

ELECTRIC LIFT CHAIR CARE AND SAFETY INFORMATION

READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE



WARNING:

Do not allow children or pets to play on or with mechanised furniture, including extended footrest. Exercise close supervision when mechanised furniture is used by, with or near children, pets or disabled persons.



This lift chair raises at the rear - do not place objects under lift chair and make sure the area is clear of obstructions during operation.



Avoid operating mechanised furniture around moving persons.



Keep hands and other objects away from openings in mechanised furniture.



Do not place mechanised furniture near power cords. Avoid entangling mechanised furniture in power cords.



Avoid liquid contact with any electric component.



Switch off and unplug mechanised furniture when not in use, and before addition or removal of parts.

Never operate mechanised furniture if cord or plug is damaged, malfunctioning or damaged. Contact supplier for examination and repair. Do not tamper with electrical components.

Take care when moving recliner that wall and transformer cords are not under the base or they may get damaged. Transformer is not to be placed under or within the recliner structure. Do not cover or place the external transformer under the chair. Keep in an open, well-ventilated area free from foreign material and away for possible pinch points.

WARNING: TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY TO PERSONS:

- Use only for its intended purpose
- Never press or activate control switch if you are not seated in recliner
- Only the occupant should activate the control switch
- Never operate with more than one person occupying seat
- Never sit or stand on the footrest