


ASSEMBLY INSTRUCTION KOMBIE MKII BUNK BED ITEM CODE 62783

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Super Amart Ewing Road, Customer Service Free call 1800 351 084

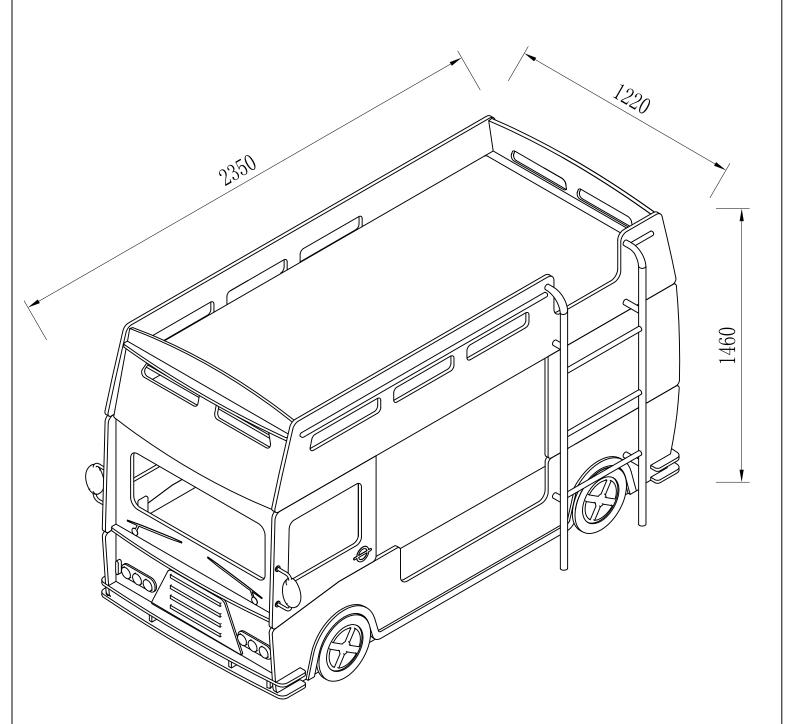


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone Super Amart Ewing Road, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level. spacious assembly area. avoid hard surfaces that may damage the product
- 2. Take care when lifting.product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

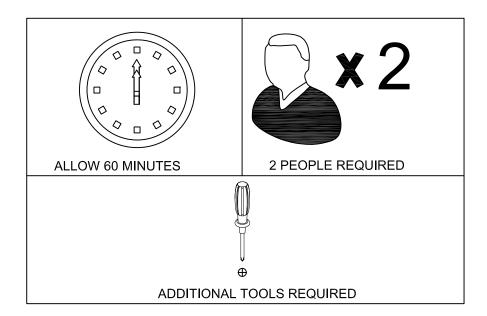



To help prevent serious or fatal injuries from entanglement or falls:

- Use the correct size mattress as specified
- Upper surface of mattress must be at least 160mm below upper edge of guard rails
- Follow all written instructions included with this bed
- Use guardrails on both sides of upper bunk
- Check the bunk bed periodically to ensure that the guardrails, access device and other components are maintained in the correct position and state of repair and that all connectors are tight with nothing protruding more than 8mm
- Ensure the upper bunk is more than 2m from any ceiling fan
- Prohibit horseplay on or under bed
- Prohibit more than one person on the upper bunk

TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9.

DO NOT REMOVE THIS LABEL


CAM Lock and Pins

step 1


HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

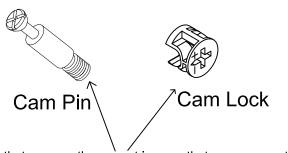

Ensure that you use the correct images that are representative of the hardware used in the product

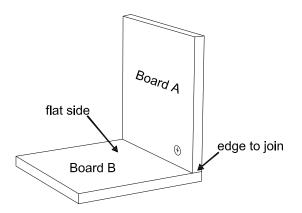


step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

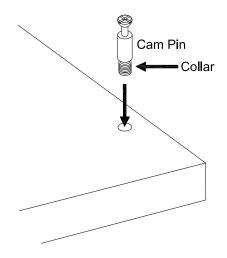

step 3

To use Cam Lock Fasteners


Now fit the hole in the edge of the joining board over the Cam Pin

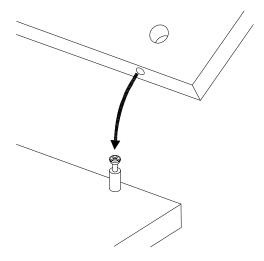

step 4

To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

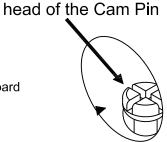

To use Cam Lock Fasteners


Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin



step 5

To use Cam Lock Fasteners


In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

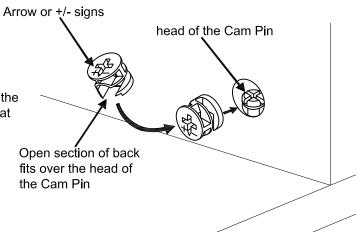


step 6

To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount,turn the Cam Pin out (counter-clockwise)one full turn,and try the Cam Lock again.

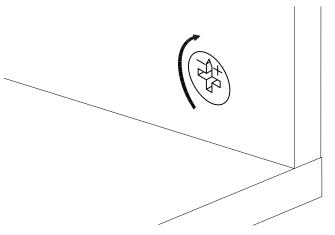


PARTS LIST

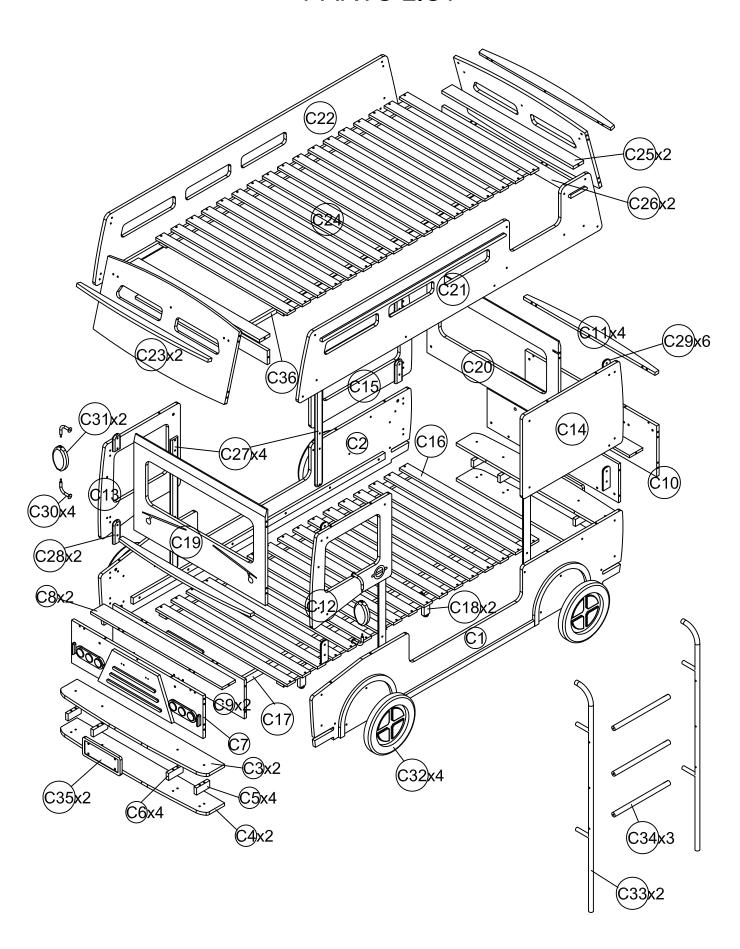


62783


C1	Right Siderail	C19	Bottom Headboard Window Panel
C2	Left siderail	C20	Bottom Footboard Window Rail
С3	Bottom Headboard/footboard connect panel	C21	Top Right Side Rail
C4	Bottom Headboard&Footboard connect panel	C22	Top Left Side Rail
C5	Bottom Headboard&Footboard connect block	C23	Top Headboard&Footboard Panel
C6	Bottom Headboard&Footboard connect block	C24	Slats 949x60x15mm
C7	Bottom Headboard front panel	C25	Top Headboard Footboard connect panel
C8	Bottom Headboard&Footboard connect panel	C26	Top Headboard Footboard connect panel
C9	Bottom Headboard&Footboard back panel	C27	Connect Tube
C10	Bottom Footboard front panel	C28	Connect block
C11	Headboard Footboard Window Rail	C29	Connect block
C12	Right Side Connect Panel	C30	Inverted Mirror panel hander
C13	Left Side Connect Panel	C31	Inverted Mirror panel
C14	Right Side Connect Panel	C32	Wheel
C15	Left Side Connect Panel	C33	Ladder side Tube
C16	Slats 949x60x15mm	C34	Ladder Connect Bar
C17	Centre Support Rail	C35	License Panel
C18	Centre Support Leg	C36	Top Centre Support Rail

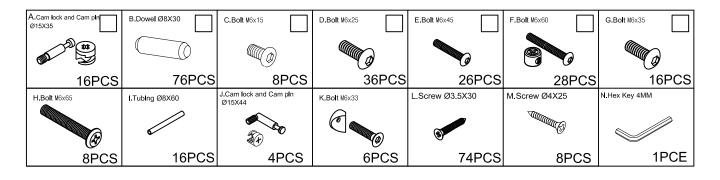


STEP 1:Insert the Dowel(B)to the Bottom Headboard Footboard Connect Panel(C3)and Bottom Headboard Footboard Connect Block(C5,C6). Use a Pillips Head Screw Driver to Tighten Bottom Headboard Footboard Connect Panel(4)to the Bottom Headboard Footboard Connect Panel(C3)with Bolt(H) throw Bottom Headboard Footboard Connect Block(C5,C6). Use a Hex Key(N)to tighten Centre Support Legs(C18)to the Centre Support Rail(C17) with Bolt(C).

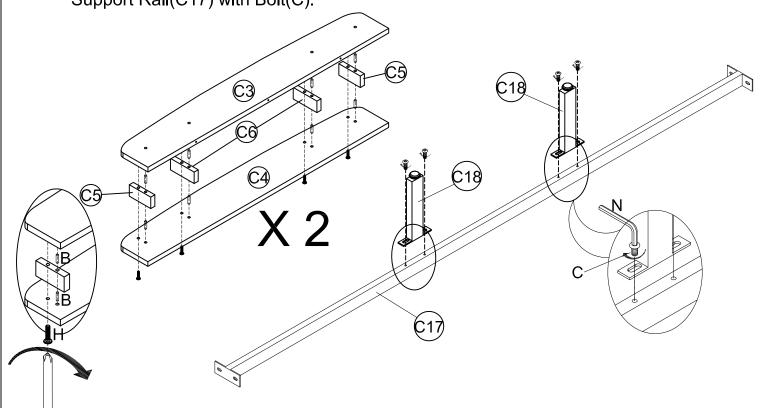


STEP 2: Insert the Cam Pin(A)to the Bottom Headboard Front Panel(C7). Use a phillips head screw driver to tighten Bottom Headboard Front Panel(C7)to the Bottom Headboard &Footboard Connect Panel(C3) with Cam Lock (A). Insert the Doewl(B) and Cam Pin(A)to the Bottom Headboard Front Panel(C7), use a phillips head xcrew driver to tighten Bottom Headoard& Frootboard connect Panel(C8) to the Bottom Headboard &Footboard Connect Panel(C8). Use a phillips head screw driver to tighten Bottom Headboard &Footboard Back Panel(C9) to the Bottom Headboard &Footboard Connect Panel(C8) with Cam Lock(A). and tightenBottom Headboard &Footboard Back Panel(C9) to Bottom Headboard Footboard Connect Panel(C8) with Screw(L)

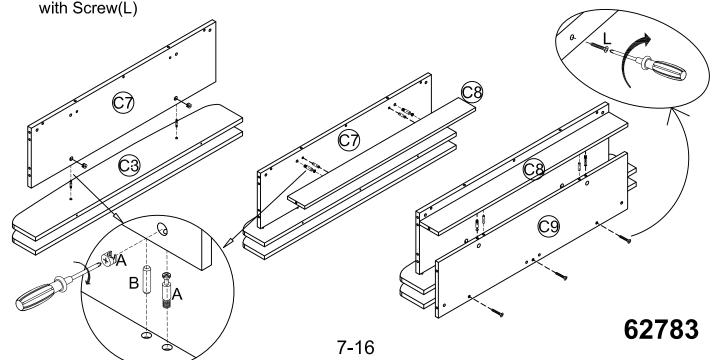


STEP 3: Insert the Cam Pin(A)to the Bottom Footboard Front Panel(C10). Use a phillips head screw driver to tighten Bottom Headboard fFootboard Panel(C10)to the Bottom Headborad &Footboard Connect Panel(C3) with Cam Lock (A). Insert the Doewl(B) and Cam Pin(A)to the Bottom Footboard Front Panel(C10), use a phillips head xcrew driver to tighten Bottom Headoard &Frootboard connect Panel(C8) to the Bottom Footboard Front Panel(C10) with Cam Lock(A). Insert the Dowel(B) and Cam Pin(A) to the Bottom Headboard &Footboard Connect Panel(C8). Use a phillips head screw driver to tighten Bottom Headboard &Footboard Back Panel(C9) to the Bottom Headboard &Footboard Connect Panel(C8) with Cam Lock(A). and tighten Bottom Headboard &Footboard Back Panel(C9) to Bottom

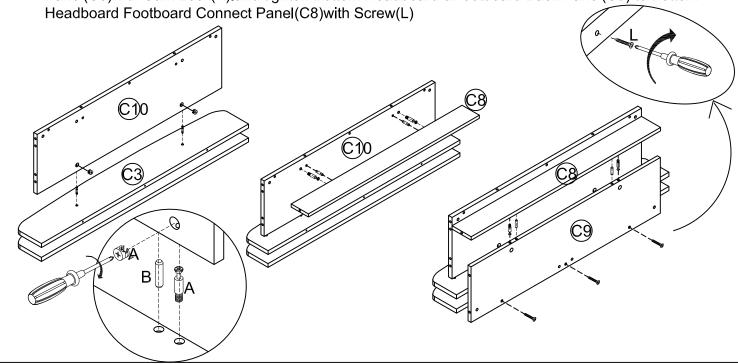


STEP 4: Insert the Dowel(B)and Cam Pin(A)to the Top Headboard Footbaord Connect Panel(C25). Use a phillips head screw driver to tighten Top Headboard Footbaord Connect Panel(C25) to the Top Headboard Footbaord Connect Panel(C26)with Cam Lock(A). Insert the Cam Pin(J)to the Top Headboard&Footboar Panel(C23). Use a phillips head screw driver to tightenTop Headboard&Footboar Panel(C23) to the Bottom Headboard &Footboard Connect Panel(C26)with Cam Lock(J). Insert the Dowel(B)to the headboard footboard Window Rail(C11). Use a Hex Key(N) to tighten Headboard Footboard Window Panel(C11) to the Top Headboard Footboard Panel(C23) with Palt(F)

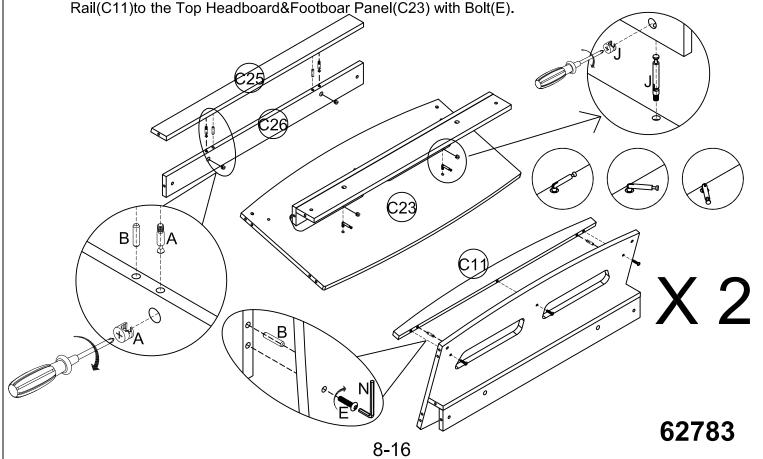

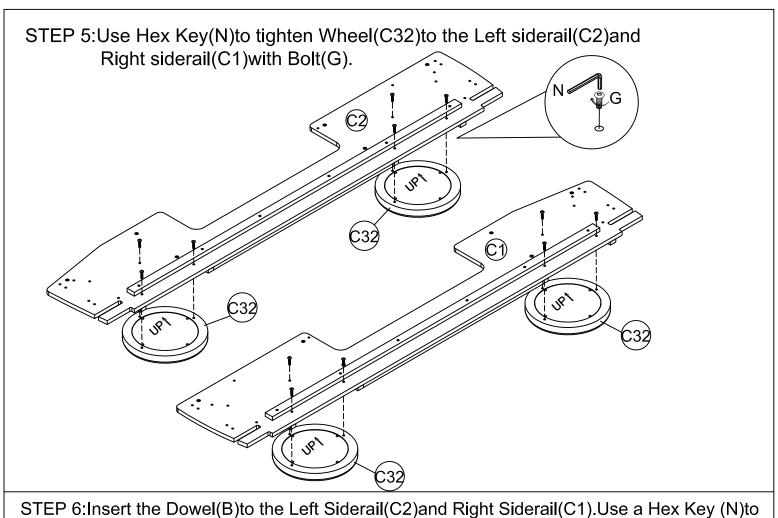


STEP 6:Insert the Dowel(B)to the Left Siderail(C2)and Right Siderail(C1).Use a Hex Key (N)to tighten The Bottom Headboard Front Panel(C7)and Bottom Headboard Footboard Connect Panel(C8) and Bottom Footboard Front Panel(C10)to the Left Siderail(C2) and Right Siderail(C1) with Bolt(E).Insert the Nut(F)to the Bottom Headboard &Footboard Back Panel(C9).Use a Hex Key (H)to tighten the Bottom Headboard Footboard Back Panel(C9)to the Left Siderail(C2)and Right Siderail(C1) with Bolt(F).

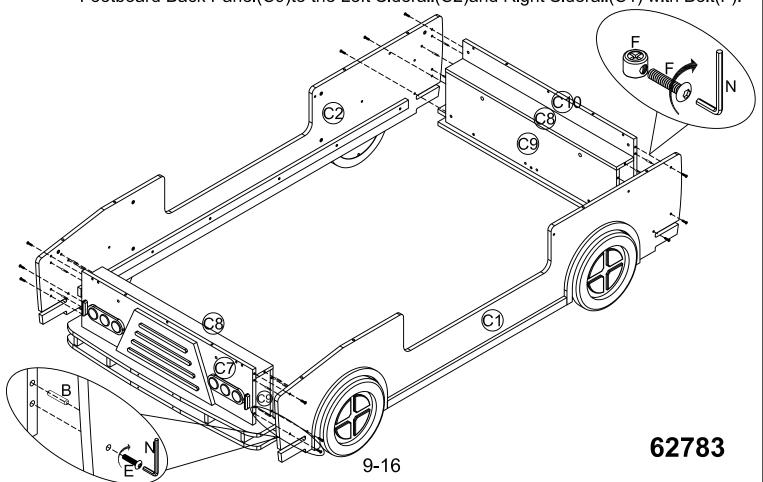


STEP 7: Insert the Dowel(B)to the Headboard Footboard Window Rail(C!11), Use a Pillips Head Screw Driver to tighten Headboard Footboard Window Rail(C11)to the Bottom Headboard &Footboard Front Panel(C7,C10)with Bolt(E). STEP 8:Use a Pillips Head Screw Driver to tighten License Panel(C35)to the Bottom Headboard &Footbaord Connect Panel(C3,C4)with Screw(M). Use a Hex Key (N) to tighten the Centre Support Rail(C17)to the Bottom Headbaord &Footboard Back Panel(C9)with Bolt (C). 62783 10-16


STEP 9:Use a Pillips Head Screw Driver to tighten the Slats(C16)to the Right Siderail(C1)and Left Slderail(C2)with Screw(L).Insert the Dowel(B)and Tubing(I)to the Siderail(C1)and Left Slderail(C2).

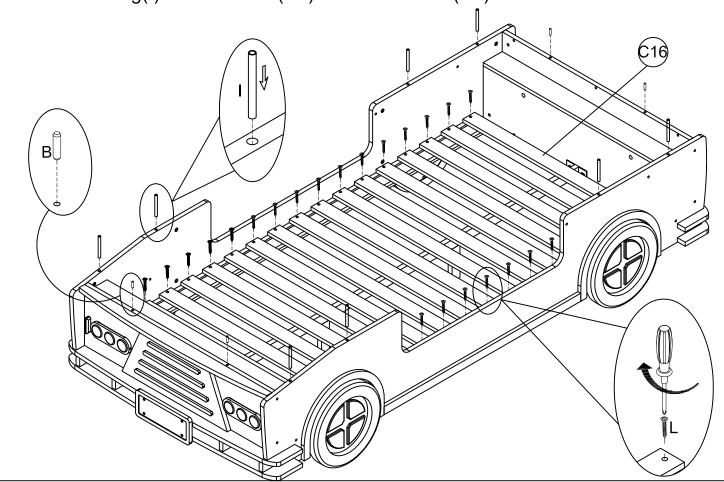


STEP 10:Insert the Dowel(B)and Nut(F)to the Bottom Headboard Window Panel(C19) and Bottom Footboard Window Panel(C20),Use a Hex Key(N)to tighten Left Side Connect Panel(C13,C15)and Right Side Connect Panel(C12,C14)to the Bottom Headboard Window Panel(C19)and Bottom Footboard Window

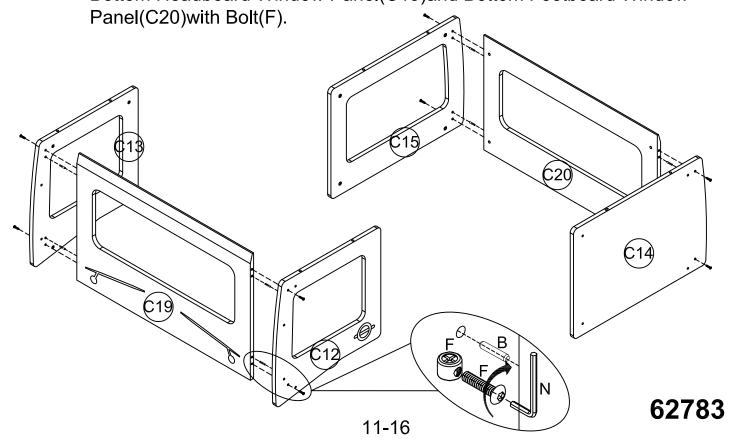



STEP 11:Insert the Bottom Headboard Window Panel(C19)and Bottom Footboard Window Panel(C20)and Left Side Connect Panel(C13,C15)and Right Side Connect Panel(C12,C14)to the Siderail(C1)and Left SIderail(C2).

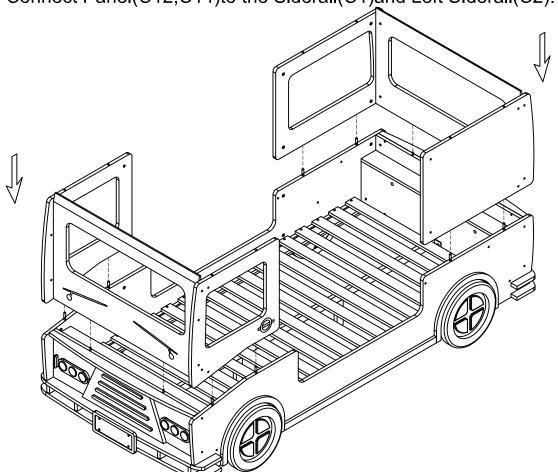



STEP 12:Use a Hex Key (N)to tighten the Connect Tubing(C27)and Connect Block(C28) and Connect Block(C29)to the Siderail(C1)and Left Slderail(C2)and Left Side Connect Panel(C13,C15)and Right Side Connect Panel(C12,C14)with Bolt(D).

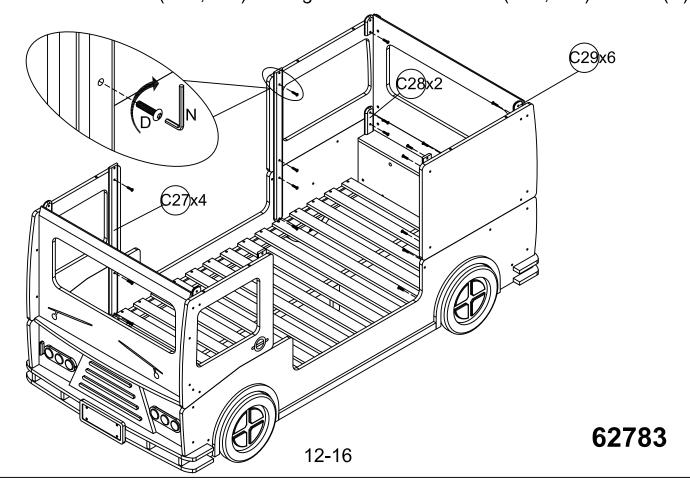


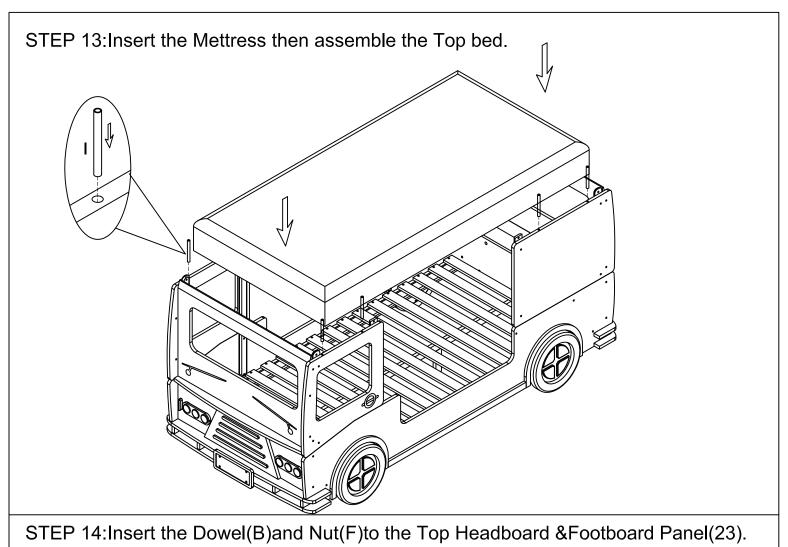

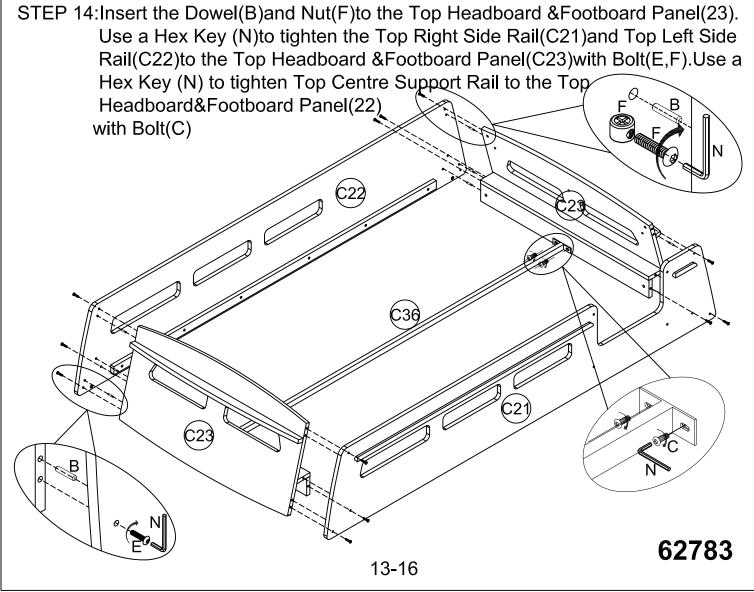


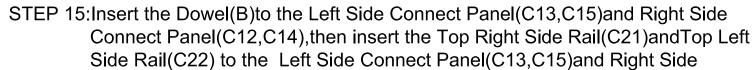


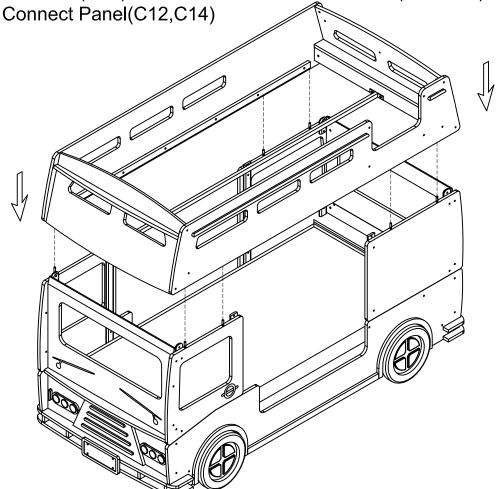


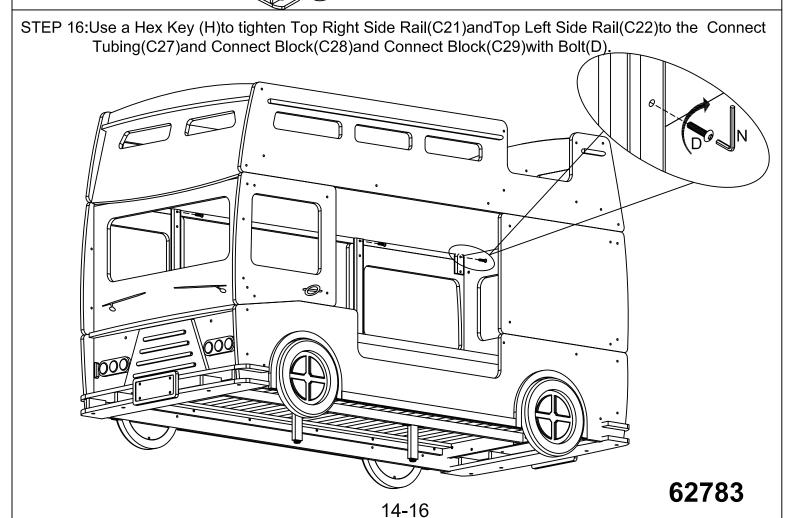

STEP 17: Insert the Inverted Mirror Panel Hander(C30)toe the Inverted Mirror Panel(C31) Use a Hex Key (N)to tighten the Ladder Connect Bar(C34)to the Ladder Side Tube(C33) with Bolt(K). STEP 18: Use a Hex Key (N)to tighten the Ladder to the Top Right Side Rail(C21)with Bolt(E). Use a Hex Key (N)to tighten the Inverted Mirror Panel Hander (C30)to the Right Side Connect Panel(C12)and Left SIde Connect Panel(C13)with Bolt(G).Use a Pillips Head Screw Driver to tighten the Slats(C24)to the Top Right Siderail (C21)and Left SIderail(C22)with Screw(L) 62783 15-16

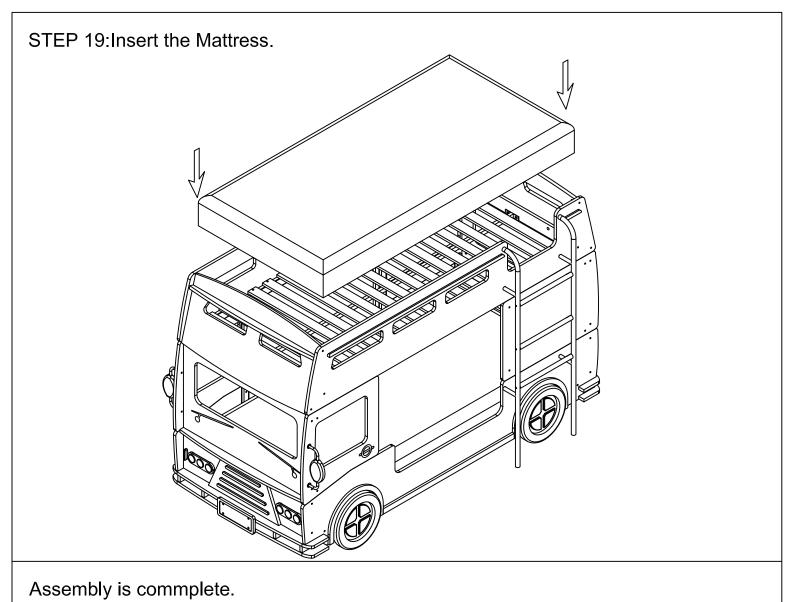

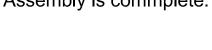

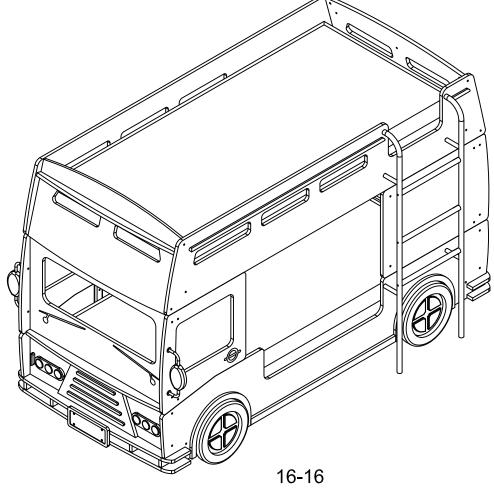

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from

Amart Furniture, Australia's largest discount furniture retail store.

Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or
 placemat. Lacquer finishes provide added scratch and heat resistance to our
 furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These
 may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage
 the product. Instead use two people to lift carefully with caution from either
 end.

