


ASSEMBLY INSTRUCTION STRATTEN MK2 SWIVEL DESK ITEM CODE 54549

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

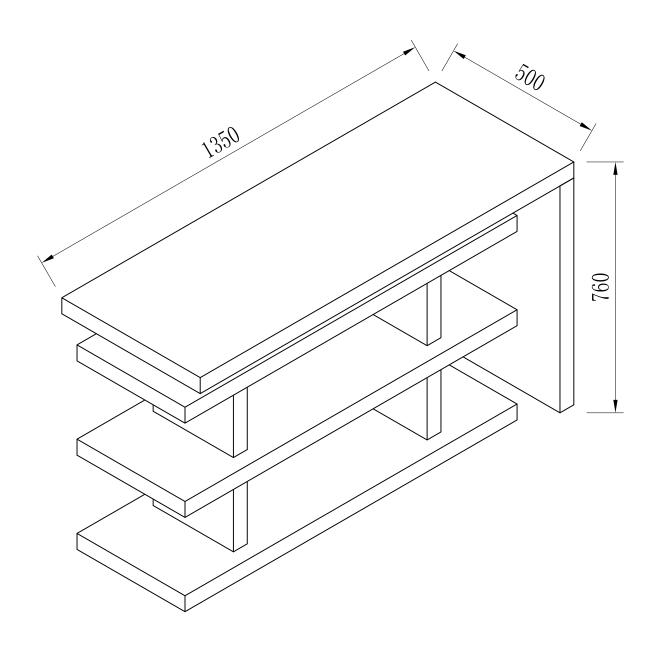


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Ewing Road,Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean,level.spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

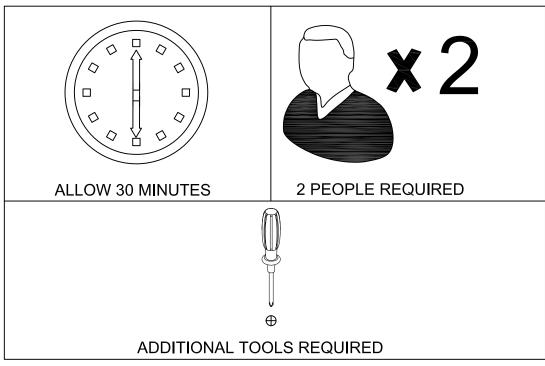




CAM Lock and Pins

step 1


HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

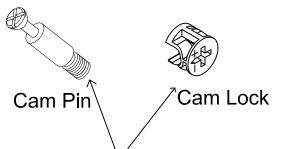

Ensure that you use the correct images that are representative of the hardware used in the product

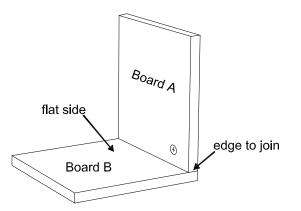


step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

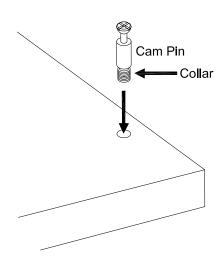

step 3

To use Cam Lock Fasteners


Now fit the hole in the edge of the joining board over the Cam Pin

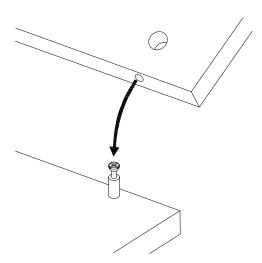

step 4

To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

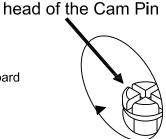

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin




Cam Lock

step 5

To use Cam Lock Fasteners


In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

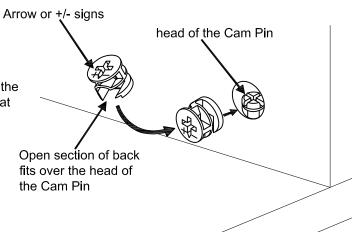


step 6

To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount,turn the Cam Pin out (counter-clockwise)one full turn,and try the Cam Lock again.

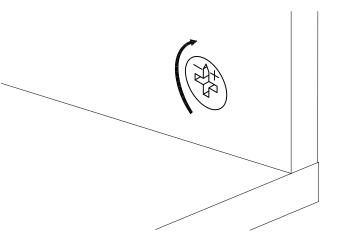


PARTS LIST

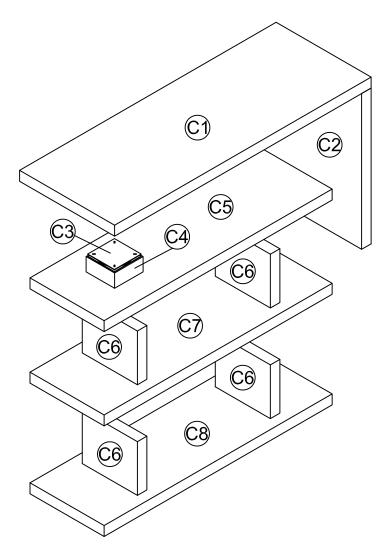


C1	Top Panel	C5	Shelf Panel
C2	Side Panel	C6	Connect Panel
C3	Rotating Platform	C7	Shelf Panel
C4	Connect Panel	C8	Bottom Panel

A.Cam pin and Cam lock Ø15X35	B.Dowel Ø8X30	C.Bolt Ø6X20	D.washer	E.Bolt M6X50	F.Bolt and Nut M8X80	G.Cover Ø38
8PCS	18PCS	8PCS	12PCS	12PCS	2PCS	2PCS
H.Hex Key M4	I.wrench M14	J.Cover Ø20	K.Protect foam Ø35	M.Belt Ø3.5x16	N.Screw Ø3.5x16	
1PCE	1PCE	8PCS	6PCS	1PCE	2PCS	


STEP 1: Use Hex key(H)to tighten the Rotating Platform(C3)to Connect panel(C4)with Bolt (C)and washer(C) .open the Rotating Platform (C3) to 45 angle. Use Hex key(H)to tighten the Rotating Platform (C3)to Shelf panel(C1)with Bolt (C) and washer (C)

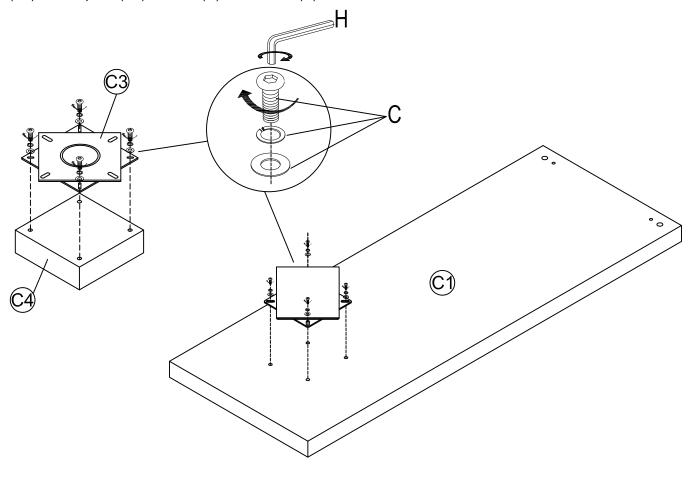


STEP 2: Put the Dowels(B)on the Shelf panel(C5),tighten Cam pin(A) on the Shelf panel(C5).Insert the Cam lock(A)in to the Connect panel (C6)large hole use a flat screwdriver to turn the Cam lock to locks onto the head of Cam pin.then put the Cover(J) on the Cam lock holes.

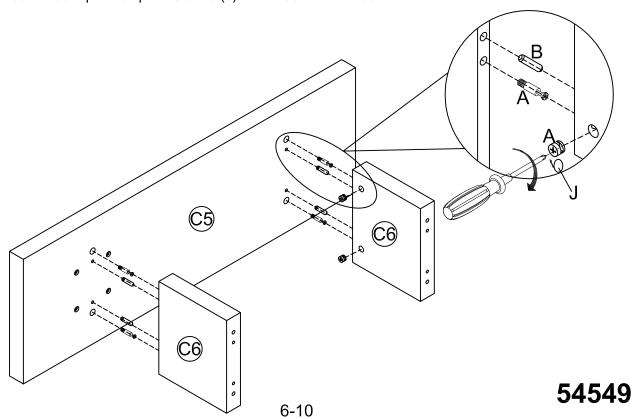


STEP 3: Put the Dowels(B)on the Connect panel(C6),use Hex Key(H)to tighten Shelf panel(C7) to Connect panel(C6)with bolts (E) and Washer(D)

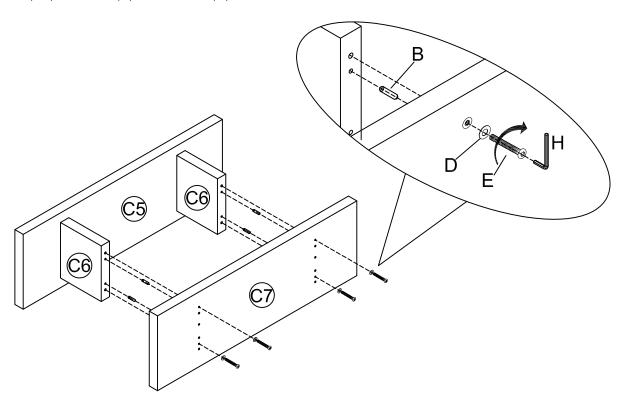


STEP 4: Put the Dowels(B)on the shelf panel(C7),tighten Cam pin(A) on the Shelf panel(C7).Insert the Cam lock(A)in to the Connect panel (C6)large hole use a flat screwdriver to turn the Cam lock to locks onto the head of Cam pin.then put the Cover(J) on the Cam lock.Put the Dowels(B)on the Connect panel(C6),use Hex Key(H)to tighten Shelf panel(C8) to Connect panel(C6)with Bolts (E) and Washer(D)

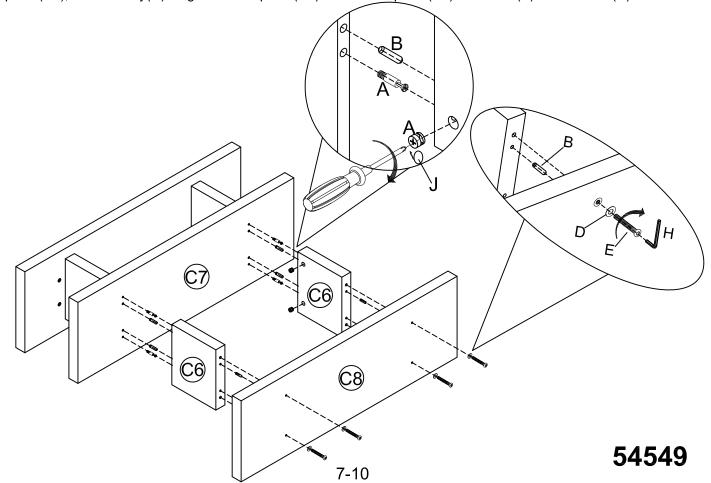


STEP 5: Put the Dowels(B)on the Top panel(C1),Insert the Bolt(F) on the Top panel Wrench(C1).use (I)to tighten Side panel(C2)to Top panel(C1) with Nut(F).then put the Cover(G) on the large hole.

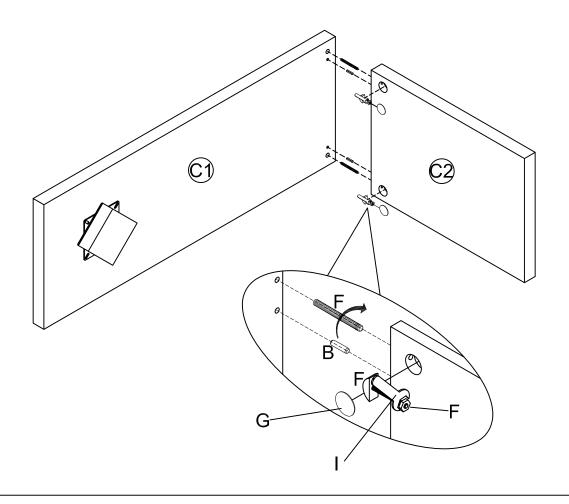


STEP 6: Use Hex key (H)to tighten Shelf panel(C5)to Connect panel(C4) with Bolt(E) and washer(D)

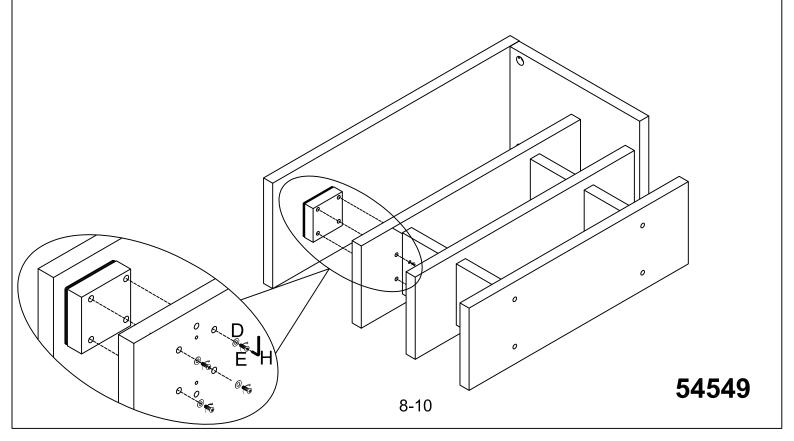

STEP 7: Stick the Protect foam(K)on the bottom of Bottom Panel(C8)and Side panel(C2). With two people carefully turn over. Use a Flat Head Screwdriver to tighten the Belt(M)to the Top panel(C1) with Screw(M).

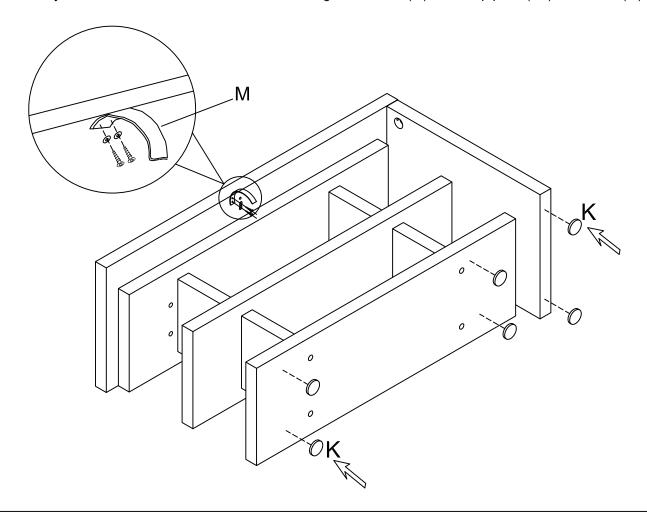


STEP 8: As an extra safety precaution please use the belt and screws(N)supplied to attach the unit securely to the wall.

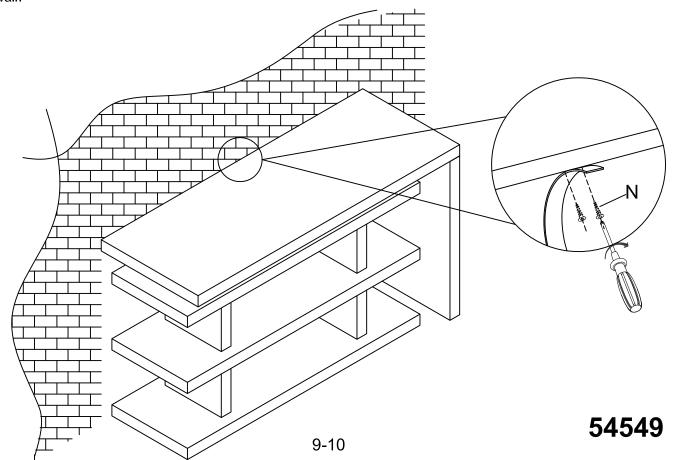

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

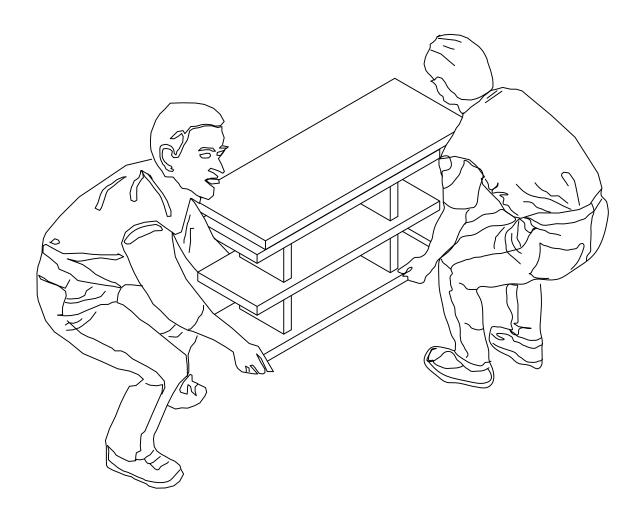

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from

Amart Furniture, Australia's largest discount furniture retail store.

Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or
 placemat. Lacquer finishes provide added scratch and heat resistance to our
 furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These
 may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage
 the product. Instead use two people to lift carefully with caution from either
 end.

