


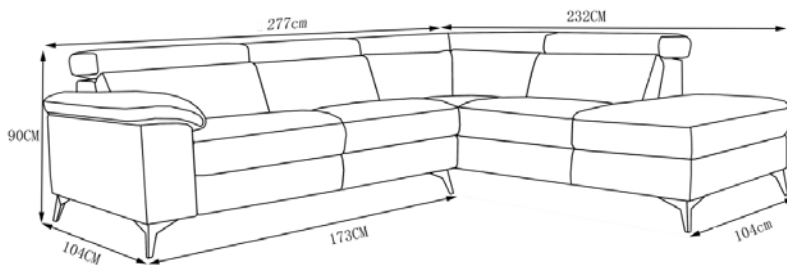

ASSEMBLY INSTRUCTION
FORTEO CORNER CHAISE
ITEM CODE 67632

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084



Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION






Before you start:



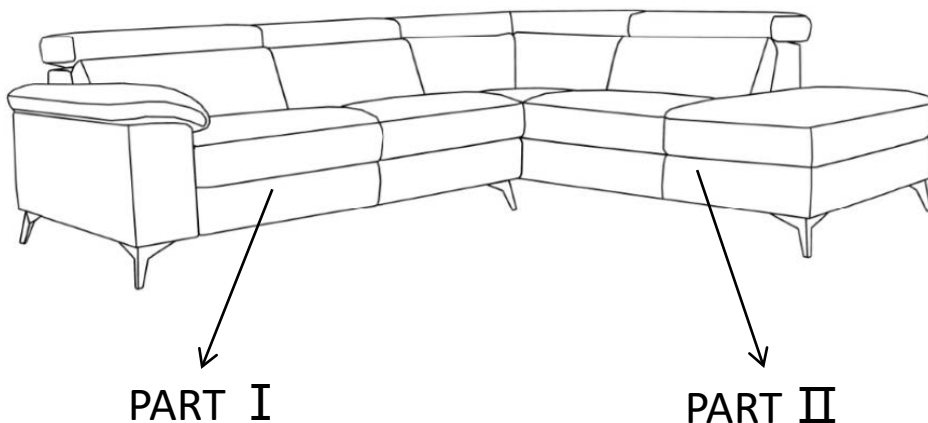

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads




PARTS LIST



<i>HARDWARE LIST</i>			
	<i>DESCRIPTION</i>		<i>QTY</i>
<i>A</i>	Sofa Leg		4PCS
<i>B</i>	Big screw		8PCS
<i>C</i>	Allen key		1PC
<i>D</i>	Surport leg		1PC
<i>E</i>	Surport leg		2PC

<i>HARDWARE LIST</i>			
	<i>DESCRIPTION</i>		<i>QTY</i>
<i>A</i>	Sofa Leg		4PCS
<i>B</i>	Big screw		8PCS
<i>C</i>	Allen key		1PC
<i>D</i>	Surport leg		2PCS

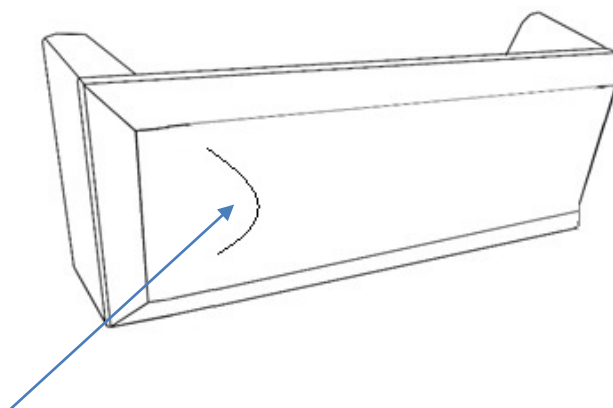

PLEASE TAKE NOTE:

YOUR SOFAS FEET AND BOLTS\SCREWS ARE LOCATED AT THE END OF THE RED STRING, UNDERNEATH THE ZIP IN YOUR DUST COVER.


PIECES REQUIRE FOR ASSEMBLY ARE LOCATED INSIDE THE DUST COVER UNDERNEATH SOFA.

Step 1


DETAILS (1) - Align base plate of each foot (A) with the pre-threaded holes in the undersides of the sofa as shown in the below diagram. Insert Bolt (B) and tighten by turning clockwise using Allen key (C)

DETAILS (2) - Align base plate of each foot (D&E) with the pre-threaded holes in the undersides of the sofa as shown in the below diagram..

PART I

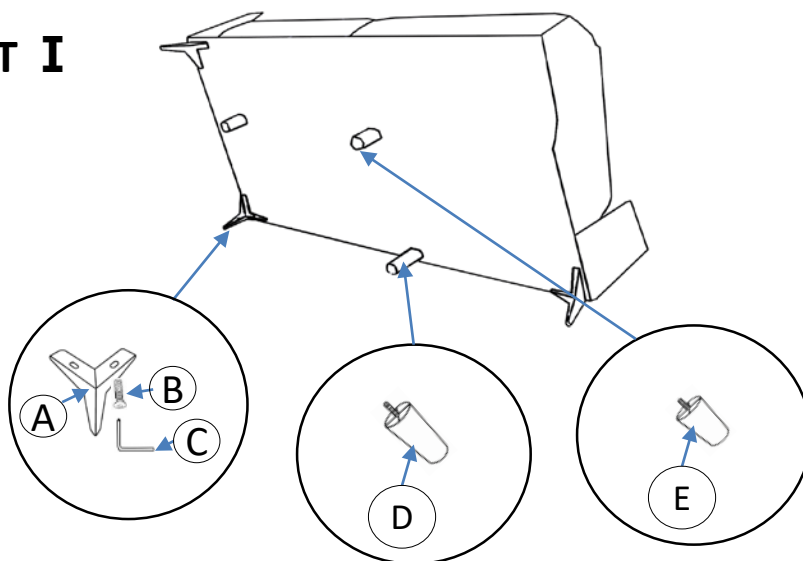

Step 2 PART I ASSEMBLY COMPLETED

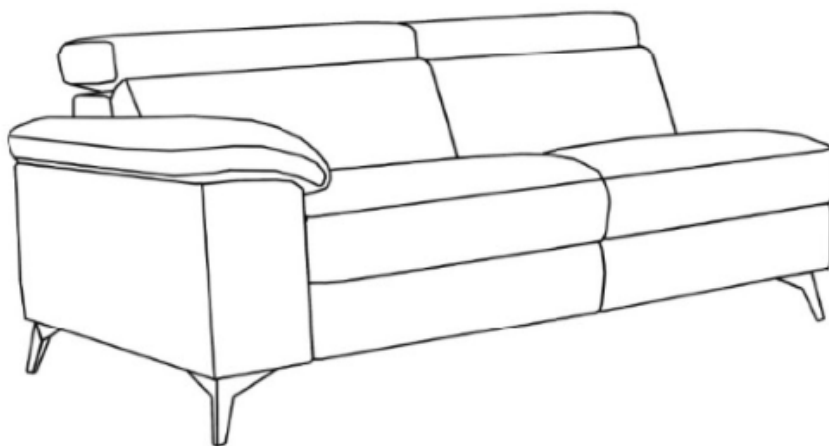

IMPORTANT:


PLEASE ENSURE FEET ARE TIGHTENED SECURELY BEFORE USE!

Step 3


DETAILS (1) - Align base plate of each foot (A) with the pre-threaded holes in the undersides of the sofa as shown in the below diagram. Insert Bolt (B) and tighten by turning clockwise using Allen key (C)

DETAILS (2) - Align base plate of each foot (D) with the pre-threaded holes in the undersides of the sofa as shown in the below diagram..


PART II

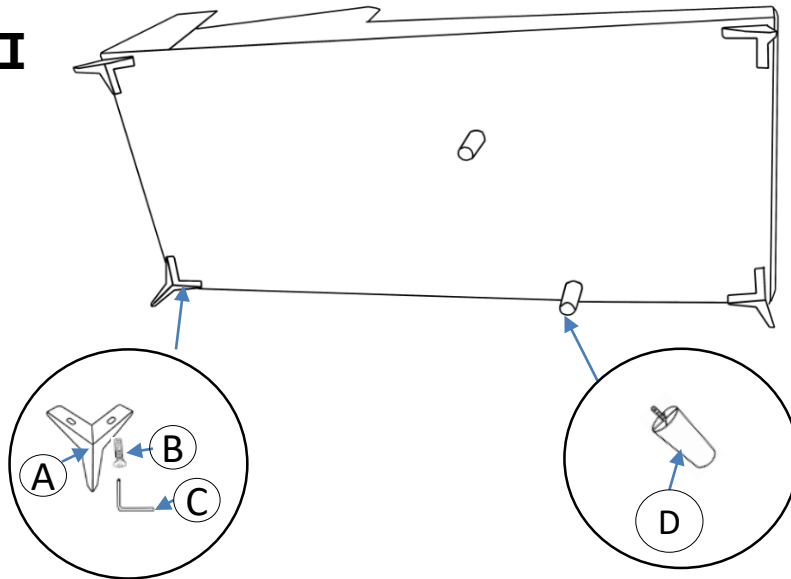

Step 4 PART II ASSEMBLY COMPLETED

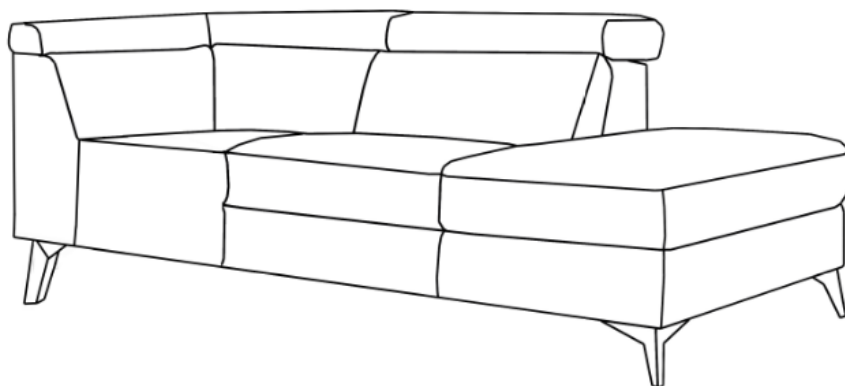

Step 5 ASSEMBLY COMPLETED

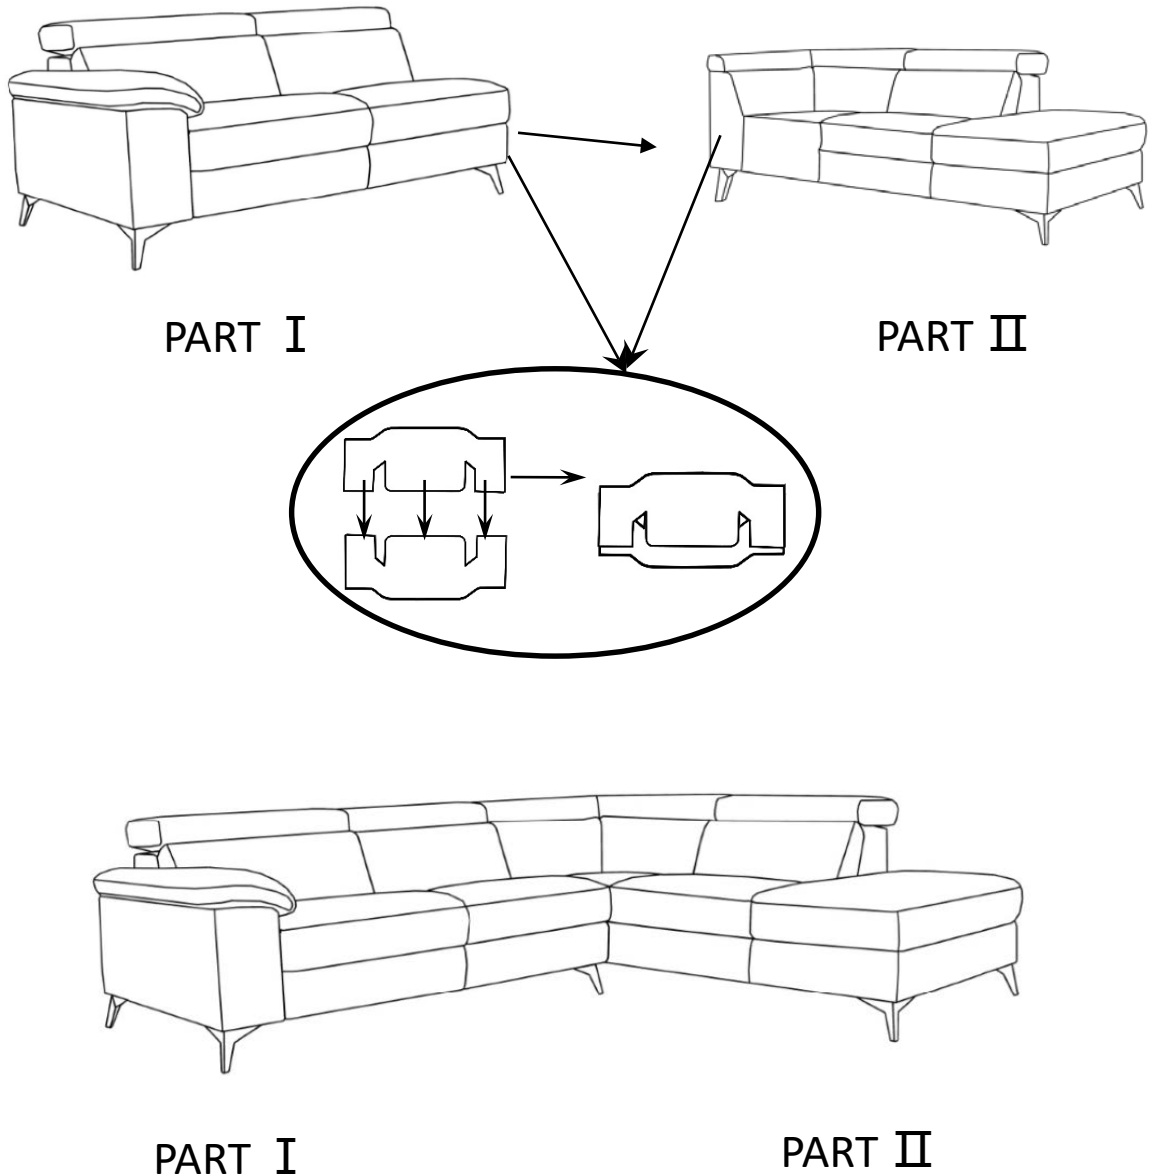


IMPORTANT:
PLEASE ENSURE FEET ARE TIGHTENED SECURELY BEFORE USE!

Step 6 PLUG TRANSFORMER AT BACK OF SOFA

Safety Note:

Transformer is not to be placed under or within the recliner structure.

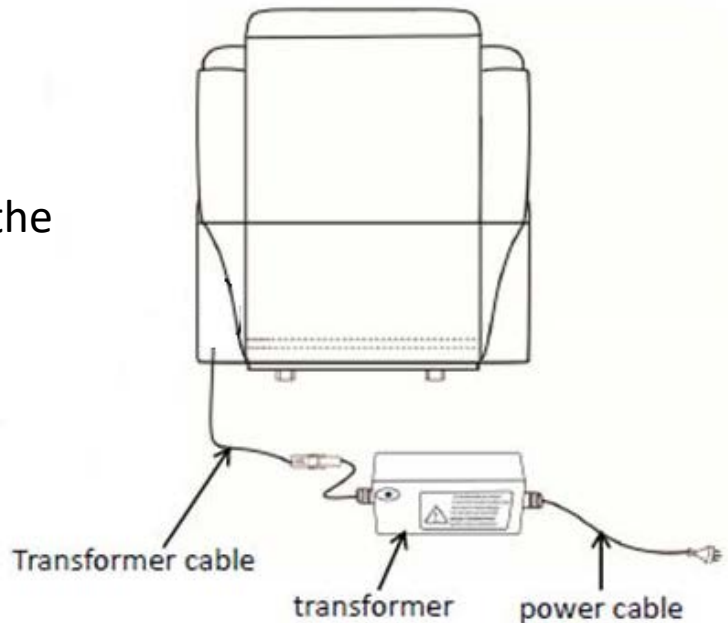

WARNING

- Do Not allow children to play on this mechanised furniture or operate the mechanism. Leg rest folds down on closing so that a child could possibly be injured. Always leave in an upright and closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it.

READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE:

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:

Always unplug from electric outlet before cleaning.

WARNING: RISK OF INJURY

Keep children away from extended footrest and any moving parts.

CAUTION: Do not allow children to play on this electric recliner or operate the powered mechanism. The leg rest folds when closing and could possibly cause injury to a child. Always leave the recliner in an upright and closed position when not in use. Keep hands and feet clear of mechanism. Only the occupant should operate it.

POWER CORD SAFETY

WARNING: unplug and remove power cord from wall when not in use and store out of reach of children.

Take care when moving recliner that wall and transformer cords are not under the base or they may get damaged.

- NEVER OPERATE ELETRIC RECLINER IF IT HAS A DAMAGED CORD OR PLUG.

WARNING: TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY TO PERSONS:

- Use only for its intended purpose
- Never press or activate control switch if you are not seated in recliner
- Only the occupant should activate the control switch
- Never operate with more than one person occupying seat
- Never sit or stand on the footrest

CARE LABEL

FABRIC CARE

REGULAR CARE: PROTECT FROM DIRECT SUNLIGHT.
VACUUM REGULARLY USING LOW SUCTION.
ROTATE REVERSIBLE CUSHIONS REGULARLY.

CLEANING:

DO NOT REMOVE CUSHION COVERS FOR SEPARATE
CLEANING EVEN THOUGH THEY HAVE ZIPPERS.
DO NOT WASH
DO NOT DRY CLEAN
DO NOT SHAMPOO CLEAN
CLEAN WITH HOT-WATER EXTRACTION MACHINE.
(HOT) PROFESSIONAL CLEANING RECOMMENDED
DO NOT USE DISHWASHING OR LAUNDRY
DETERGENTS
USE ONLY UPHOLSTERY DETERGENTS
DO NOT WET FILLING
DRY IN SHADE AWAY FROM DIRECT HEAT AND
SUNLIGHT
ALLOW TO DRY THOROUGHLY BEFORE RE-USE

SPOT CLEANING:

DO NOT RUB
DO NOT SPOT CLEAN WITH ANY SOLVENT.
TREAT SPILLS AND STAINS AS SOON AS POSSIBLE.
GENTLY SCRAPE ANY SOIL OR MOP ANY LIQUID
FROM THE SURFACE OF THE FABRIC.
APPLY PROPRIETARY CLEANING AGENTS STRICTLY
ACCORDING TO INSTRUCTIONS TO REMOVE THE
RESIDUE OF THE SPILL.
DO NOT SATURATE THE FABRIC OR INTERIOR WITH
WATER OR OTHER CLEANING LIQUIDS.

WARNING: APPLY ONLY WATER-BASED SOIL RESIST
(FABRIC PROTECTION) TREATMENTS. DO NOT USE
AEROSOL PRODUCTS.