
ASSEMBLY INSTRUCTION

JARVIS 4 Drawer Tall Chest

ITEM CODE 74675

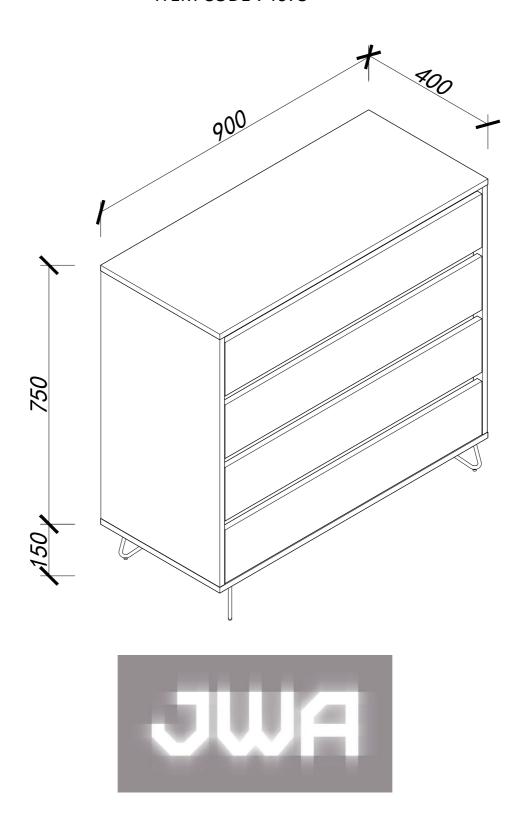


Imported by JWA Furniture Pty Ltd, Brisbane Qld, Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:


- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

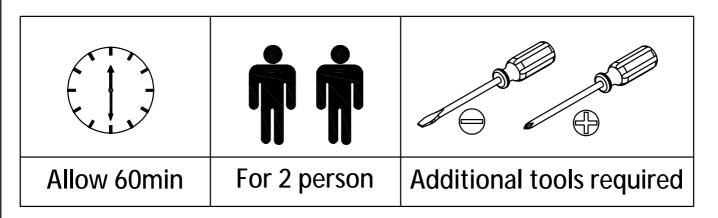





CAM LOCK INSTALL METHOD AS FOLLOWS

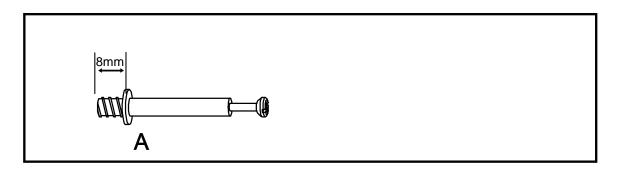

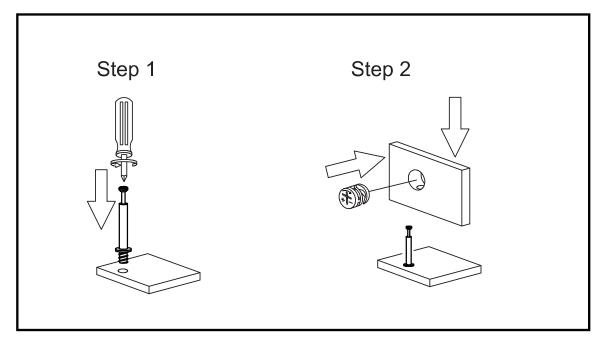

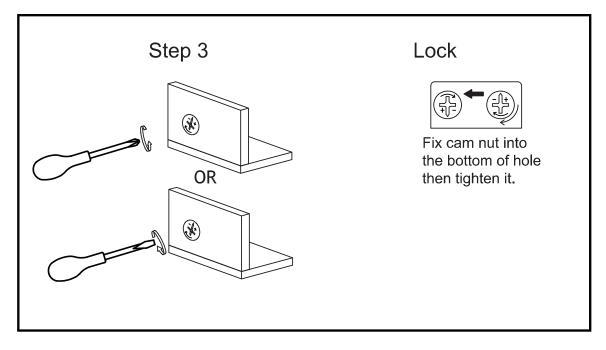


PARTS LIST

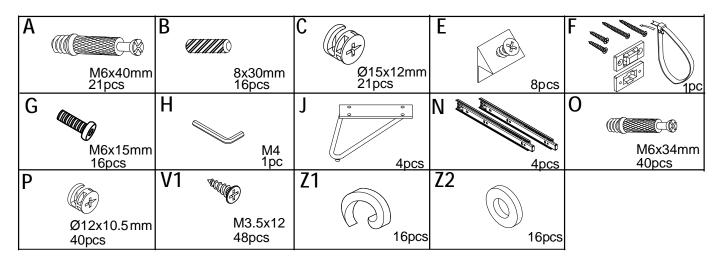


Panel No	Panel Sizes	Quantity
1	900*400*16	1
2	900*400*16	1
3	718*399*16	1
4	718*399*16	1
5	866*100*16	1
6	876*319*5	2
7	866*60*16	1


Panel No	Panel Sizes	Quantity	
8	866*60*16	3	
9	862*155*16	4	
10	822*80*12	4	
11	338*100*12	4	
12	350*80*12	4	
13	350*80*12	4	
14	832*348*5	4	

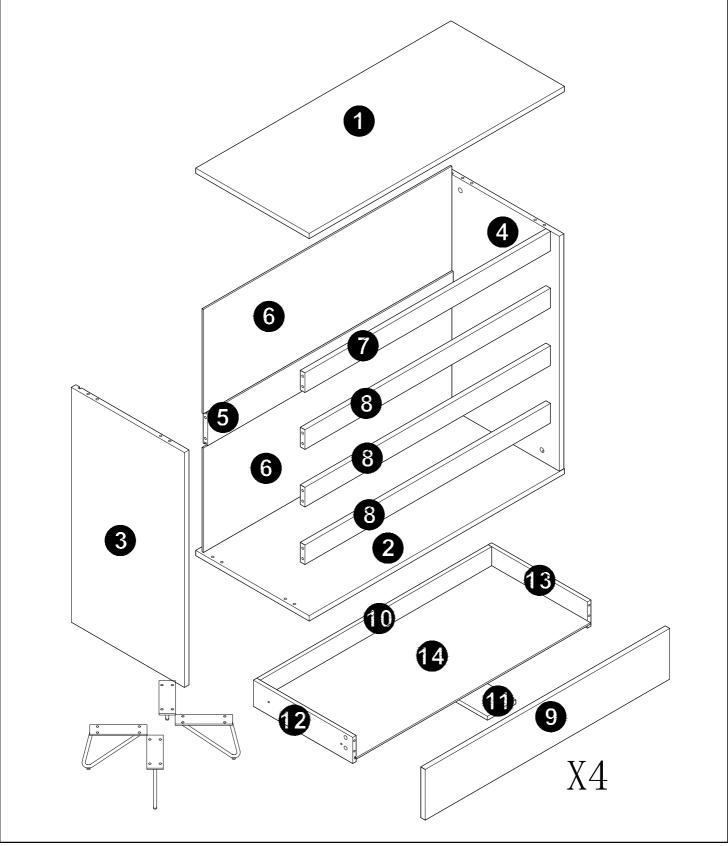


STEP 1: Fix dowel (B) and cam pin (A) to panel (1) (2) (3) (4). B=16

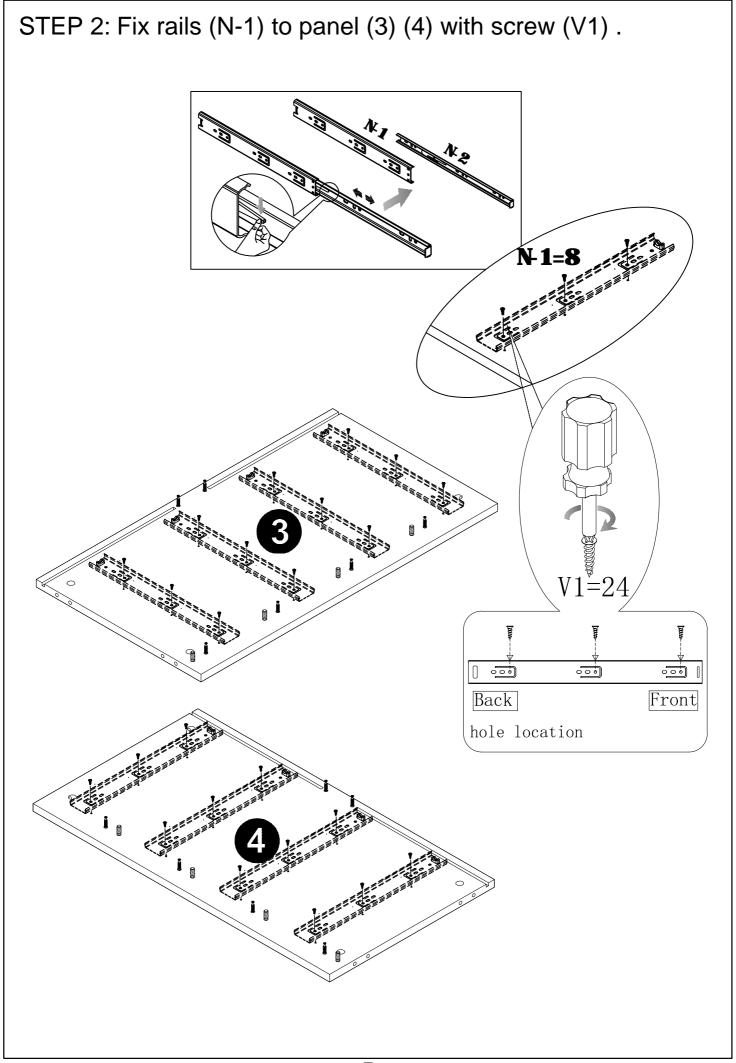


STEP 3: Fix panel (5) (7) (8) to panel (3) (4) with cam lock (C) C=12

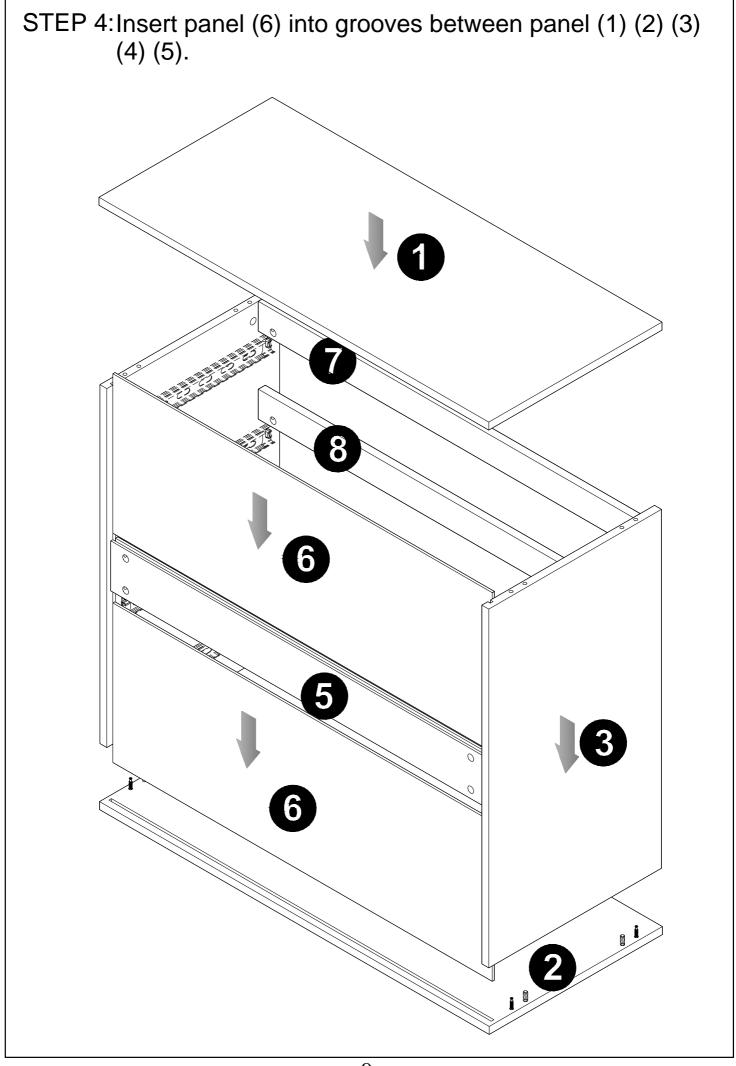

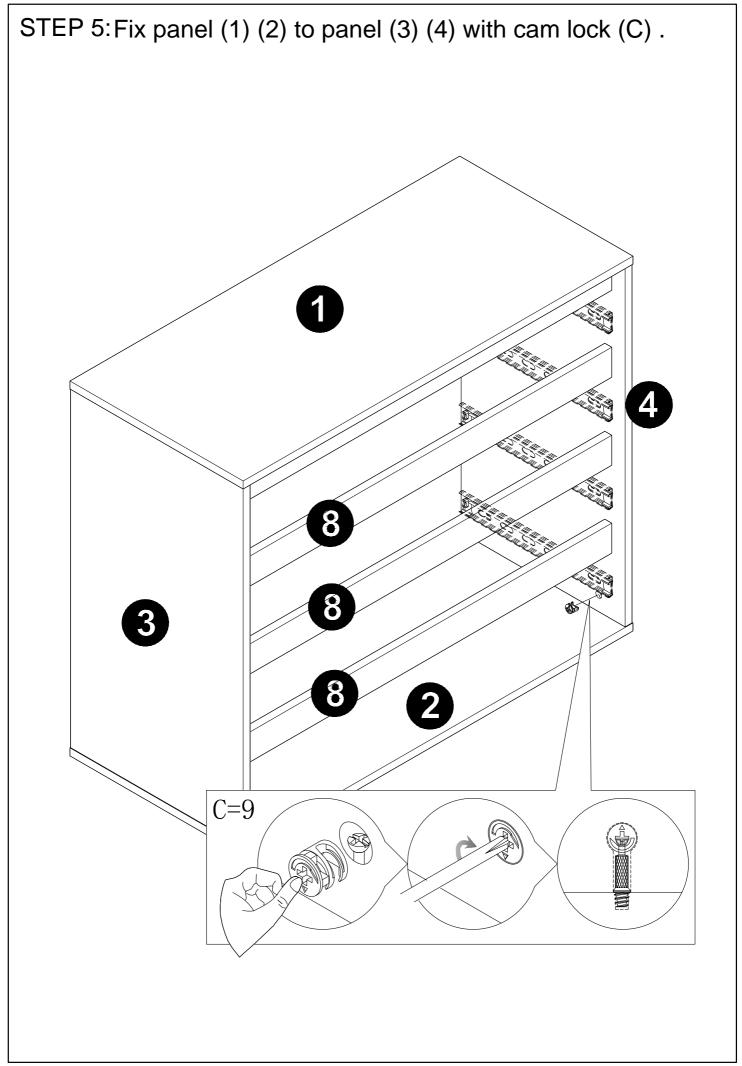


STEP 6: Fix metal leg (J) to bottom panel (2) with bolt (G), lock washer (Z1), washer (Z2). Using allen key (H) to fix 100% as shown. J=4H=1Z2=16Z1 = 16G = 16

STEP 7-1:Fix cam pin (O) to panel (9) (10) (12) (13).

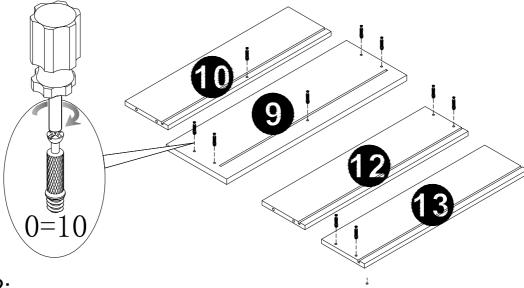


STEP 7-2:


Fix panel (11) (12) (13) to panel (10) with cam lock (P). Insert panel (14) into grooves between panel (9) (10) (12) (13). Fix panel (11) (12) (13) to panel (9) with cam lock (P).

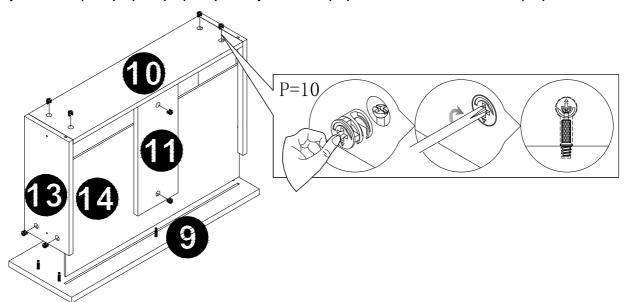

STEP 7-3:Fix rails (N-2) to panel (12) (13) with screw (V1)

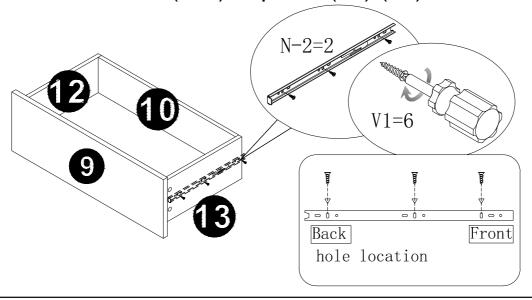


X4

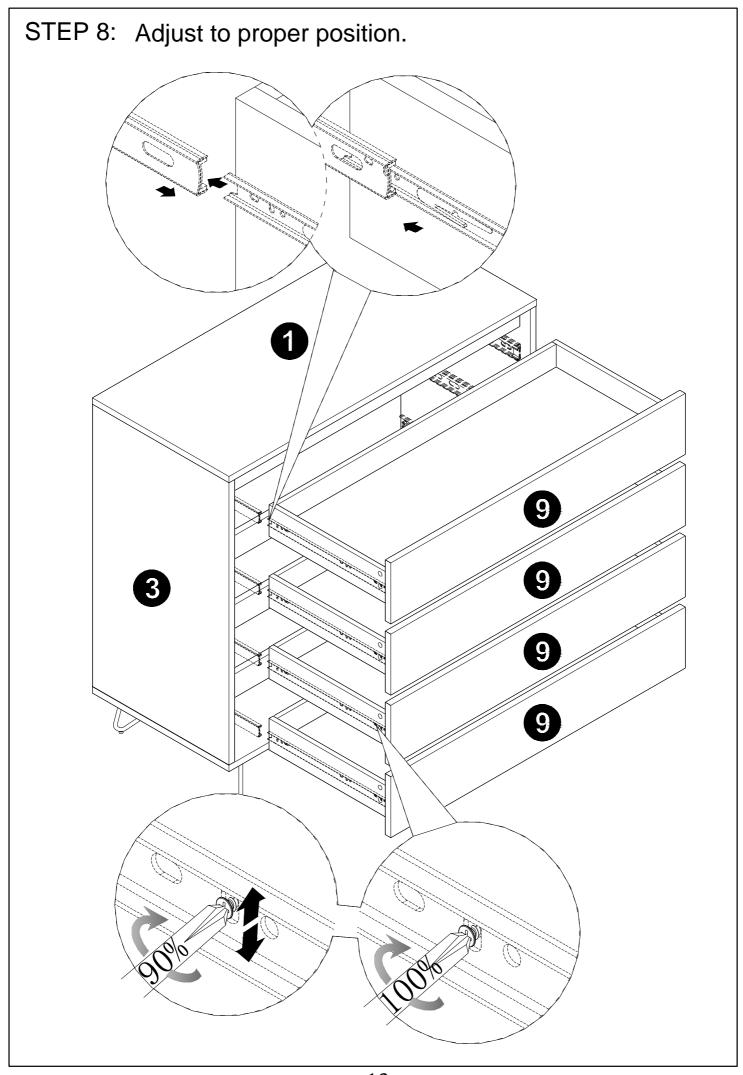

STEP 9:Insert the back panel hook (E) into the back and using screw to fix, as shown. 6 E=8

SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

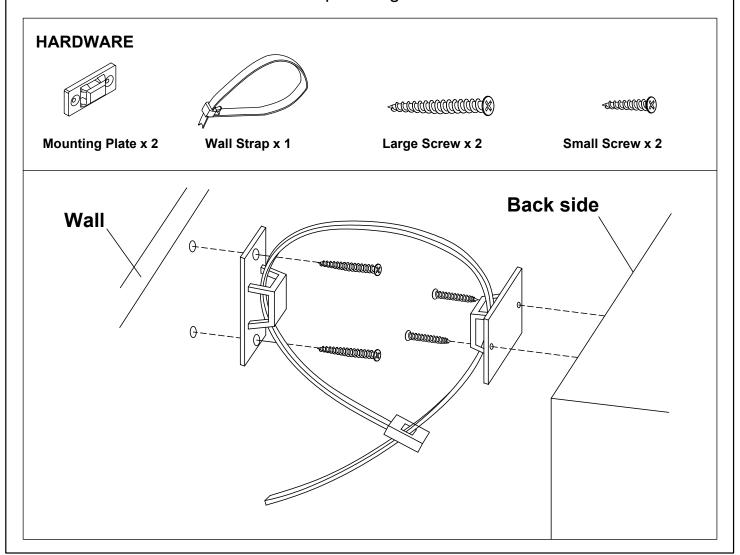




To protect your furniture, we suggest the following:

- · Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.


NOTE: If the above care advise is not adhered to your product warranty may become void

艾丽四斗柜(三胺档条艾丽脚)包装图1

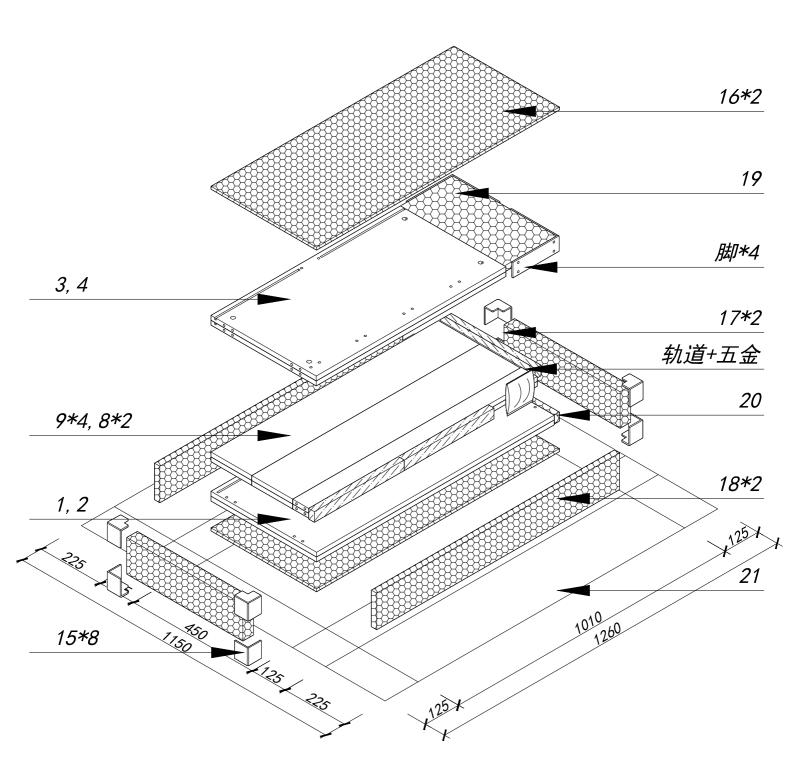

Panel No		Panel Sizes	Quantity
15	护角	50*50*50	8
16	泡沫	920*400*10	2
17	泡沫	440*115*40	2
18	泡沫	920*115*20	2
19	泡沫	395*235*20	1
20	泡沫	400*32*20	1
21	纸盒	内径1010*450*125	1

艾丽四斗柜(三胺档条艾丽脚)包装图2

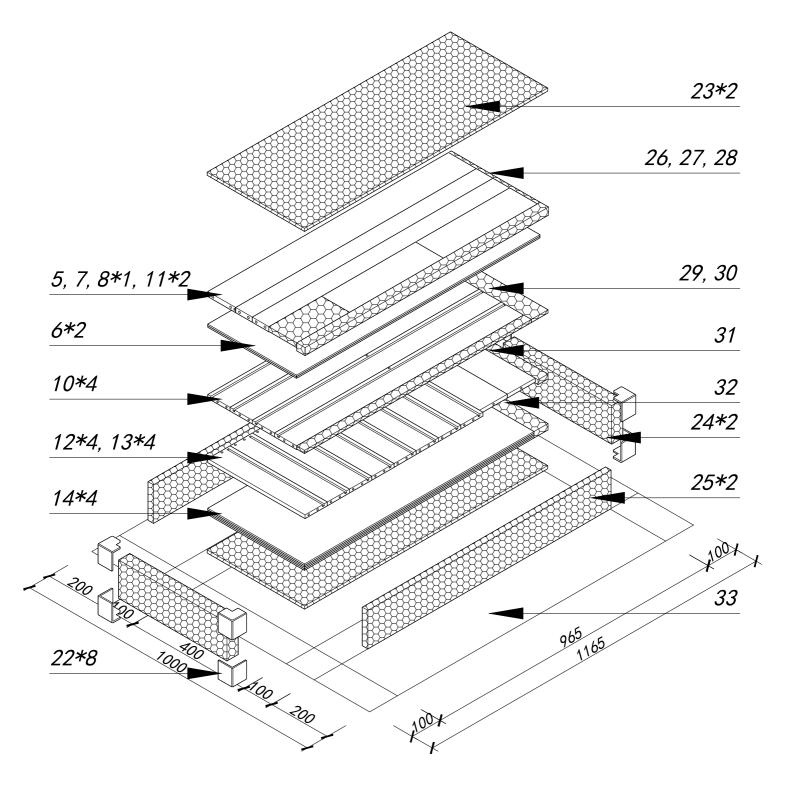

Pane I No)	Panel Sizes	Quantity	Pane I No)	Panel Sizes	Quantity
22	护角	50*50*50	8	28	泡沫	876*30*25	1
23	泡沫	875*350*10	2	29	泡沫	350*54*10	1
24	泡沫	390*90*40	2	30	泡沫	816*30*10	1
25	泡沫	875*90*20	2	31	泡沫	350*36*15	1
26	泡沫	320*15*10	1	32	泡沫	350*44*20	1
27	泡沫	190*100*15	1	33	纸盒	内径965*400*100	1