
Assembly Instructions



Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE

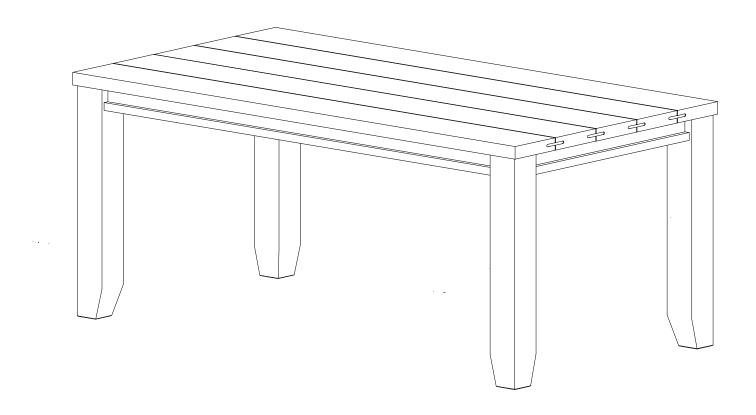

Thank you for purchasing this quality product from Kruger Moon. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call Super Amart 1800 351 084.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.

- Keep all hardware parts out of reach of children.

Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE



When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

Parts List		
Item	Description	Qty
А	Тор	1
В	Legs	4
1	Bolt (M8x70mm)	8
2	Lock washer (Φ8.5xΦ13mm)	8
3	Flat washer (Φ8.5xΦ19mm)	8
4	Allen key (4mm)	1


Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE



Step 1

Place legs (B) in position as shown below. Use bolts (1) and washers (2),(3) to attach legs, tighten with the Allen key (4).

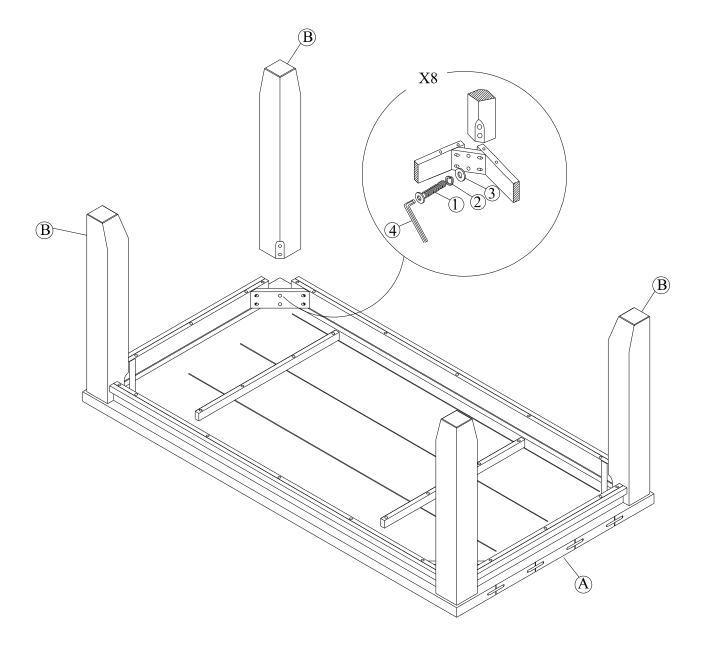


Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE



STEP 2

Now carefully turn dining table over to the upright position, ensuring this step is carried out with two strong people at each end of the table. Take extra care not to lean the table on 2 legs as you move the table into its upright position as this may damage the table.

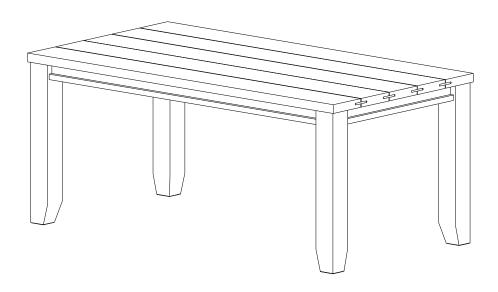

Now the job is complete!

Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE



IMPORTANT: CARE GUIDE FOR YOUR TIMBER FURNITURE

Congratulations! You have just purchased a quality product from Super Amart, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...

A multi-step finish is applied to all our furniture, but all wood comes from nature. Because of this, there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish.

These differences in character are not defects, but distinctions that make each piece of furniture unique.

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come.

- <u>Dust frequently with a clean damp lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting.
- <u>Do not expose your furniture to any liquids</u>. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs.
- <u>Do not allow plastic to come in direct contact with your furniture</u>. Chemicals in the plastic of placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.

Range : LE FRANSCHHOEK

Item : 2.1m DINING TABLE

