




**ASSEMBLY INSTRUCTION**  
**BLAZE ENTERTAINMENT UNIT**  
**ITEM CODE 65002**

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

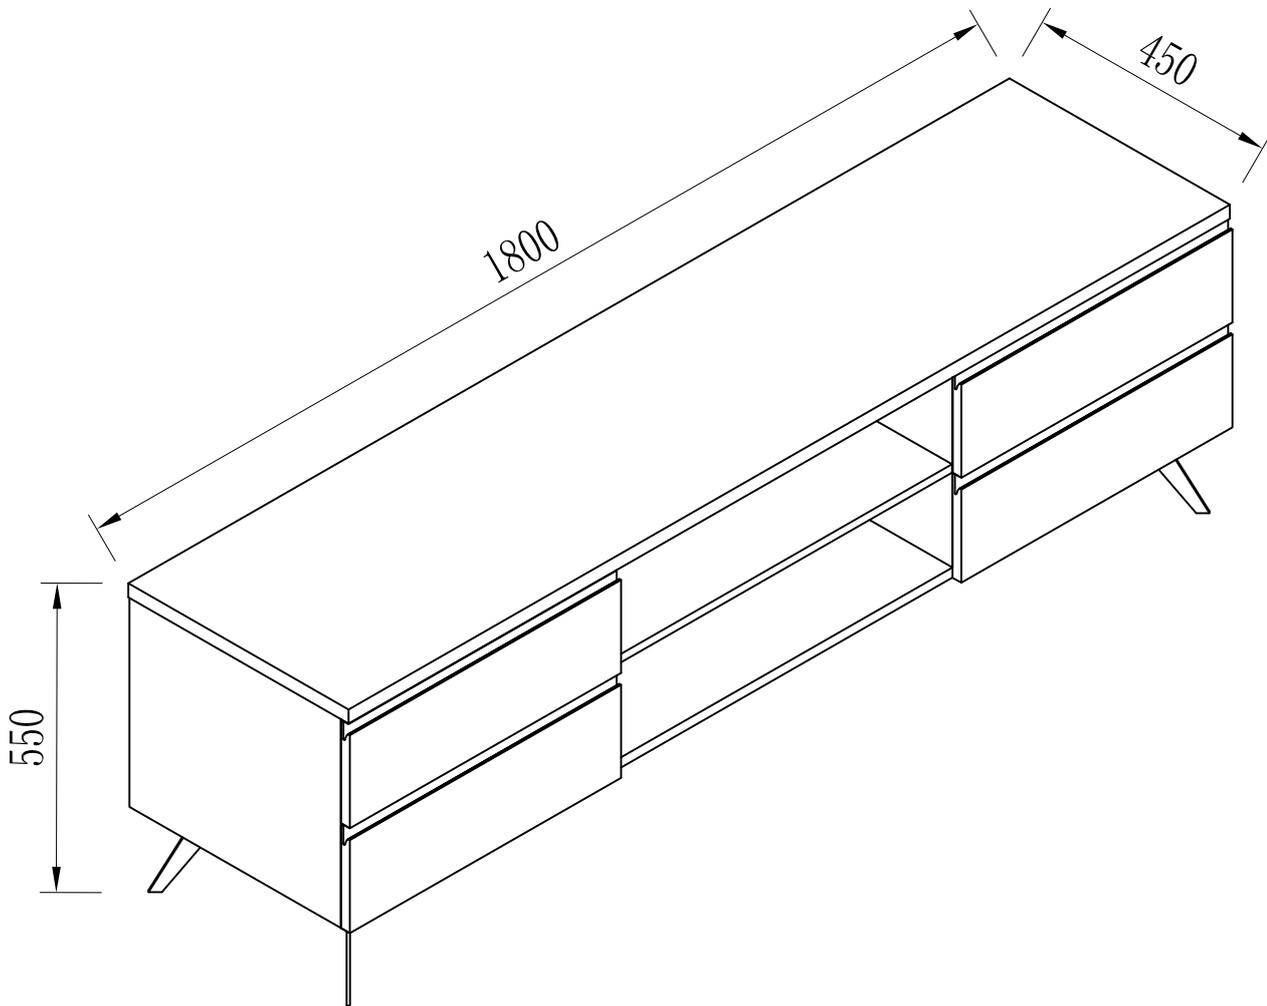



Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture  
Customer Service Free call 1800 351 084

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

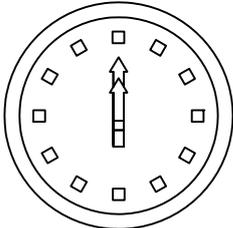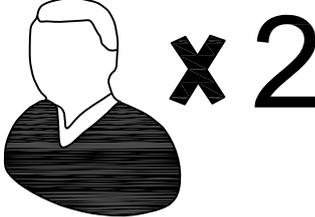 ALLOW 60 MINUTES	 2 PEOPLE REQUIRED
 ⊕ ADDITIONAL TOOLS REQUIRED	

 <b>TIPPING WARNING</b> 	
	<p>Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:</p> <ul style="list-style-type: none"><li>• Install the provided "Tipping Kit" as per the instructions</li><li>• Never allow children to climb on or hang off of any part of this product</li><li>• Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product</li></ul> <p>If this product has drawers:</p> <ul style="list-style-type: none"><li>• Place the heaviest items in lowest drawers</li><li>• Do not open more than 1 drawer at a time as this may cause the product to become unbalanced</li><li>• Do not tamper with or remove any drawer interlocking/running system</li></ul> <p><b>Note:</b> The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.</p> <p><i>This is a permanent label. Do not attempt to remove!</i></p>



# CAM Lock and Pins

## step 1

### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

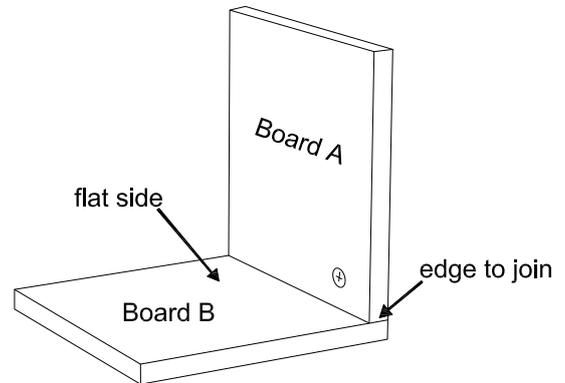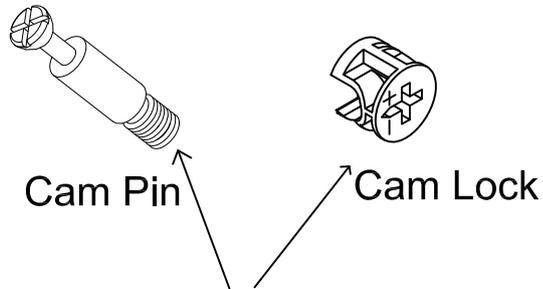


Ensure that you use the correct images that are representative of the hardware used in the product

## step 2

### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

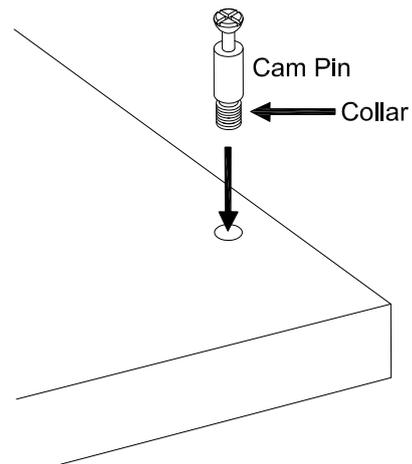

## step 3

### To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

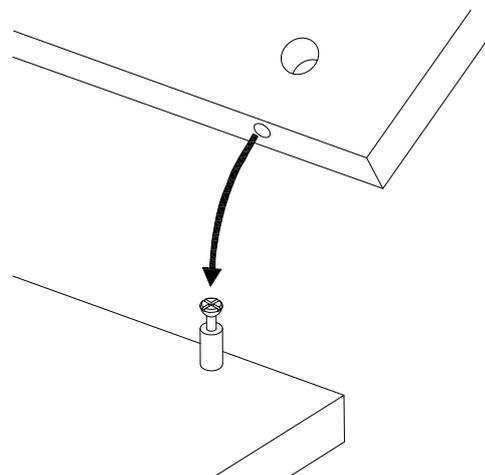


## step 4

### To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

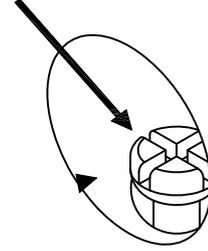

### To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin



Cam Lock


## step 5

### To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin

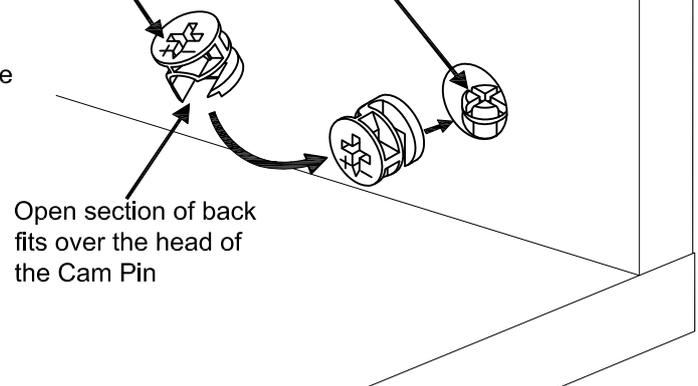


Open section of back fits over the head of the Cam Pin


## step 6

### To use Cam Lock Fasteners


Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

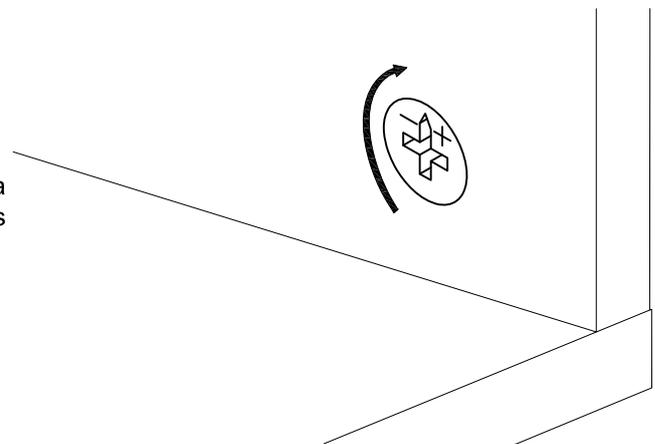

# PARTS LIST

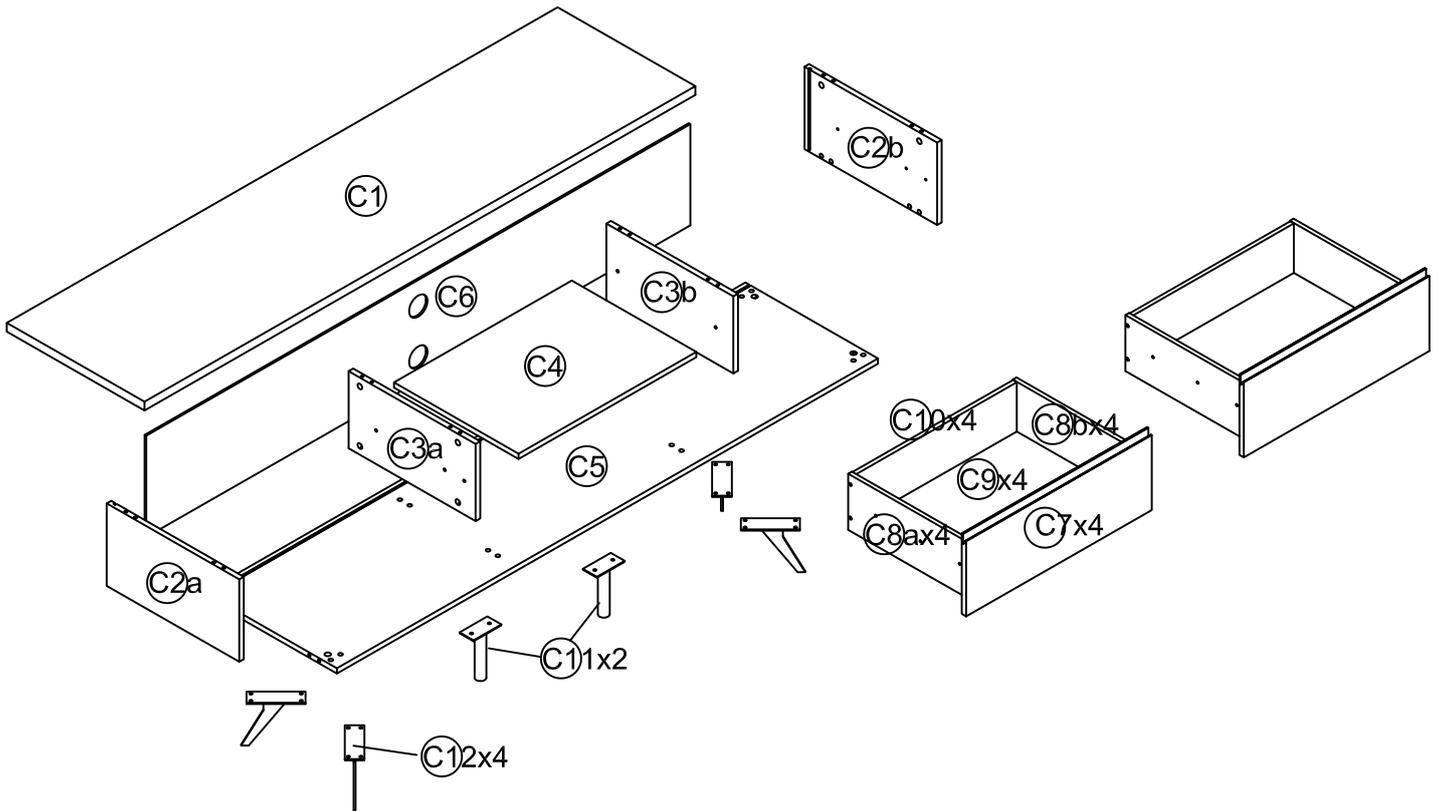

C1	Top Panel	C7	Drawer Front Panel
C2a	Left Side Panel	C8a	Drawer Left Side Panel
C2b	Right Side Panel	C8b	Drawer Right Side Panel
C3a	Support Panel	C9	Drawer Bottom Panel
C3b	Support Panel	C10	Drawer Back Panel
C4	Shelf Panel	C11	Middle Metal Legs
C5	Bottom Panel	C12	Metal Legs
C6	Back Panel		

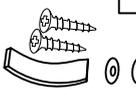
A. Cam lock and Cam pin Ø15X35  20PCS	B. Dowel Ø8X30  20PCS	C. Screw Ø3.5X12  48PCS	D. Screw Ø3X18  6PCS	E. Connector  6PCS	F. Bolt M6x15  20PCS	G. Washer  20PCS
H. Screw Ø3.5X30  16PCS	I. Hex key M4  1PCE	J. Belt  2PCS	K. Runner 350mm  8PCS	L. Cam lock and Cam pin Ø12X27  16PCS	M. Screw Ø3.5X16  4PCS	

**65002**


**STEP 1:**

Runner slide separately ( $K=K1+K2$ )


Carefully pull out the runner slide ( $K2$ ) and press plastic clip to fully separate runner slide as diagram shown

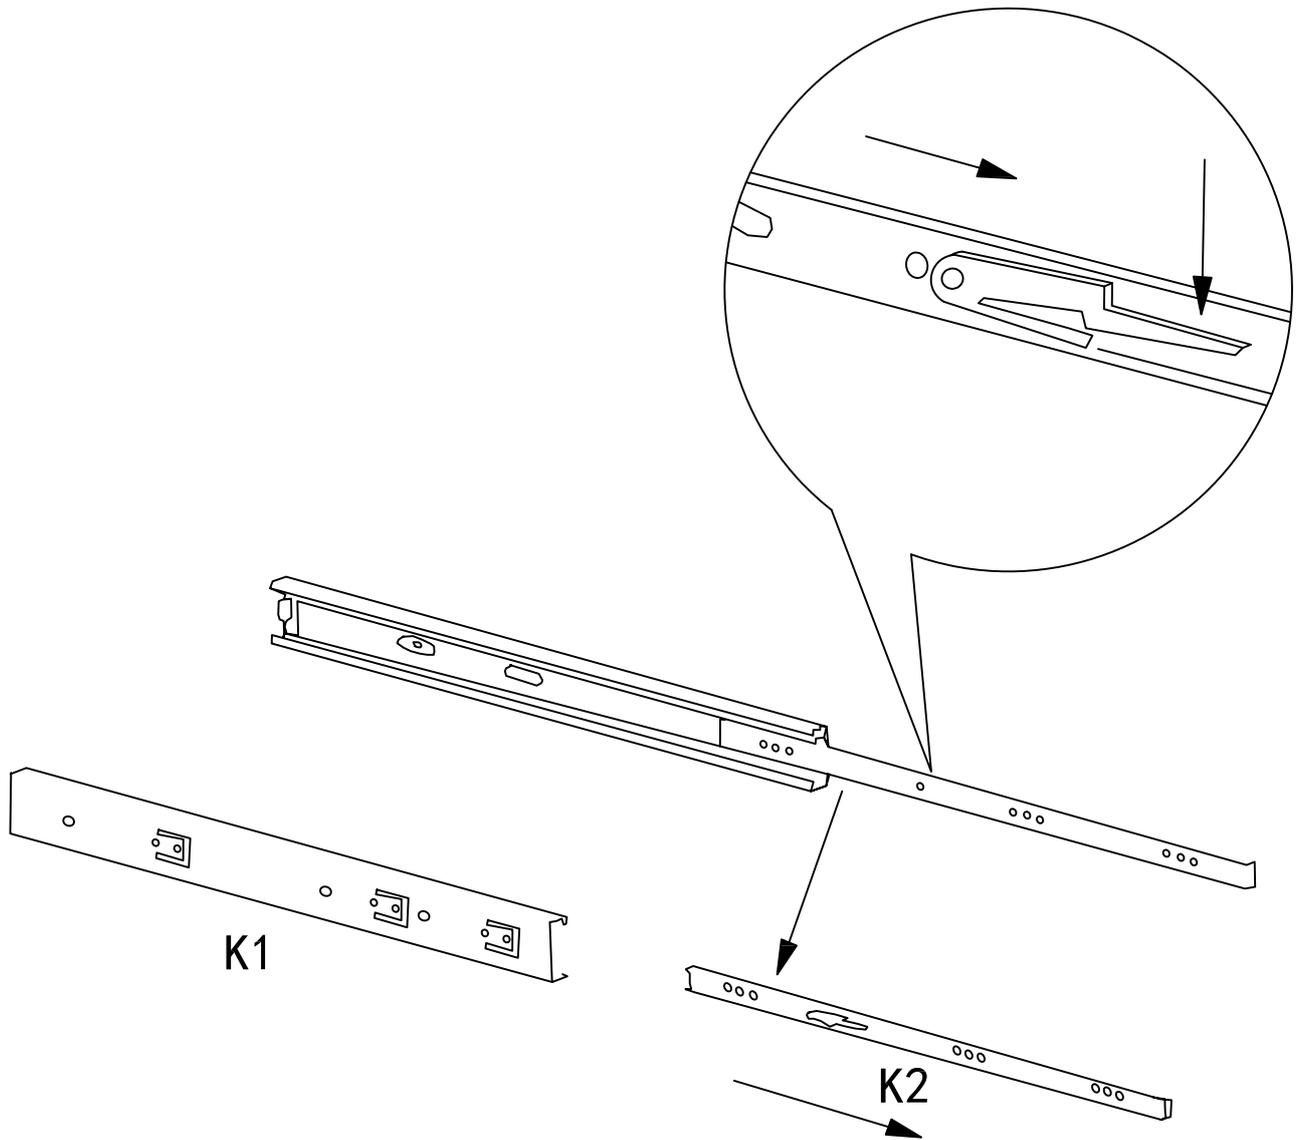


STEP 2: Tighten the Runner(K1)to the Support Panel(C3a,C3b)and Left Side Panel(C2a)and Right Side Panel(C2b)with Screw(C).Insert the Dowel(B)to the Support Panel(C3a,C3b) and the Side Panels(C2a,C2b).Insert the Cam Pin(A)to the Side Panels(C2a,C2b)

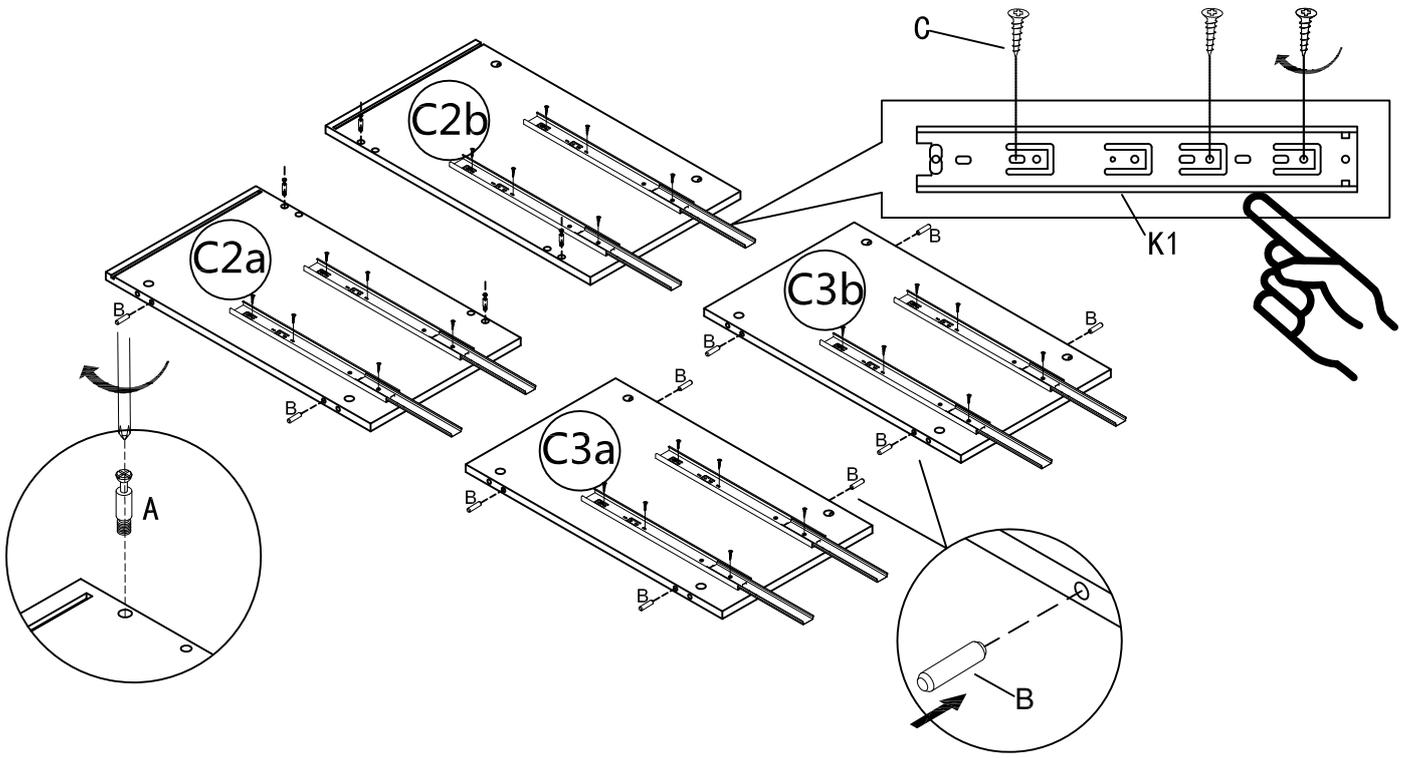


STEP 3: Insert the Cam Pin(A)and the Dowel(B)to the Top and Bottom Panel(C1,C5).

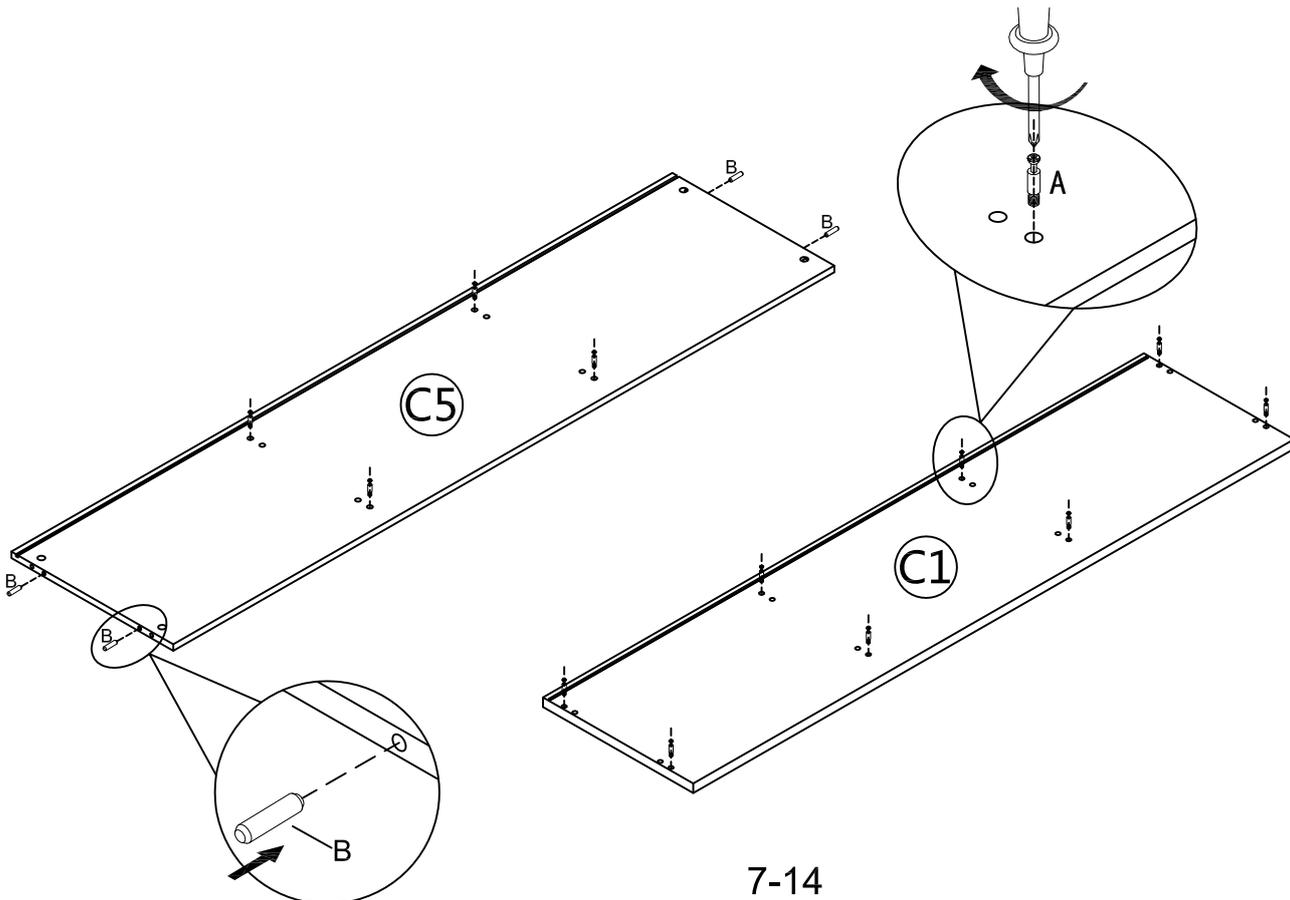

STEP 4: Insert the Cam Pin(A)and Dowel(B)to the Support Panels(C3a,C3b).Insert the Cam lock(A)in to the large hole of Shelf Panel(C4) Use a Phillips Head Screw driver to turn the Cam lock(A) to lock onto the head of the Cam Pin(A)

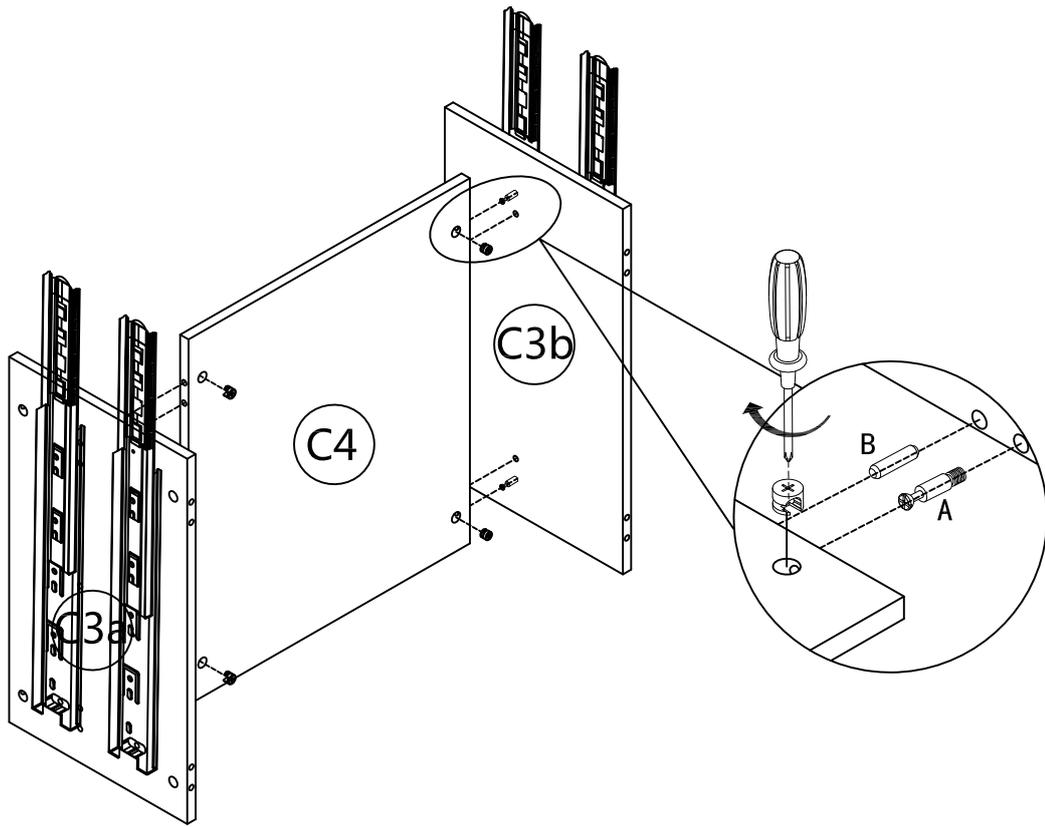


STEP 5: Insert the Cam Lock(A)into the Large hole of Support Panels(C3a,C3b) . Use a Phillips Head screwdriver to turn the Cam Locks into the head of the Cam Pin.

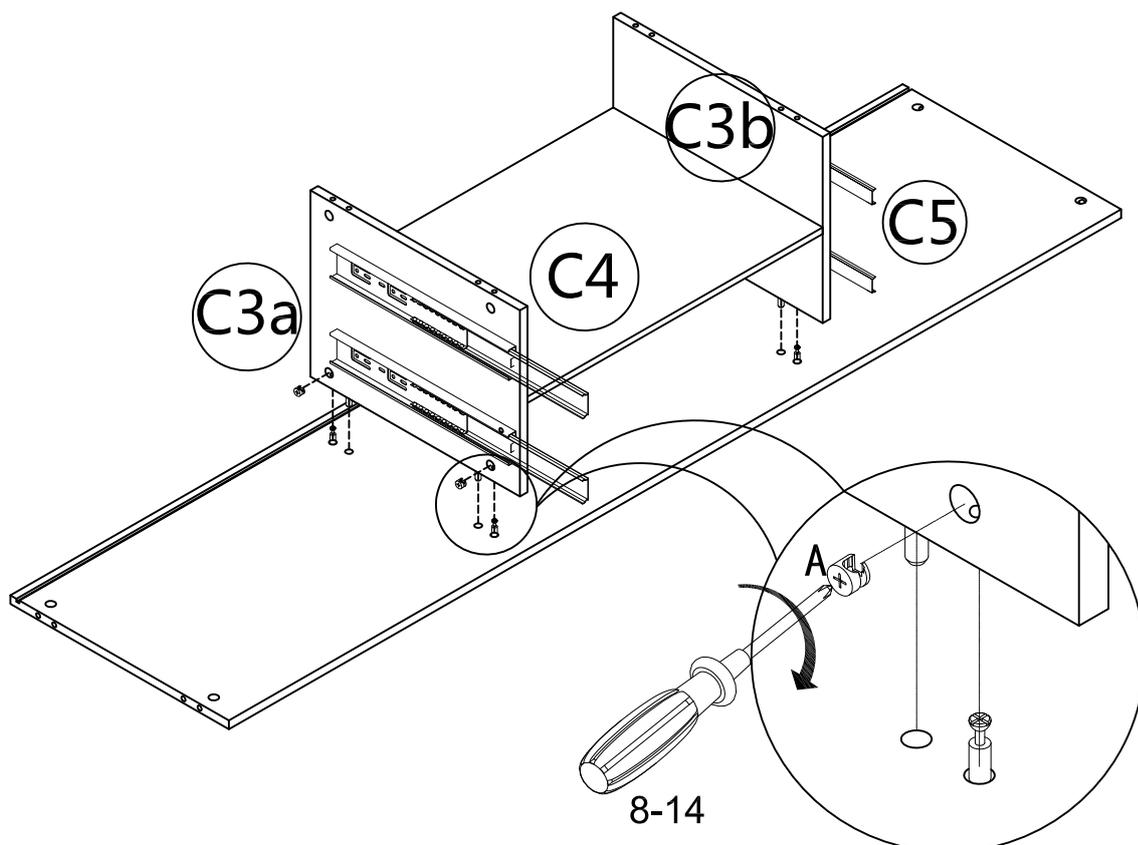


65002


STEP 6: Insert the Cam Lock(A)into the large hole of Bottom panel(C5).Use a Phillips Head Screwdriver to turn the Cam Lock(A)to locks onto the head of Cam Pin(A).

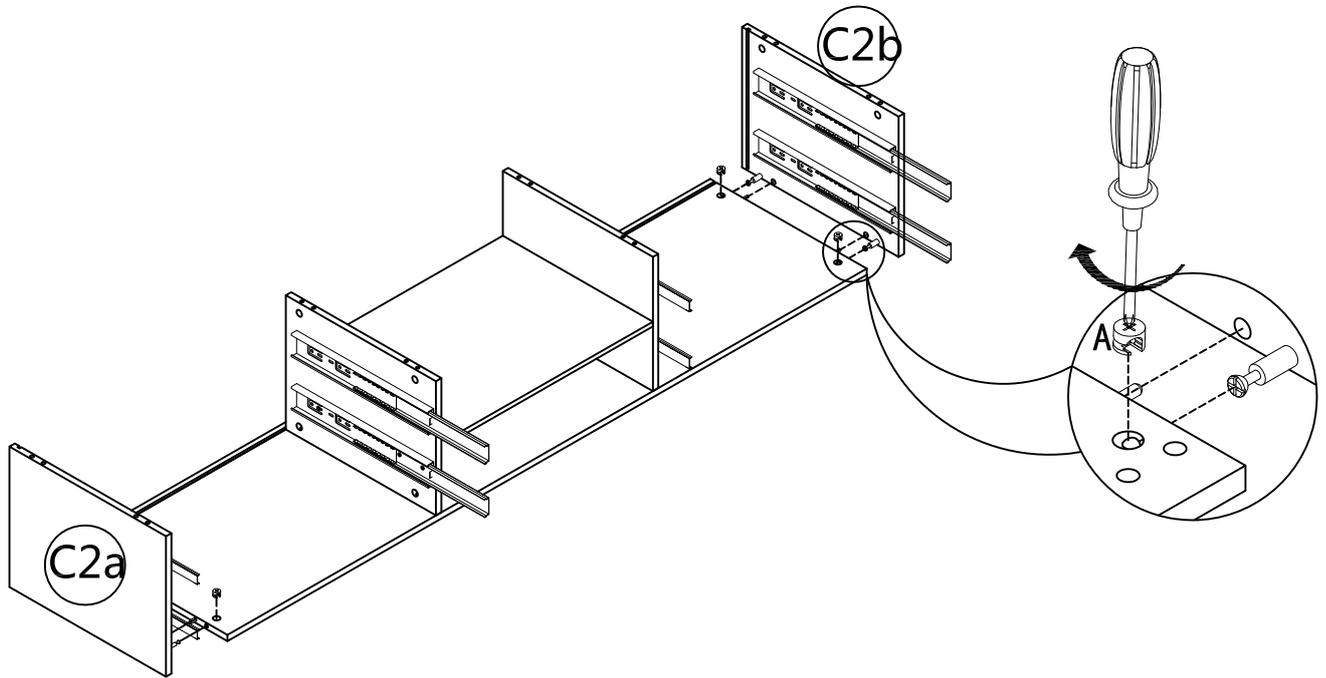


STEP 7: Insert the Back Panel(C6) to Left Side Panel(C2a)and Right Side Panel(C2b) and Bottom Panel(C5).

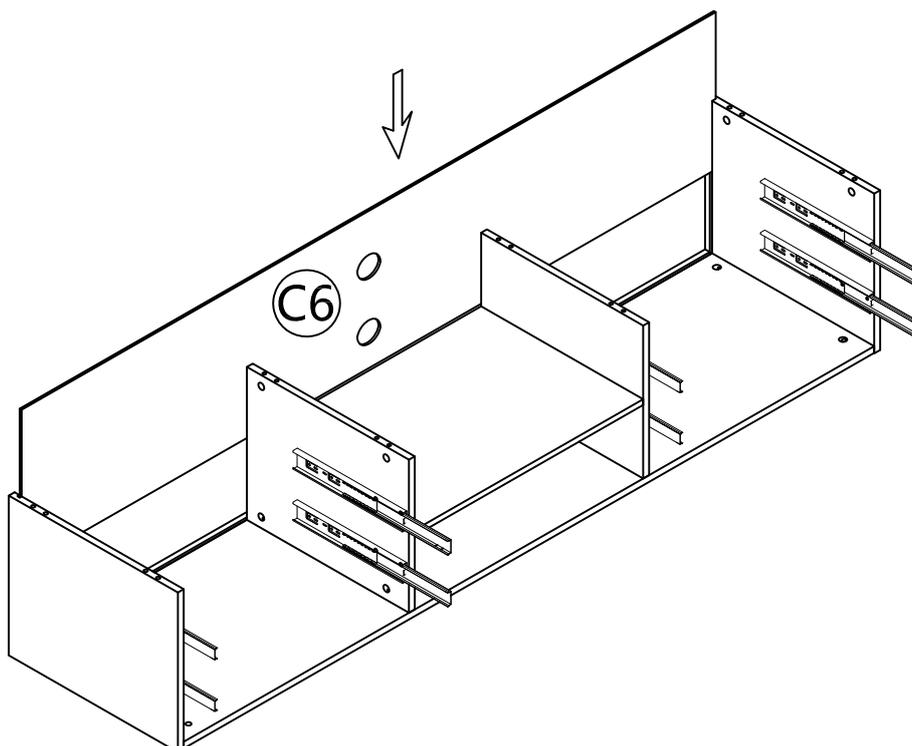

STEP 8: Insert the Cam Lock(A)into the large hole of Side Panels(C2a,C2b).Use a Phillips Head Screwdriver to turn the Cam Lock(A) to locks onto the head of Cam Pin(A).

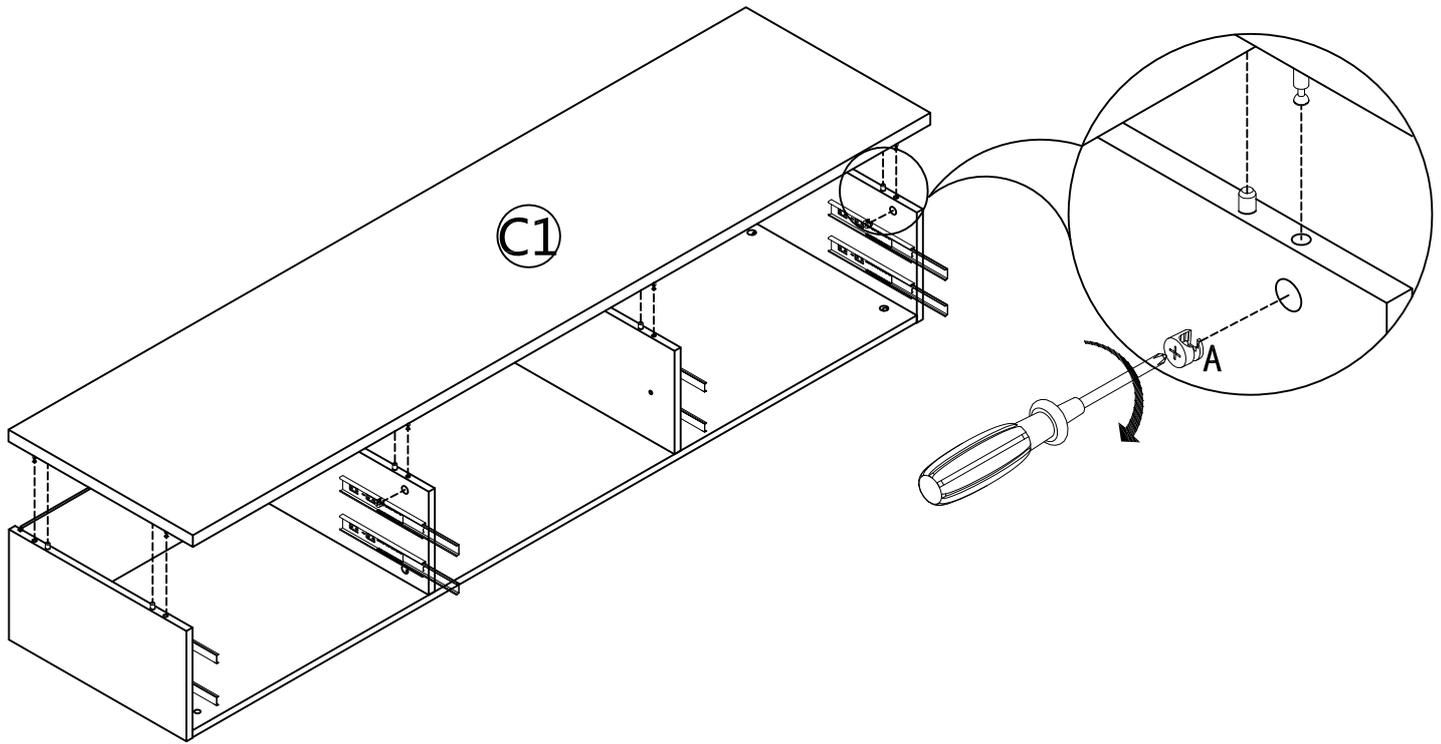


STEP 9: Put the Bolt(F)through the Washer(G),the Use the Hex Key(I) to tighten the Metal Legs(C11,C12) to the Bottom Panel(C5).

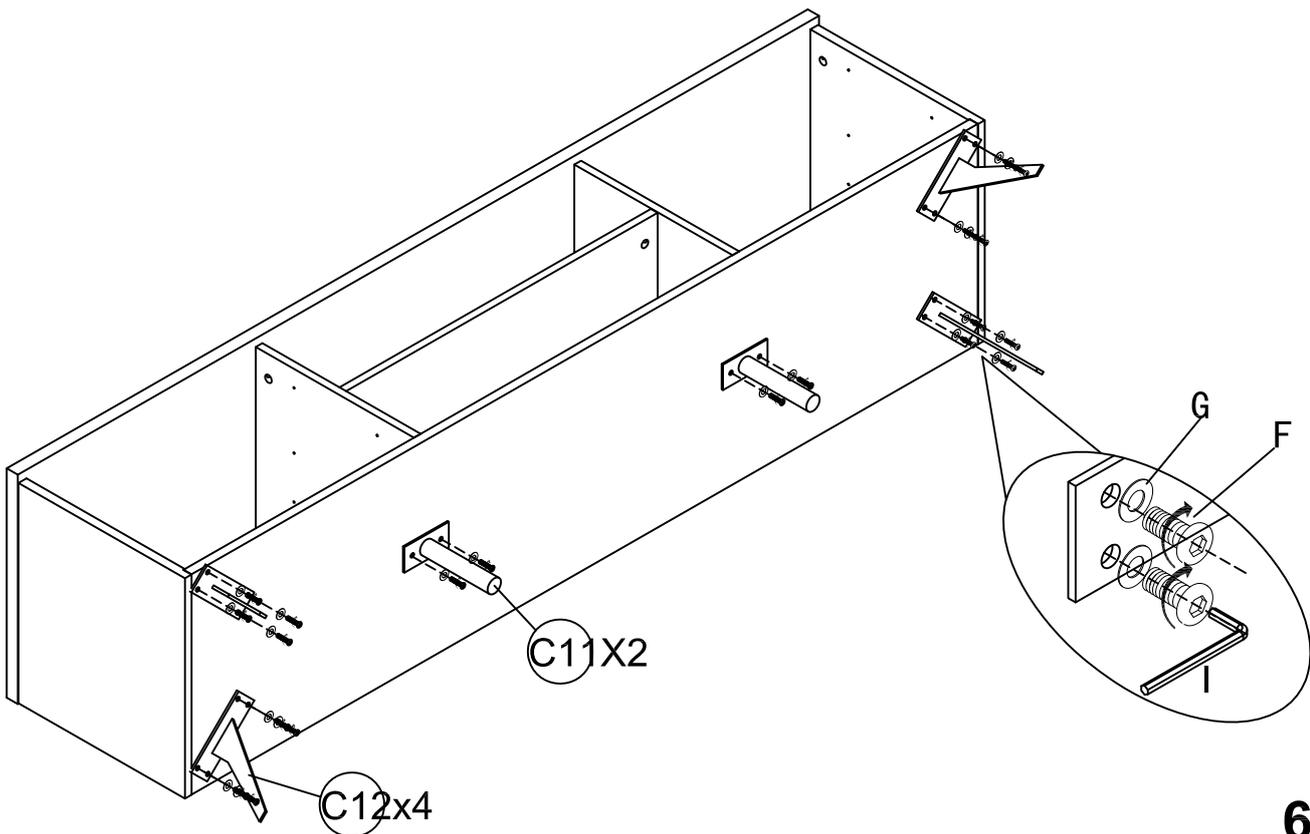


**65002**

STEP 10: Use a Phillips Head Screwdriver to tighten the Connector(E)to the corner of back with screw(D).use a Phillips Head Screwdriver to tighten the Belt(J)to the Back Panel(C6) with Screw(J).

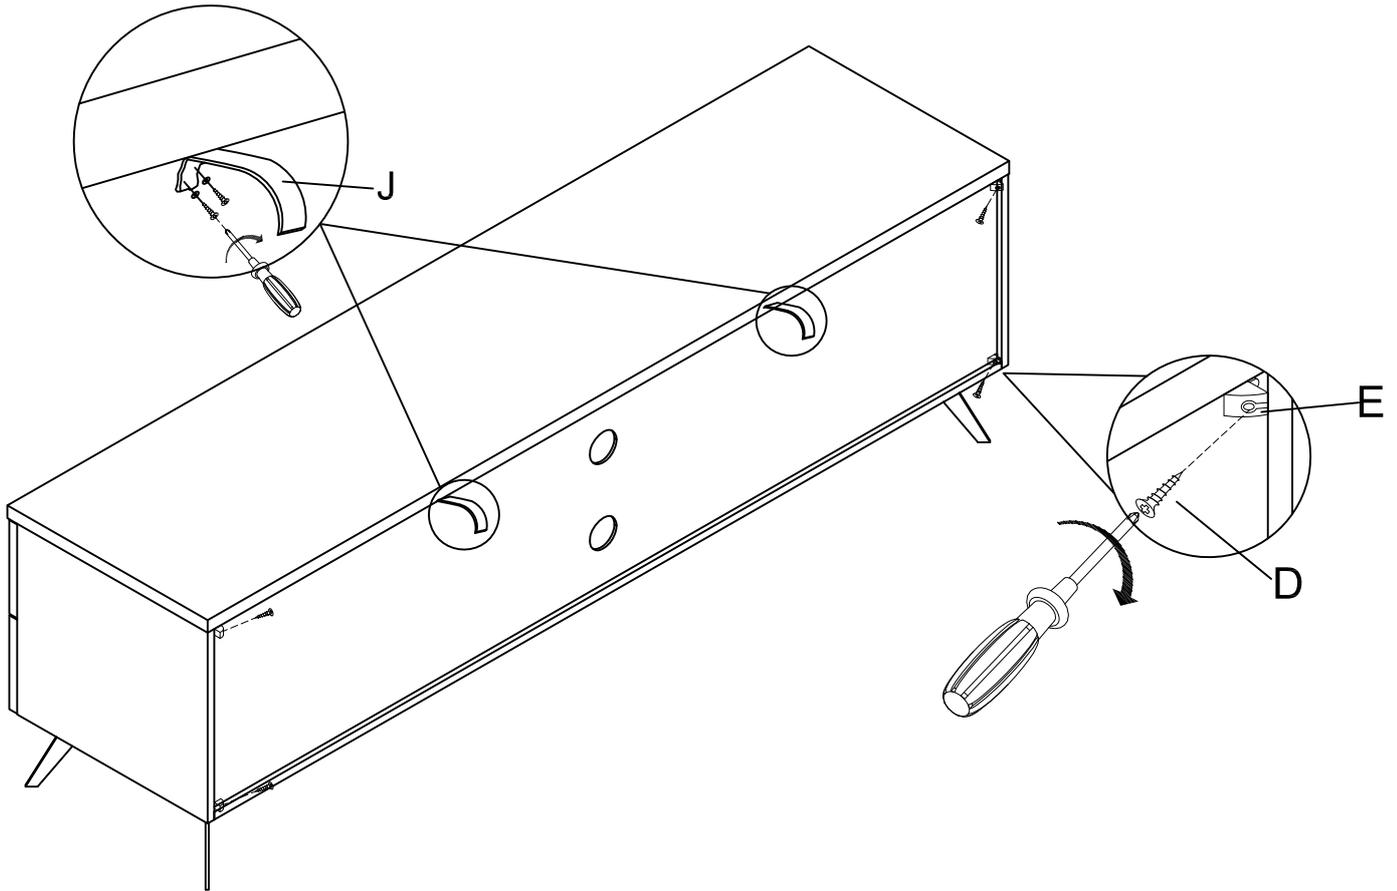


STEP 11: Insert the Cam Pin(L)to the Drawer Front Panel(C7). Insert the Cam Lock(L)to the large hole of the Drawer Side Panels(C8a,C8b). Use a Phillips Head Screwdriver to turn the Cam Lock(B) to lock onto the head of Cam Pin(L).

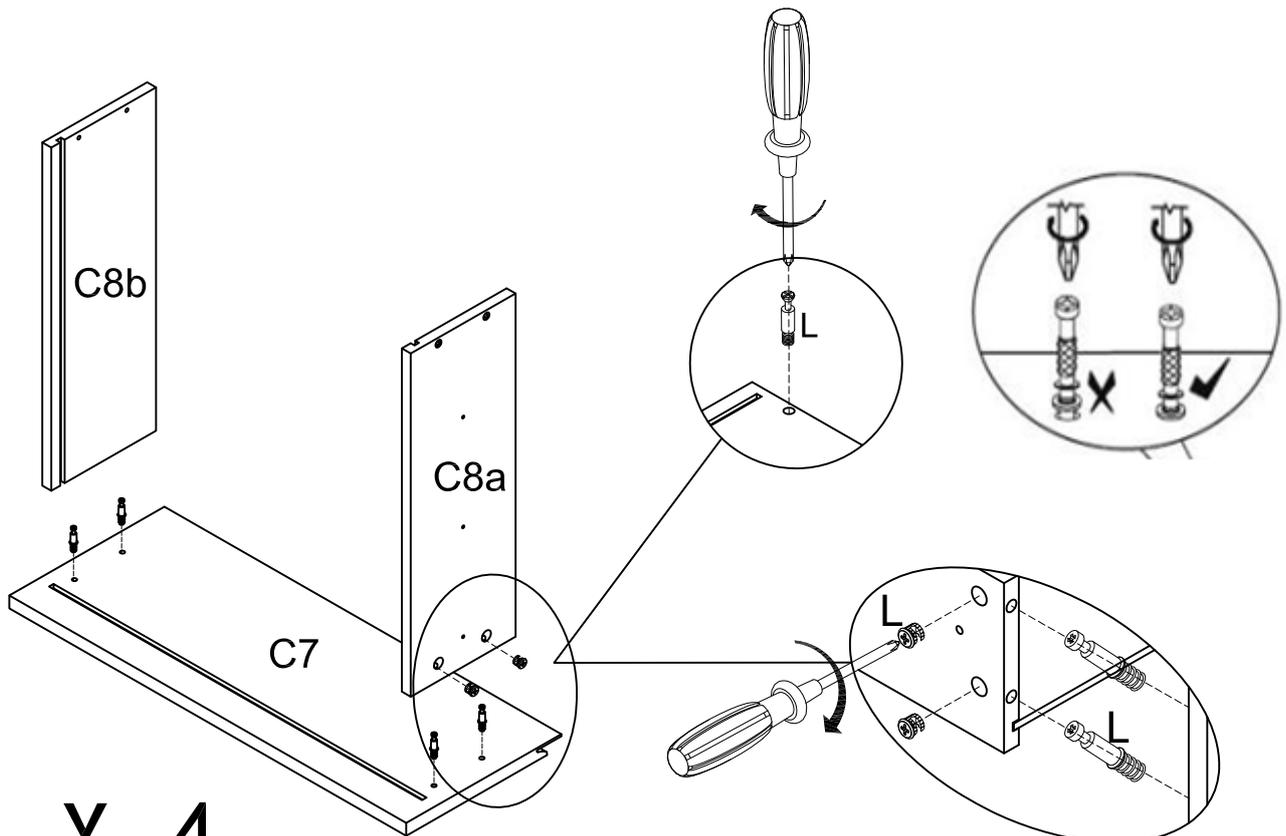


X 4

STEP 12: Insert the Drawer Bottom Panel(C9)to the Drawer Side panel(C8a,C8b) and Drawer Front Panel(C7). Use a Phillips Head Screwdriver to tighten Drawer Side panel(C8a,C8b) to the Drawer Back Panel(C10) with Screw(H)

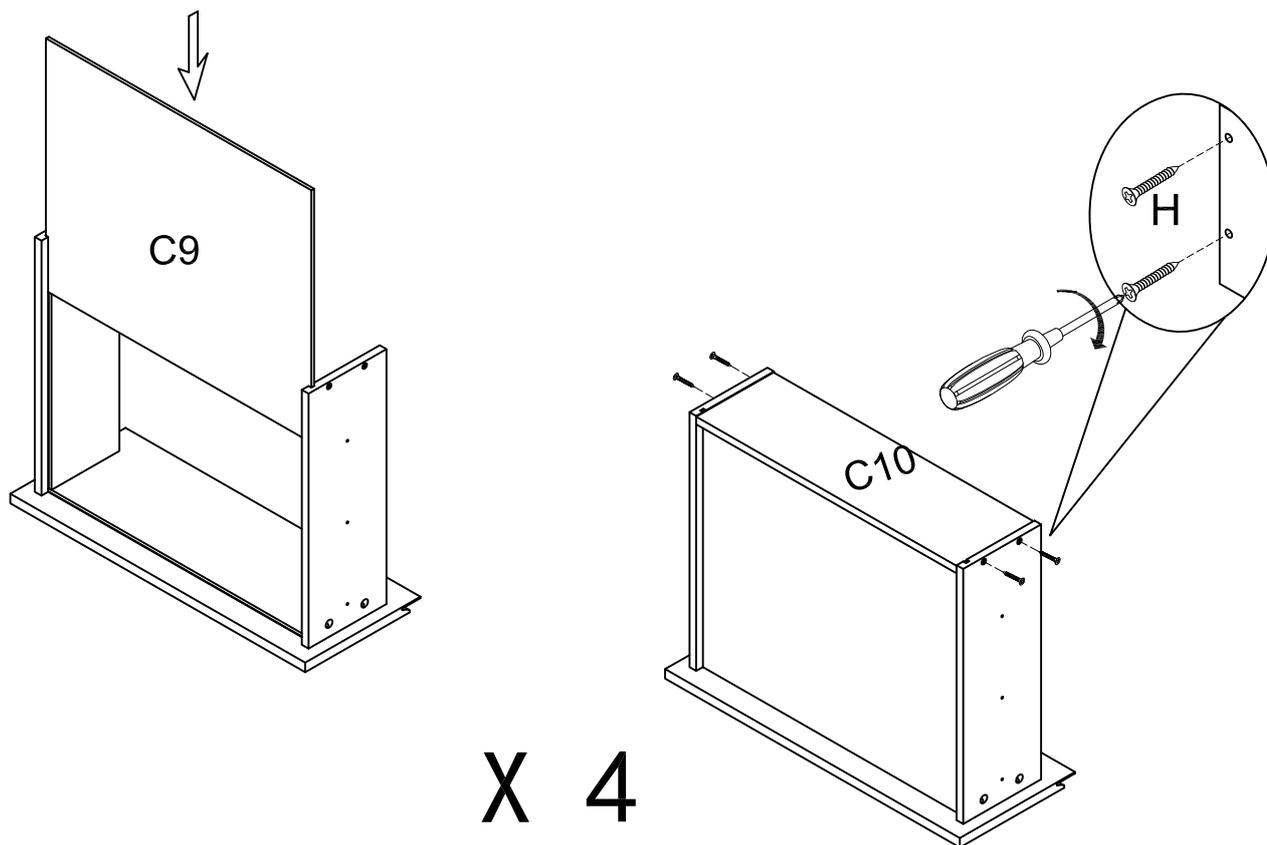


STEP 13: Use a Phillips Head Screwdriver to tighten Runner(K2)to the Drawer Side Panel(C8a.C8b) with Screw(C).

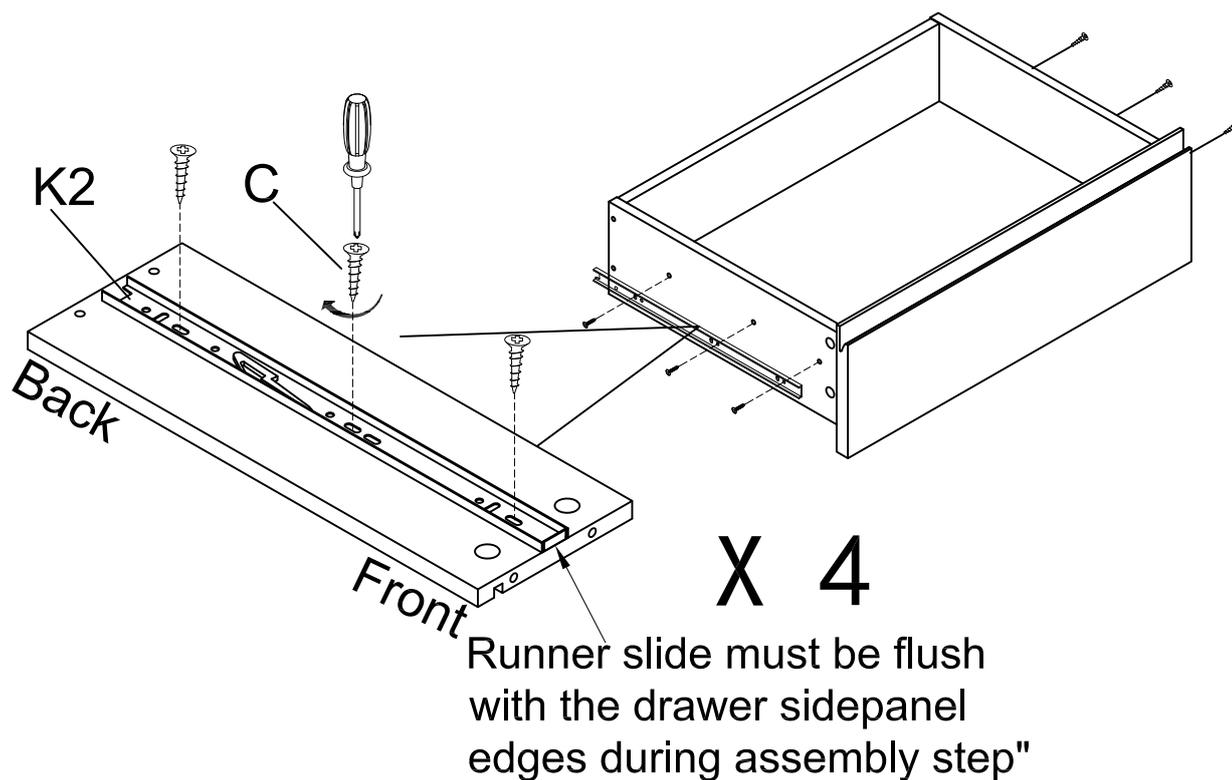


**65002**

STEP 14: Insert the Drawers to the Body. Use Phillips Head Screwdriver tighten the Belt(M) to the wall with Screw(M).

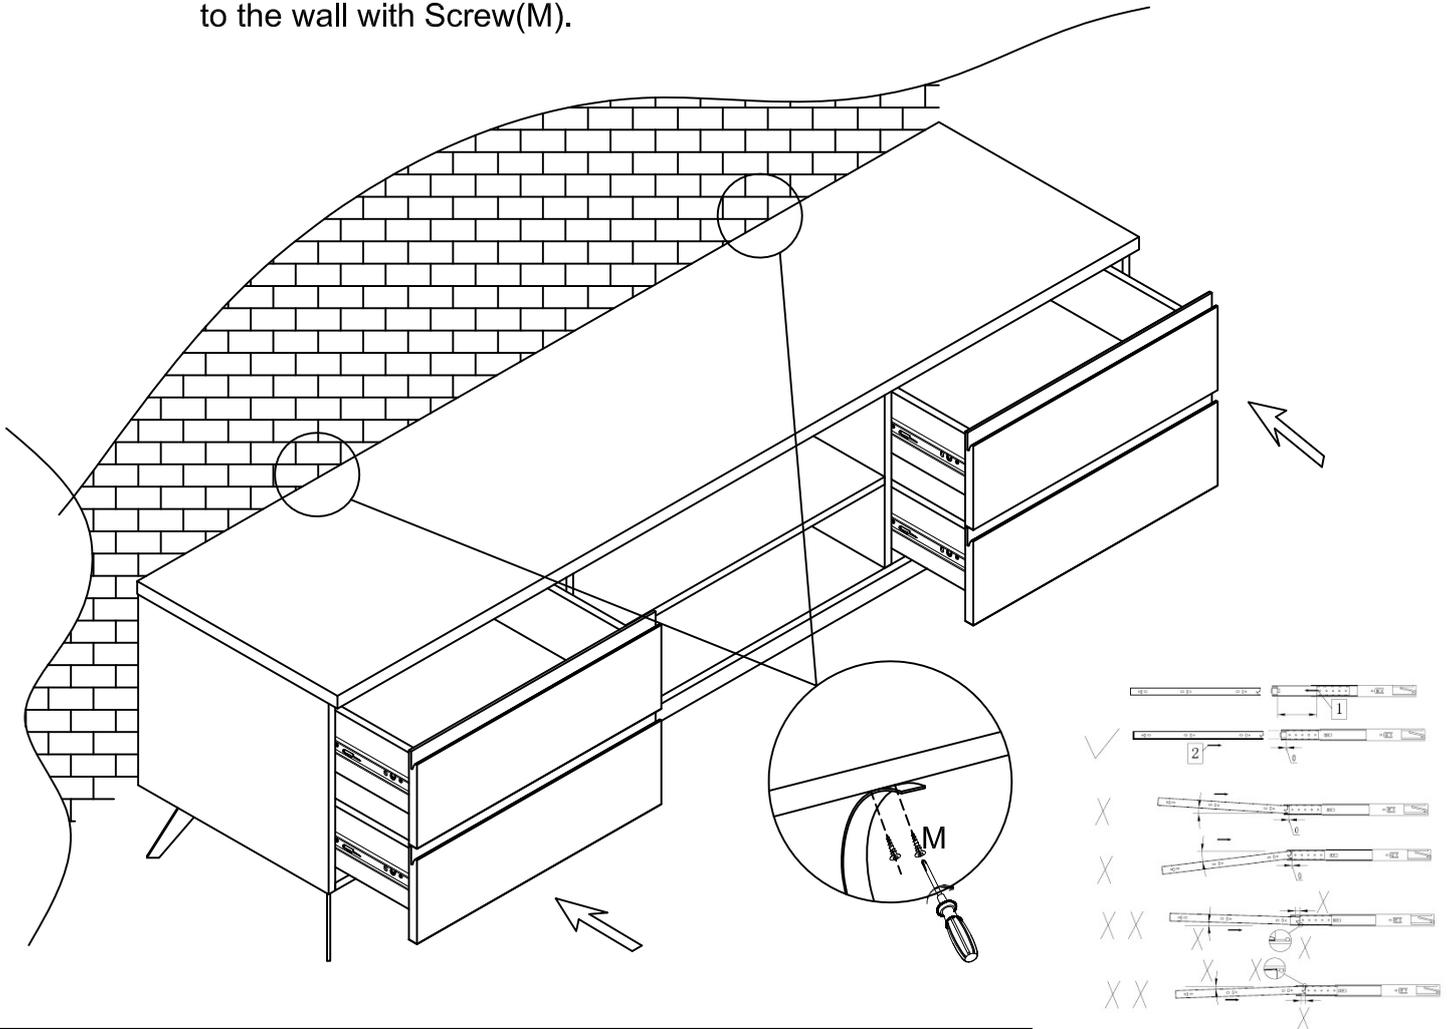


**Assembly is complete**

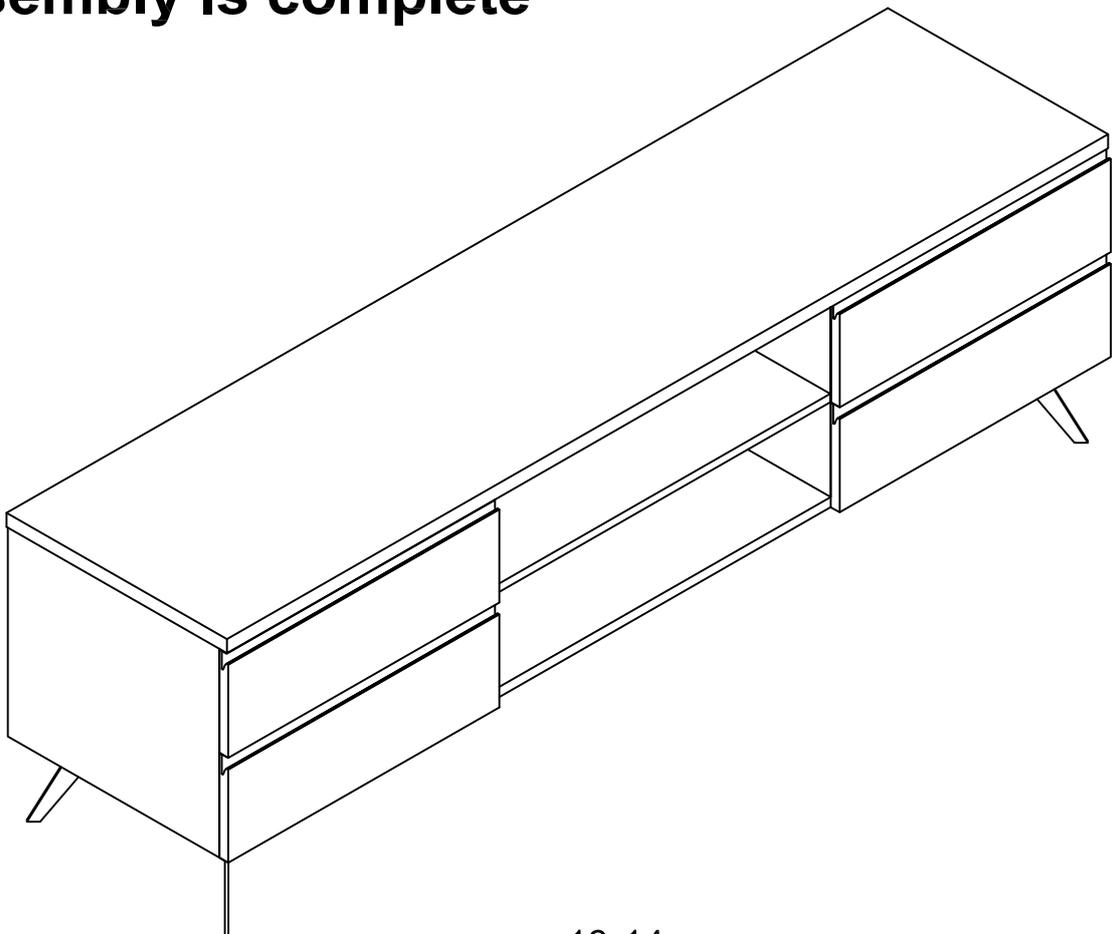

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

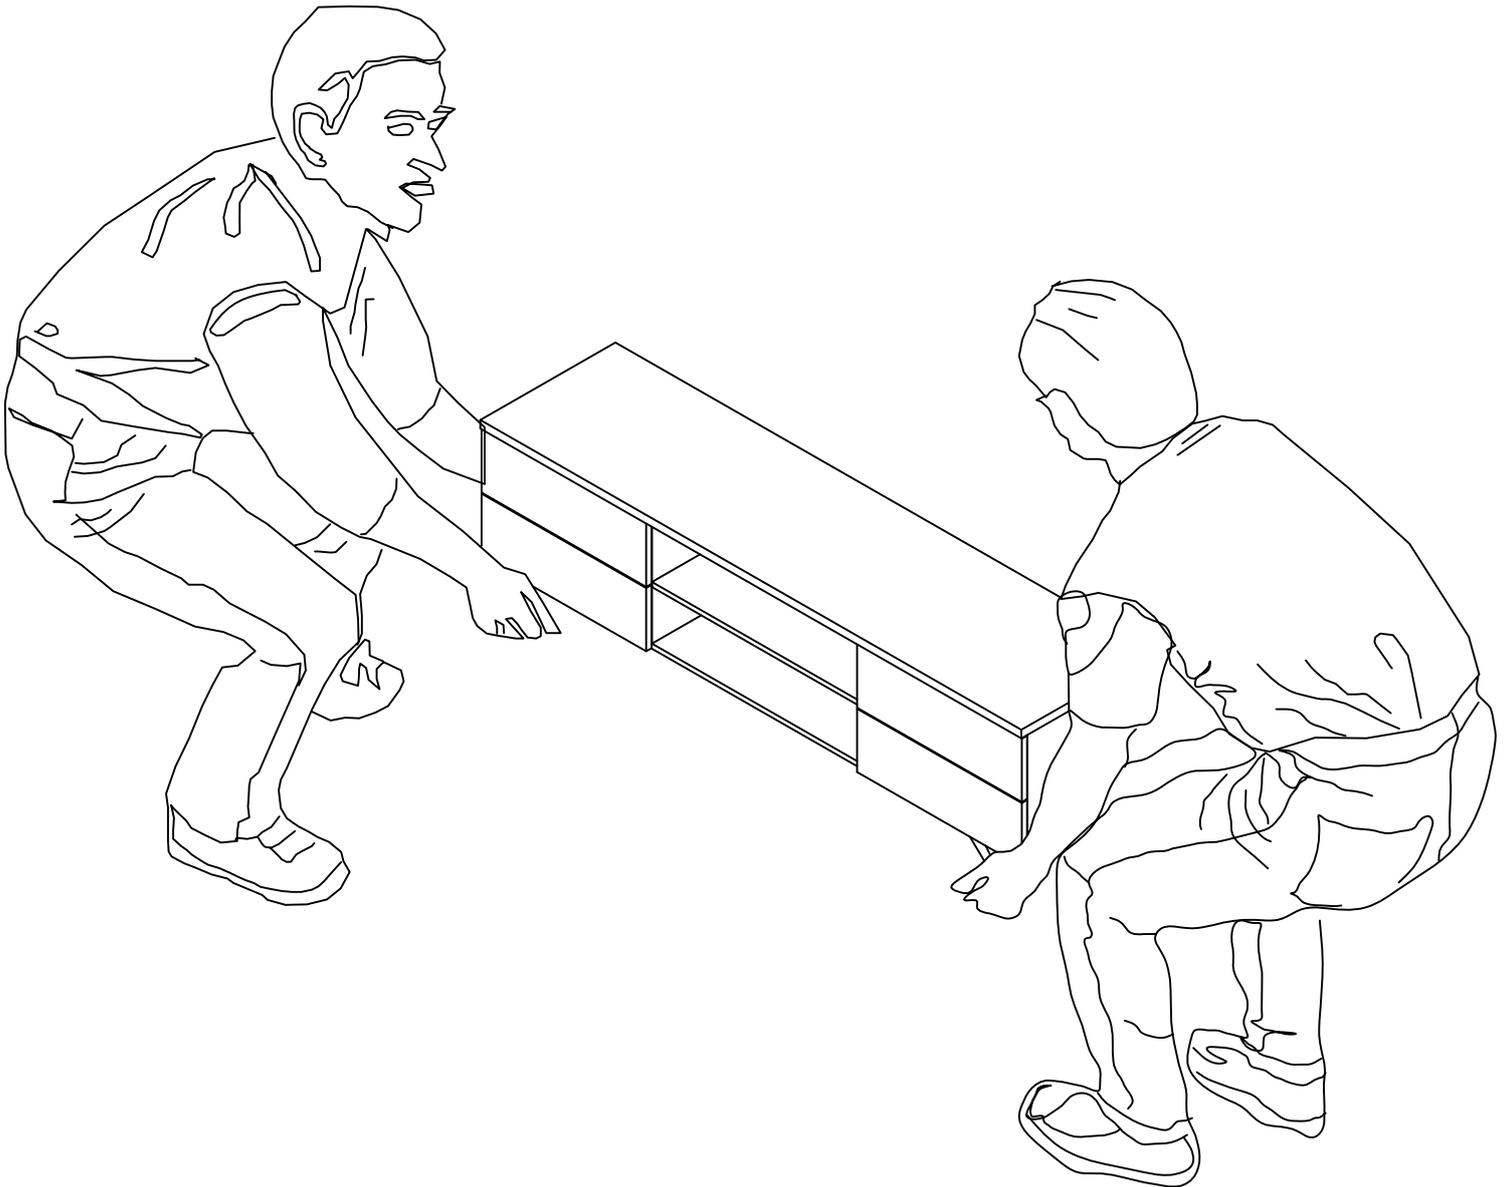

## **IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE**

*Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...*

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.