


ASSEMBLY INSTRUCTION NOTTINGHAM DINING CHAIR ITEM CODE 61337

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

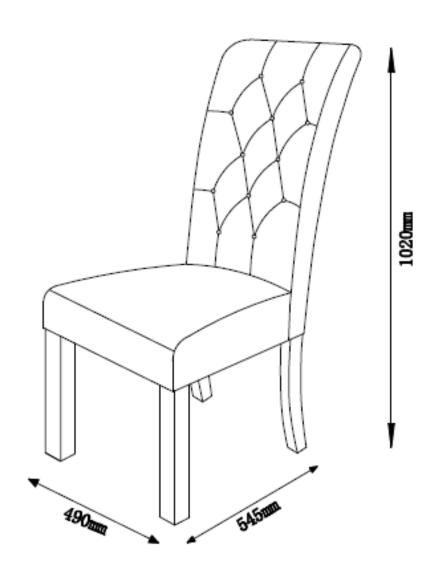


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION


Before you start:

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

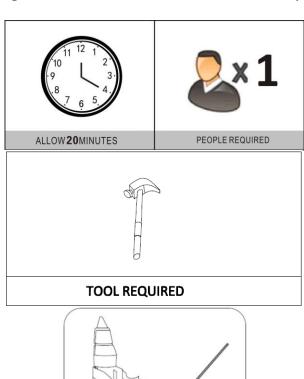




PARTS LIST

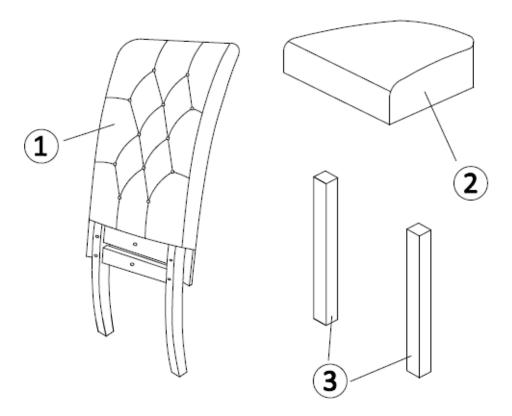

1	BACK FRAME
2	BOX SEAT
3	LEGS

A. BOLT 1/4"X50MM	B. BOLT 1/4"X60MM	C. ALLEN KEY	D. FLAT WASHER
(a) Million (b) 8PCS	(a) (a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	1PCS	O 10PCS
		2.00	10103
E. LOCK WASHER	F. FOOT NAIL		
10PCS	4PCS		


STEP1 Locate the corners of the box seat opposite to the center hole. Insert the legs(3) into the corners of the box seat(2). Assemble bolts (A), lock washer (E) and flat washers (D) through each corner block of the box seat (2) using Allen Key (C).

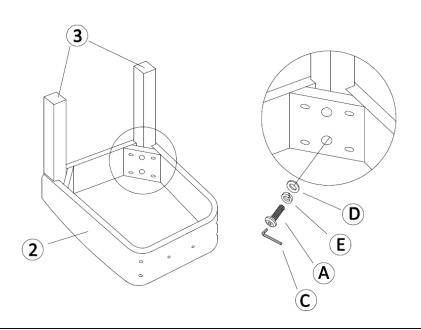


STEP2 Place the box seat (2) on the back frame (1).

Assemble the bolts (B), lock washer (E) and flat washer (D) on to the back frame (1), using Allen Key (C).


Do not tighten bolts at this point.

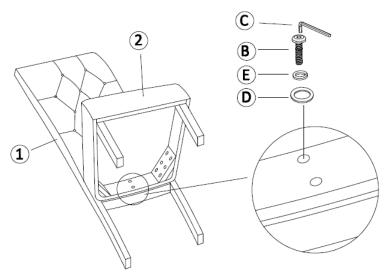

STEP3 Assemble bolts (A), lock washer (E) and flat washer (D) through each corner block of the box seat (2) to the back frame(1). Do not tighten the bolts at this point in time.

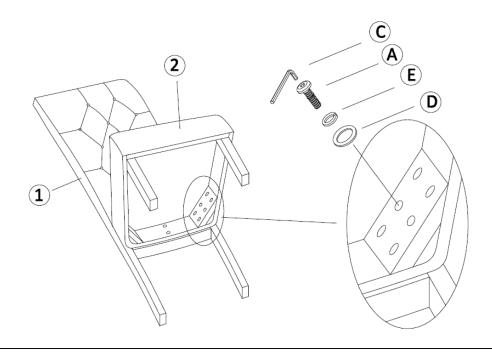


STEP4 Assemble foot nail (F)on the bottom of each leg with hammer.

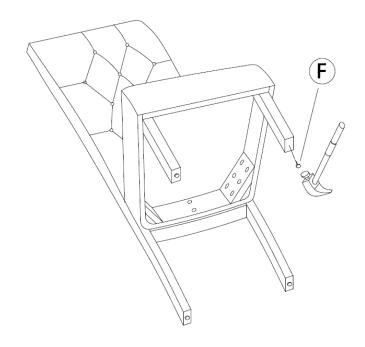

STEP5 Carefully turn the chair over, and put the chair on the floor.

Tighten each loose bolt a little at a time while marking sure the chair remain level. Repeat until all loose bolts are tight.

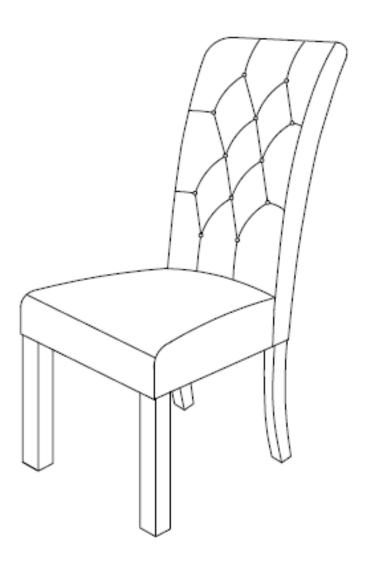

ASSEMBLY IS COMPLETE

Care and maintenance

REGULAR CARE:

- · Protect from direct sunlight
- Vacuum regularly using low suction
- · Rotate reversible cushions regularly

CLEANING:

- Do not remove cushion covers for separate cleaning even though they may have zippers
- Do not wash , Do not dry clean , Do not shampoo clean
- · Clean with hot water extraction machine. Professional cleaning recommended
- · Do not use dishwashing liquid or laundry detergent
- · Use only upholstery detergents
- Do not wet filling
- · Dry in shade away from direct heat and sunlight
- Allow to dry thoroughly before re-use

SPOT CLEANING:

- Do not rub
- · Do not spot clean with any solvent
- · Treat spills and stains as soon as possible
- · Gently scrape off any soil or mop any liquid from the surface of the fabric
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- Do not saturate the fabric or interior with water or other cleaning liquids

WARNING:

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

- * PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY
- * PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AN D IS EASILY REMOVED

Do not:

- · Use chair/stool as a ladder
- · Climb on the chair/stool
- Stand on the foot-rest of the chair, as this could lead to the stool becoming unbalanced and overturning