


ASSEMBLY INSTRUCTION JARVIE FIRE PIT WITH GRILL

ITEM CODE - 72229

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia . For any assistance with assembly or for missing parts please phone Amart Furniture , Customer Service Freecall 1800 351 084

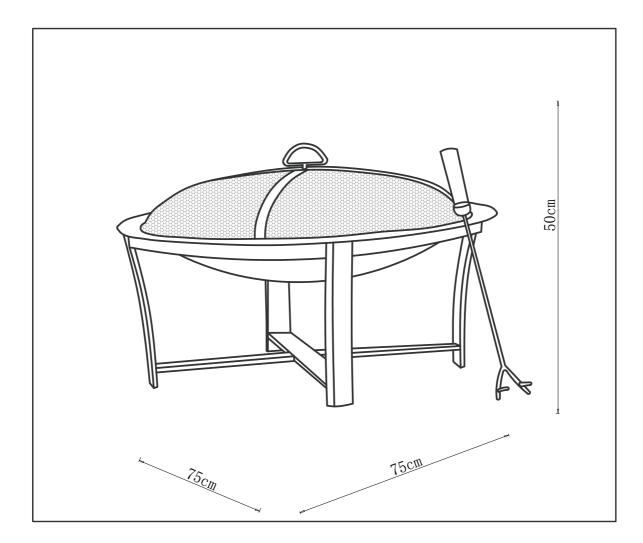


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia . For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Freecall 1800 351 084


PRE-ASSEMBLY PREPARATION

Before you start:


- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

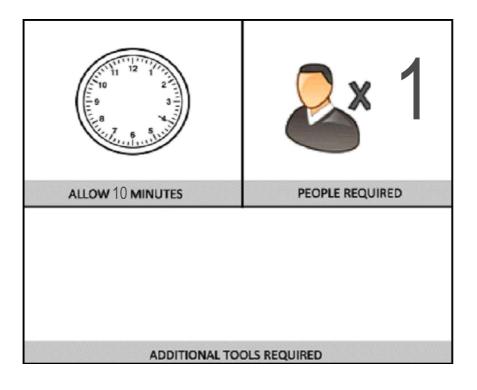


ITEM CODE 72229

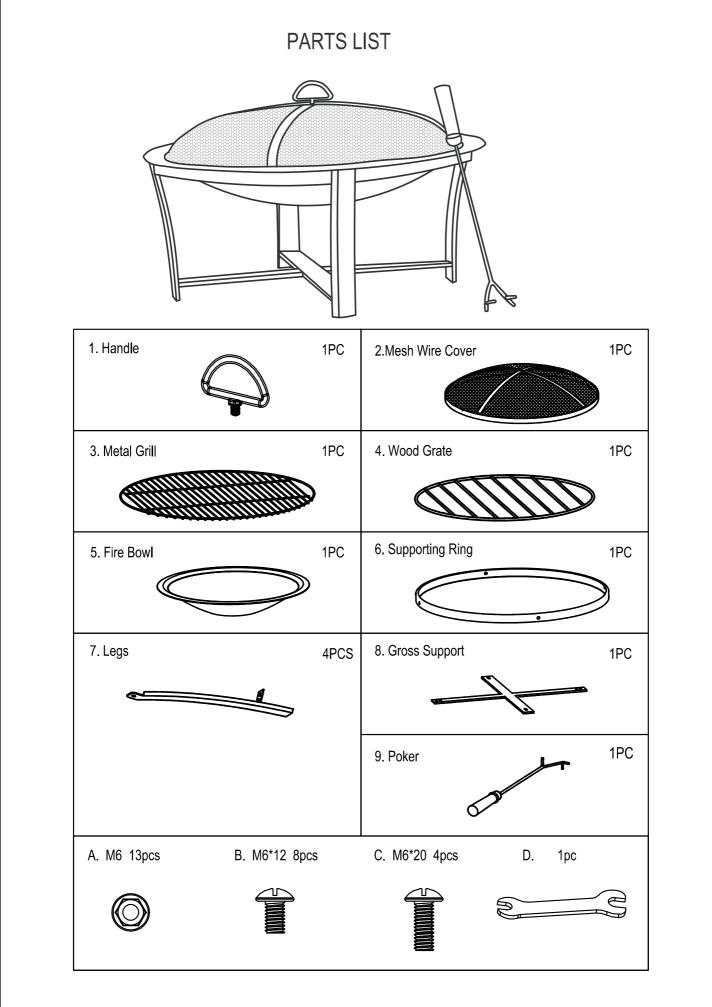


ITEM CODE 72229

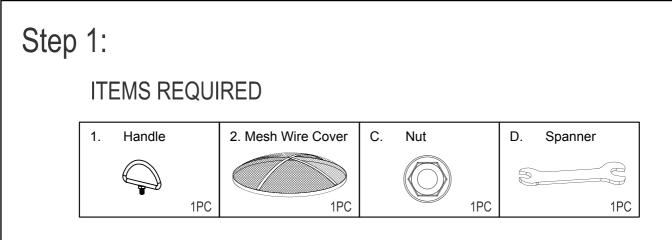



- Screw handle(1) into mesh wire cover(2), then lock them from the bottom of cover by nut (C).
- Tighten with spanner (D).

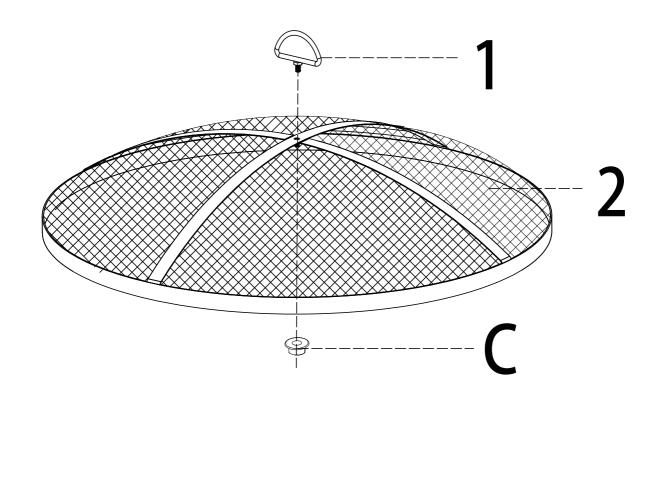

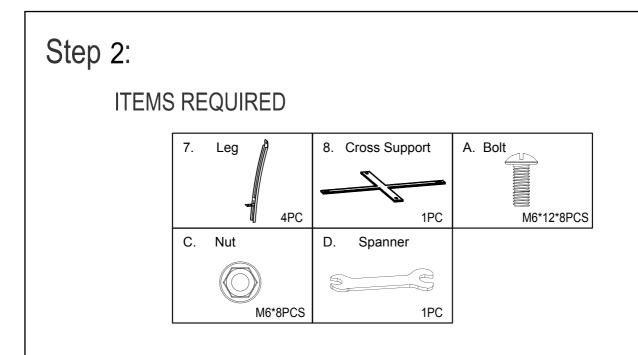



- Attach four legs (7) to cross support (8) using Bolt (A) and nut (C).
- Insert all bolts before fully tightening.
- Tighten with spanner (D).

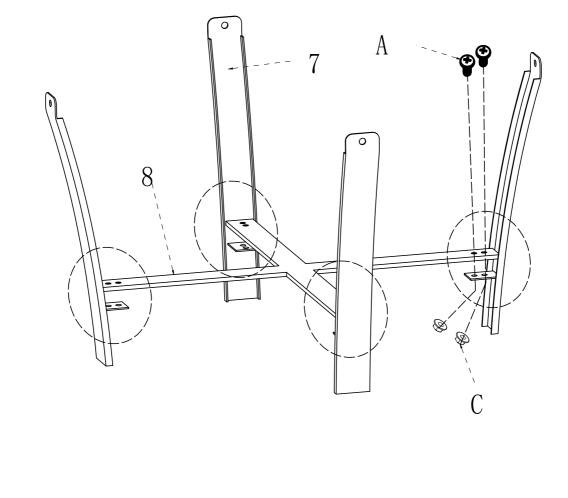


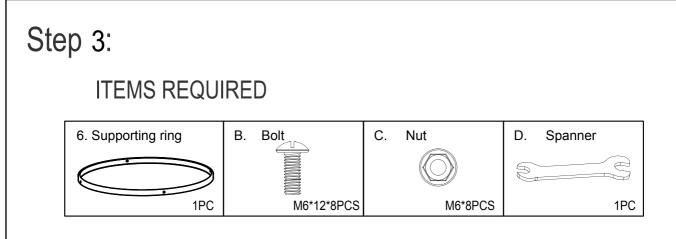

- Attach support ring (6) to fixed legs using bolt (B) and nut (C).
- Insert all bolts before fully tightening.
- Tighten with spanner (D).

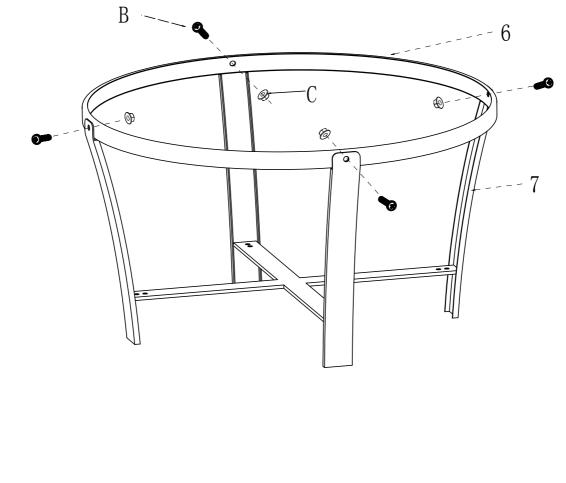

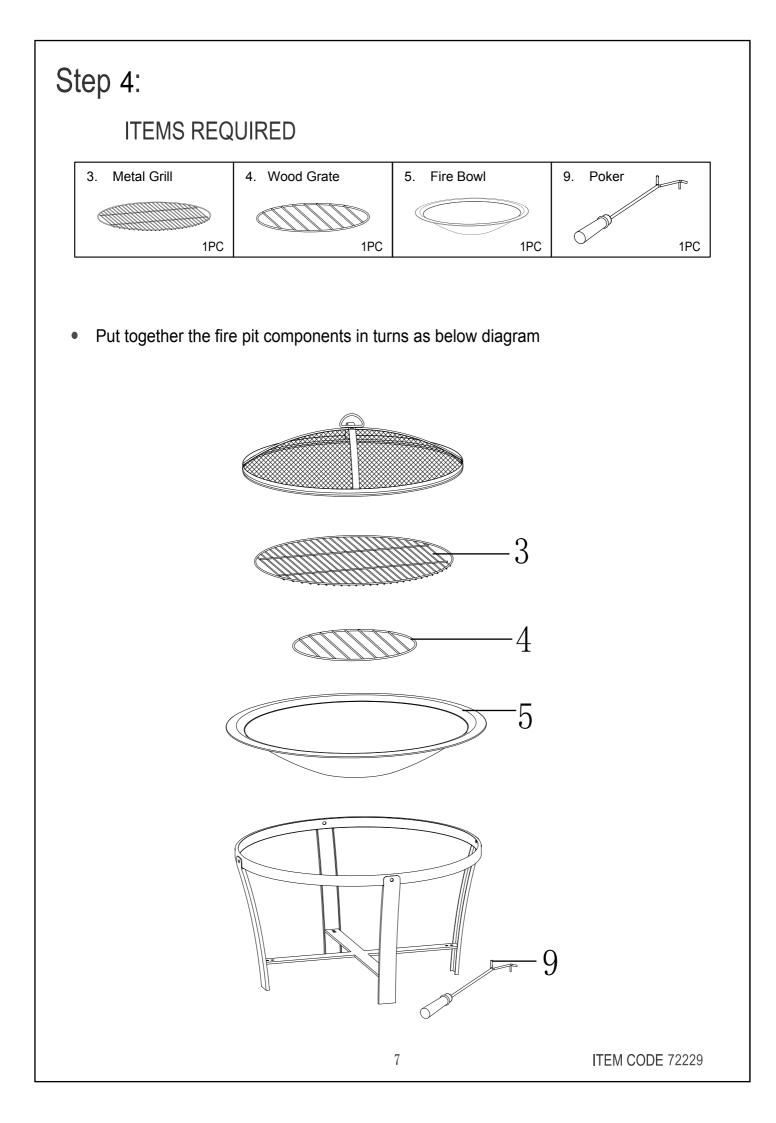

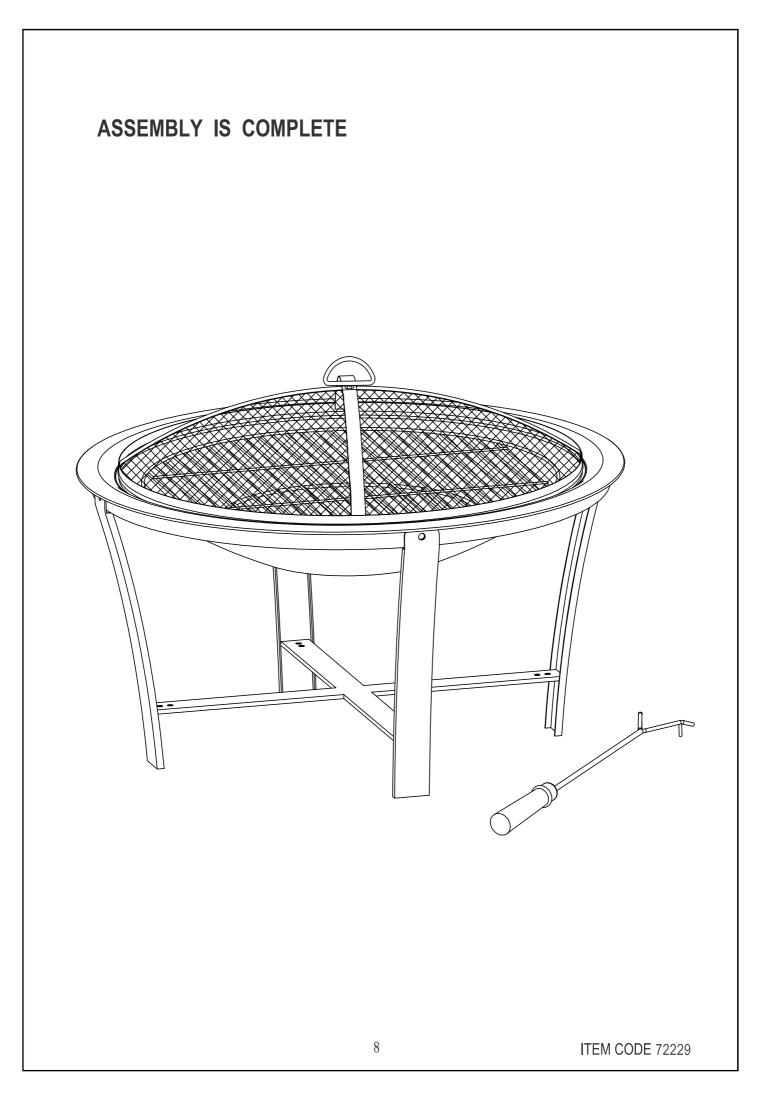

Care and maintenance



Metal

- Item is designed for outdoor use ONLY. It is not to be used in a building, garage or any other enclosed area. However, we do not recommend leaving the unit outside when not in use.
- ☑ To preserve the life of the unit, avoid prolonged exposure to the elements & store inside/under cover or use a outdoor cover.
- \blacksquare Do not use flammable liquids for igniting or re-igniting.
- $\boxtimes\,$ Do not use in windy conditions.
- I Open flames and embers must not be left unattended.
- ☑ Not recommended for use on timber decking or any other combustible surface.
- ☑ Keep children and animals away from the unit while in use.
- ☑ While in use the unit may become hot, please do not touch the unit while it is in use.
- After use, please ensure the unit is allowed to cool down before moving.
- ☑ Do not allow the unit to be left in the rain or left wet for extended periods of time.
- ☑ Wipe unit dry immediately after becoming wet.
- $\ensuremath{\boxtimes}$ Do not clean the unit with any harsh solvents, abrasives or chemicals.
- ☑ To remove dirt and grime, simply rinse with fresh water periodically, clean using a sponge and mild detergent solution as required.

WARNING

- FOR OUTSIDE USE ONLY
- NEVER LEAVE AN OPEN FIRE UNATTENDED

