
ASSEMBLY INSTRUCTION

POOLE 3 PCE OUTDOOR SETTING ITEM CODE 74383

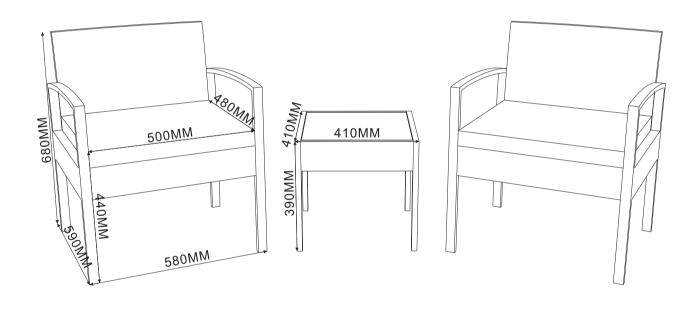



Imported by JWA furniture Pty Ltd,Qld,Brisbanw Australia


For any assistance with assembly or for missing parts please refer to your receipt

74383


PRE-ASSEMBLY PREPARATION

Before you start:

- 1 .Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2 .Take care when lifting. Product should be assembled as near as possible to the point of use
- 3 .Ensure that you have all required contents for complete assembly
- 4 .Always read the assembly instructions carefully before beginning assembly.
- 5 .Keep all hardware parts and packaging out of reach of small children.
- 6 .Do not over tighten the screws and bolts as this may damage the threads
- 7 .Assembly is to be carried out by a competent adult(s)
- 8 .During assembly, children should be kept away from the product due to possible risk to injury.
- 9 .Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

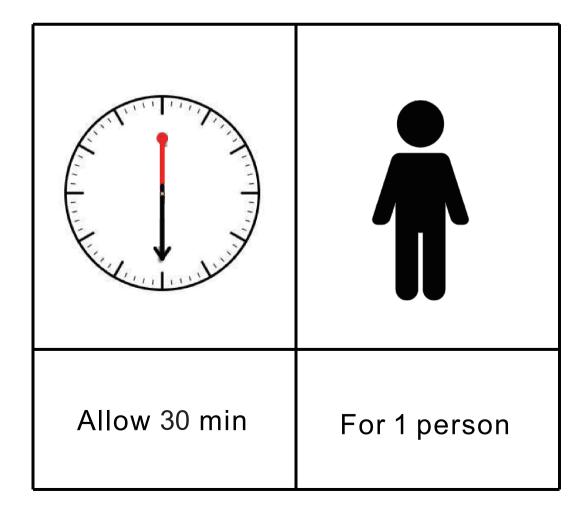

PARTS LIST

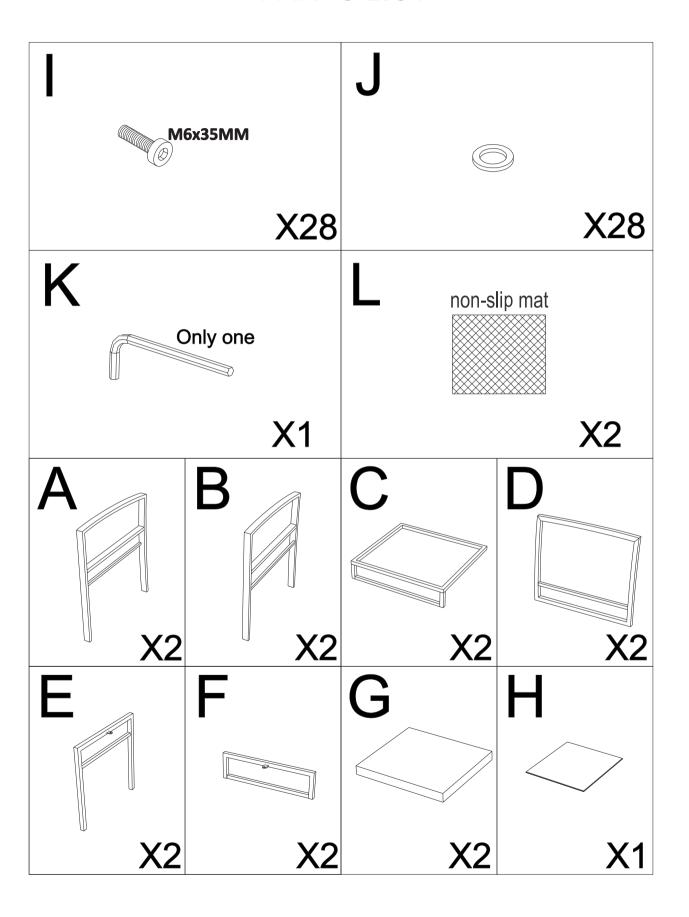


STEP 1:


IMPORTANT ASSEMBLY INFORMATION

When assembling – do not tighten bolts to 100%

Loosely hand tighten all bolts. Once all components are in place and only then – completely tighten using the Allen key provided.

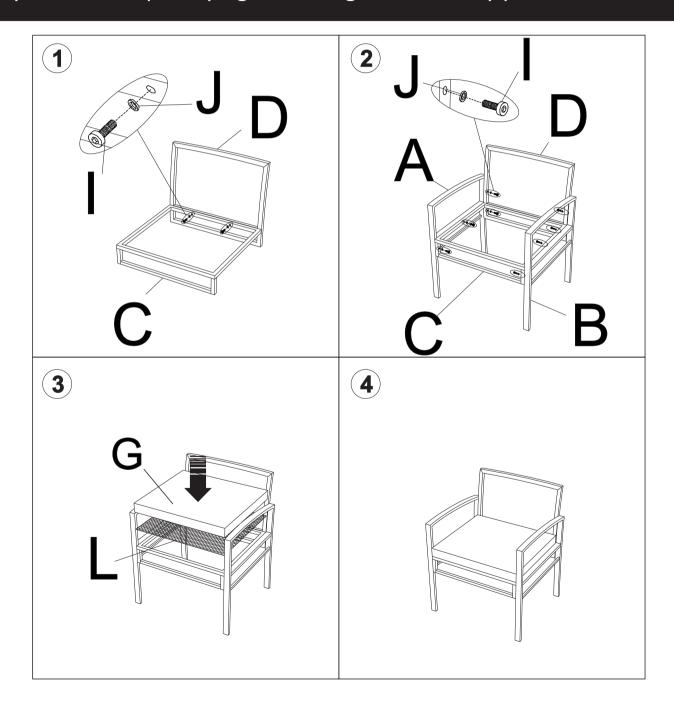

STEP 2:

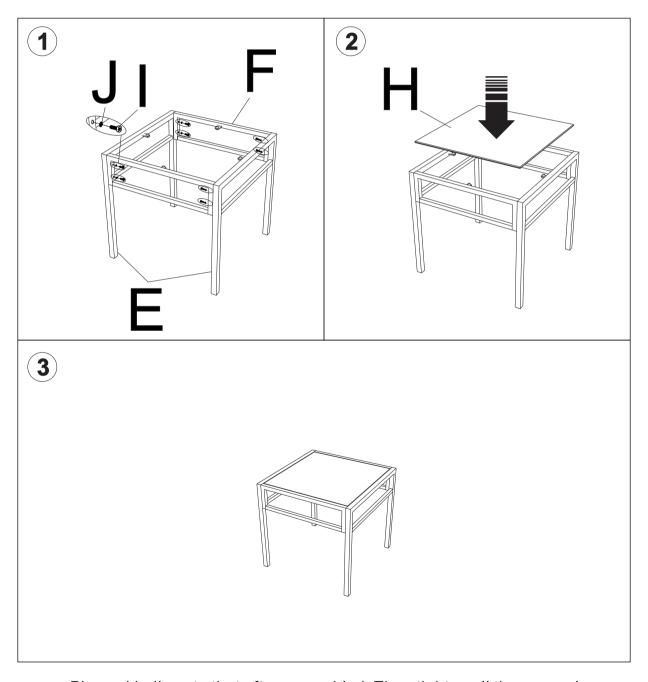

Please kindly note that after assembled, Then tighten all the screws!

CARE AND MAINTENANCE

Product Care for Outdoor Metal and Aluminium Items

- •Item is designed for use outdoors. However we do not recommend leaving this product outside when not in use. To preserve the life of this item, avoid prolonged exposure to the elements & store inside/under cover or use an outdoor cover.
- •DO NOT allow the furniture to be left in the rain or left wet for extended periods of time.
- •Wipe furniture Dry immediately after it becoming wet.
- •DO NOT clean your furniture down with any harsh solvents, abrasives or chemicals.
- •To remove dirt and grime, simply rinse with fresh water or periodically clean using a sponge and mild detergent solution as required.

WICKER:

- •Regular vacuuming and dusting of items is recommended
- •If weave on wicker becomes lacerated/damaged, do not pull on it as this may cause unravelling
- •Prolonged exposure to the elements may cause colour fading
- •To extend the life of your product the use of an Amart approved Outdoor Furniture Cover is highly recommended. Please contact store of purchase for further details

Glass

• If the glass is chipped or broken, stop using the product and consult place of purchase

WARNING:

- Do not place very hot or cold items on the glass surface unless adequately thick table mats are used to prevent such items coming in contact with the glass
- Do not sit or stand upon the glass surface
- Do not use the glass as a chopping surface
- Do not strike the glass with hard or pointed items
- When cleaning the glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these may scratch the glass