


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Ewing Road,Customer Service Free call 1800 351 084

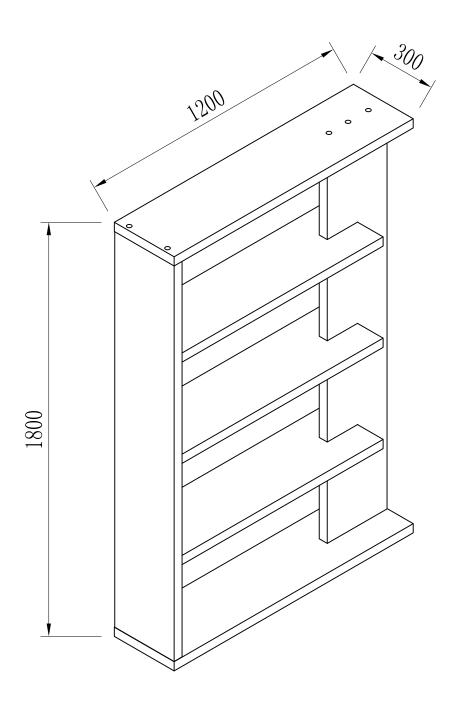

A


Furniture

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Ewing Road,Customer Service Free call 1800 351 084

# PRE-ASSEMBLY PREPARATION

## Before you start:

- 1. Choose a clean, level. spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting.Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

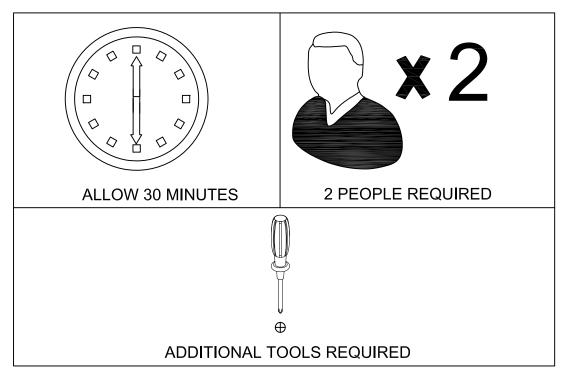



### CAM Lock and Pins step 1 HOW TO USE CAM LOCK FASTENERS To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work. Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B) Board A flat side edge to join (f)Cam Pin Cam Lock Board B Ensure that you use the correct images that are representative of the hardware used in the product step 2

### step 3

it is important that:

### To use Cam Lock Fasteners

To use Cam Lock Fasteners

Cam Pin is inserted up to the collar


The Cam Pin is inserted into the flat side of a board,

\* The cam pin is kept vertical and is not put in on an angle

\* Not enough and the resulting product wont be stable

\* Too far and it wont catch the Cam Lock (Do not Over Tighten)

Now fit the hole in the edge of the joining board over the Cam Pin

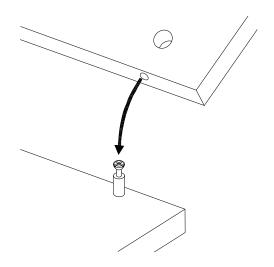

Cam Pin

- Collar

# step 4 <u>To use Cam Lock Fasteners</u>


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

### To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin


### step 5 To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

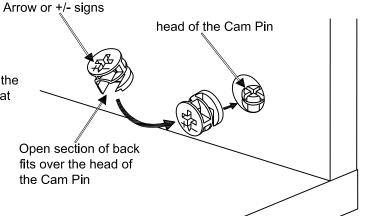

### step 6 To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount,turn the Cam Pin out (counter-clockwise)one full turn,and try the Cam Lock again.

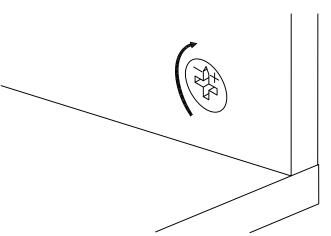



head of the Cam Pin







			ARTS LIS	ST C33 C4 C4 C4 C4 C4 C4 C4		
C1	Left Side Panel					
C2	Right Side Panel					
C3a	Top Panel					
C3b	Bottom Panel					
C4	Shelf Panel					
H.T Nut	B.Dowel Ø8X30 C.Cover Ø CS 10PCS I.Bolt M8X1767mm PCS 2PCS	12PCS	2.Cover Ø35 4PCS 4PCS 5.ScrewØ3.5x16 0111112 2PCS	E.Bolt M8X45 6PCS K.Belt 0 0 1PCS	F.Washer	G.Hex key M5

54550


STEP 1: Put the Dowels(B)on the Left side panel(C1),tighten Cam pin(A) on the Left side panel(C1).Insert the Cam lock(A)in to the Shelf panel (C4)large hole use a flat screwdriver to turn the Cam lock to locks onto the head of Cam pin.then put the Cover(C) on the Cam lock holes.

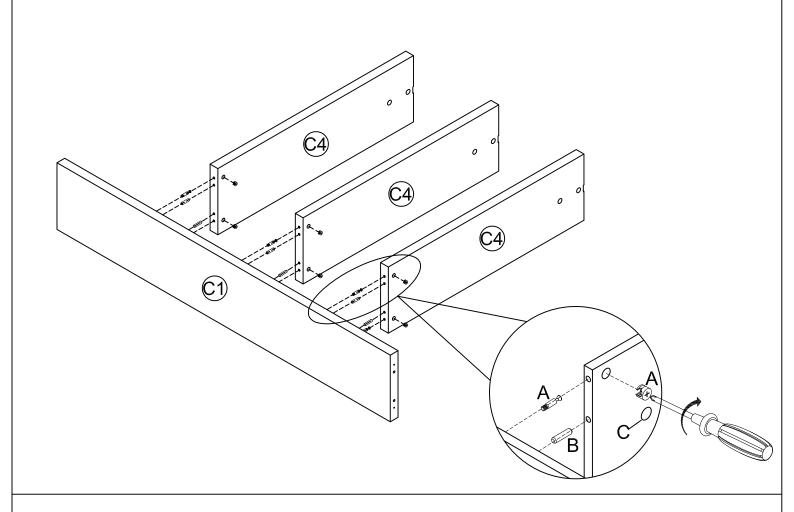


STEP 2: Put the Right side panel (C2) in to Shelf panel (C4)accordingly.

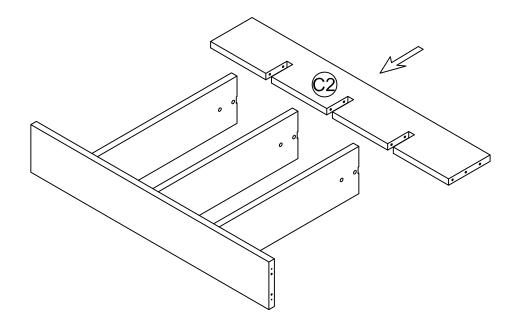



STEP 3: In the same time.Use Hex Key(G) to tighten Top panel(C3a)and Bottome panel(C3b) to Right side panel(C2) with T Nut(H)and Bolt (I).Insert Dowels(B) to Left side panel(C1),Use Hex Key(G) to tighten Top panel(C3a)and Bottom panel(C3b) to Left side panel(C1) with Bolt (E)and Washer(F)

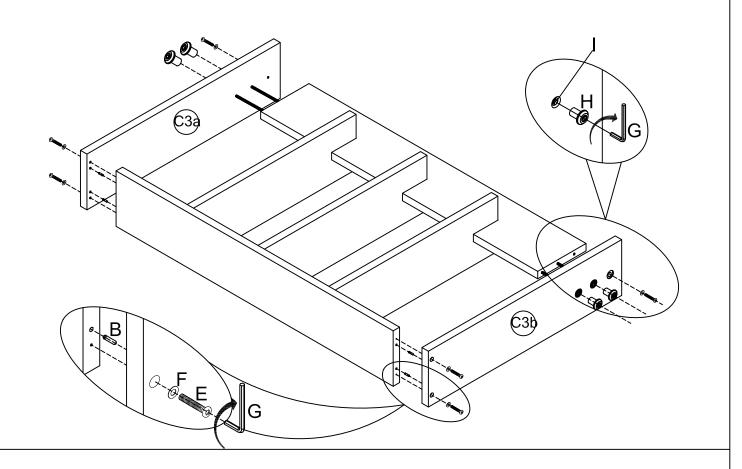

STEP 4: Stick the protect foam(D)on the bottom of Bottom panel(C3b).With two people carefully turn over.

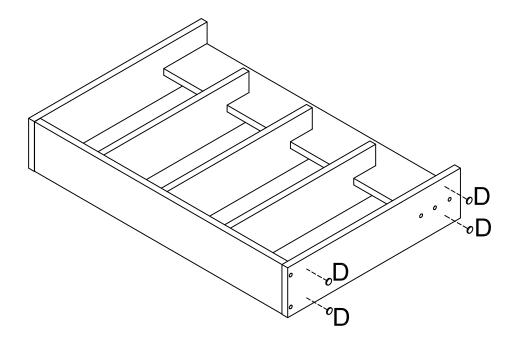


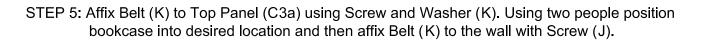

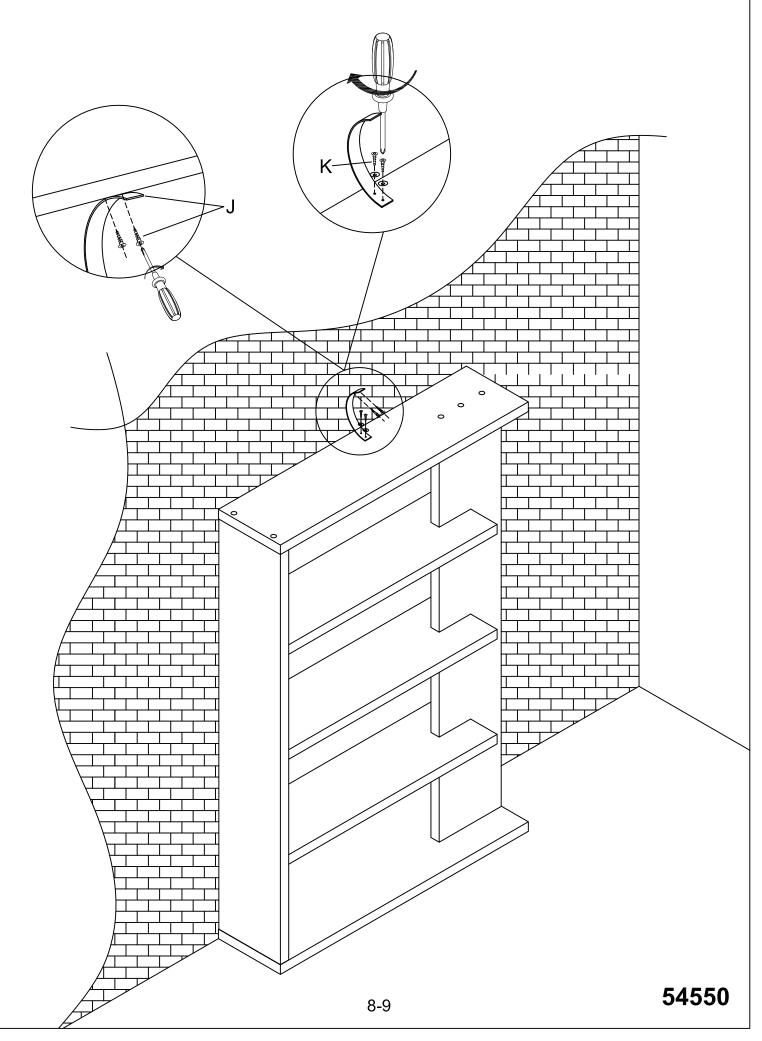

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

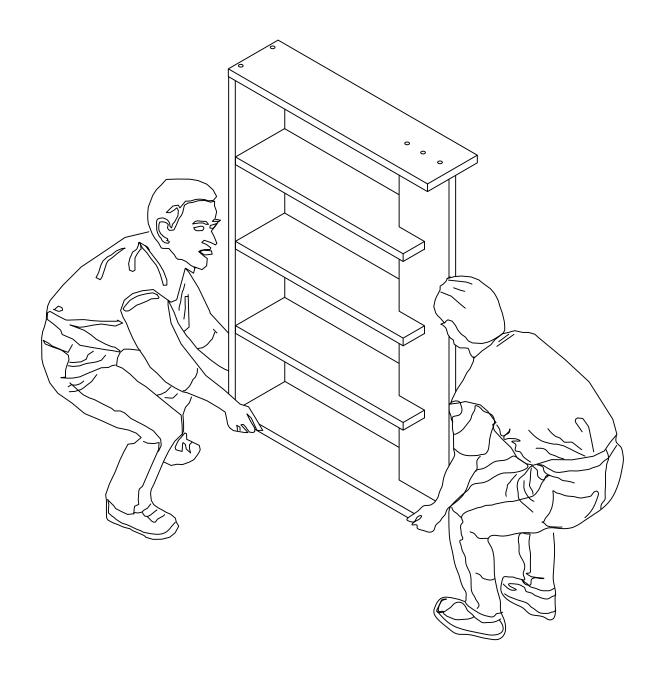

#### IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- <u>Avoid using chemicals or solvents when cleaning the product.</u>
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- <u>Avoid exposing your furniture to strong sunlight</u>. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- <u>Do not expose your furniture to any liquids</u>. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- <u>Do not allow plastic to come in direct contact with your furniture</u>. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.

