

 


**ASSEMBLY INSTRUCTION**  
**ALYSSA BUFFET**  
**ITEM CODE 65888**

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

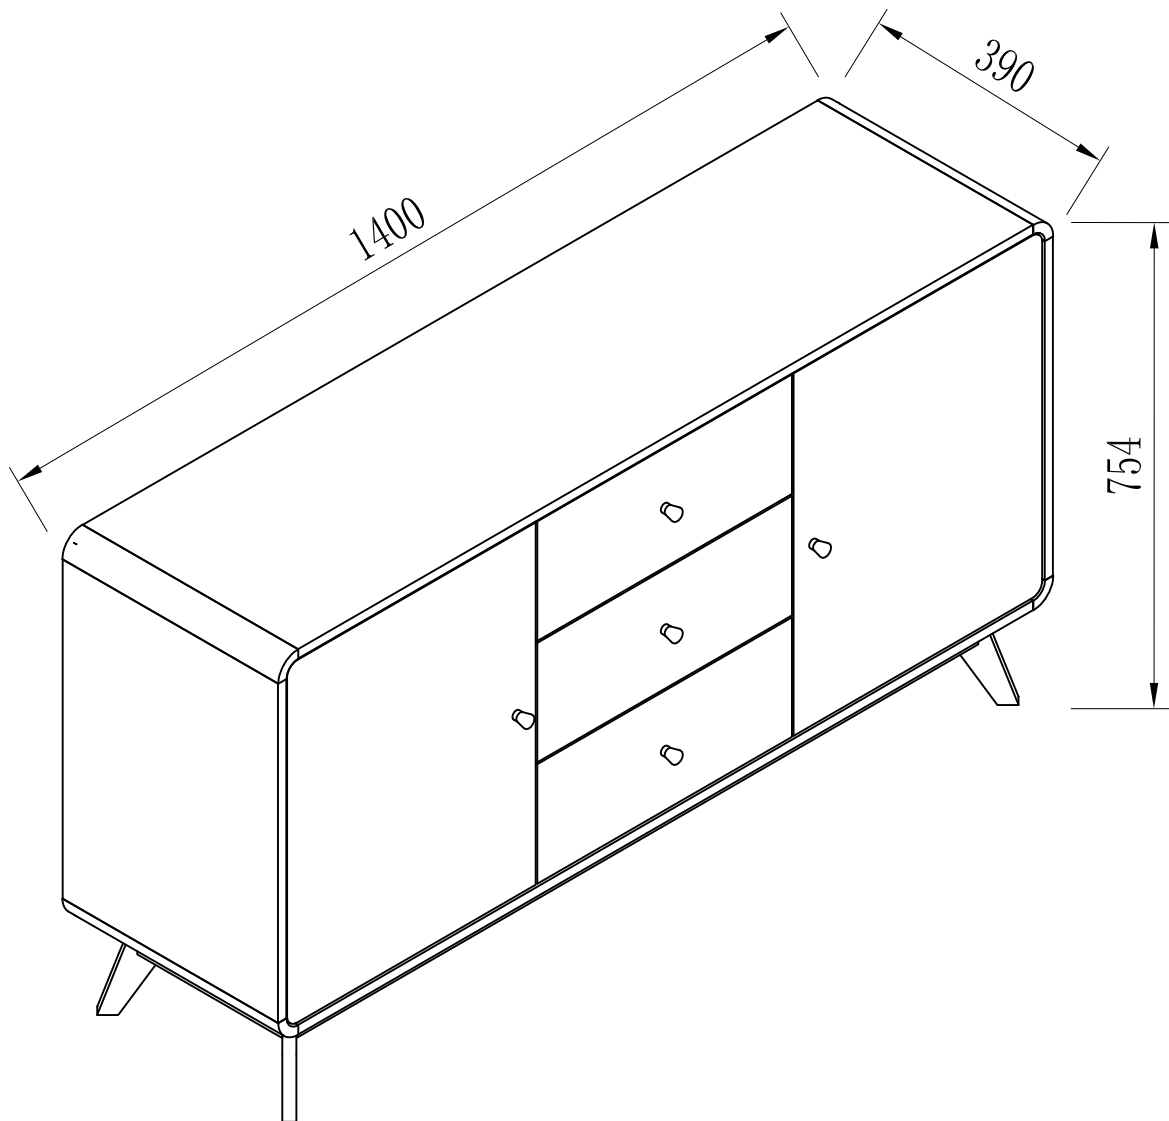




Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture  
Customer Service Free call 1800 351 084

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

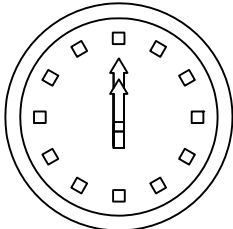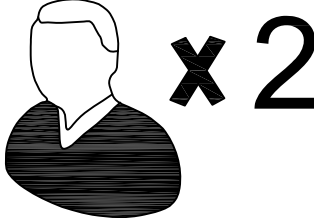 ALLOW 60 MINUTES	 2 PEOPLE REQUIRED
 ⊕ ADDITIONAL TOOLS REQUIRED	

 <b>TIPPING WARNING</b> 	
	<p>Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:</p> <ul style="list-style-type: none"><li>• Install the provided "Tipping Kit" as per the instructions</li><li>• Never allow children to climb on or hang off of any part of this product</li><li>• Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product</li></ul> <p>If this product has drawers:</p> <ul style="list-style-type: none"><li>• Place the heaviest items in lowest drawers</li><li>• Do not open more than 1 drawer at a time as this may cause the product to become unbalanced</li><li>• Do not tamper with or remove any drawer interlocking/running system</li></ul> <p><b>Note:</b> The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.</p> <p><i>This is a permanent label. Do not attempt to remove!</i></p>



# CAM Lock and Pins
  
## step 1

### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

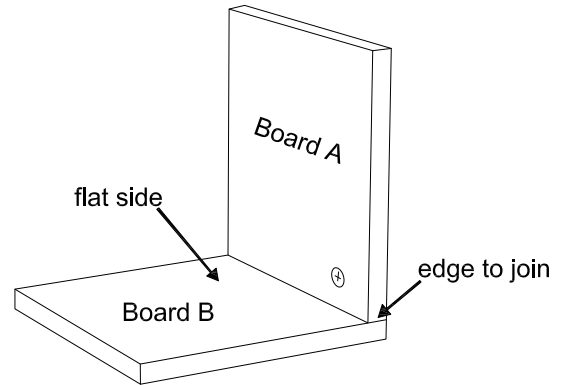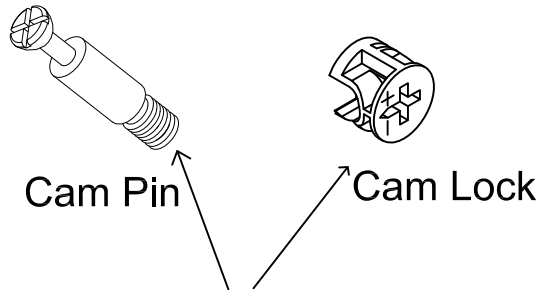


Ensure that you use the correct images that are representative of the hardware used in the product

## step 2
 
### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

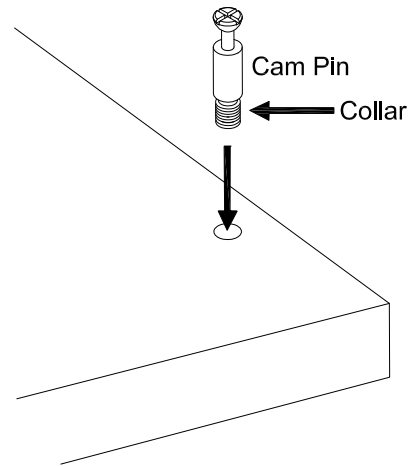

## step 3

### To use Cam Lock Fasteners

 Now fit the hole in the edge of the joining board over the Cam Pin

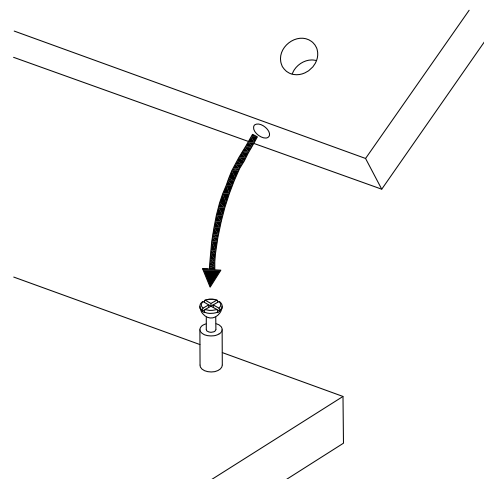


## step 4

### To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

 head of the Cam Pin

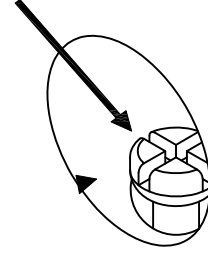

### To use Cam Lock Fasteners

 Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

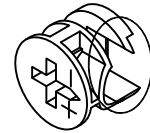

Cam Lock

## step 5

 
### To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

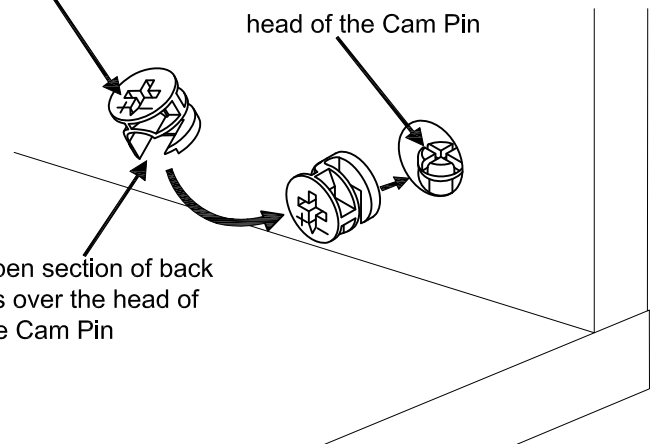


## step 6
  
### To use Cam Lock Fasteners





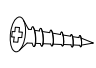
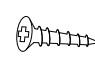

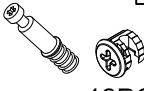
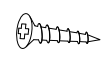
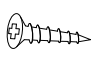
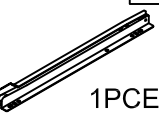
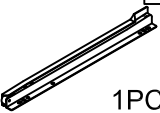


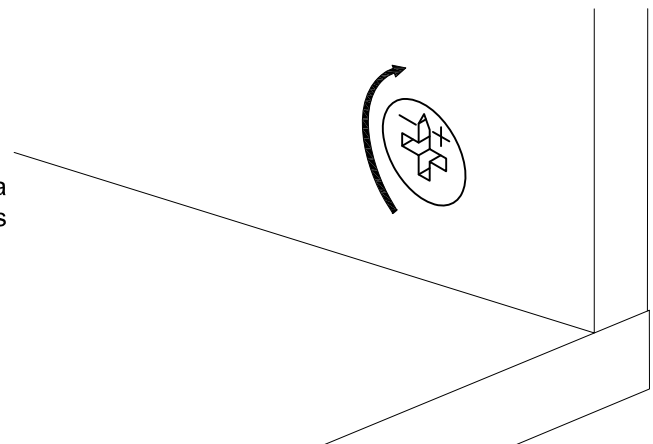
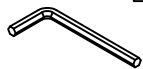

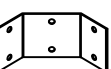


Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

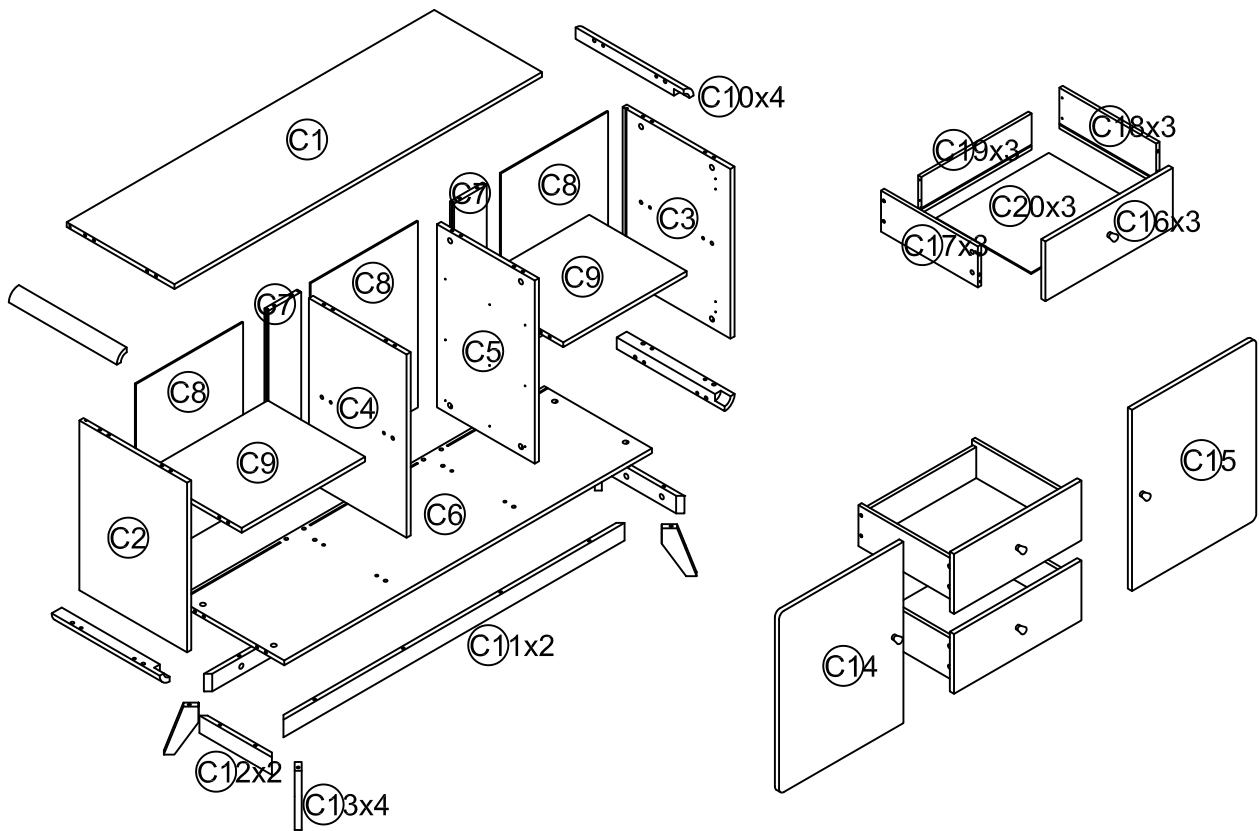

# PARTS LIST

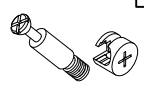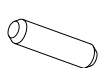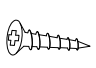 


C1	Top Panel	C11	Long Apron Panel
C2	Left Side Panel	C12	Short Apron Panel
C3	Right Side Panel	C13	Leg Panel
C4	Middle Left Side Support Panel	C14	Left Side Door Panel
C5	Middle Right Side Support Panel	C15	Right Side Door Panel
C6	Bottom Panel	C16	Drawer Front Panel
C7	Back Support Rail Panel	C17	Drawer Left Side Panel
C8	Back Panel	C18	Drawer Right Side Panel
C9	Shelf Panel	C19	Drawer Back Panel
C10	Corner Panel	C20	Drawer Bottom Panel



A.Cam lock and Cam pin Ø15X32  18PCS	B.Dowel Ø8X30  8PCS	C.Screw Ø3.5X12  28PCS	D.Screw Ø3.5X30  4PCS	E.Screw Ø3.5X16  1PCE	F.Screw Ø3X18  4PCS	G.Connector  4PCS
H.Cam lock and Cam pin Ø12X27  12PCS	I.Screw Ø4X14  24PCS	J.Screw Ø4X16  16PCS	K:Runner (L) 350mm  1PCE	K:Runner (R) 350mm  1PCE	L.Screw Ø4X16  8PCS	M.Handle  1PCE
N.Bolt M4x20  5PCS	O.Hex Key 4MM  1PCE	P.Belt  1PC	Q.Corner plate  4PCS	R.Bolt  4PCS	S.Hinge  4PCS	

**65888**


Step 1. Take off the Runner (K,L&R)

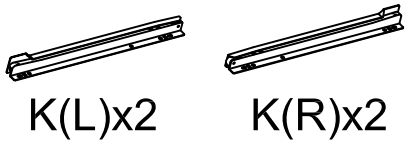


$$K=K1+K2$$

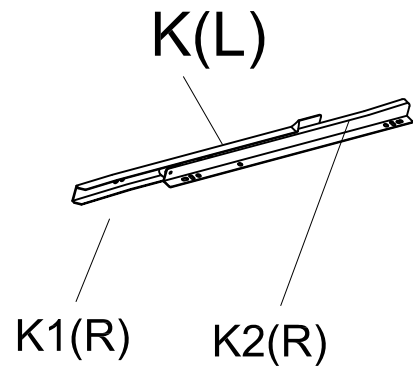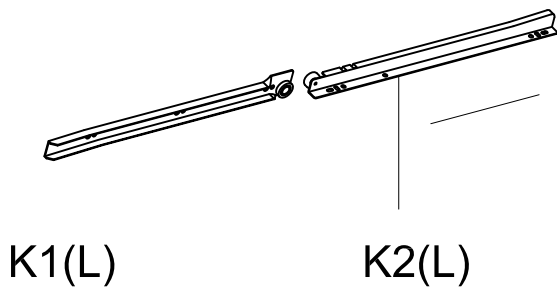  

 
STEP 2: Insert the Dowel (B) to the Top Panel (C1) and Bottom Panel (C6) and Shelf Panel (C9). Use a Phillips Head Screw driver to insert the Cam Pin (A) to Top Panel (C1) and Bottom Panel (C6) and Corner Panel (C10) .

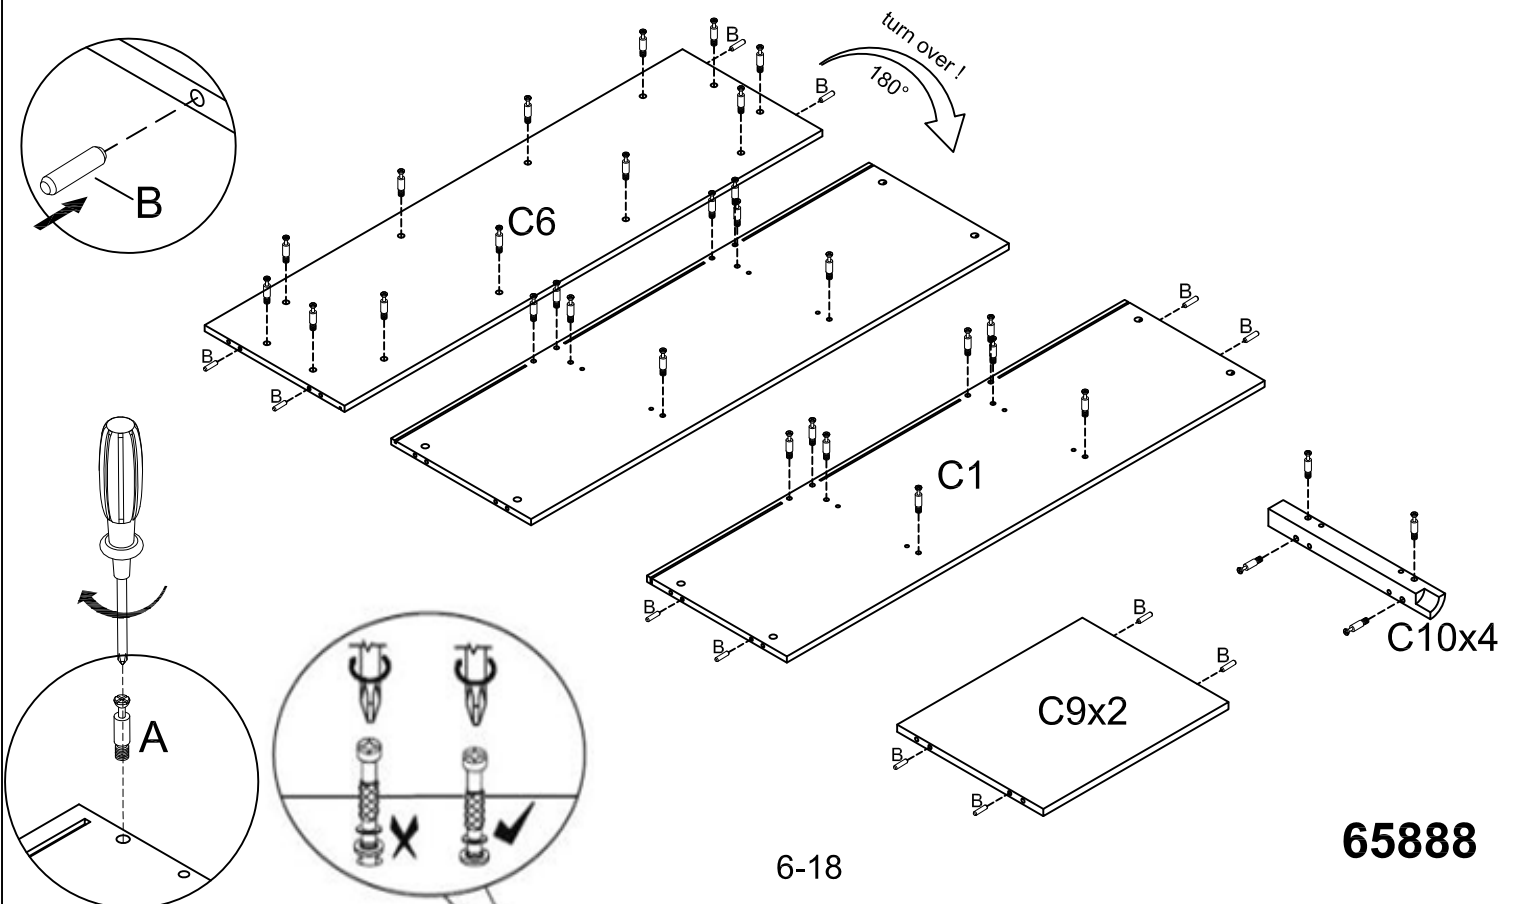

 **STEP 3:** Insert the Dowel (B) to the Left Side Panel (C2) and Right Side Panel (C3) and Middle Left Side Support Panel (C4) and Middle Right Side Support Panel (C5). Use a Phillips Head Screw driver to insert the Cam Pin (A) to the Left Side Panel (C2) and Right Side Panel (C3) and Middle Left Side Support Panel (C4) and Middle Right Side Support Panel (C5).

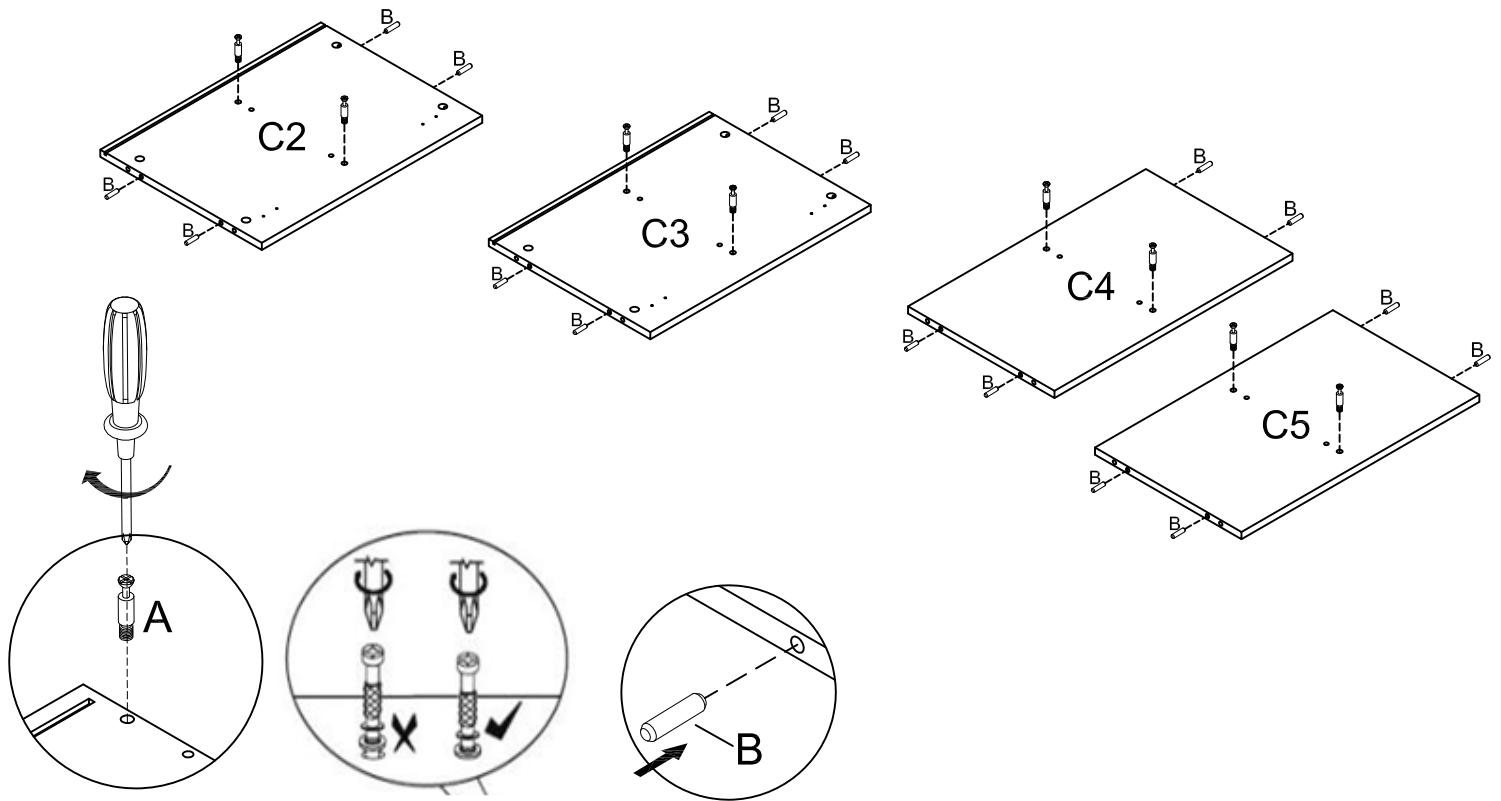


 **STEP 4:** Assemble the Corner Panel (C10) to the Left Side Panel (C2) and Right Side Panel (C3). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

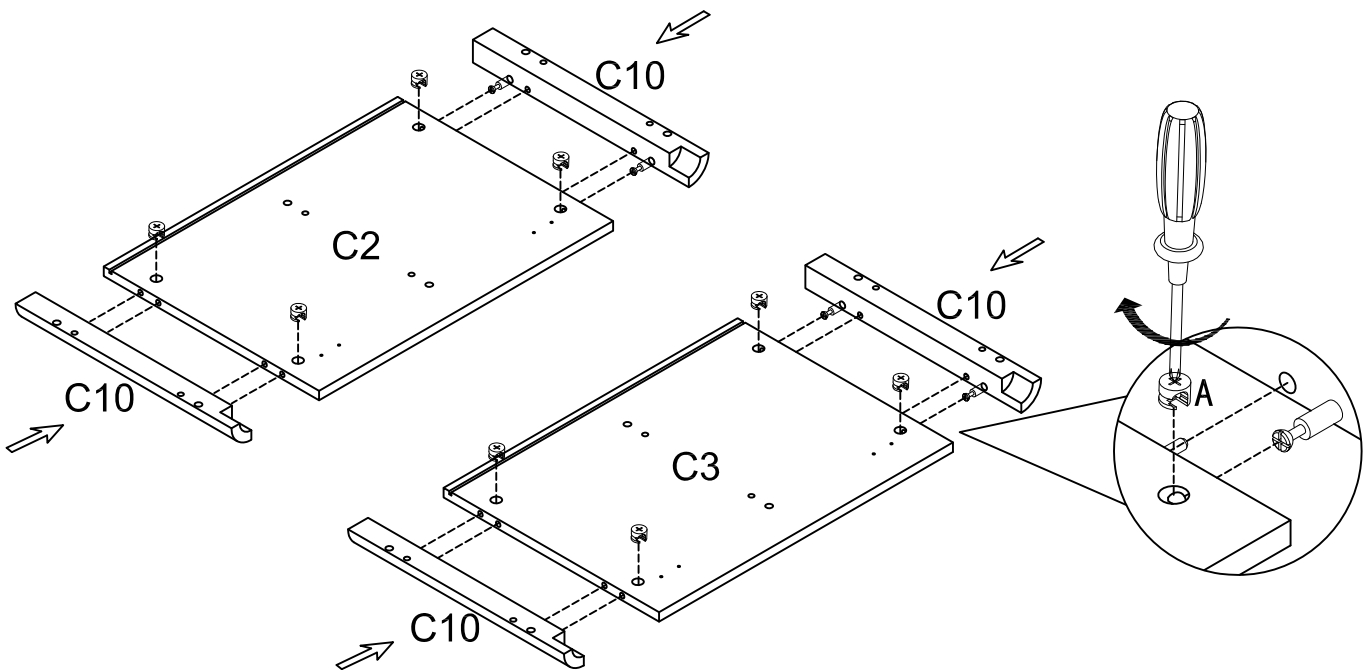


**65888**

 STEP 5: Assemble the Shelf Panel (C9) to the Middle Left Side Support Panel (C4) and Middle Right Side Support Panel (C5), Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin (A).

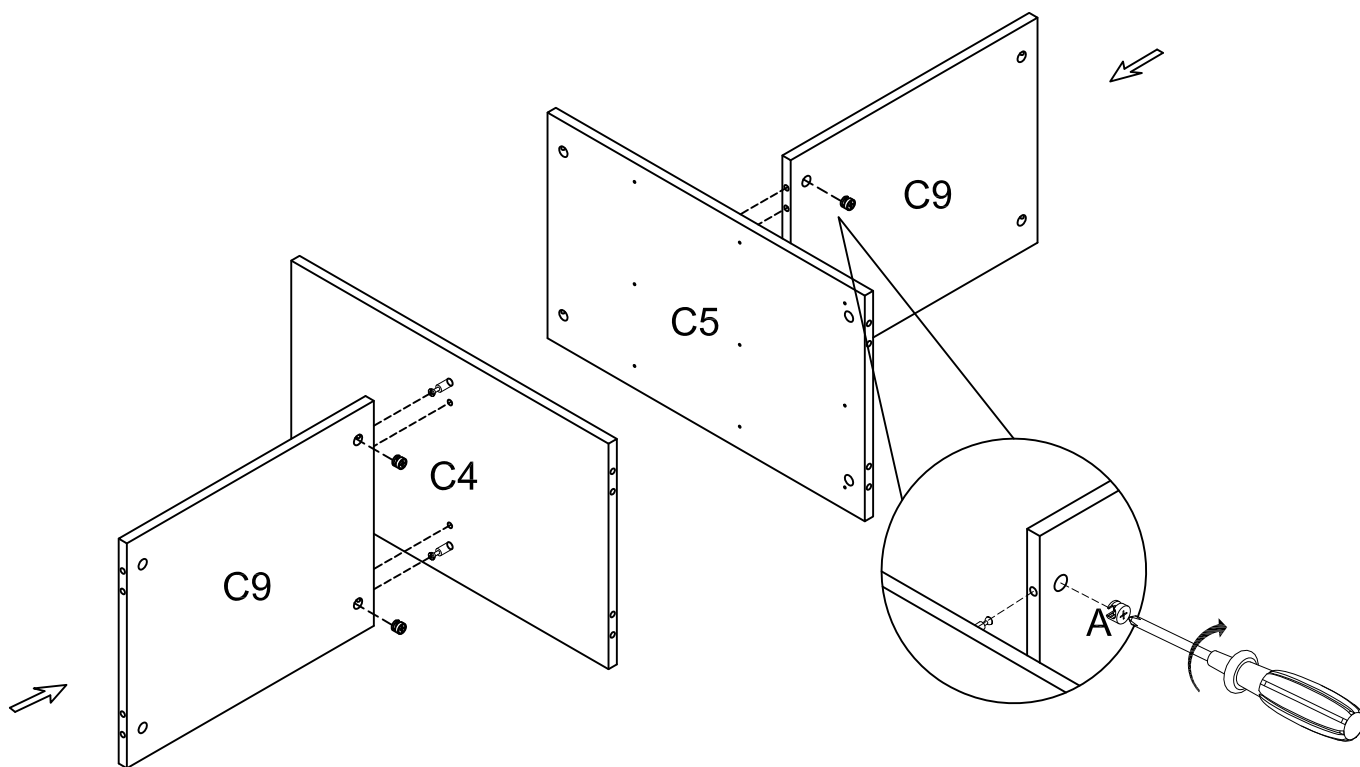


 STEP 6: Assemble the Middle Left Side Support Panel (C4) and Middle Right Side Support Panel (C5) to the Top Panel (C1). Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin (A)

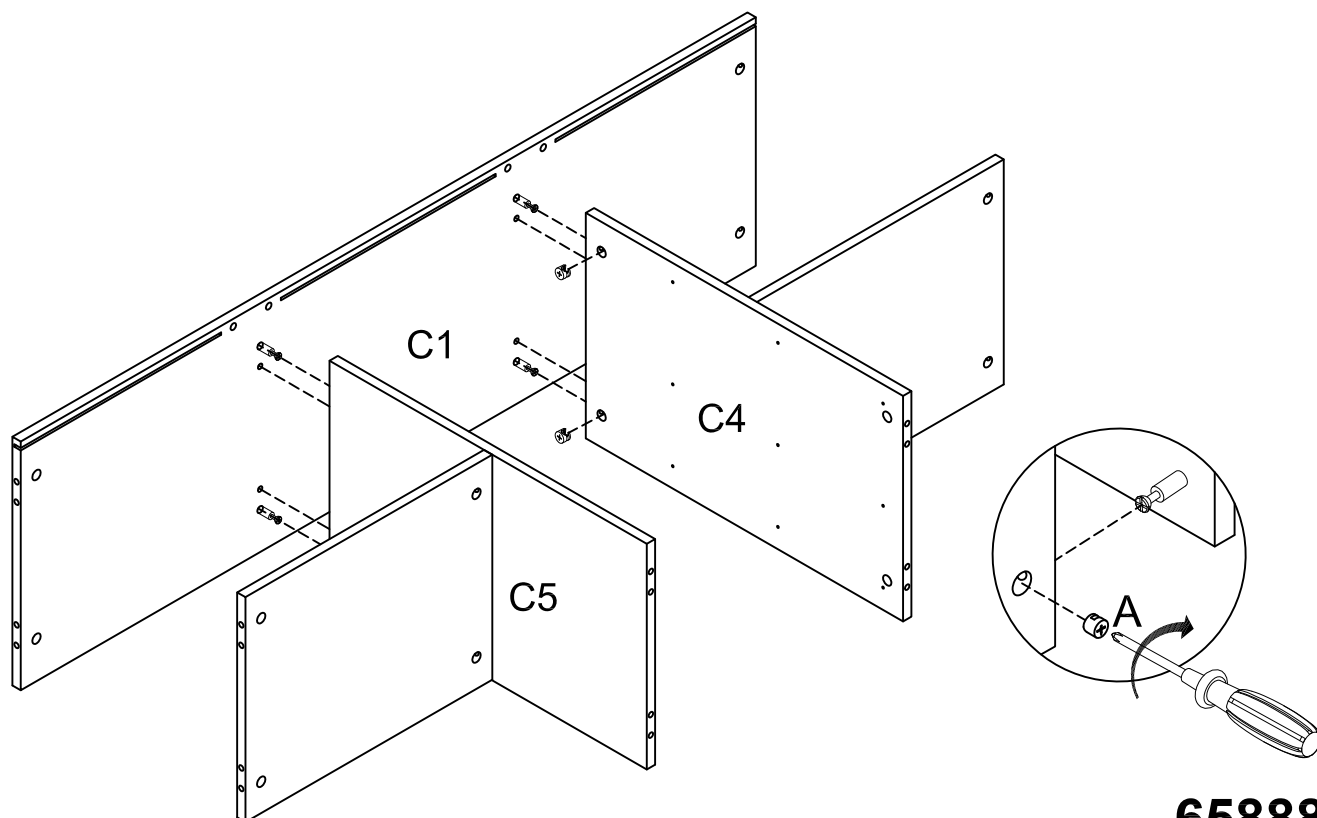




 
STEP 7: Assemble the Back Support Rail Panel (C7) to the Top Panel (C1). Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin (A)

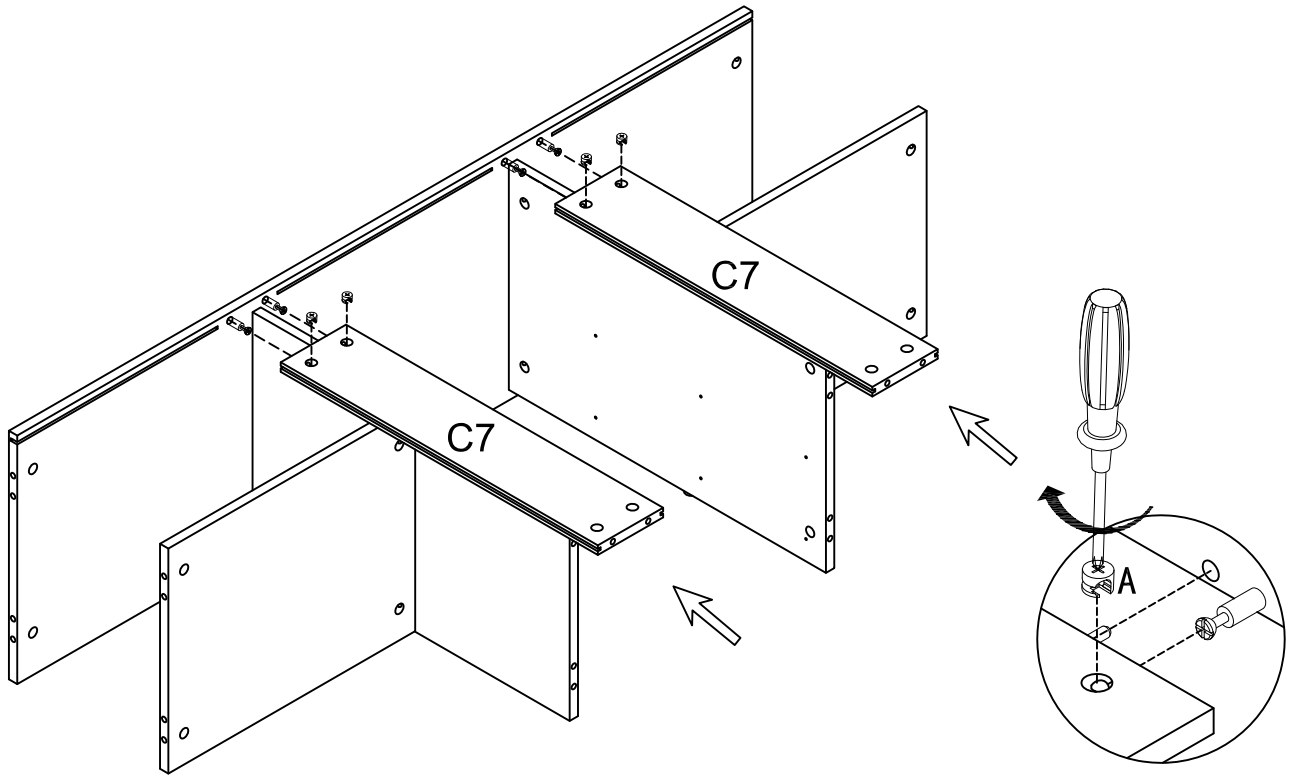

 
STEP 8: Insert the Back Panel (C8) to the Back Support Rail Panel (C7) and Top Panel (C1).

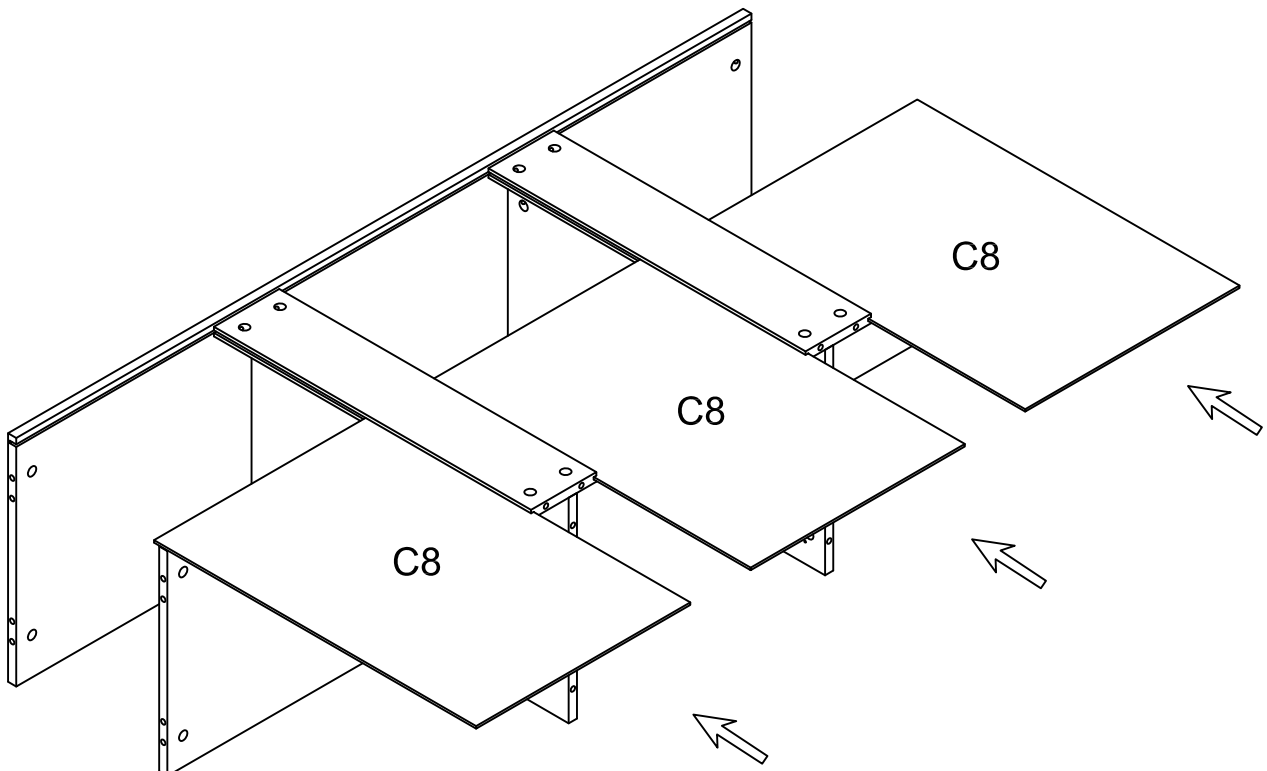

 
STEP 9: Assemble the Back Support Rail Panel (C7) to the Bottom Panel (C6). Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin (A)

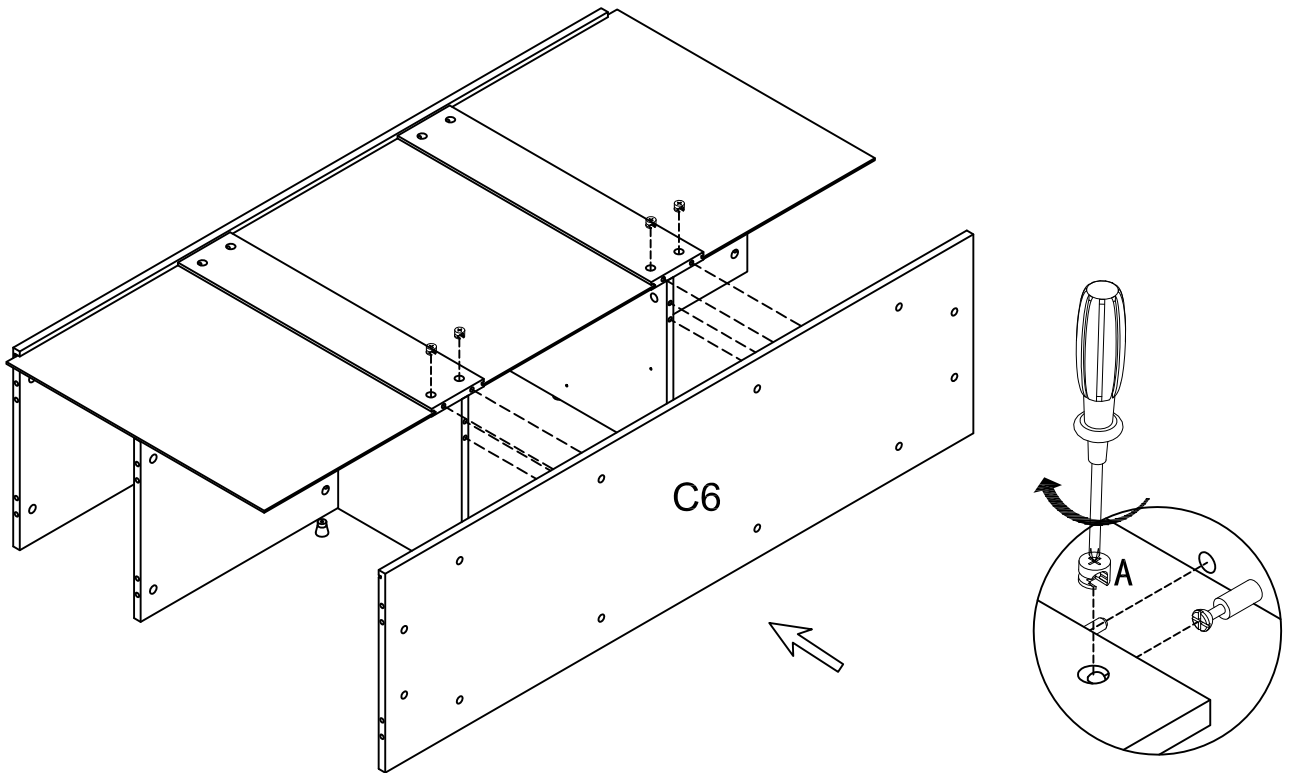

 
STEP 10: Assemble the Top Panel (C1) to Bottom Panel (C6) and Shelf Panel (C9) to the Corner Panel (C10) and Left Side Panel (C2) and Right Side Panel (C3). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

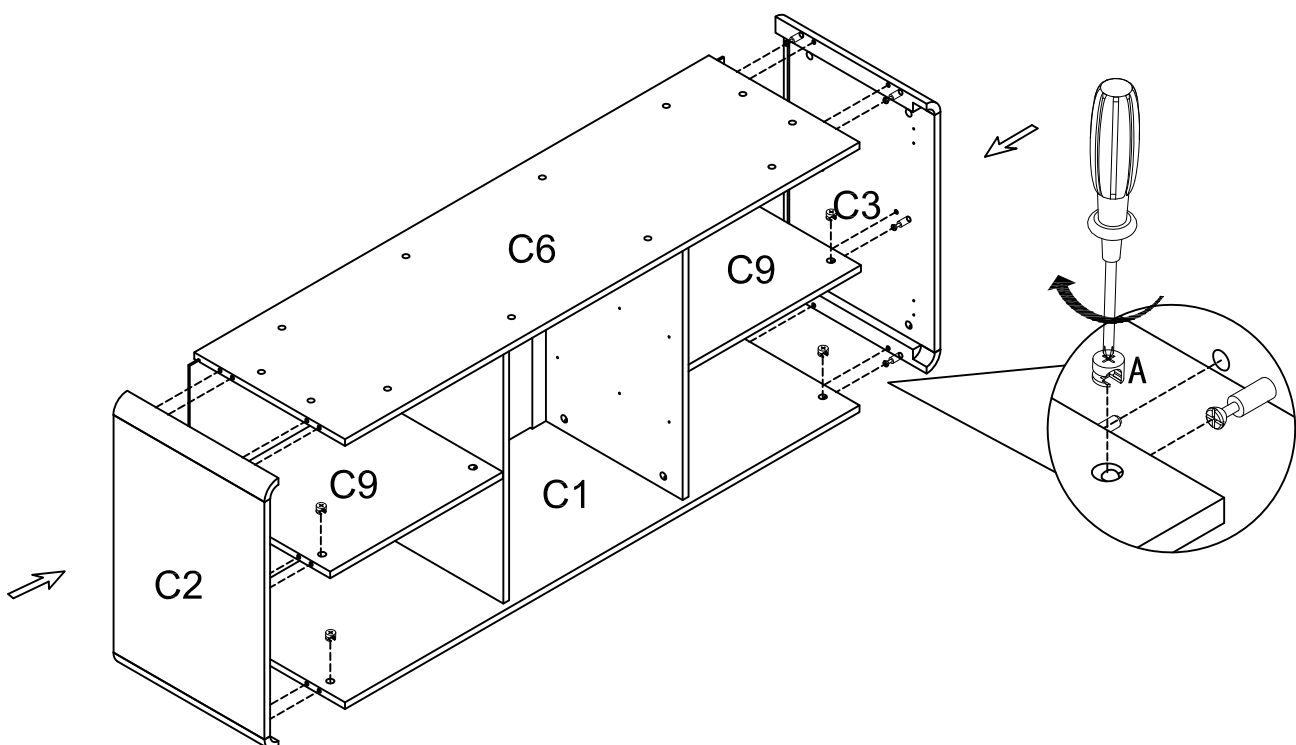

 STEP 11: Assemble the Long Apron Panel (C11) and Short Apron Panel (C12) to the Bottom Panel (C6). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

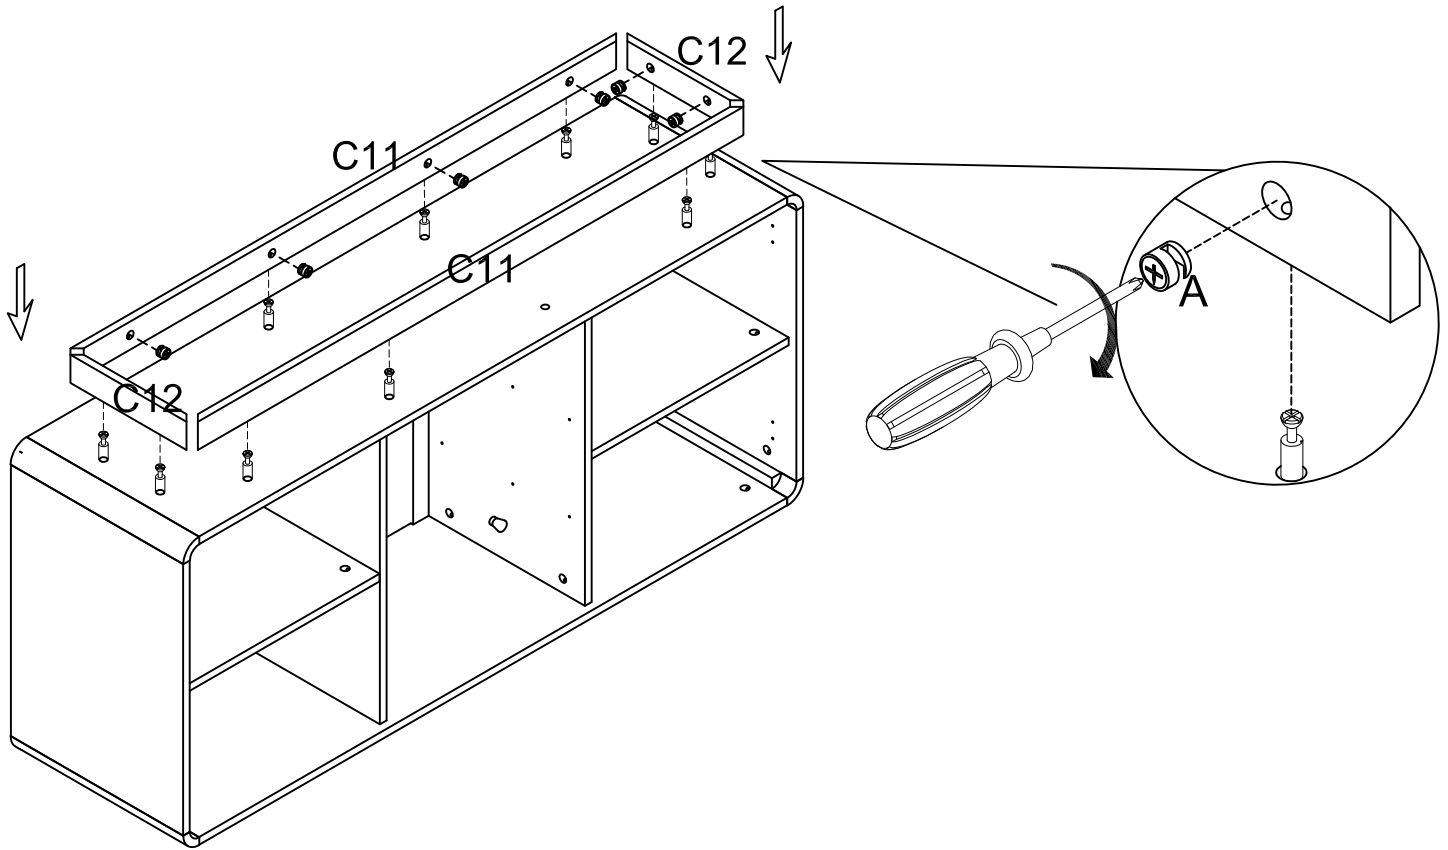


 STEP 12: Use a Hex Key (O) to assemble the Leg Panel (C13) to the Bottom Panel (C6) with Bolt (R). Use a Phillips Head Screwdriver to assemble the Corner Plate (Q) to the Long Apron Panel (C11) and Short Apron Panel (C12) and Leg Panel (C13) with Bolt (L) and Screw (J).

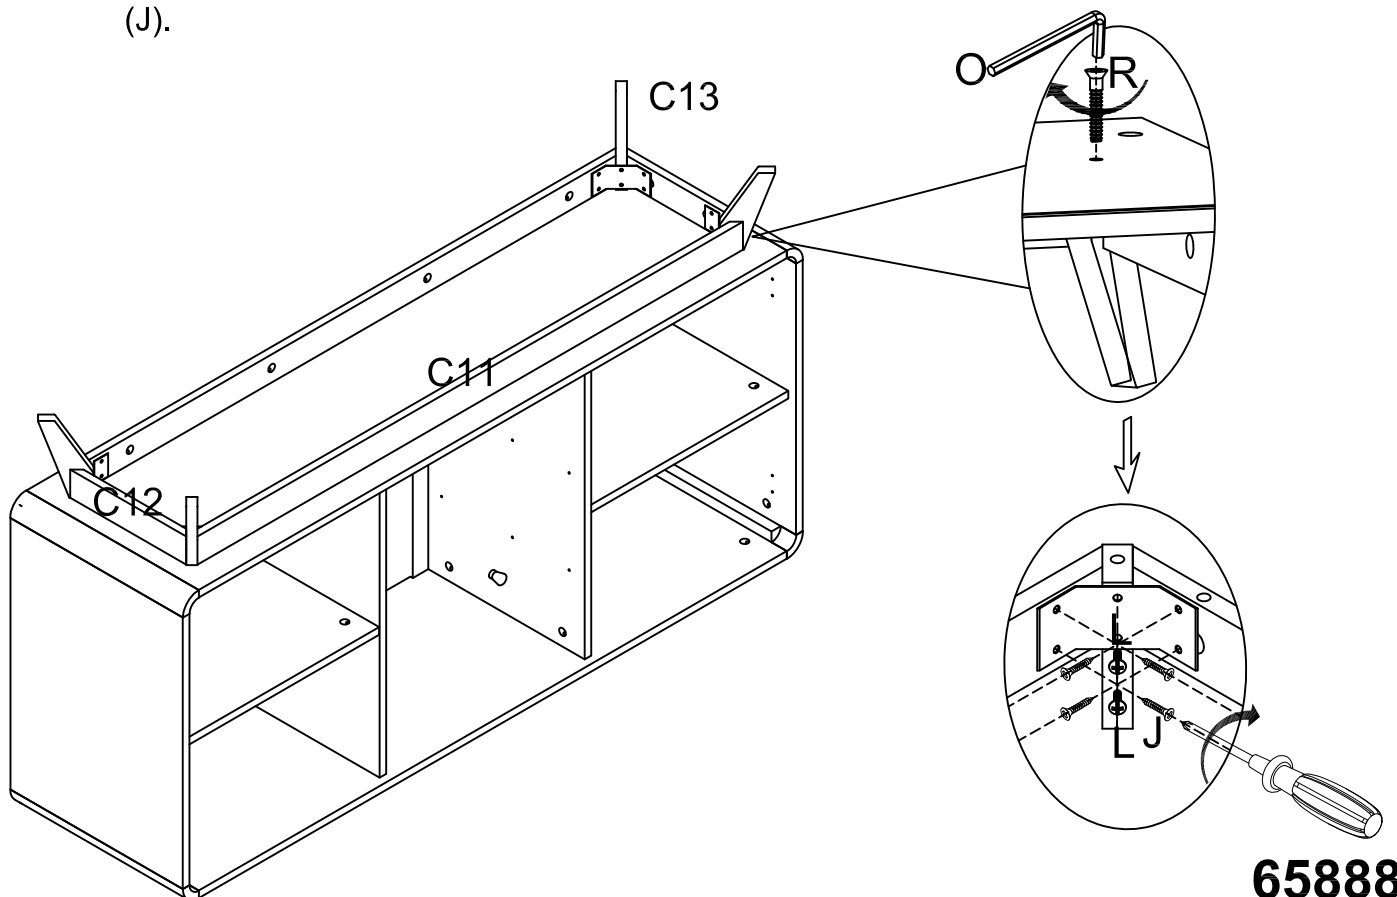


65888

 
STEP 13: Use a Phillips Head Screw driver to assemble the Runner (K1L) to the Middle Left Side Support Panel (C4) and assemble the Runner (K1R) to the Middle Right Side Support Panel (C5) with Screw (C).

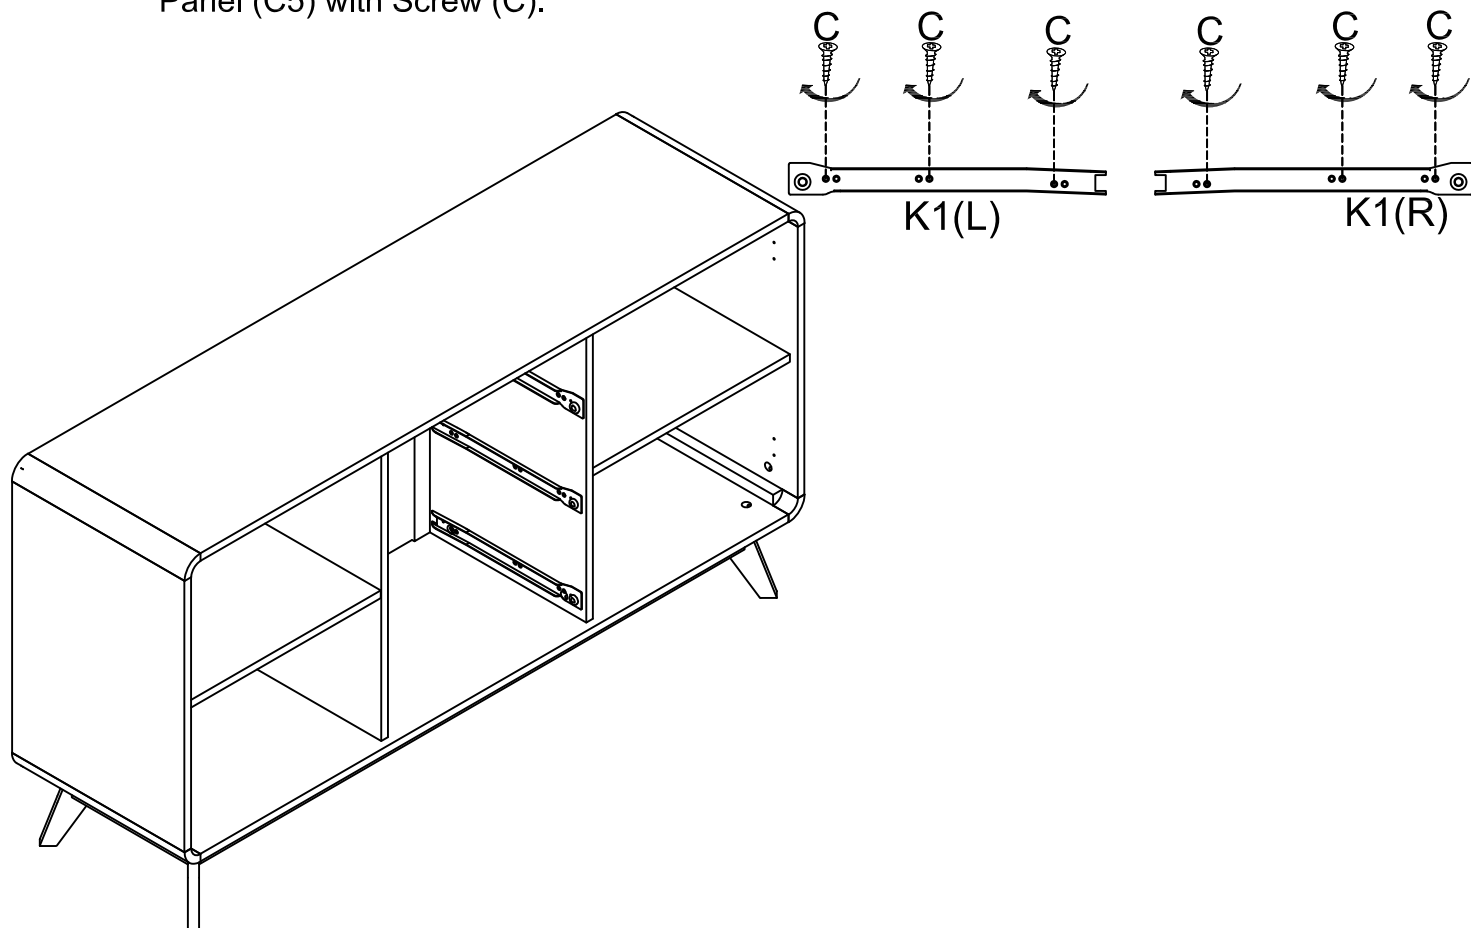

 
STEP 14: Use a Phillips Head Screwdriver to Insert the Cam Pin (H) to the Drawer Front Panel (C16). Assemble the Drawer Left Side Panel (C17) and Drawer Right Side Panel (C18) to the Drawer Front Panel (C16). Use a Phillips Head Screwdriver to turn the Cam Lock (H) to lock onto the head of Cam Pin (H).

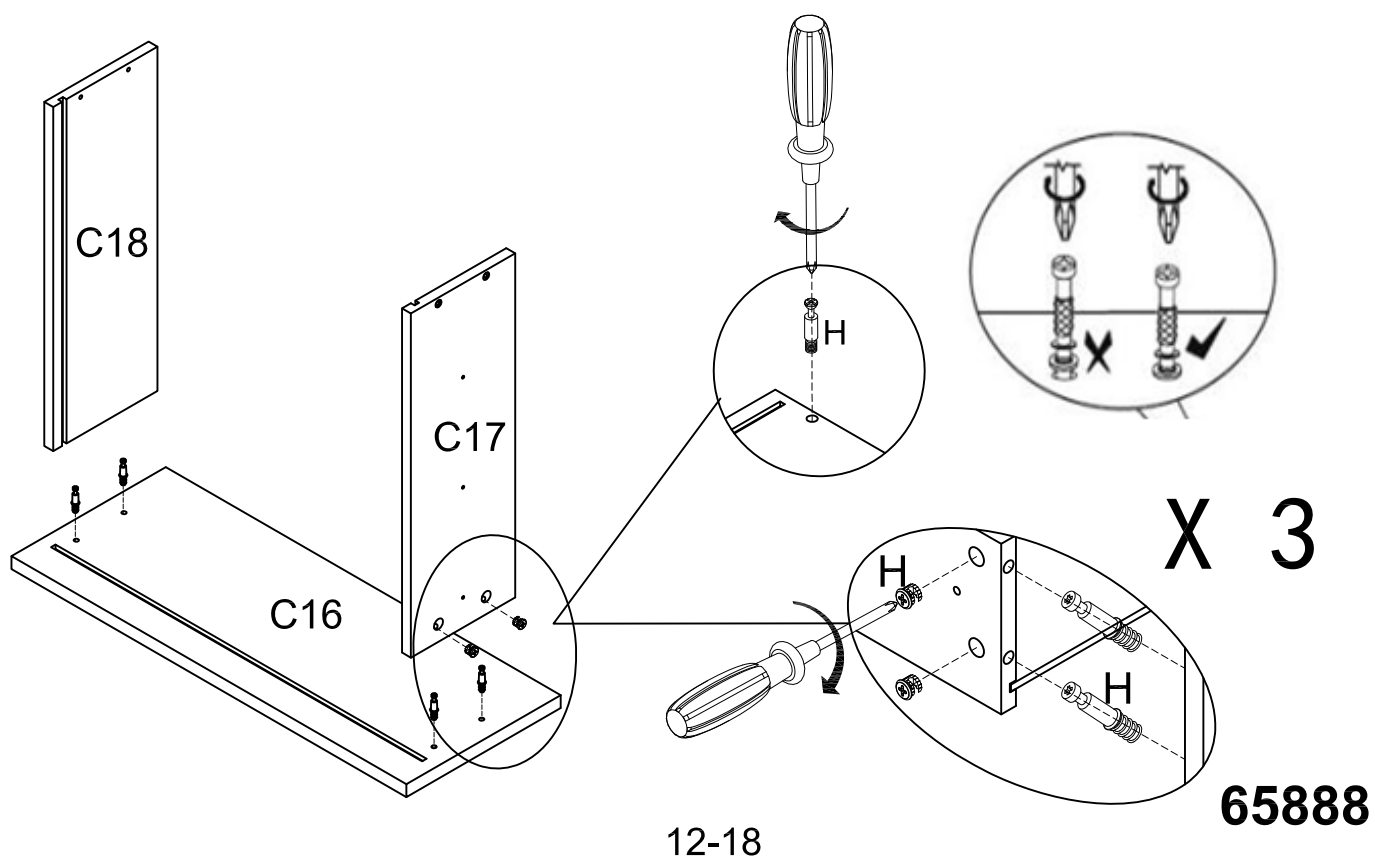

 STEP 15: Insert the Drawer Bottom Panel (C20) to the Drawer Left Side Panel (C17) and Drawer Right Side Panel (C18) and Drawer Front Panel (C16). Use a Phillips Head Screwdriver to assemble the Drawer Back Panel (C19) to the Drawer Left Side Panel (C17) and Drawer Right Side Panel (C18) with Screw (D).

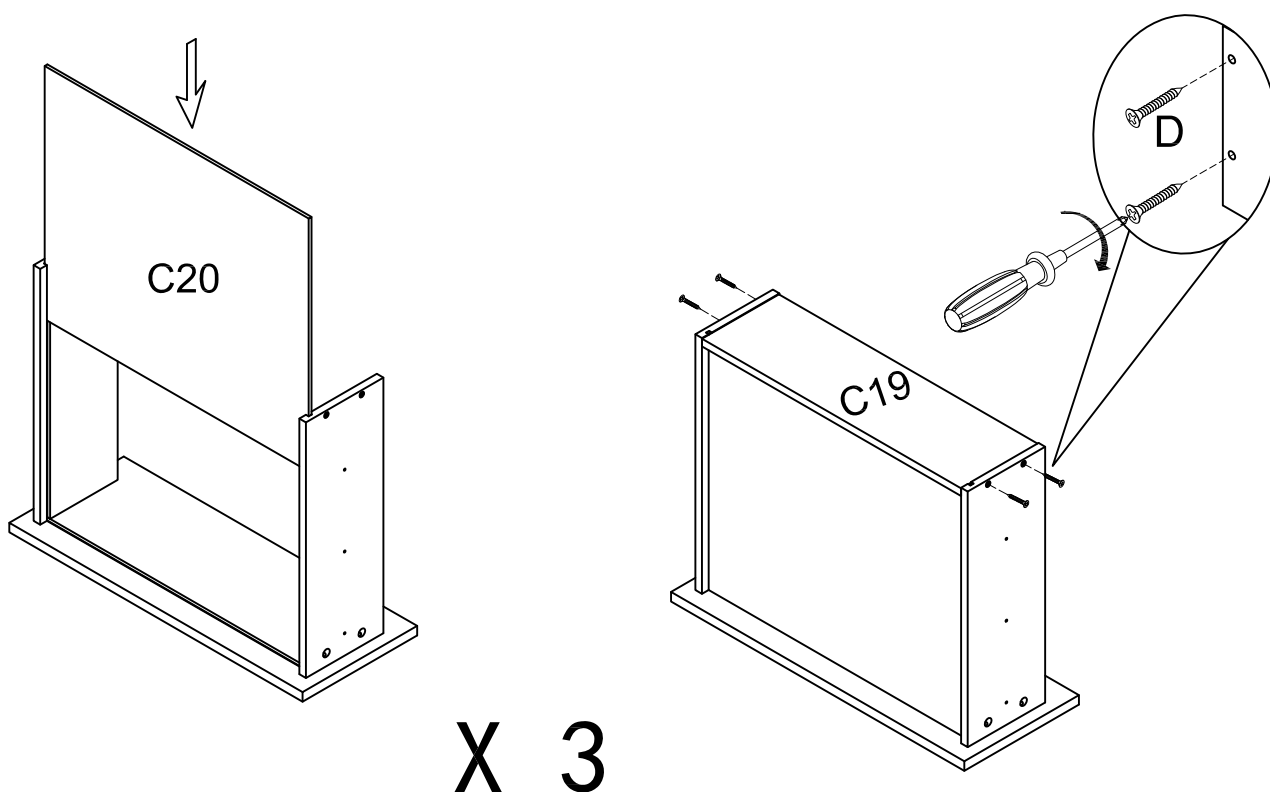


 STEP 16: Use a Phillips Head Screwdriver to assemble the Handle (M) to the Drawer Front Panel (C16) with Bolt (N).

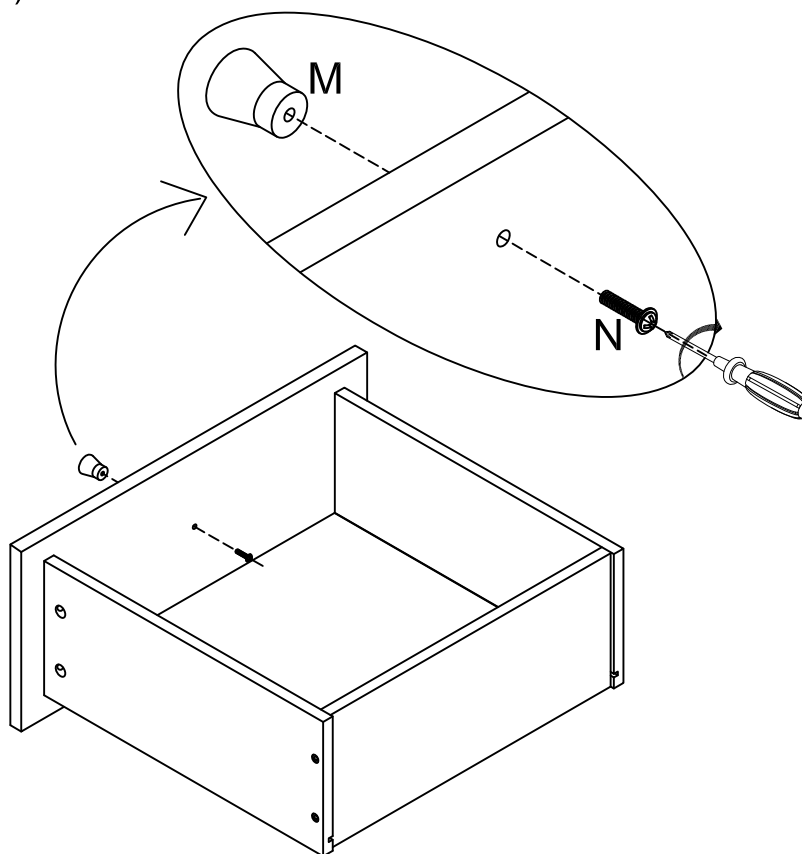


X 3

 
STEP 17: Use a Phillips Head Screwdriver to assemble the Runner (K2L\R) to the Drawer Left Side Panel (C17) and Drawer Right Side Panel (C18) with Screw (C).

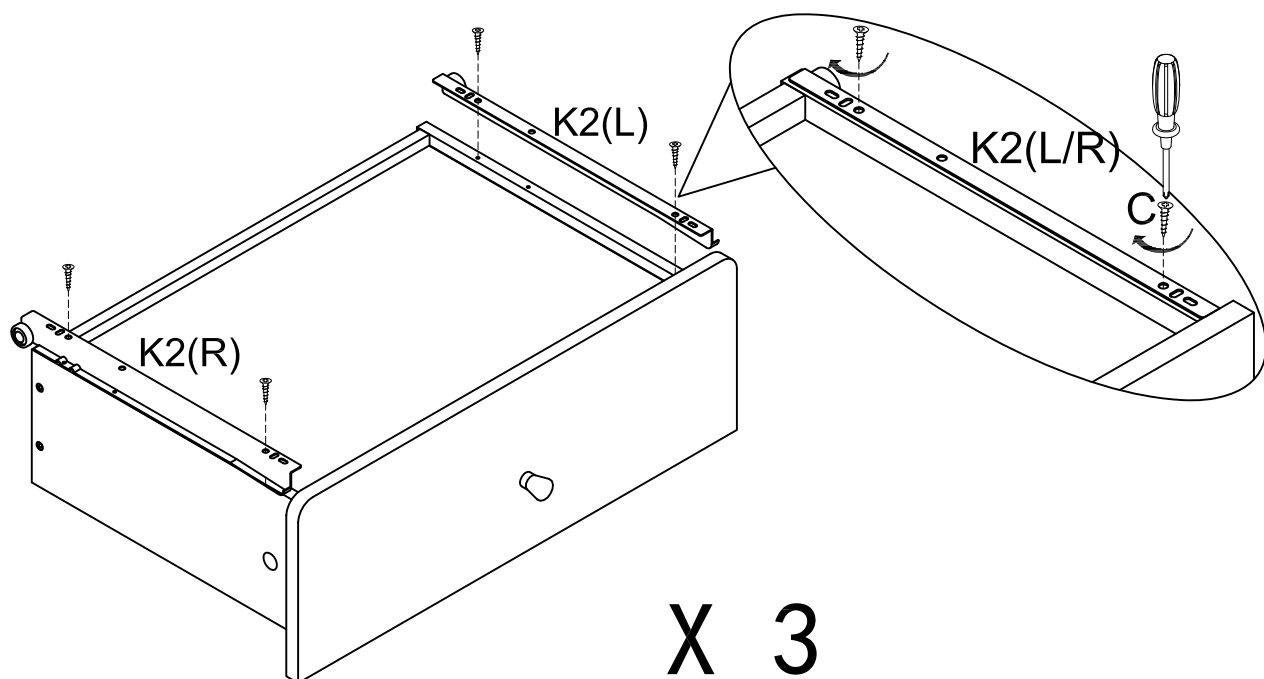

 
STEP 17: Insert the Drawer to the Middle Left Side Support Panel (C4) and Middle Right Side Support Panel (C5).

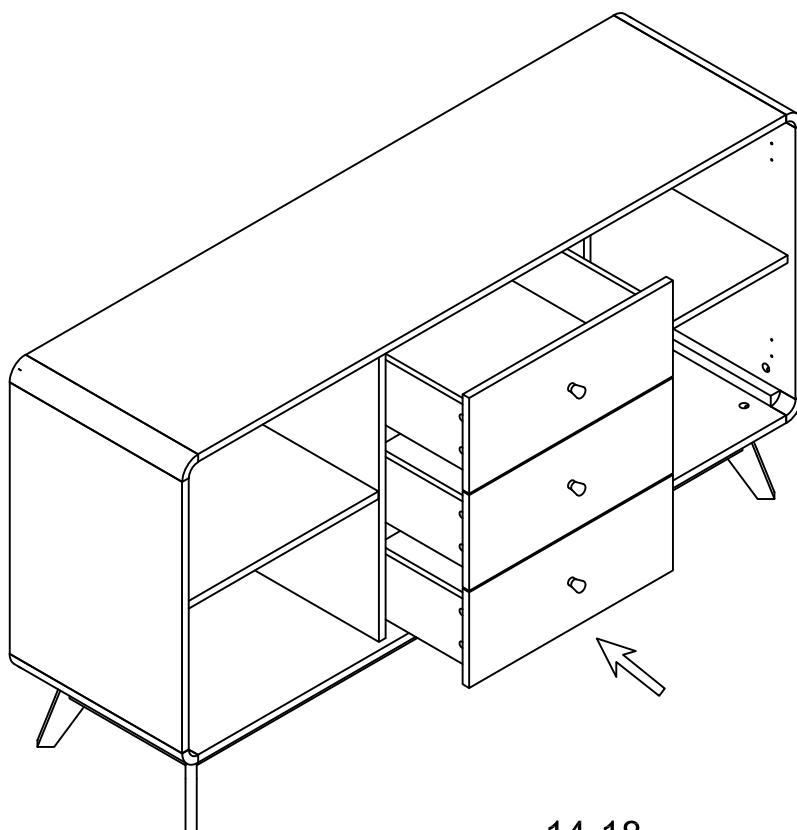

 
STEP 19: Use a Phillips Head Screwdriver to assemble the Handle (M) to the Left Side Door Panel (C14) and Right Side Door Panel (C15) with Bolt (N). Use a Phillips Head Screwdriver to assemble Hinge (S) to the Left Side Door Panel (C14) and Right Side Door Panel (C15) and Left Side Panel (C2) and Right Side Panel (C3) with Screw (I).

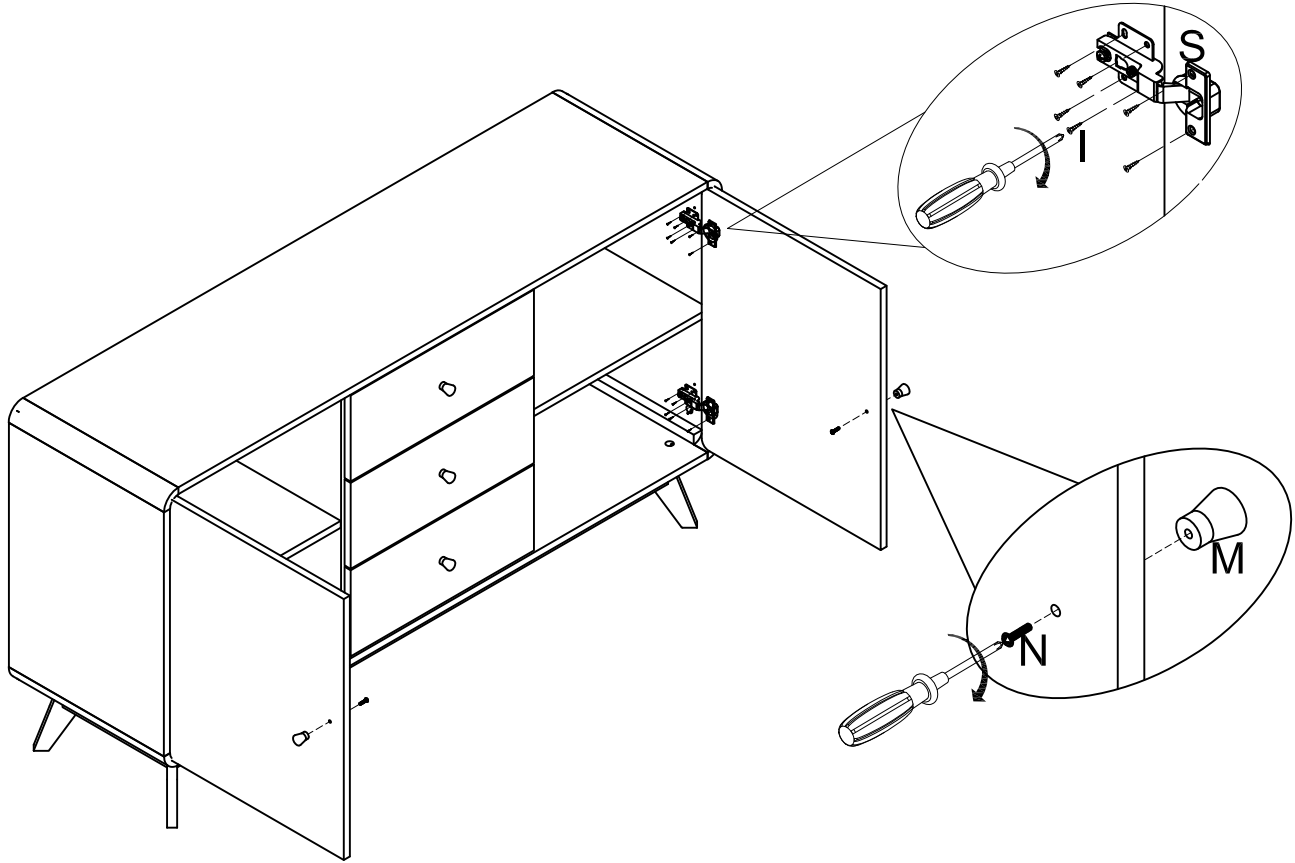

 
STEP 20: Use a Phillips Head Screwdriver to tighten the Belt (P) to the Top Panel (C1) with Screw (P). Use a Phillips Head Screwdriver to tighten the Connector (G) to the back corner with Screw (F).

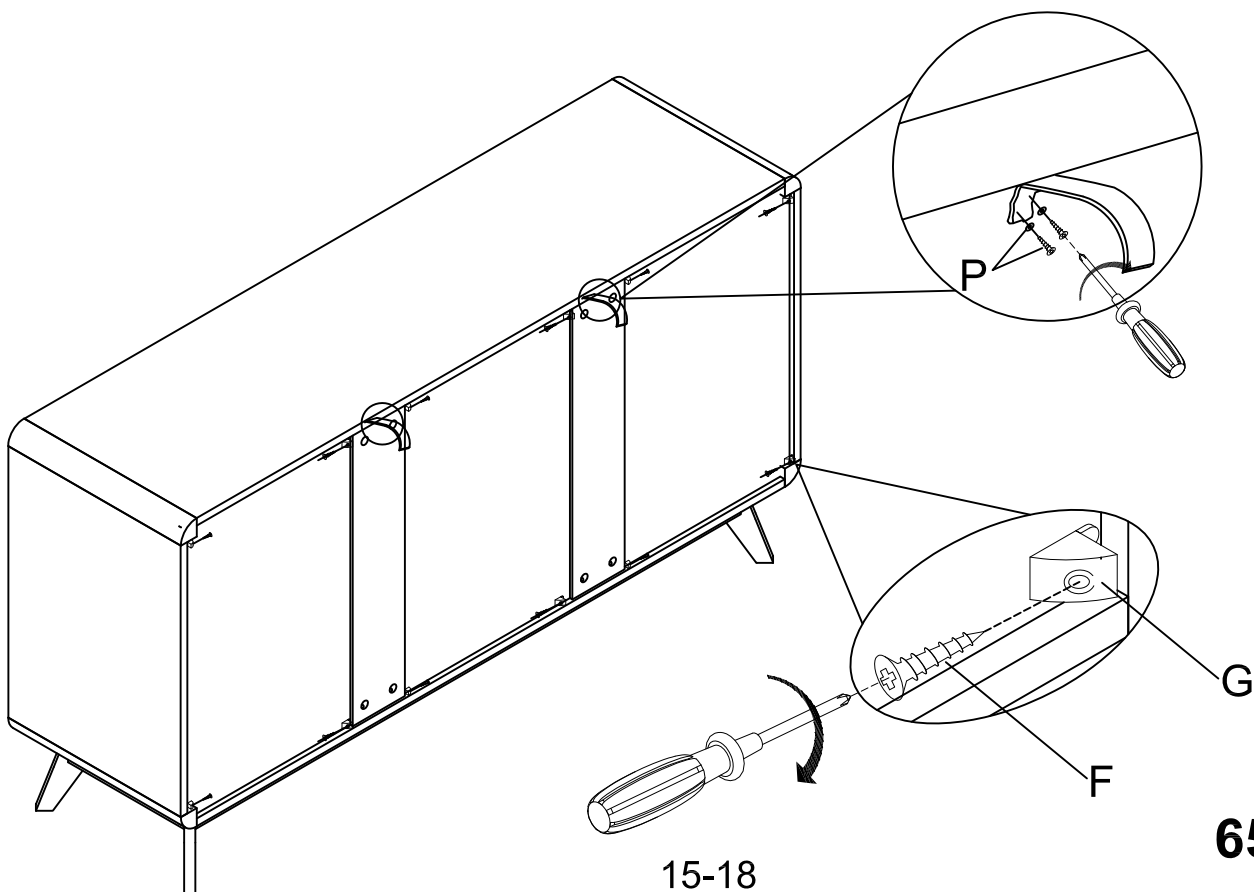


 
STEP 21: Use a Phillips Head Screwdriver to tighten the Belt (P) to the Wall with Screw (E).

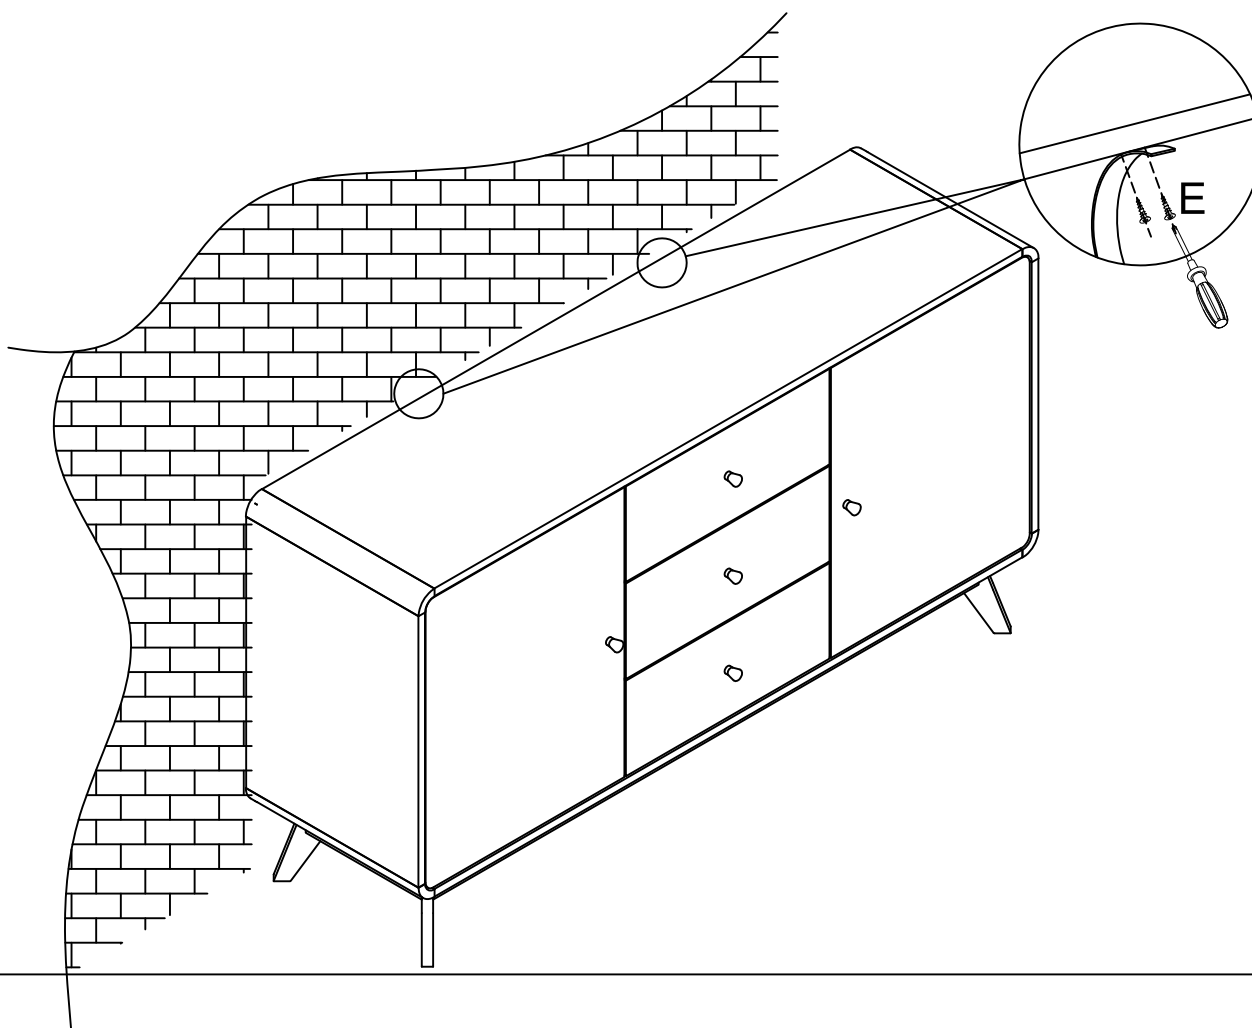

**Assembly is complete**

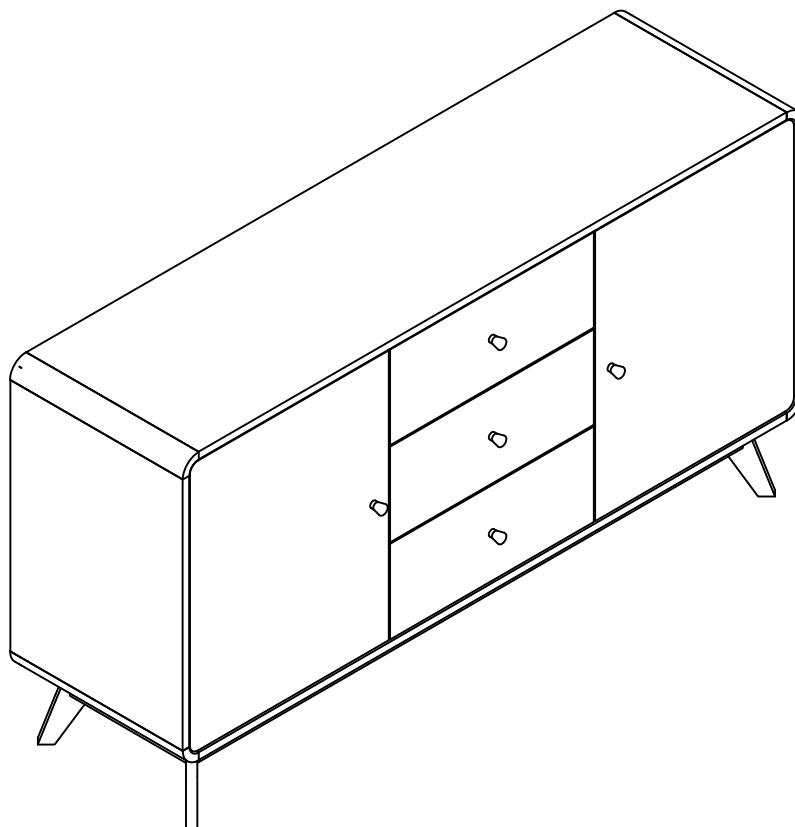 




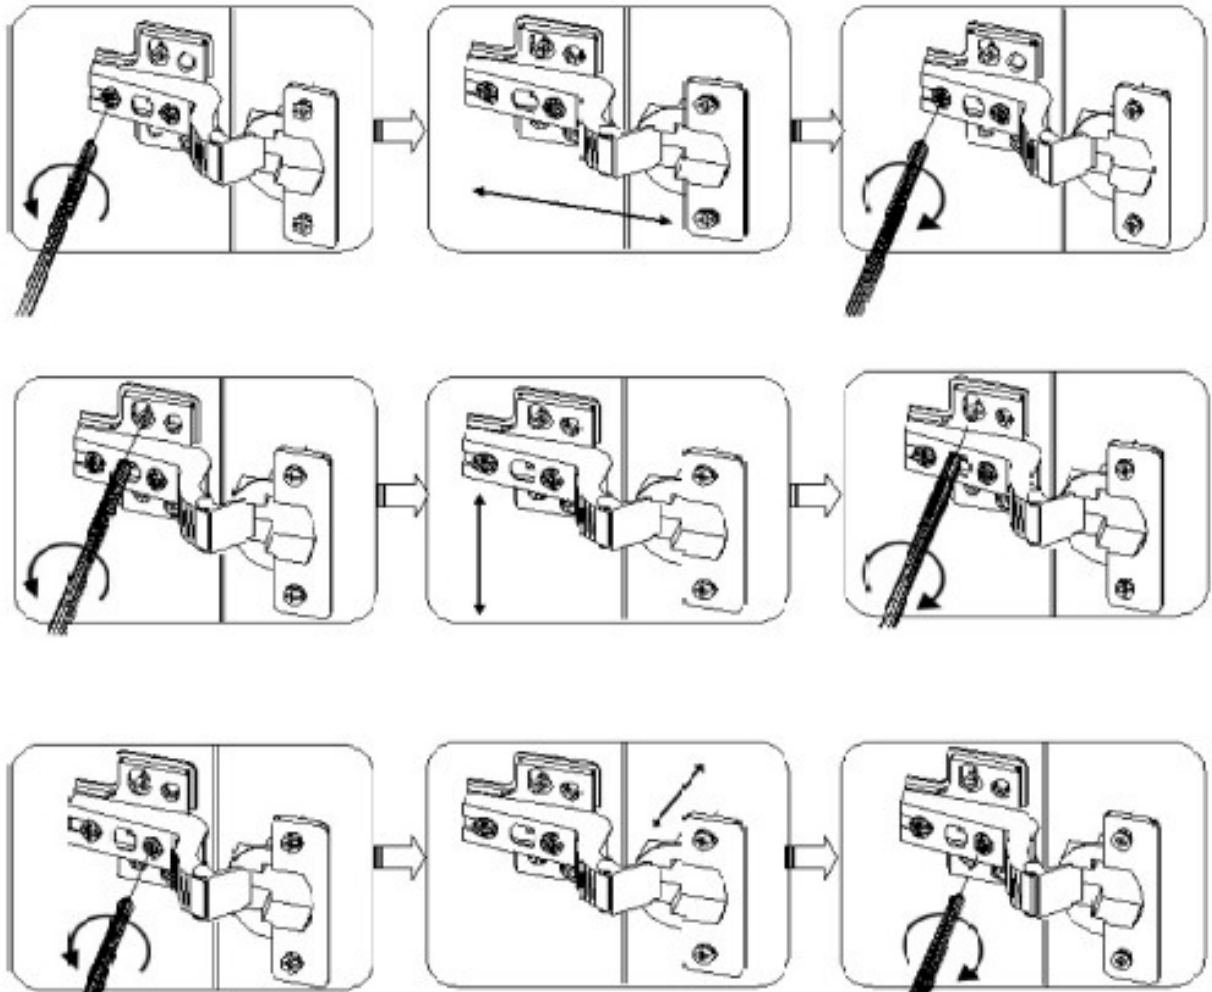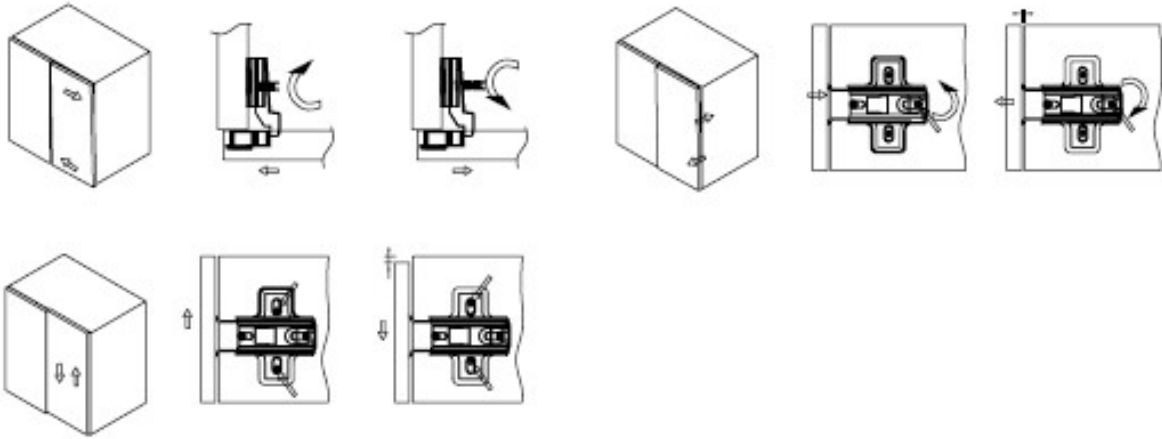  

Note -

 Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

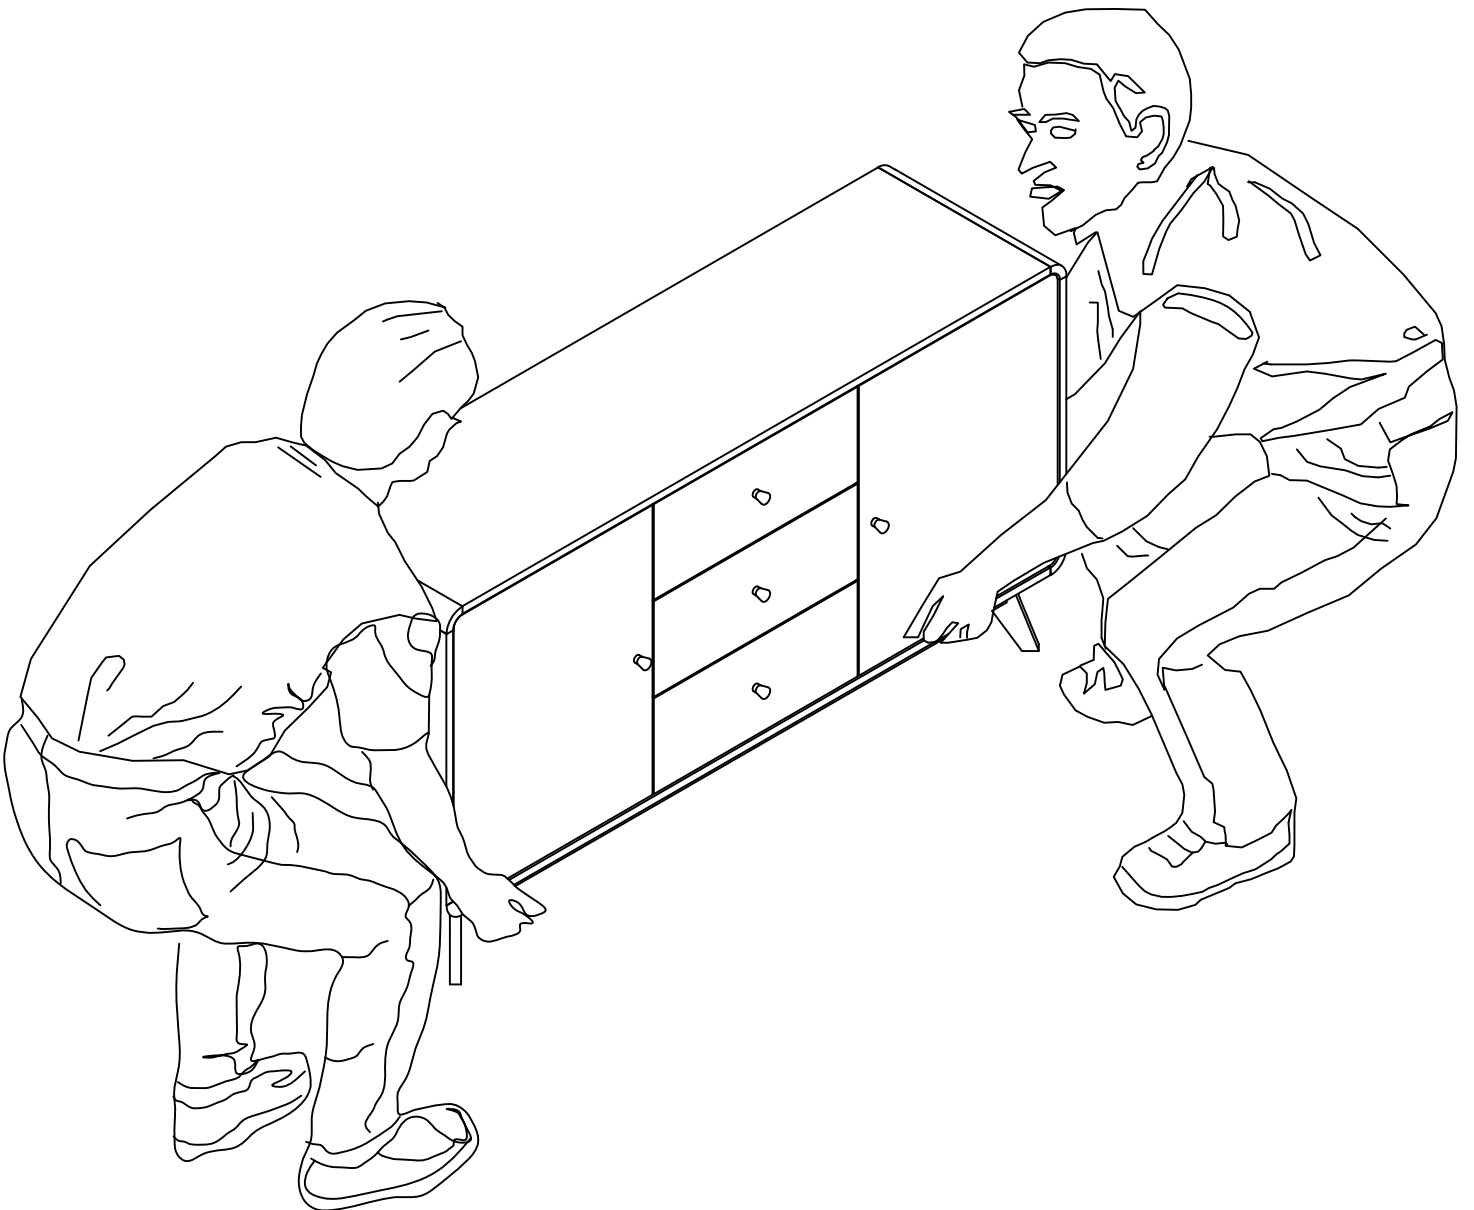

## **IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE**

*Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...*

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.