 




**ASSEMBLY INSTRUCTION
MORRISON CORNER CHAISE
ITEM CODE 69015**

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

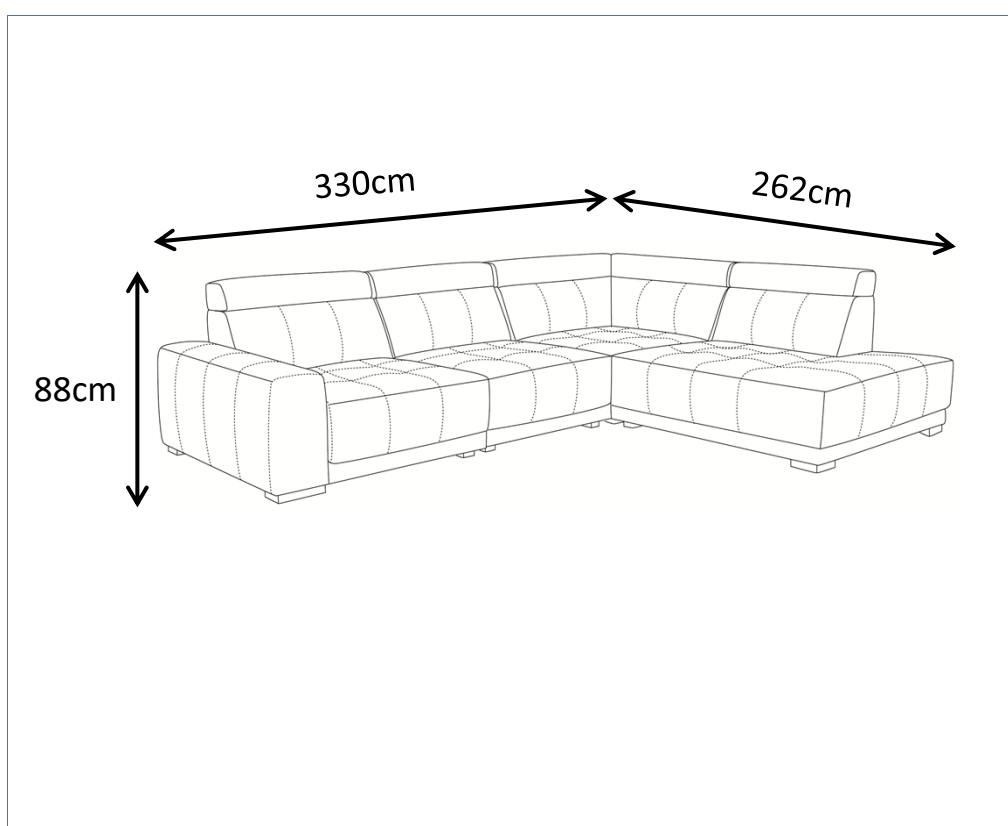



Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

 
1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads


	
ALLOW 30 MINUTES	PEOPLE REQUIRED
ADDITIONAL TOOLS REQUIRED	

 

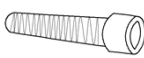 
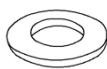 





WARNING

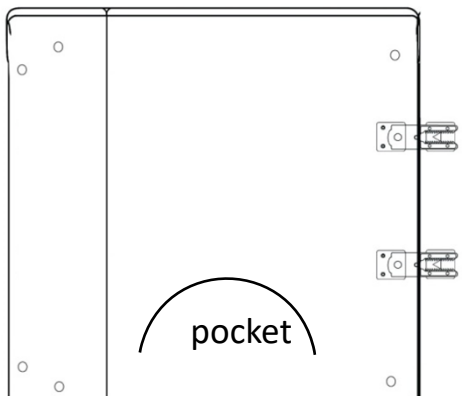- DO NOT STUB YOUR TOES ON THE CONNECTION CLIP POKING OUT FROM THE BOTTOM OF THE SOFA.
- KEEP ALL BODY PARTS CLEAR FROM UNDER THE MOVING BACKREST MECHANISM TO AVOID INJURY.

 
Step1: Locate package of sofa legs with fittings and hardware for assembly of adjustable backrest that are placed into zipper pocket at the bottom of left hand facing chair.

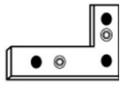

 
 With 2 people carefully turn onto back on piece of cardboard or carpet to protect covering

<p>a. Timber leg  2pcs</p>	<p>b. Plastic leg  2pcs</p>	<p>c. Bolt M8X60  4pcs</p>	<p>d. Washer 18*8.5*2mm  4pcs</p>	<p>e. Allen key  1pcs</p>
<p>f. Bolt M8X40  4pcs</p>	<p>g. Nut  4pcs</p>	<p>h. Wrench  1pcs</p>	<p>i. Washer 25*8.5*2mm  8pcs</p>	

 
STEP2: Tighten the pair of timber leg (a) to the bottom of left hand facing chair at arm side with bolt (c) and washer (d) by Allen key (e).

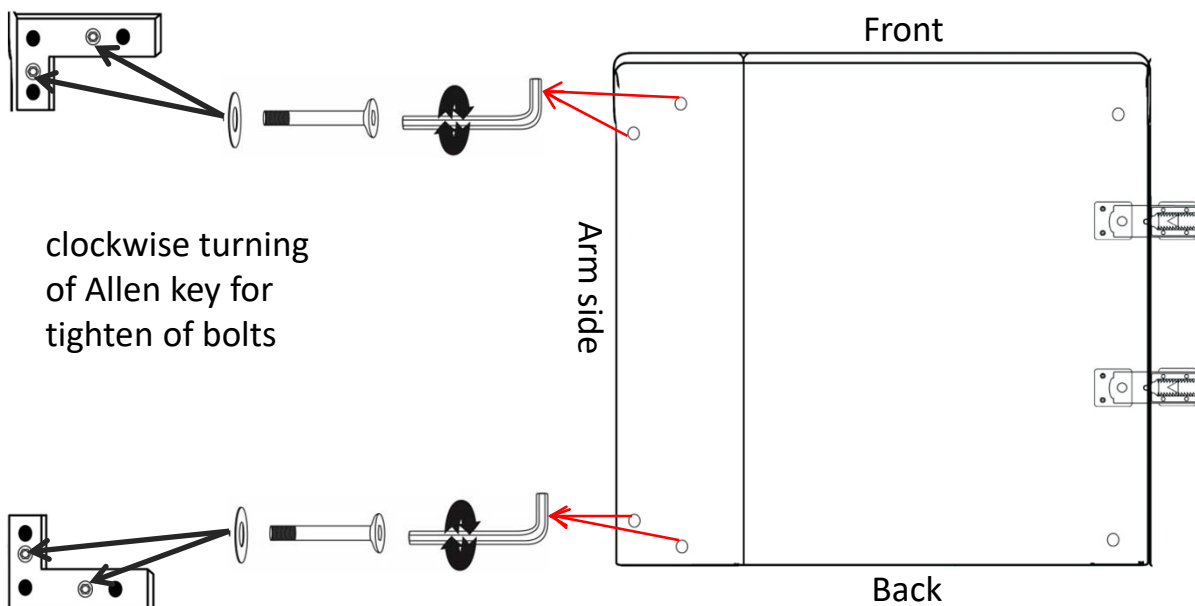

 
STEP3: Screw two plastic legs (b) into holes at bottom of armless side of the left hand facing chair.

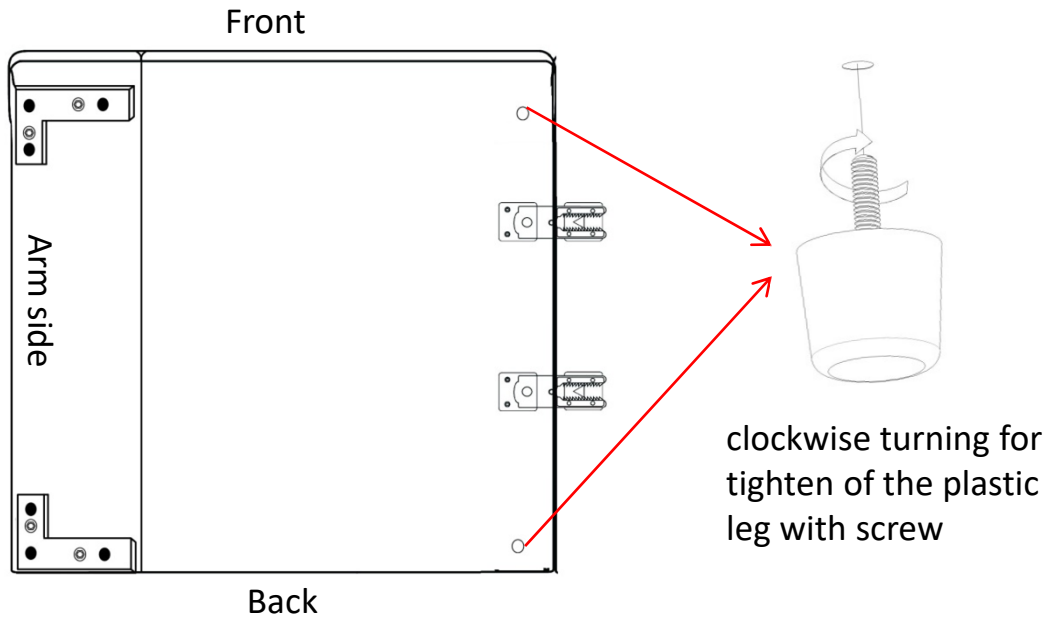



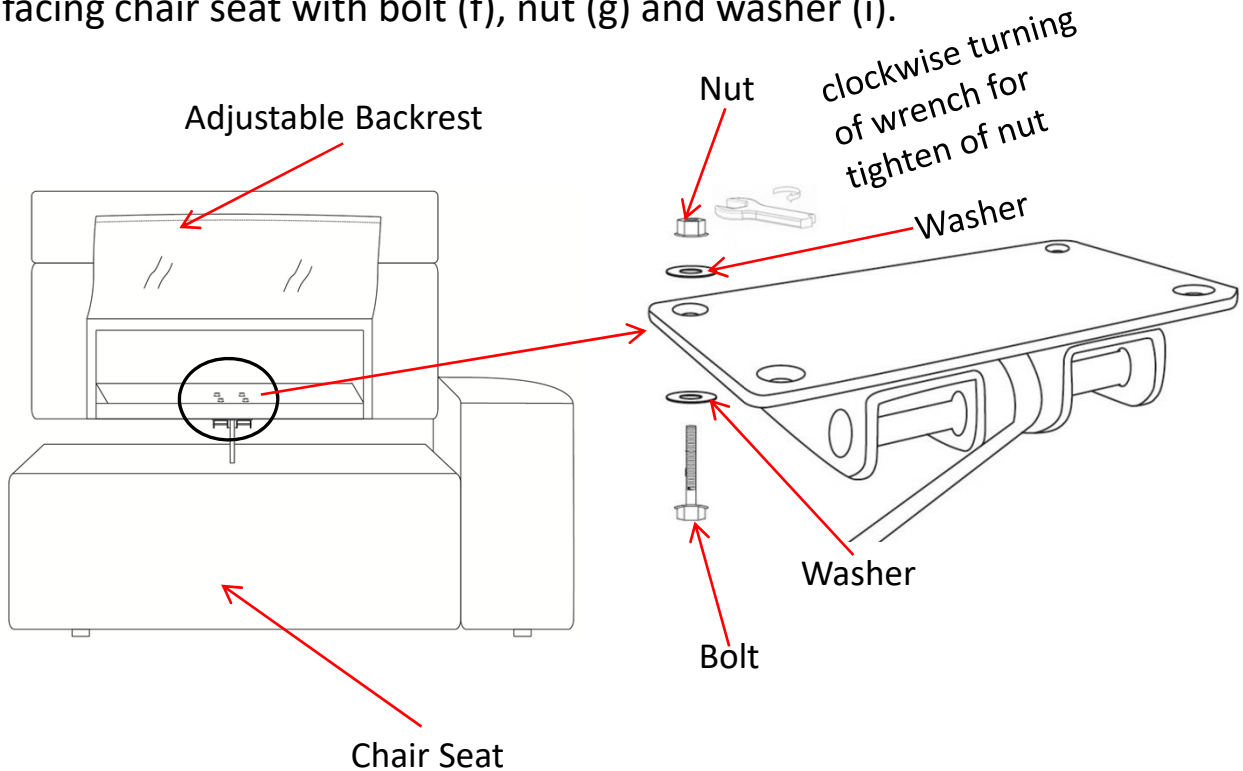 


STEP4: Use wrench (h) to fix the adjustable backrest at the left hand facing chair seat with bolt (f), nut (g) and washer (i).

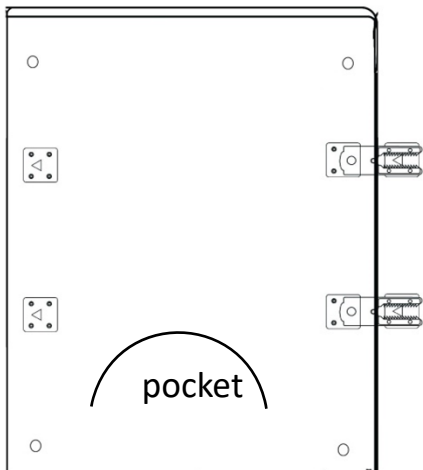

 
 
Step5: Locate package of sofa legs and hardware for assembly of adjustable backrest that are placed into zipper pocket at the bottom of armless chair.

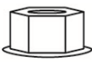

 With 2 people carefully turn onto back on piece of cardboard or carpet to protect covering

 
<p>f. Bolt M8X40 4pcs</p> 	<p>g. Nut 4pcs</p> 	<p>i. Washer 25*8.5*2mm 8pcs</p> 	<p>b. Plastic leg 4pcs</p> 
---	--	--	--

STEP6: Screw four plastic legs (b) into holes at bottom of the armless chair.

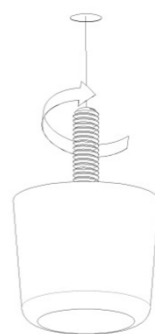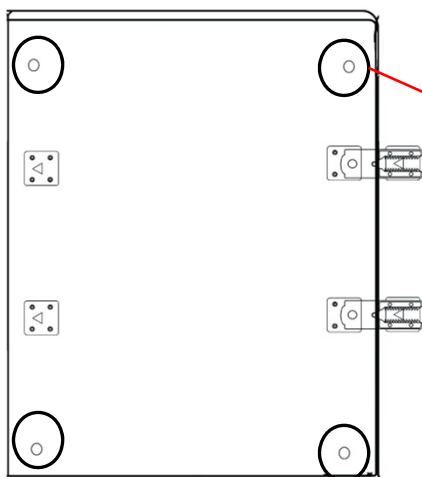 



clockwise turning for tighten of the plastic leg with screw

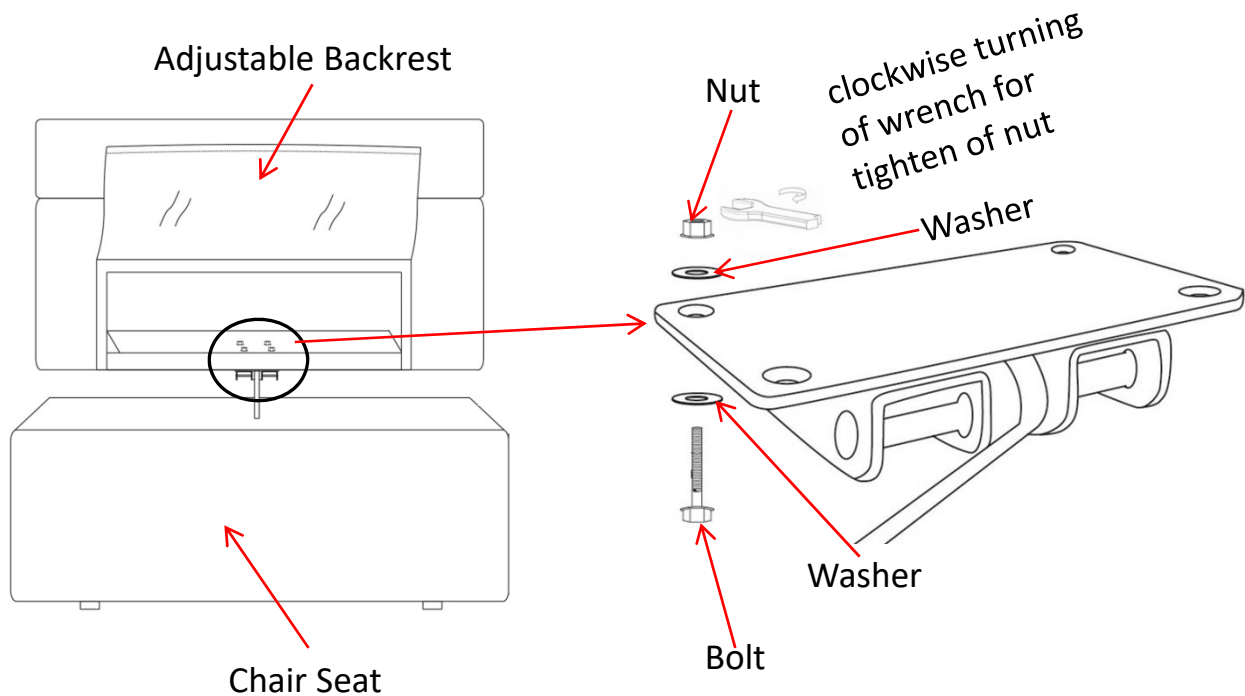 



Step7: Use wrench (h) to fix the adjustable backrest at the armless chair seat with bolt (f), nut (g) and washer (i).

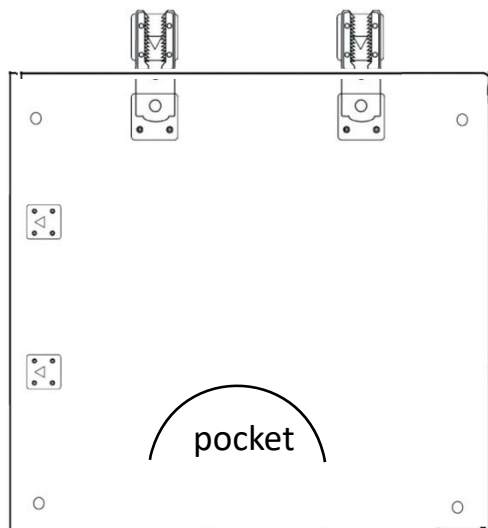

 
STEP8: Locate package of sofa legs and hardware for assembly of backrest that are placed into zipper pocket at the bottom of wedge piece.

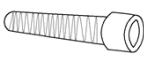

 With 2 people carefully turn onto back on piece of cardboard or carpet to protect covering

 
<p>c. Bolt M8X60</p>  <p>6pcs</p>	<p>d. Washer 18*8.5*2mm</p>  <p>6pcs</p>	<p>e. Allen key</p>  <p>1pcs</p>	<p>b. Plastic leg</p>  <p>4pcs</p>
--	---	---	---

Step9: Screw four plastic legs (b) into holes at bottom of the wedge piece.

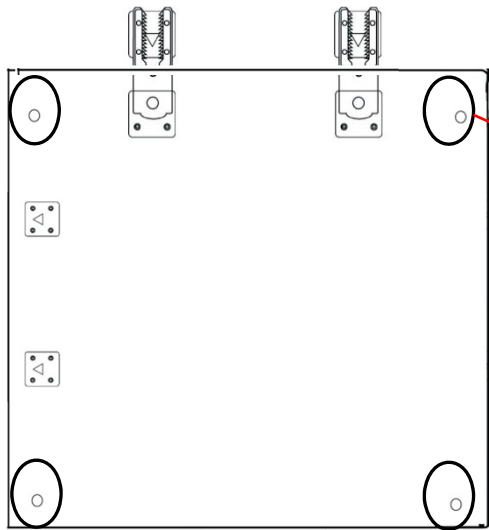 



clockwise turning for
tighten of the plastic
leg with screw

 


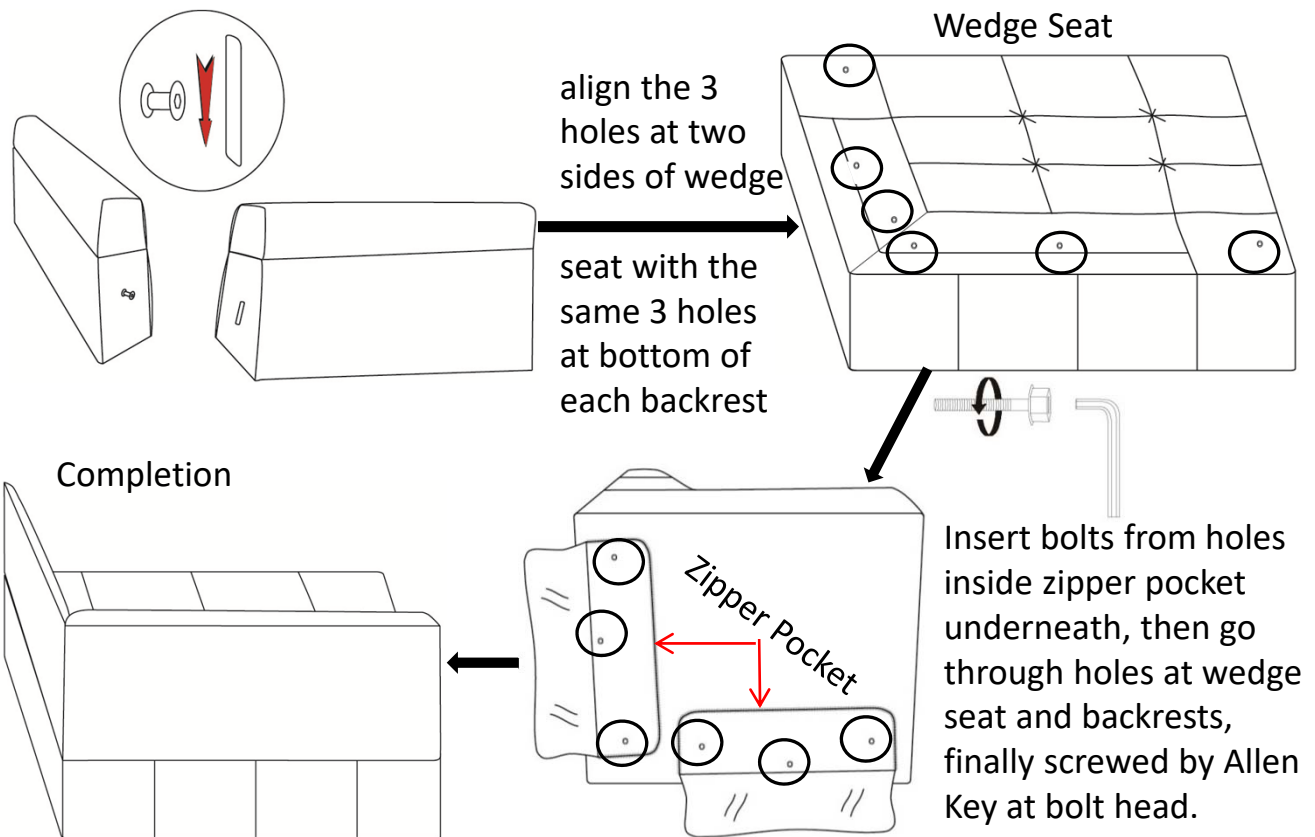


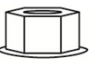 

STEP10: Connect the two backrests of the wedge piece by slotting, then fix them at the wedge piece seat with bolt (c) and washer (d) by Allen key (e).

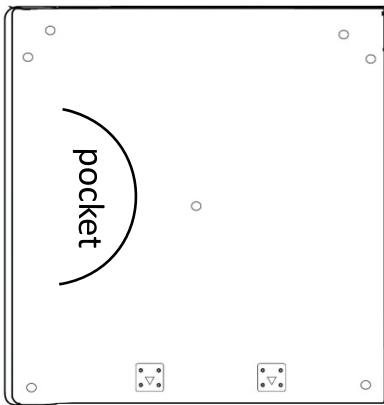

 
Step11: Locate package of sofa legs with fittings and hardware for assembly of adjustable backrest that are placed into zipper pocket at the bottom of right hand facing end chair.

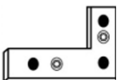

 
 
 With 2 people carefully turn onto back on piece of cardboard or carpet to protect covering

a. Timber leg  2pcs	b. Plastic leg  3pcs	c. Bolt M8X60  4pcs	d. Washer 18*8.5*2mm  4pcs
e. Allen key  1pcs	f. Bolt M8X40  4pcs	g. Nut  4pcs	i. Washer 25*8.5*2mm  8pcs

STEP12: Tighten the pair of timber leg (a) to the bottom of right hand facing end chair at front with bolt (c) and washer (d) by Allen key (e).

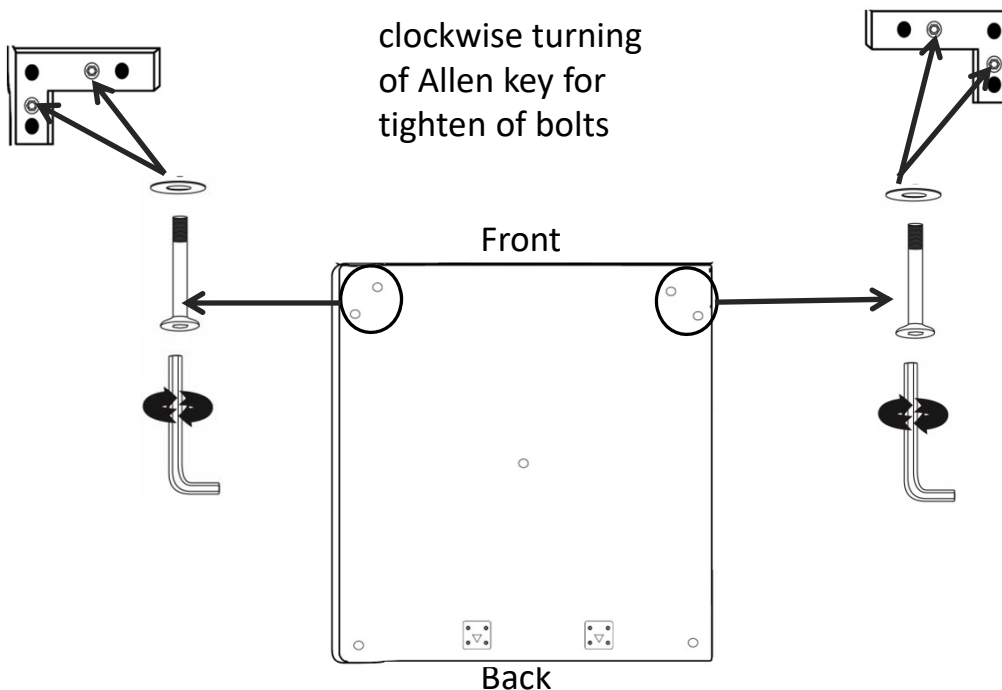 


STEP13: Screw three plastic legs (b) into holes at the bottom of right hand facing end chair.

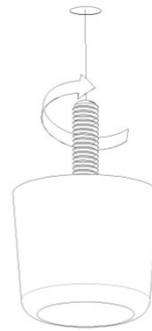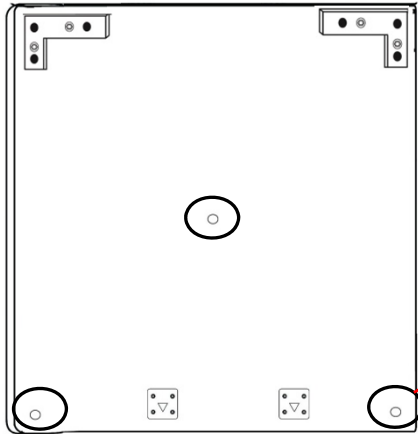 


clockwise turning for
tighten of the plastic
leg with screw

STEP14: Use wrench (h) to fix the adjustable backrest at the right hand facing end chair seat with bolt (f), nut (g) and washer (i).

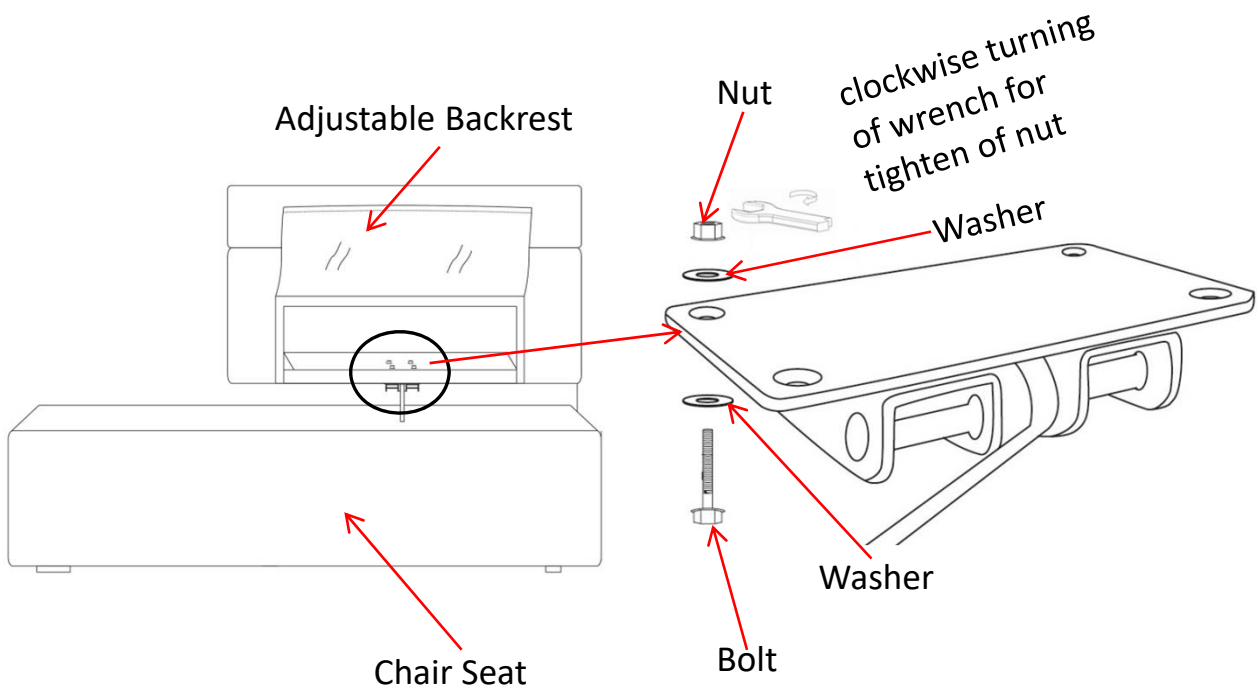 


STEP15: Connect 4 pieces of the corner chaise by sliding foldable clips into slide way parts at the bottom of every piece.

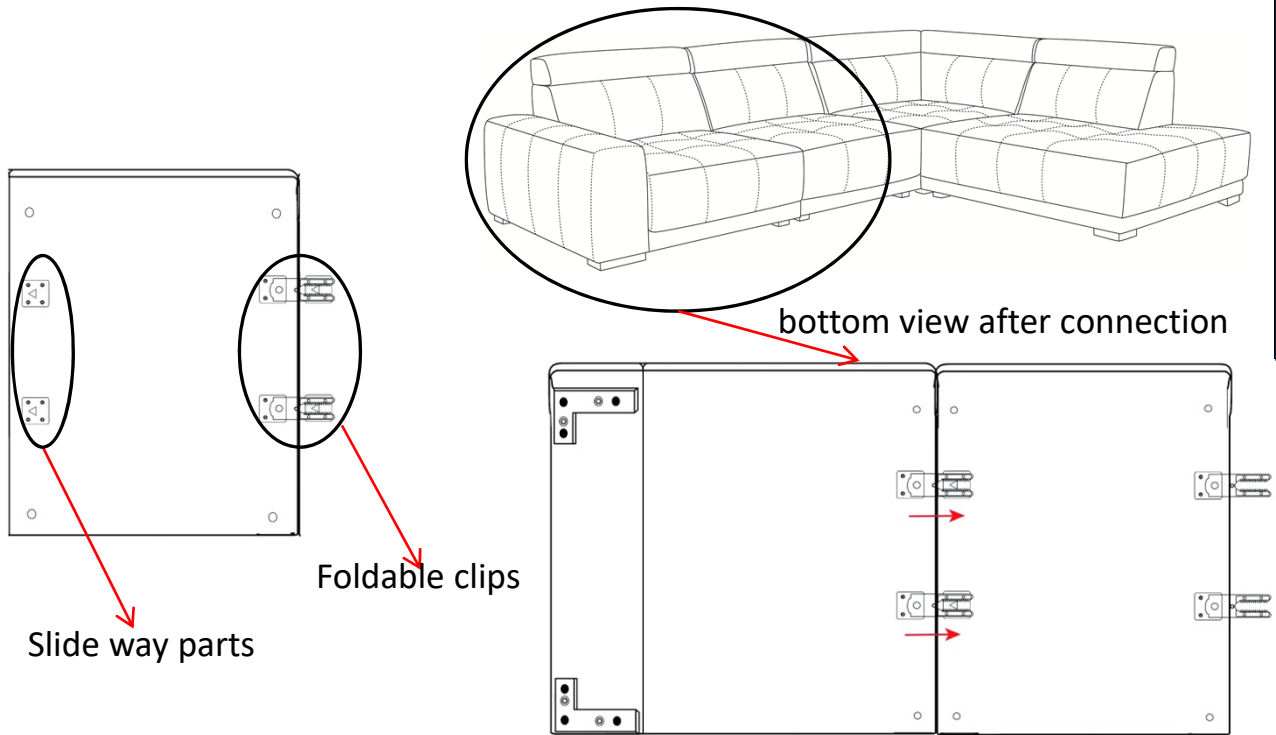

To Separate Two Lounge Pieces

Use two people to lift the lounge and move clear of the connection clips.

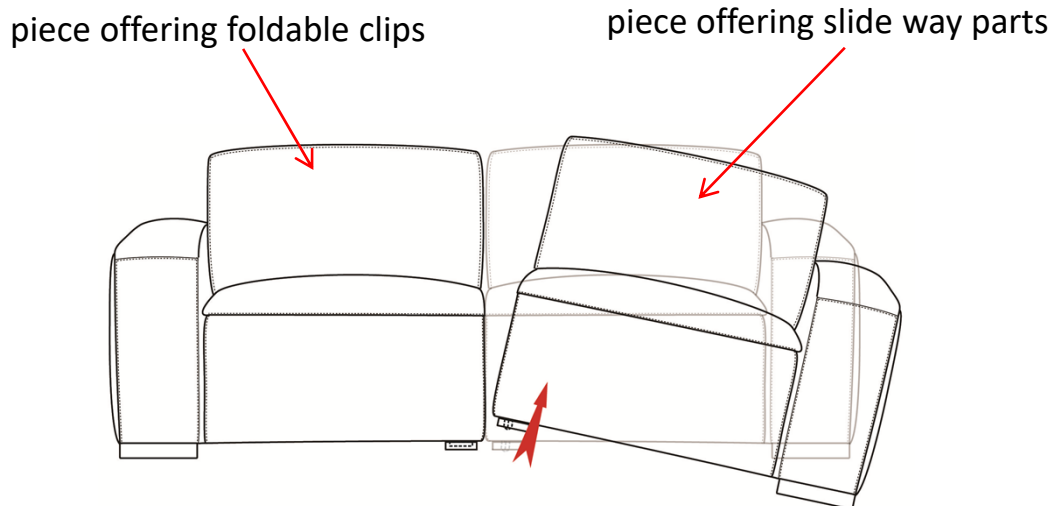

CARE AND MAINTENANCE

FABRIC CARE

REGULAR CARE: PROTECT FROM DIRECT SUNLIGHT.
VACUUM REGULARLY USING LOW SUCTION.
ROTATE REVERSIBLE CUSHIONS REGULARLY.

CLEANING:

DO NOT REMOVE CUSHION COVERS FOR SEPARATE
CLEANING EVEN THOUGH THEY HAVE ZIPPERS.

DO NOT WASH

DO NOT DRY CLEAN

DO NOT SHAMPOO CLEAN

CLEAN WITH HOT-WATER EXTRACTION MACHINE.

(HOT) PROFESSIONAL CLEANING RECOMMENDED

DO NOT USE DISHWASHING OR LAUNDRY

DETERGENTS

USE ONLY UPHOLSTERY DETERGENTS

DO NOT WET FILLING

DRY IN SHADE AWAY FROM DIRECT HEAT AND

SUNLIGHT

ALLOW TO DRY THOROUGHLY BEFORE RE-USE

SPOT CLEANING:

DO NOT RUB

DO NOT SPOT CLEAN WITH ANY SOLVENT.

TREAT SPILLS AND STAINS AS SOON AS POSSIBLE.

GENTLY SCRAPE ANY SOIL OR MOP ANY LIQUID

FROM THE SURFACE OF THE FABRIC.

APPLY PROPRIETARY CLEANING AGENTS STRICTLY

ACCORDING TO INSTRUCTIONS TO REMOVE THE

RESIDUE OF THE SPILL.

DO NOT SATURATE THE FABRIC OR INTERIOR WITH

WATER OR OTHER CLEANING LIQUIDS.

WARNING: APPLY ONLY WATER-BASED SOIL RESIST

(FABRIC PROTECTION) TREATMENTS. DO NOT USE

AEROSOL PRODUCTS.