
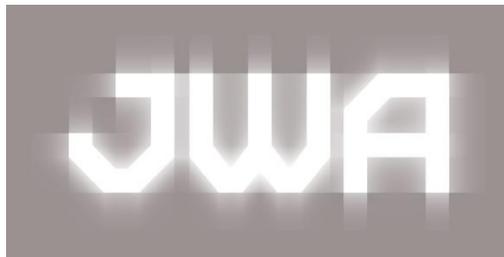


ASSEMBLY INSTRUCTION

DORSEY

4 DRAWER TALL CHEST

ITEM CODE 73020/73022


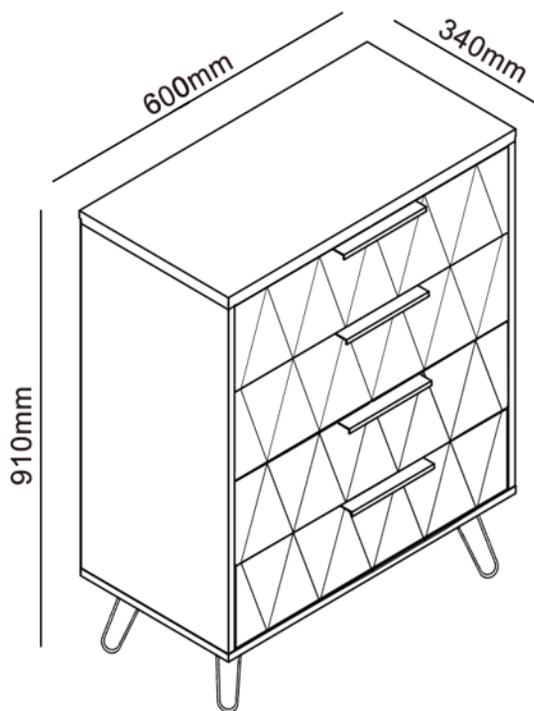


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

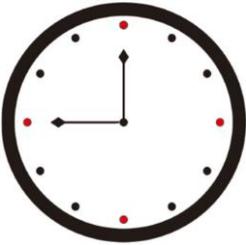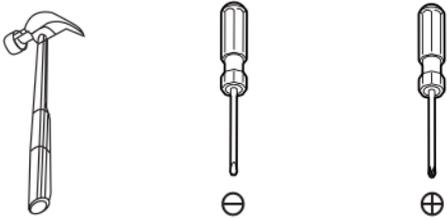		
Allow 45 min	For 2 person	Additional tools required



TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

 
If this product has drawers:



- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!

PARTS LIST




NO.	ITEM	QTY
A	 6x30mm	18 PCS
B	 15x10mm	26 PCS
C	 6x35mm	26 PCS
D	 4x35mm	24 PCS
E		4 PCS
F	 3x12mm	8 PCS
G	 4x10mm	48 PCS

  NO.	ITEM	QTY
H		8 PCS
I	 3x16mm	8 PCS
J	 4x10mm	20 PCS
K		4 PCS
L		4 PCS
M		1 PCE
N		4 PCS

PARTS LIST


NO.	ITEM	QTY
1	TOP PANEL	1 PCE
2	LEFT SIDE PANEL	1 PCE
3	RIGHT SIDE PANEL	1 PCE
4	BOTTOM PANEL	1 PCE
5	BACK PANEL	1 PCE
6	DRAWER FRONT PANEL	2 PCS
7	DRAWER FRONT PANEL	2 PCS

NO.	ITEM	QTY
8	DRAWER LEFT PANEL	4 PCS
9	DRAWER RIGHT PANEL	4 PCS
10	DRAWER BACK PANEL	4 PCS
11	DRAWER BOTTOM PANEL	4 PCS
12	SUPPORT PANEL	4 PCS
13	SUPPORT PANEL	1 PCE

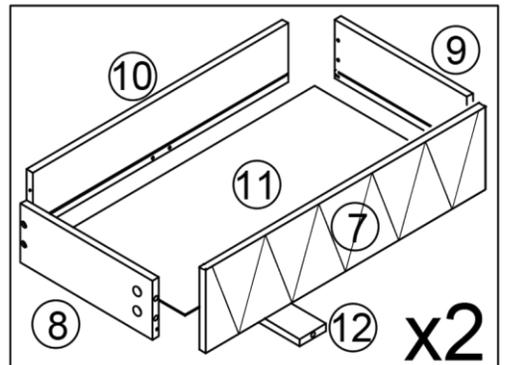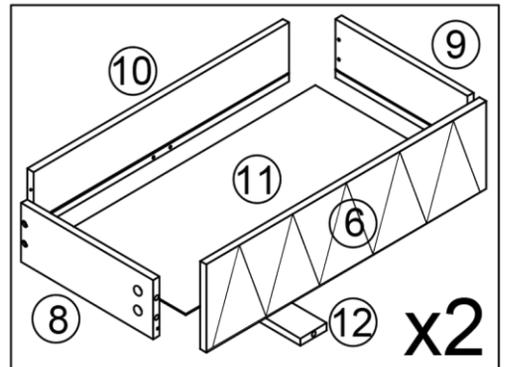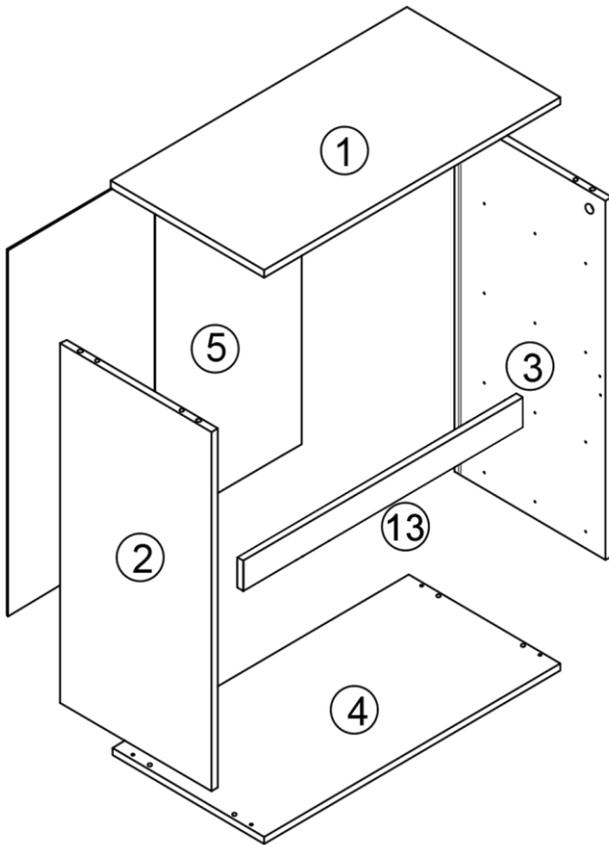


STEP 1:

G	X2	L	X4	C	X1
					



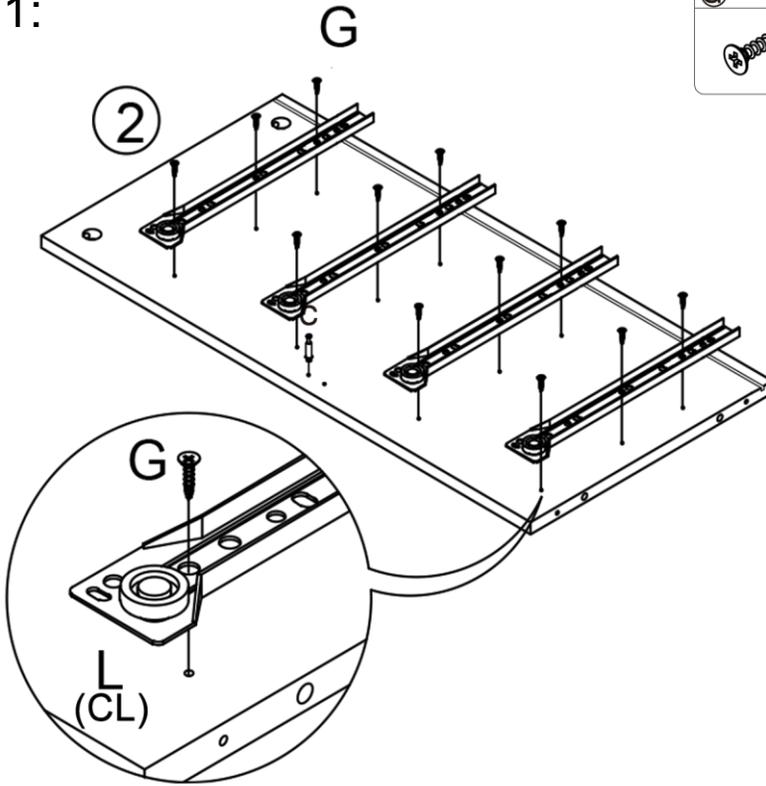


STEP 2:



G	X2	L	X4	C	X1
					

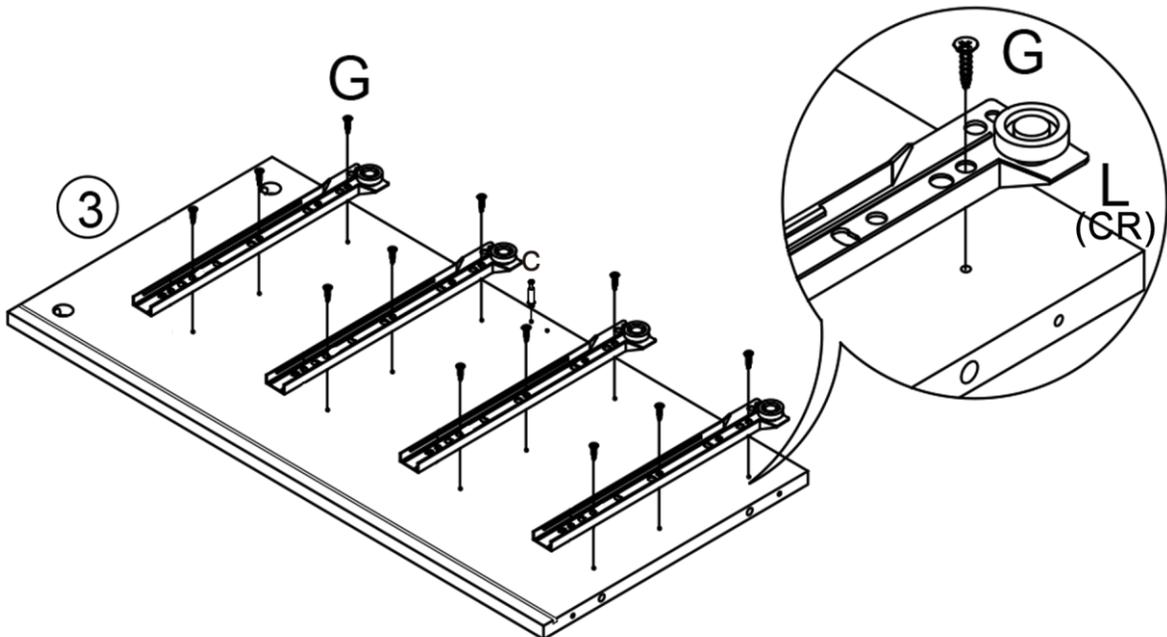



STEP 3:

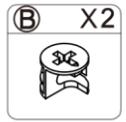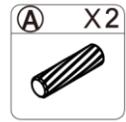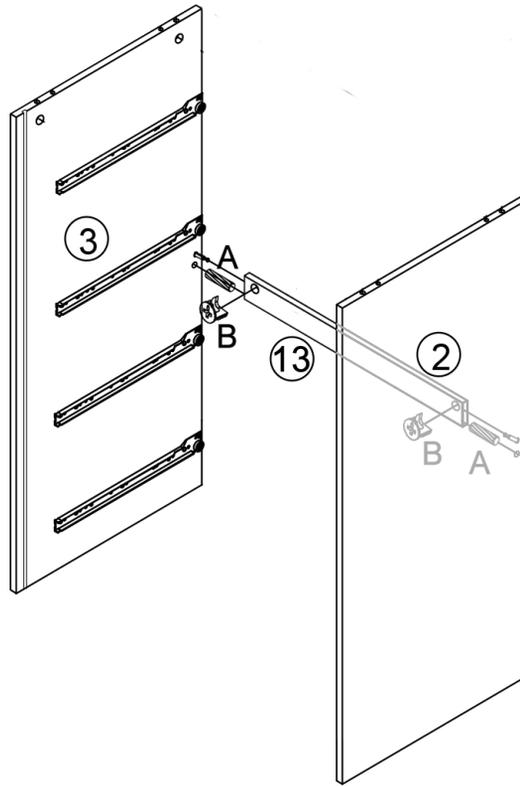


STEP 4:

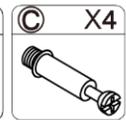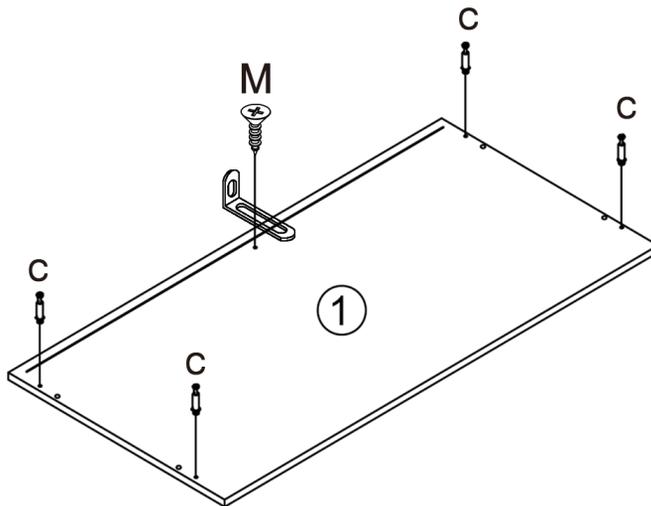

STEP 5:

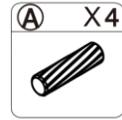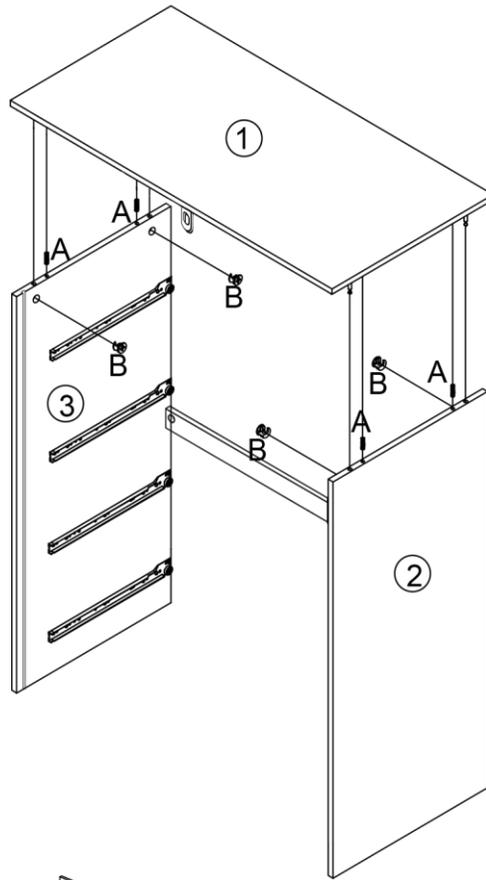


STEP 6:

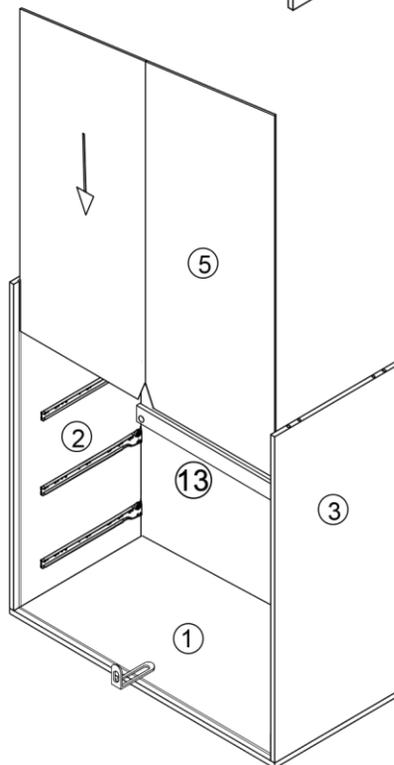


STEP 7:

A X4	D X4	J X20	K X4
			

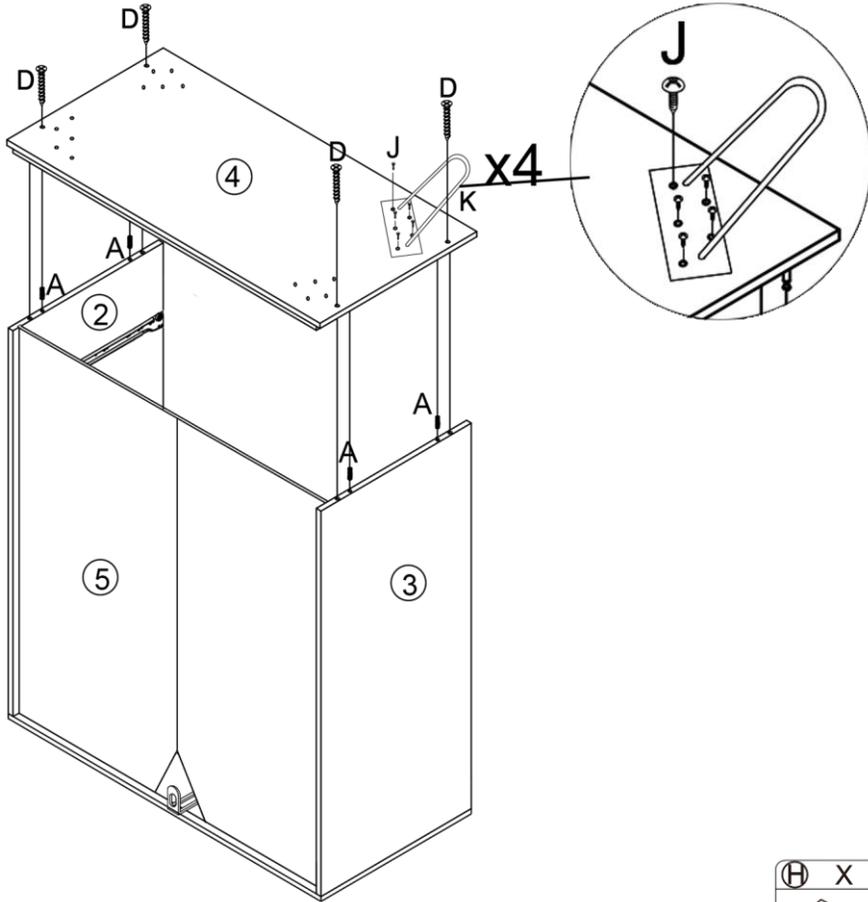

STEP 8:

H X 8	I X 8
	

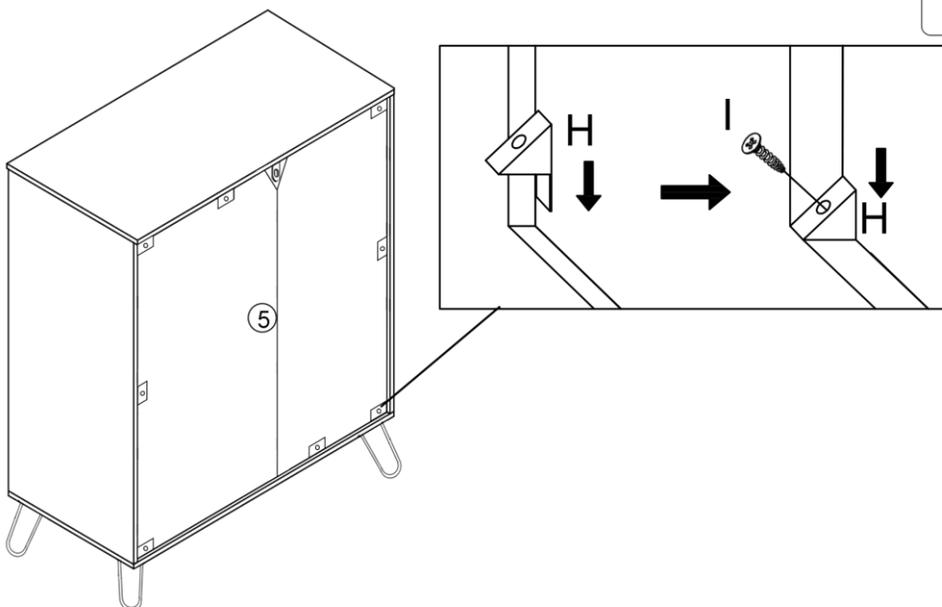


STEP 9:




WARNING: Anti-tipping hardware is only a deterrent. It is not a substitute for proper adult supervision.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use.



Please ensure the anti-tipping hardware provided is suitable for your wall or else it might damage your wall during installation.

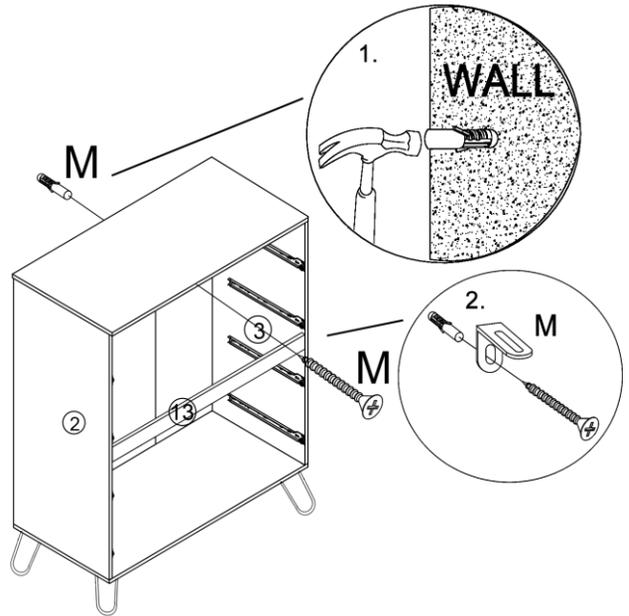


STEP 10:

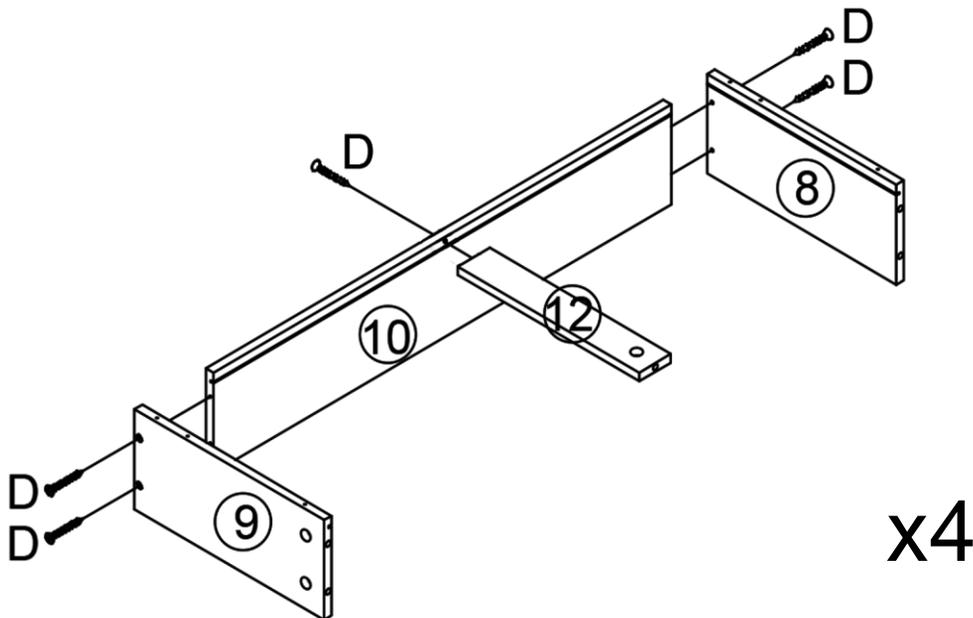


STEP 11:

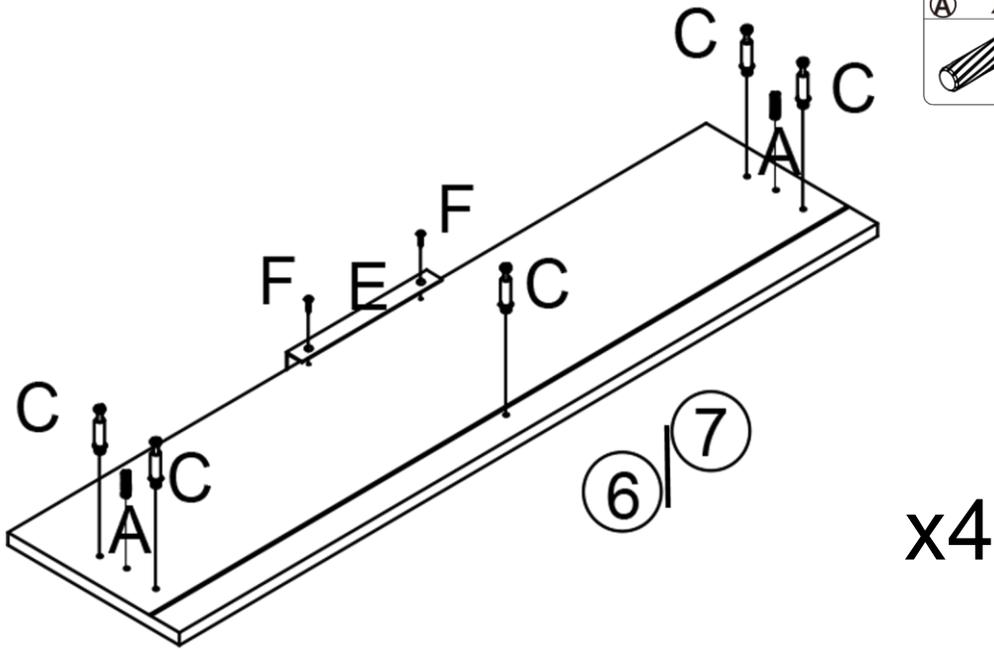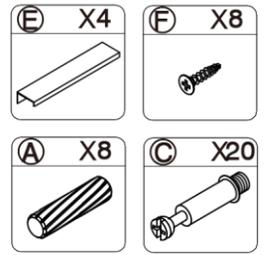

STEP 12:

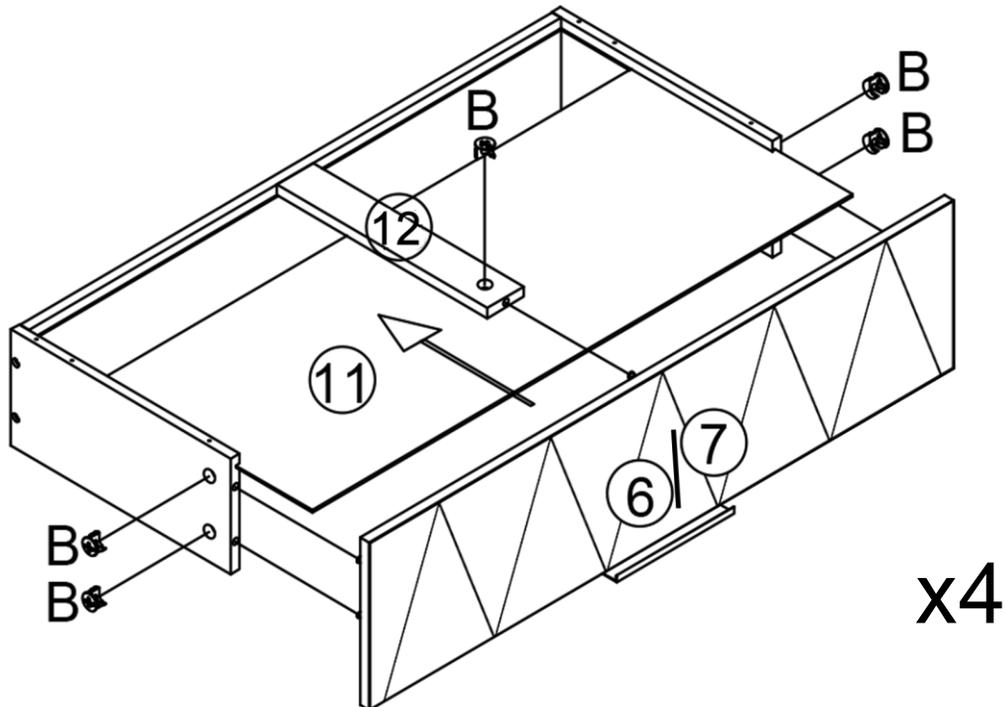


STEP 13:

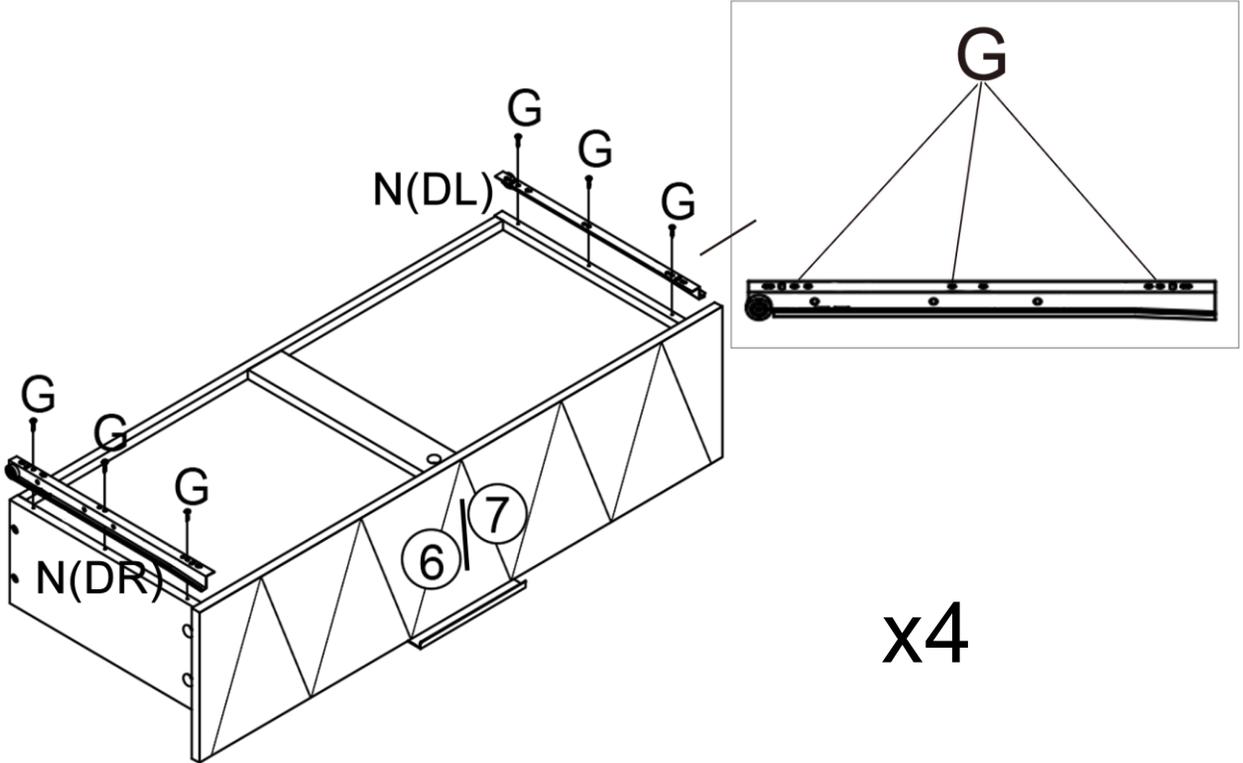


x4

STEP 14:

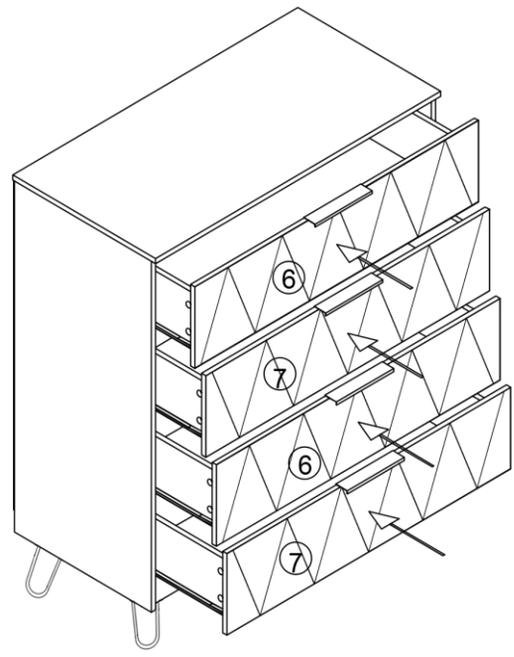

ASSEMBLY IS COMPLETE

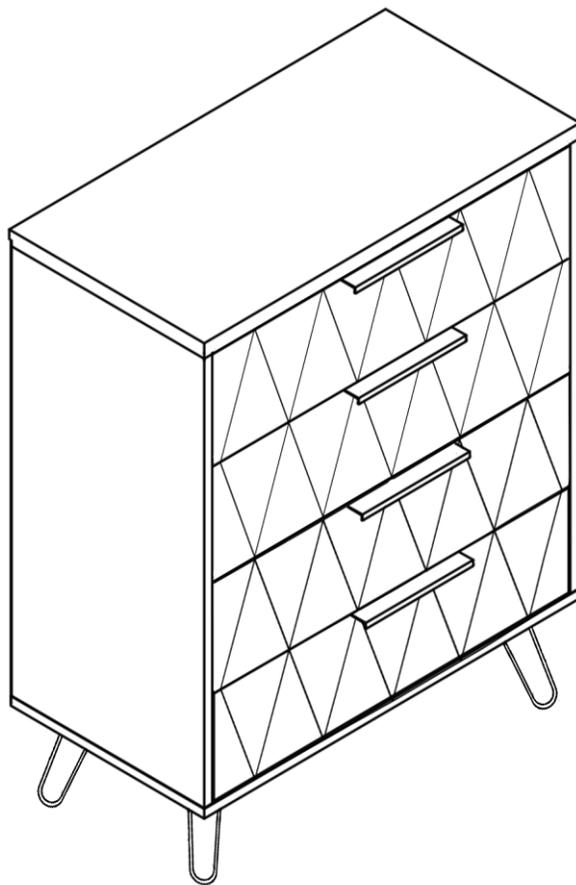

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void