

 


# **ASSEMBLY INSTRUCTION REAGAN TALL CHEST ITEM CODE 74015**

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

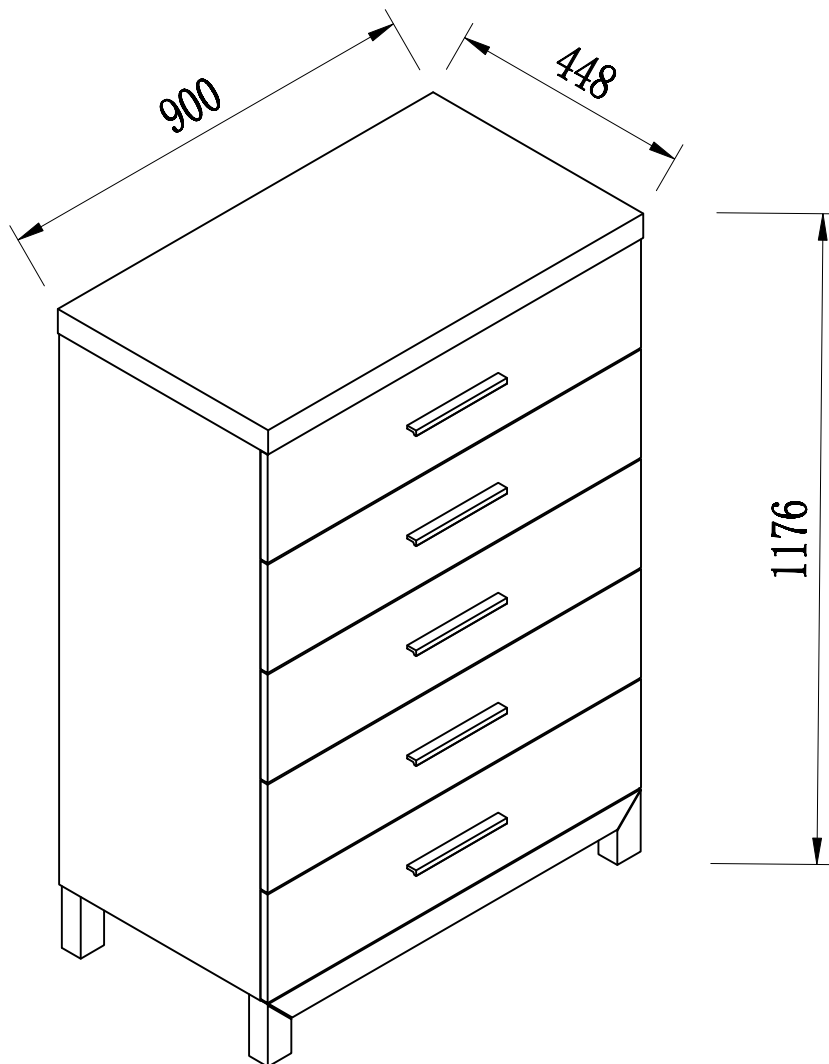




Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture  
Customer Service Free call 1800 351 084

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

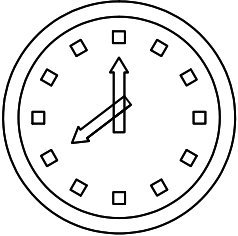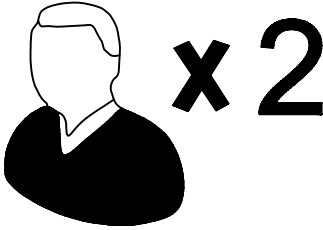	
<b>ALLOW 40 MINUTES</b>	<b>2 PEOPLE REQUIRED</b>
	
<b>ADDITIONAL TOOLS REQUIRED</b>	

**TIPPING WARNING**



Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note:** The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

*This is a permanent label. Do not attempt to remove!*

 
# CAM Lock and Pins

## step 1


### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used.  
The below is information on how these work.

Cam Locks are fasteners used to join two boards together,  
usually the edge of one board(A) to the flat side of another board(B)

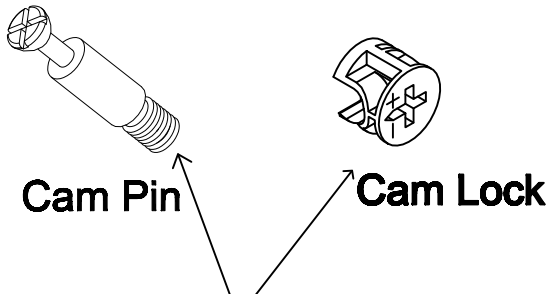

 Ensure that you use the correct images that are representative  
of the hardware used in the product

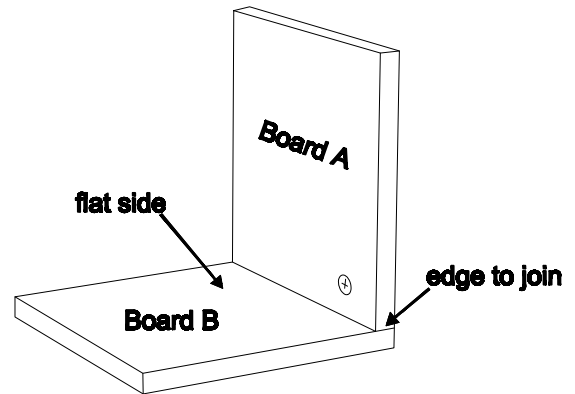


## step 2

### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board,  
it is important that:

 
- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

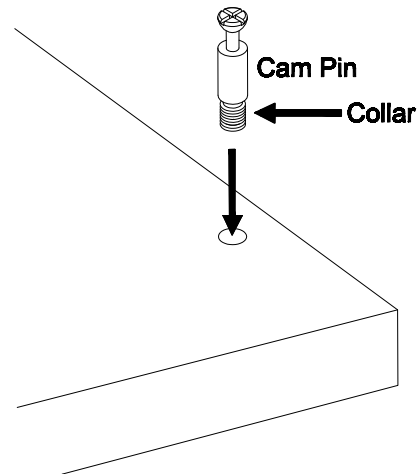

## step 3

### To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

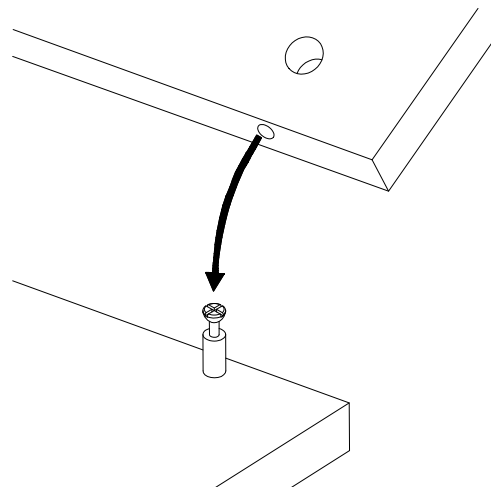


## step 4

### To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

 head of the Cam Pin

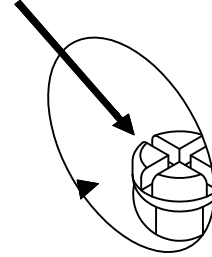

### To use Cam Lock Fasteners

 Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

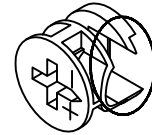

Cam Lock

## step 5


### To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin

Open section of back fits over the head of the Cam Pin

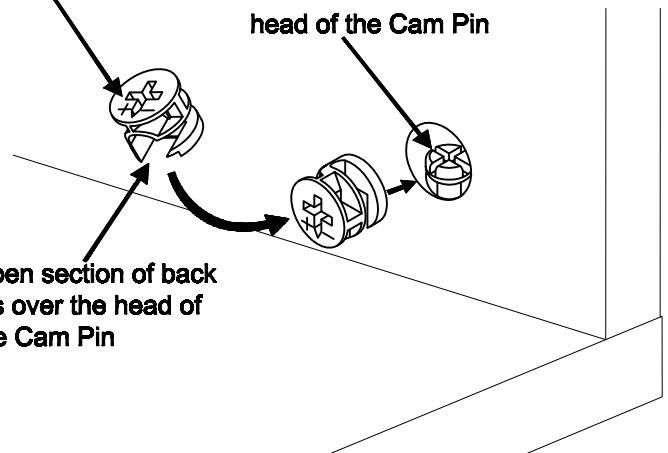


## step 6
 
### To use Cam Lock Fasteners




 

 
 

 

 



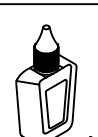
Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

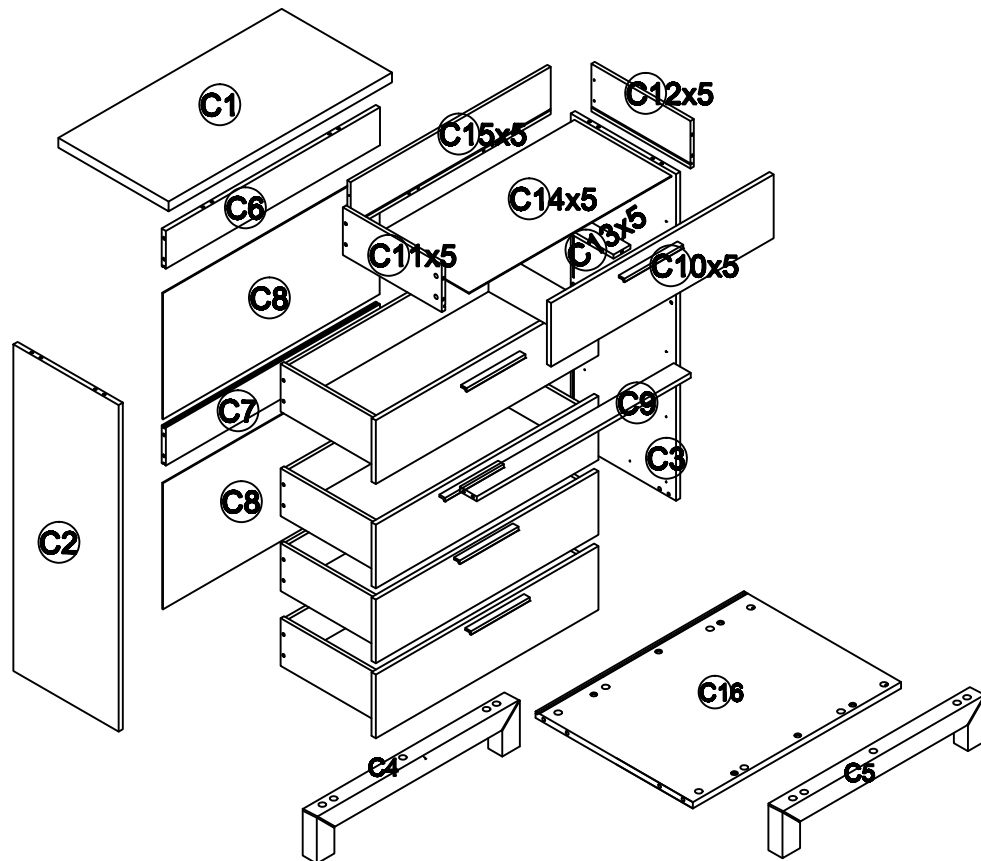

# PARTS LIST



<b>C1</b>	<b>Top Panel</b>	<b>C9</b>	<b>Front Rail Panel</b>
<b>C2</b>	<b>Left Side Panel</b>	<b>C10</b>	<b>Drawer Front Panel</b>
<b>C3</b>	<b>Right Side Panel</b>	<b>C11</b>	<b>Drawer Left Side Panel</b>
<b>C4</b>	<b>Leg</b>	<b>C12</b>	<b>Drawer Right Side Panel</b>
<b>C5</b>	<b>Leg</b>	<b>C13</b>	<b>Drawer Bottom Support Panel</b>
<b>C6</b>	<b>Back Rail</b>	<b>C14</b>	<b>Drawer Bottom Panel</b>
<b>C7</b>	<b>Back Rail</b>	<b>C15</b>	<b>Drawer Back Panel</b>
<b>C8</b>	<b>Back Panel</b>	<b>C16</b>	<b>Bottom Support Panel</b>

 
<b>A. Cam lock and Cam pin</b>  <b>21PCS</b>	<b>B. Cam lock and Cam pin</b>  <b>25PCS</b>	<b>C. Dowel Ø8X30</b>  <b>16PCS</b>	<b>D. Screw Ø3.5X12</b>  <b>60PCS</b>	<b>E. Screw Ø3.5X30</b>  <b>30PCS</b>	<b>F. Screw Ø5X18</b>  <b>8PCS</b>	<b>G. Connector</b>  <b>8PCS</b>
<b>H. Screw M4x20</b>  <b>10PCS</b>	<b>I. Screw M6x35</b>  <b>6PCS</b>	<b>J. Handle</b>  <b>5PCS</b>	<b>K. Hex Key 4MM</b>  <b>1PCE</b>	<b>L. Runner 280mm</b>  <b>10PCS</b>	<b>M. Protect foam Ø35X5mm</b>  <b>4PCS</b>	<b>N. Wall Anchor</b>  <b>1PCE</b>
<b>O. Glue</b>  <b>1PC</b>						

**74015**


## Step 1:

**Separate the Runner Pieces ( $L=L_1 + L_2$ )**


**Carefully extend the runner Slide ( $L_2$ ) and press plastic clip to release it from the runner ( $L_1$ ) as shown.**

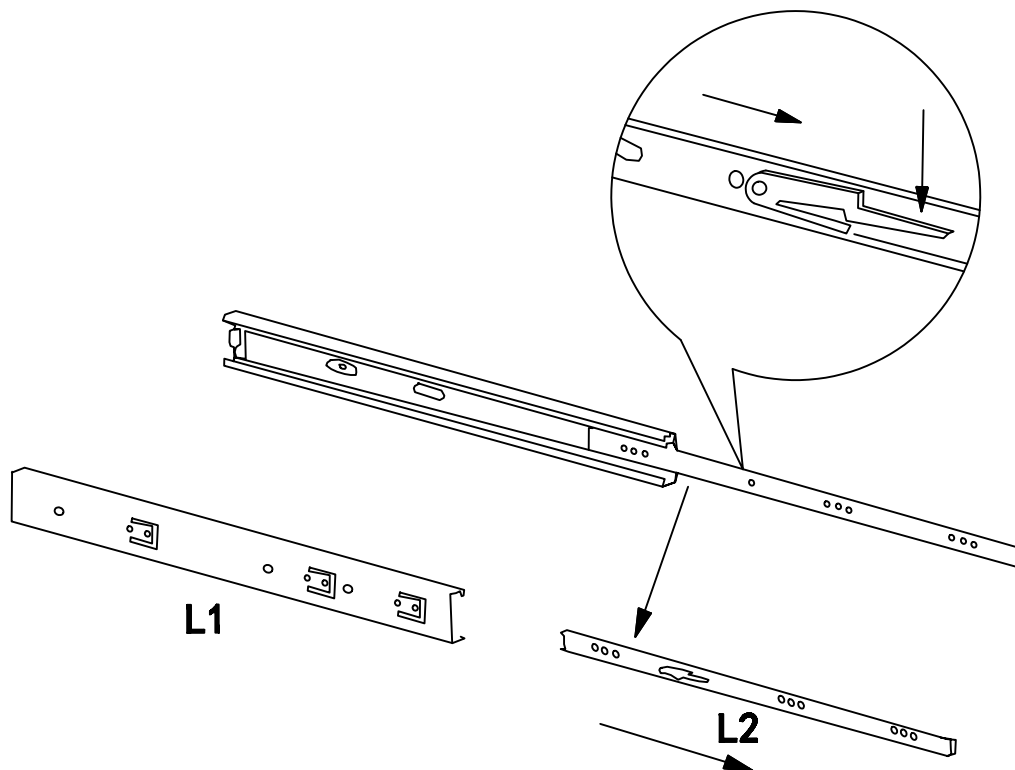


**Step 2: Insert the Dowels (C) into the Left Side Panel and Right Side Panel (C3). Use a Phillips Head Screwdriver to attach the Runners (L1) to the Left Side Panel and Right Side Panel (C3) with Screw (D). Use a Phillips Head Screwdriver to insert the Cam Pins (A) into the Left Side Panel (C2) and Right Side Panel (C3) as shown.**

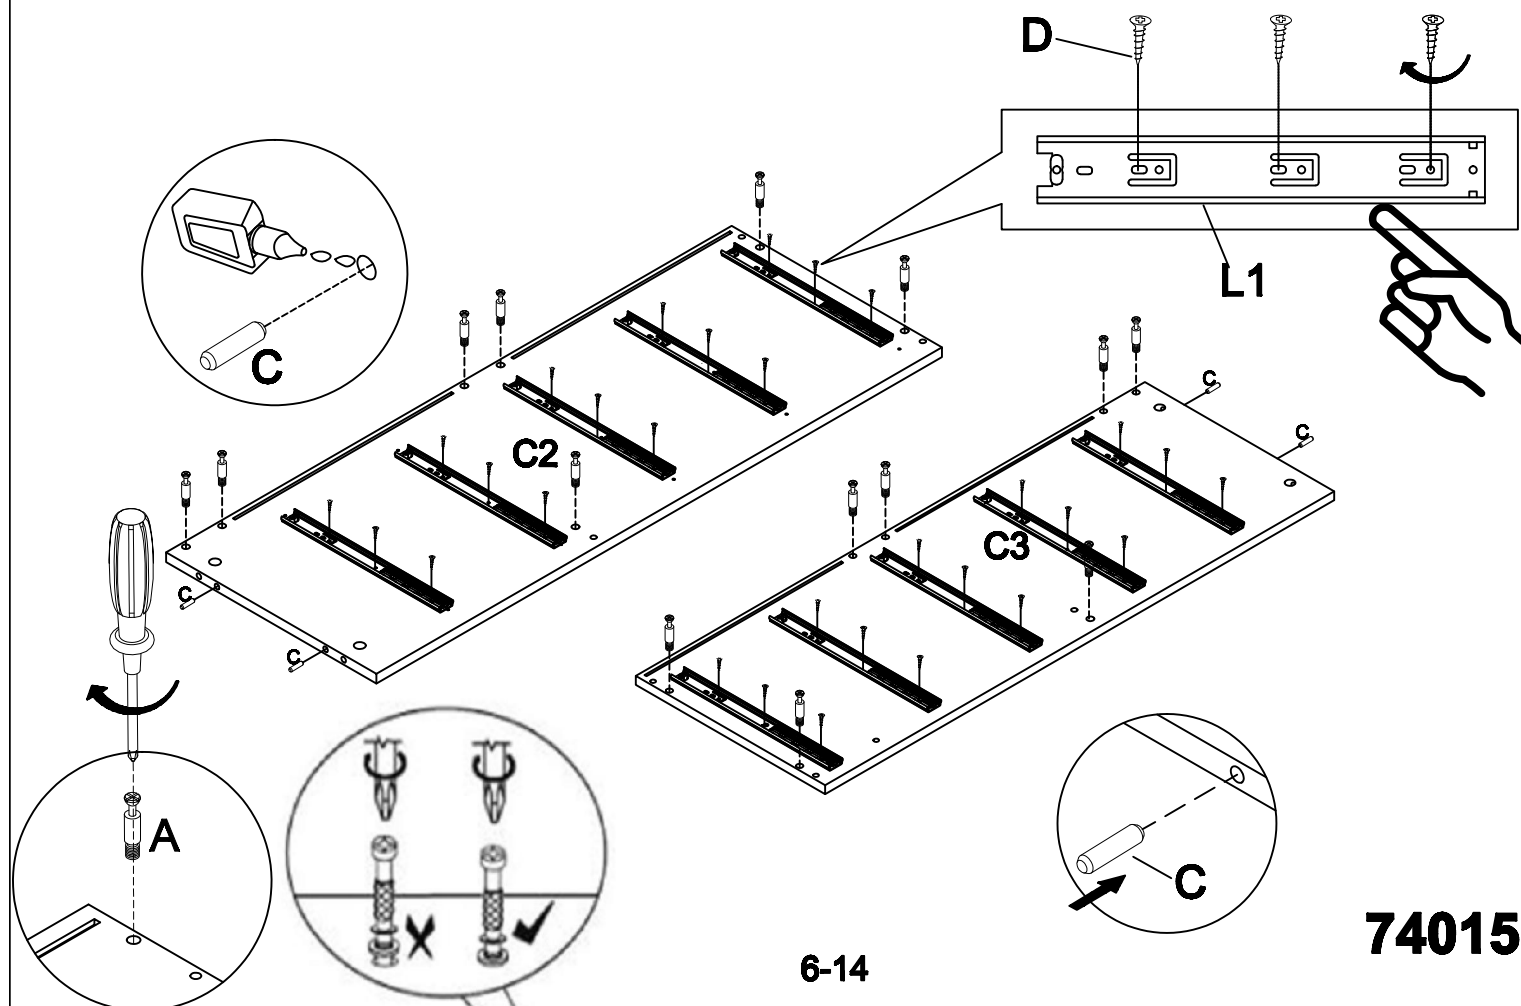 


**Step3: Insert the Dowel(C) to the Back Rail(C6) and Front Rail Panel(C9) and Bottom Support Panel(C16). Use a Phillips Head Screwdriver to insert the Cam Pin(A) to the Top panel(C1).**

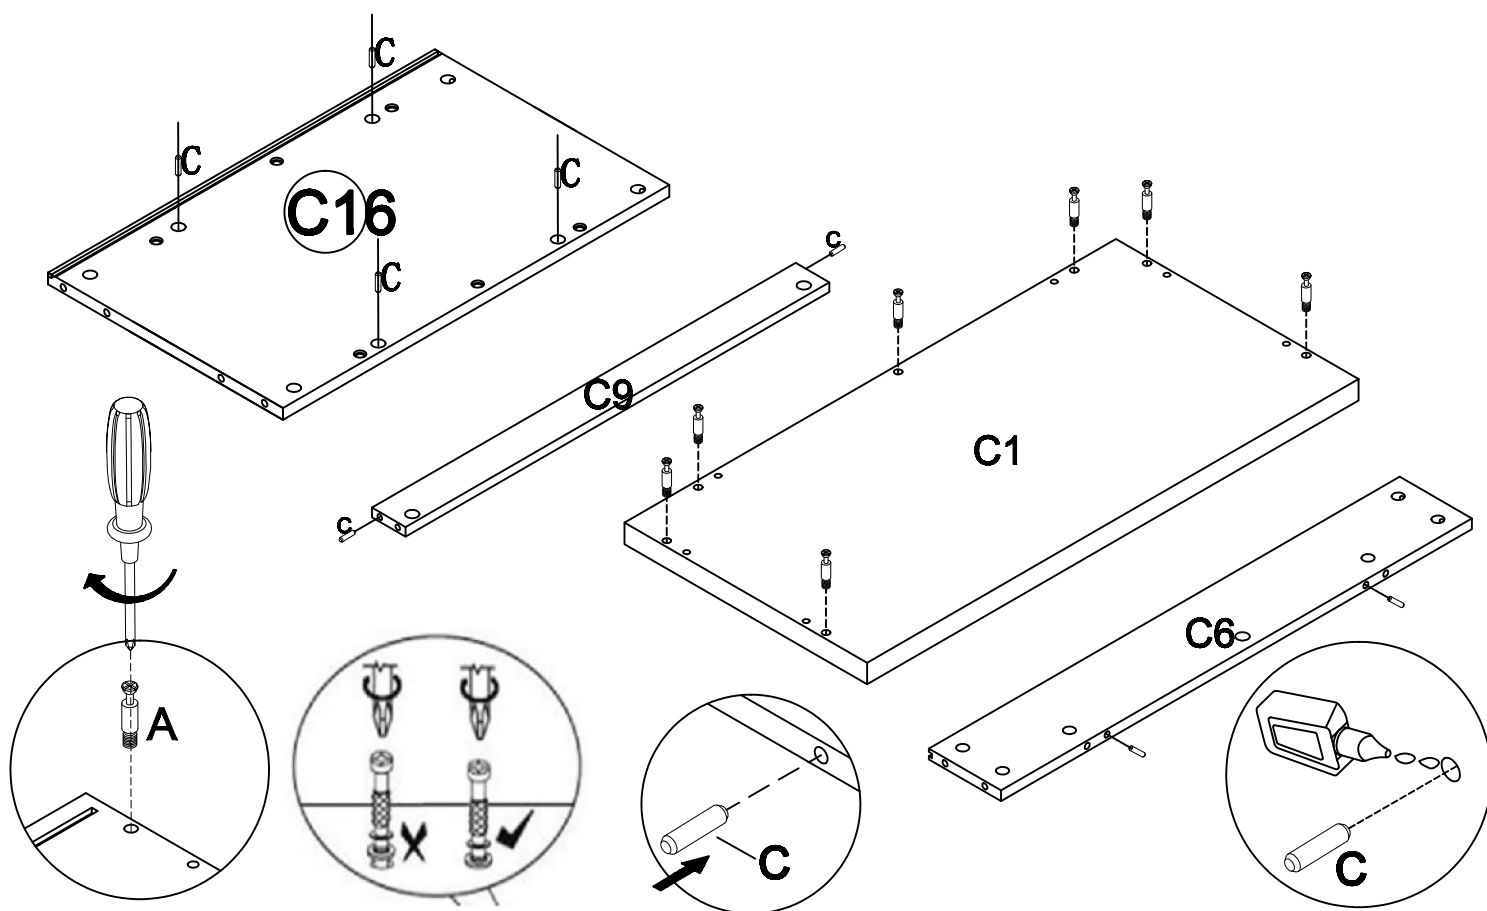 


**Step4: Attach the Bottom Support Panel(C16) and Front Rail Panel(C9) and Back Rail(C6,C7) to the Left side Panel(C2). Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).**

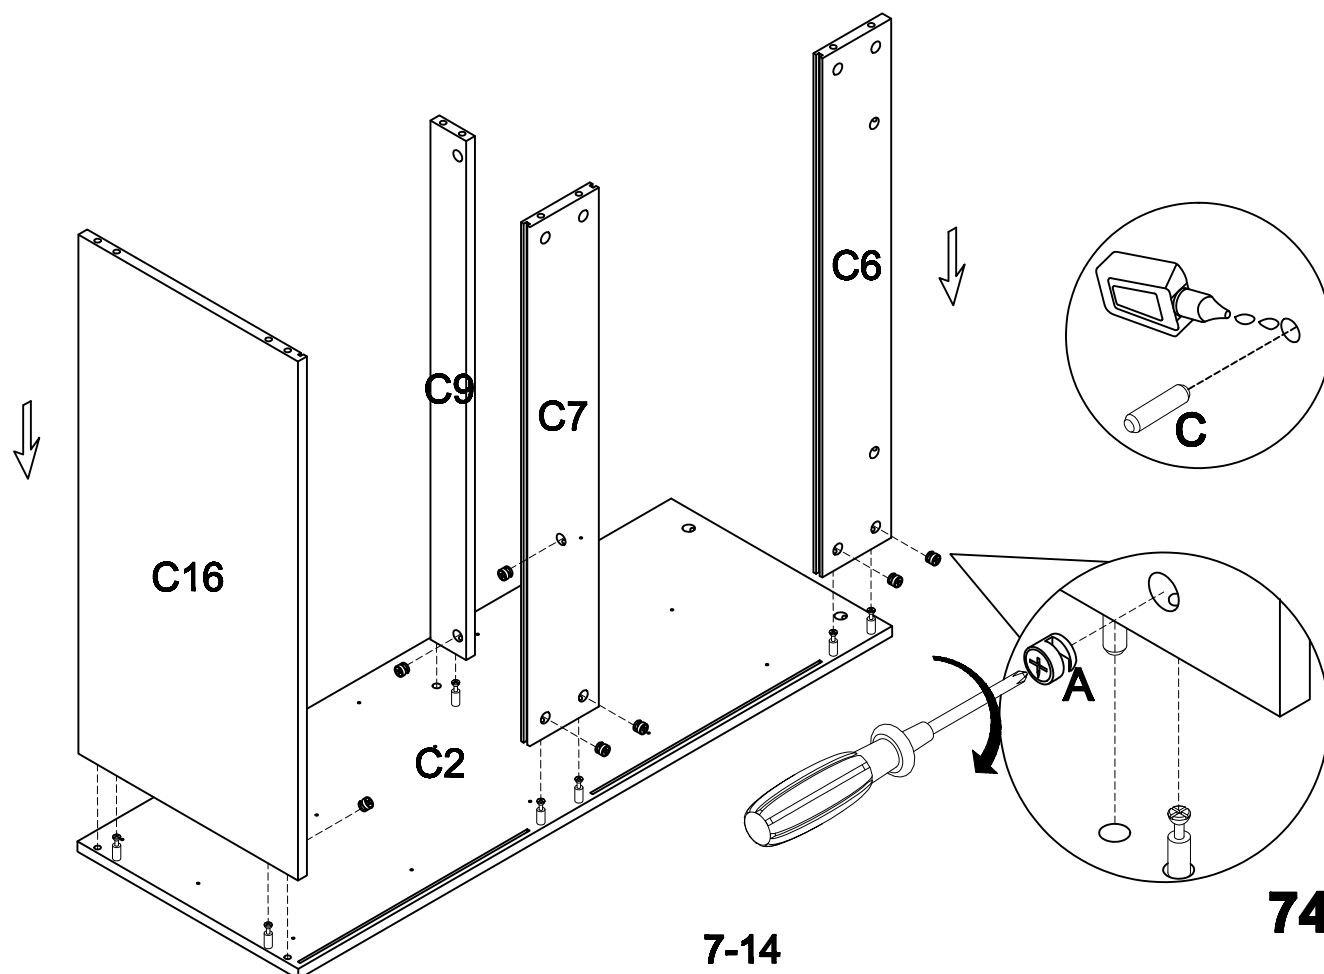 

**Step5: Insert the Back Panel(C8) into the groove.**

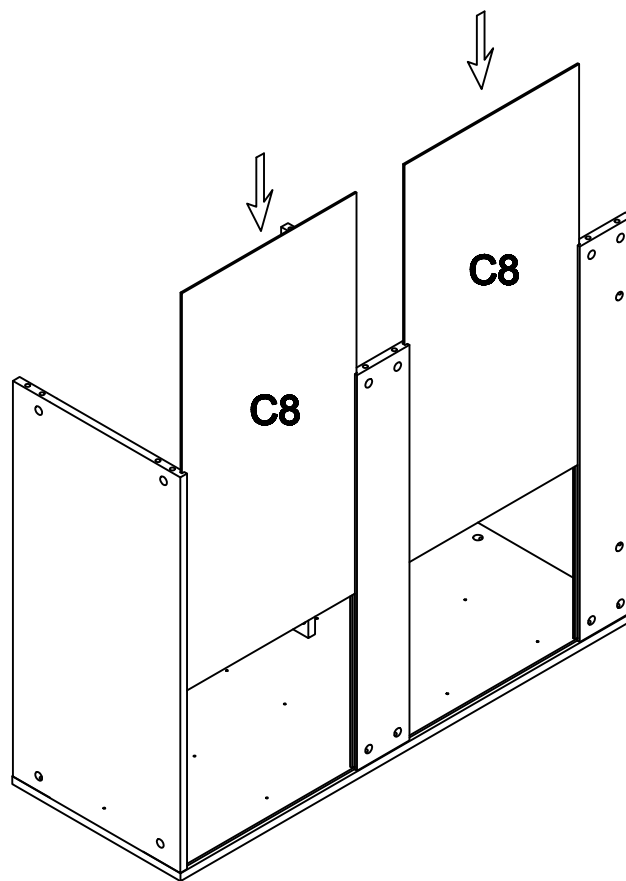 


**Step6: Attach the Right side Panel(C3) to the Bottom Support Panel(C16) and the Back Rail(C6) and Back Rail(C7) .Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin(A).**

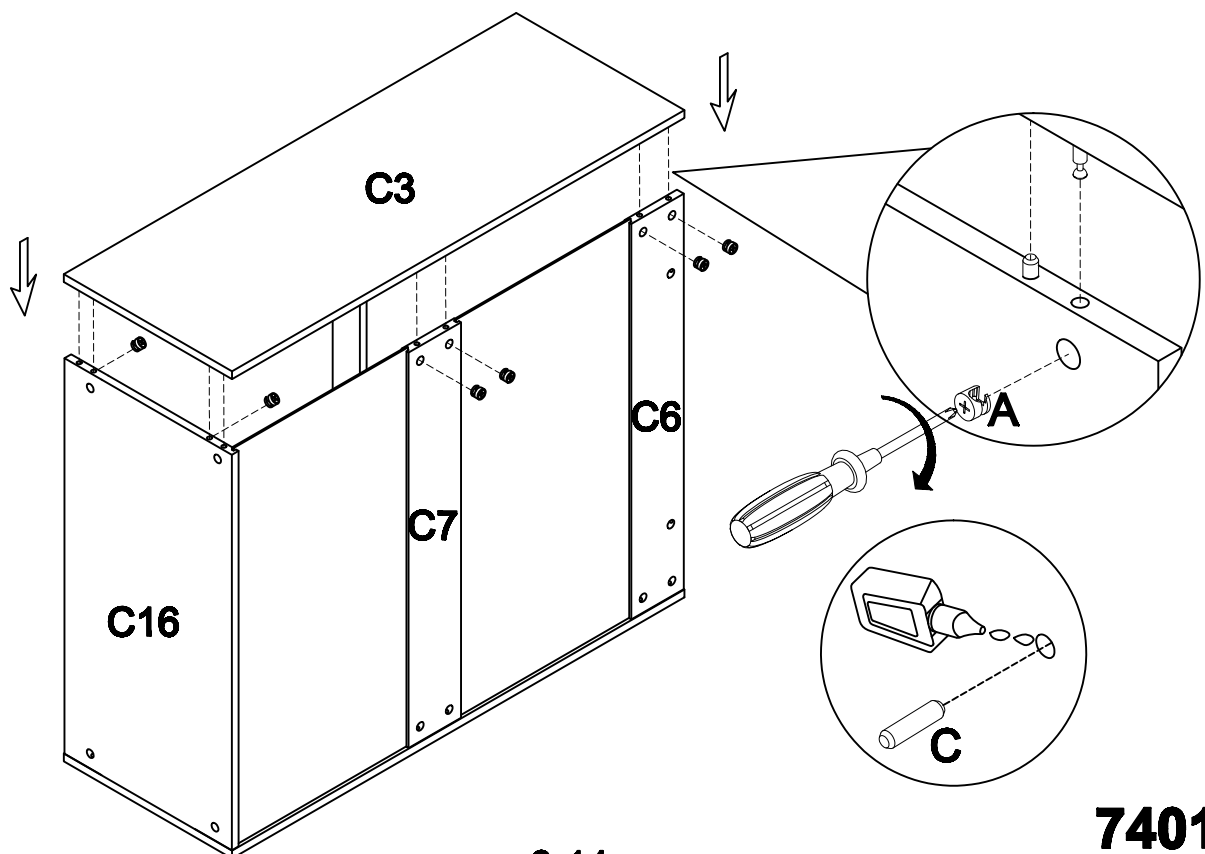 





**Step7: Insert Dowels (C) into the Legs (C4, C5). Use Hex Key (L) to attach the Legs (C4, C5) to the Bottom Support Panel (C16) with Screw (I). Attach the Foam Protective Pads (M) to the bottom of the Legs (C4, C5).**

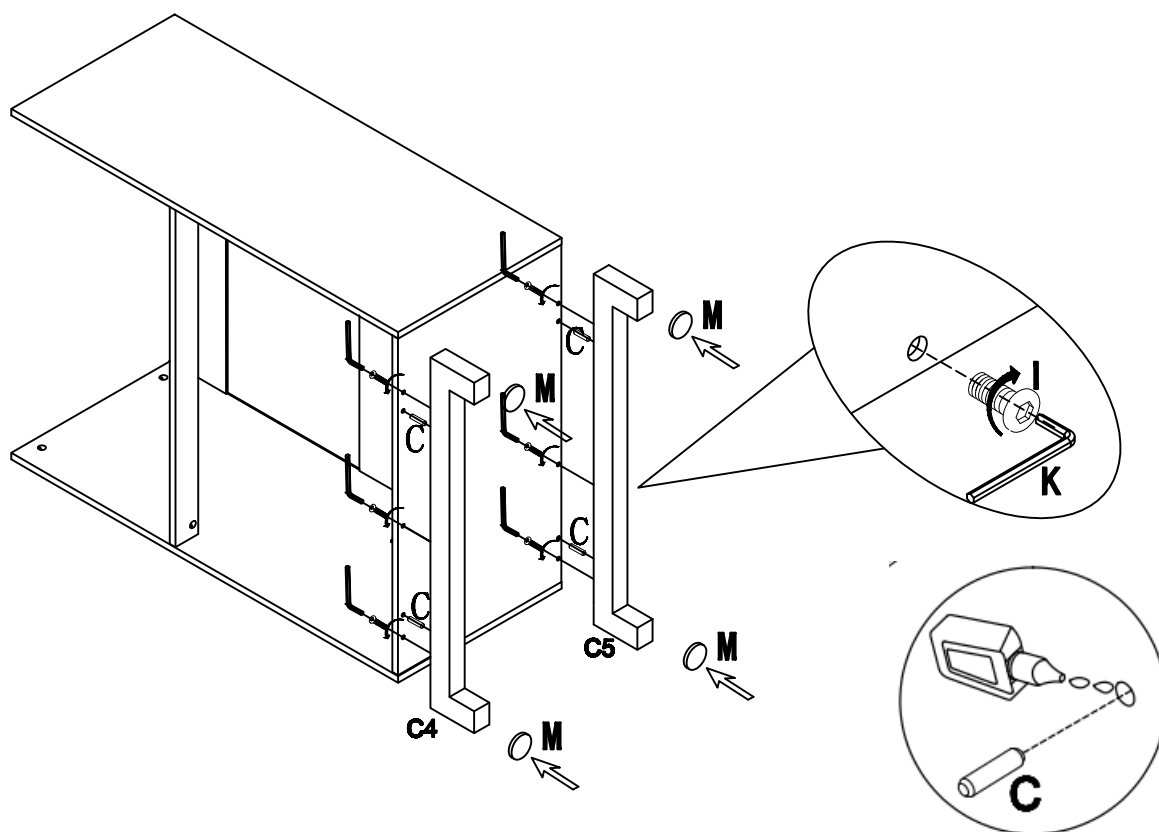 


**Step8: Attach the Top panel(C1) to the Left side Panel(C2)and Right side Panel(C3).Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).**

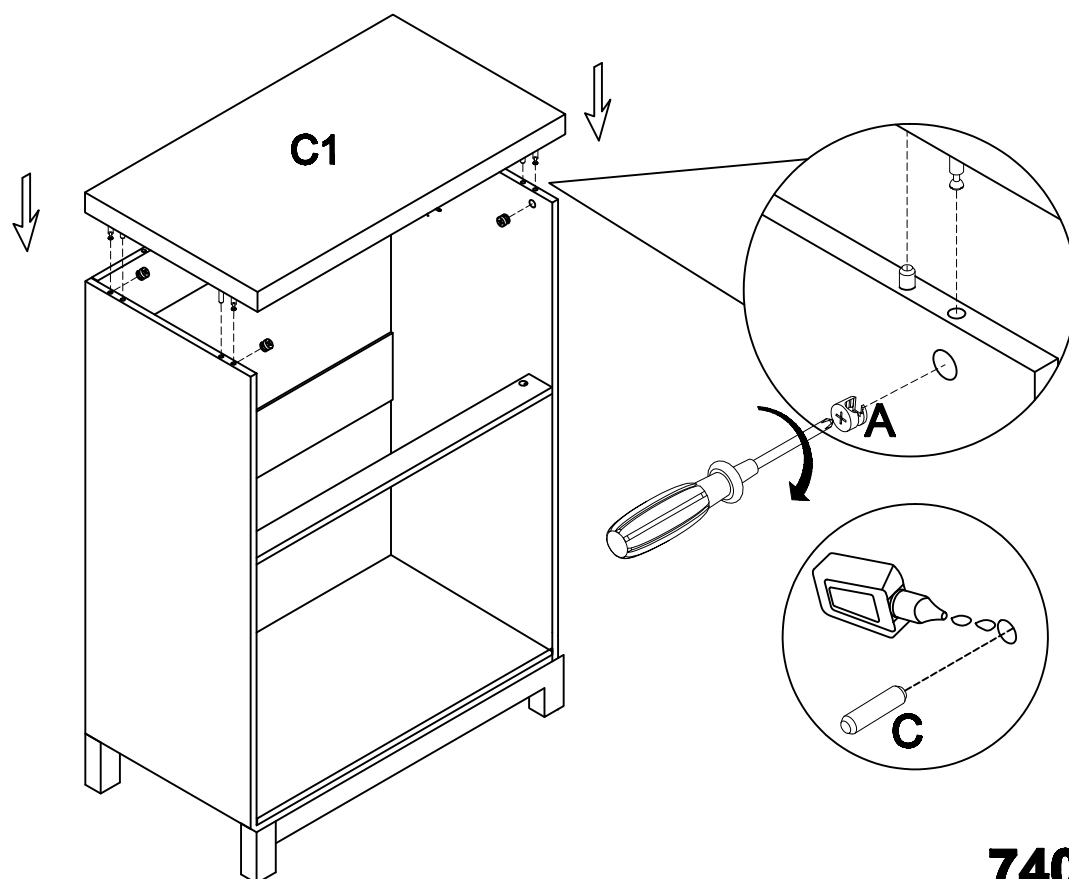 

**Step9: Use a Phillips Head Screwdriver to attach the Connector(G) to the back corner with Screw(F).**

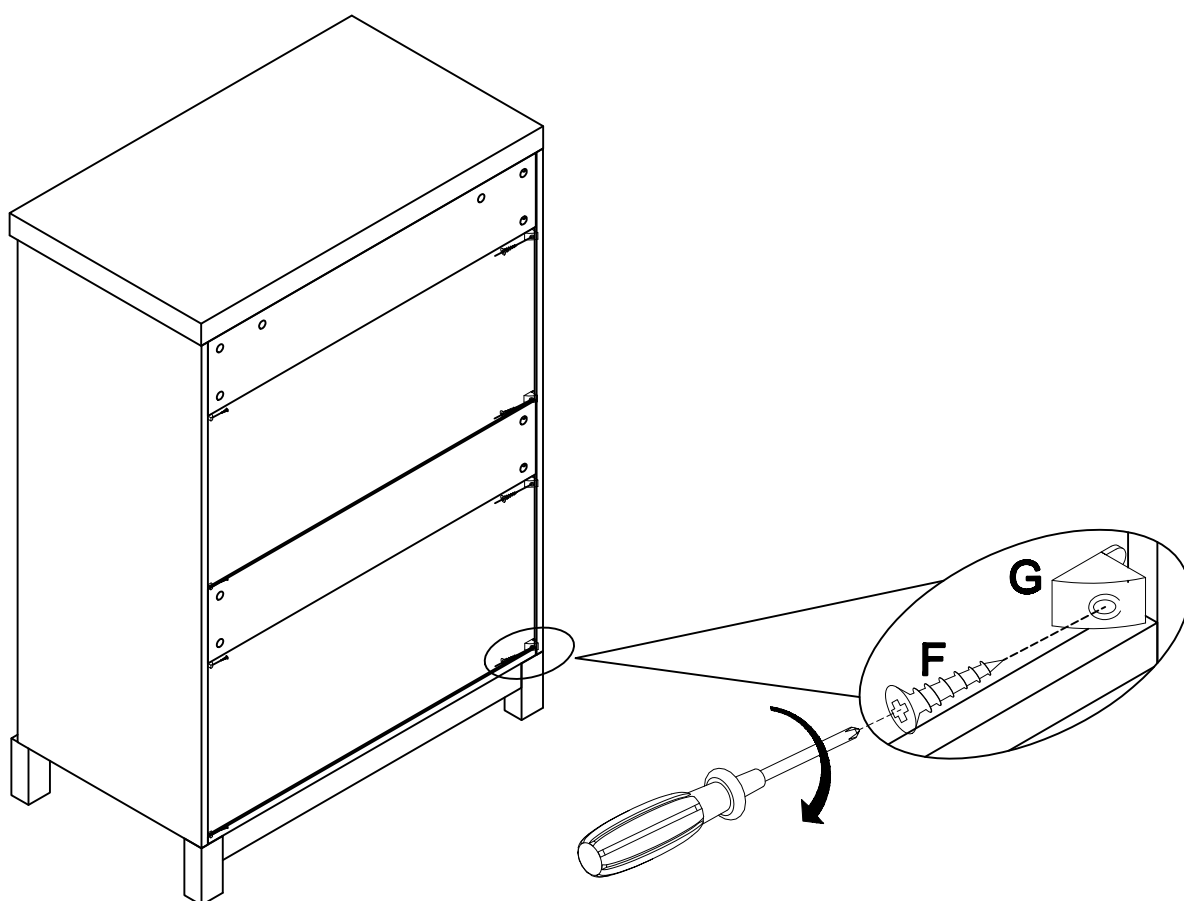 


**Step10: Use a Phillips Head screwdriver to insert Cam Pin (B) into the Drawer Front Panels (C10). Attach the Drawer Left Side Panel (C11), Drawer Right Side Panel (C12) and Drawer Bottom Support Panel (C13) to the Drawer Front Panel (C10). Use a Phillips Head Screwdriver to turn the Cam Lock (B) to lock onto the head of Cam Pin (B).**

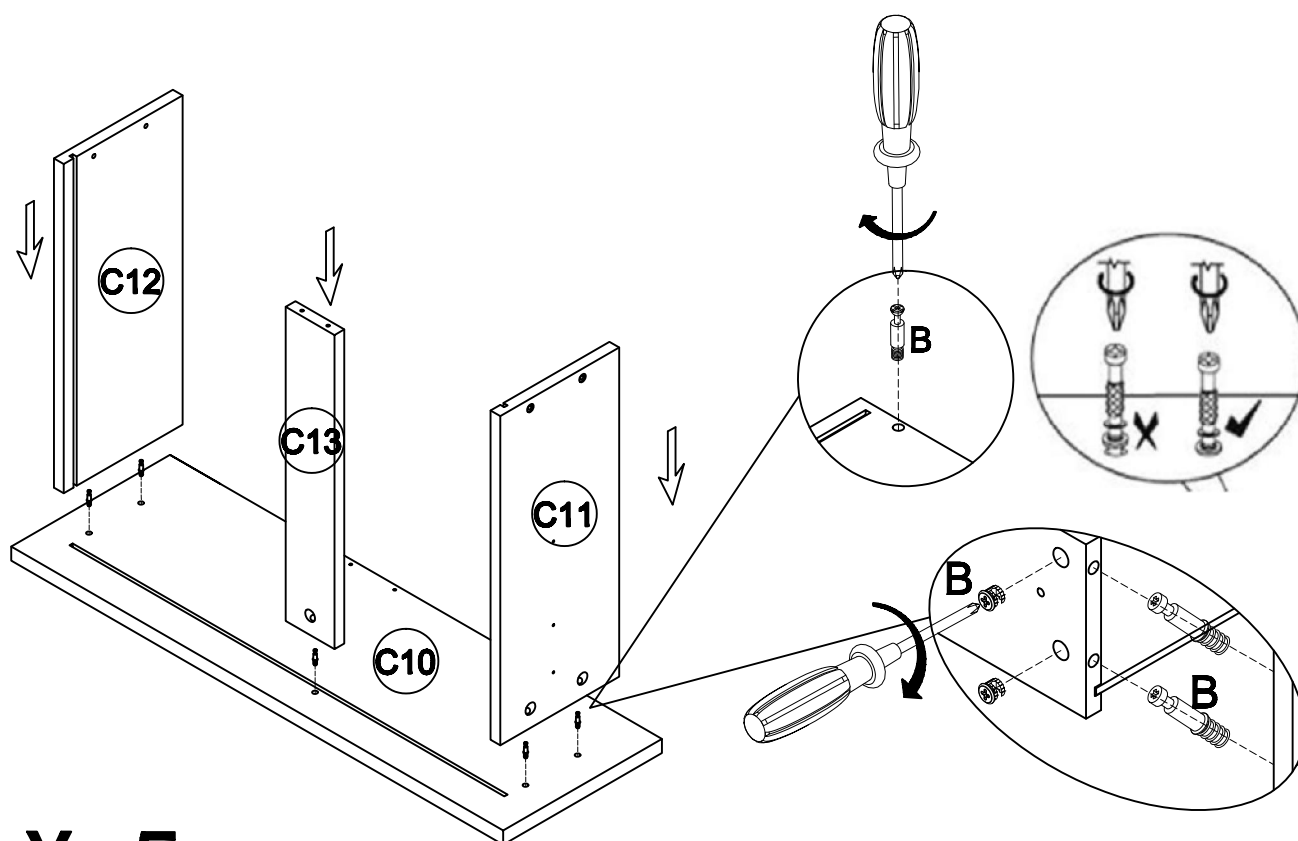 


**X 5**

 **Step11: Insert the Drawer Bottom Panel (C14) into the Drawer Left Side Panel (C11), Drawer Right Side Panel (C12) and Drawer Front Panel (C10). Use a Phillips Head Screwdriver to attach the Drawer Back Panel to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (C12) with Screw (E).**

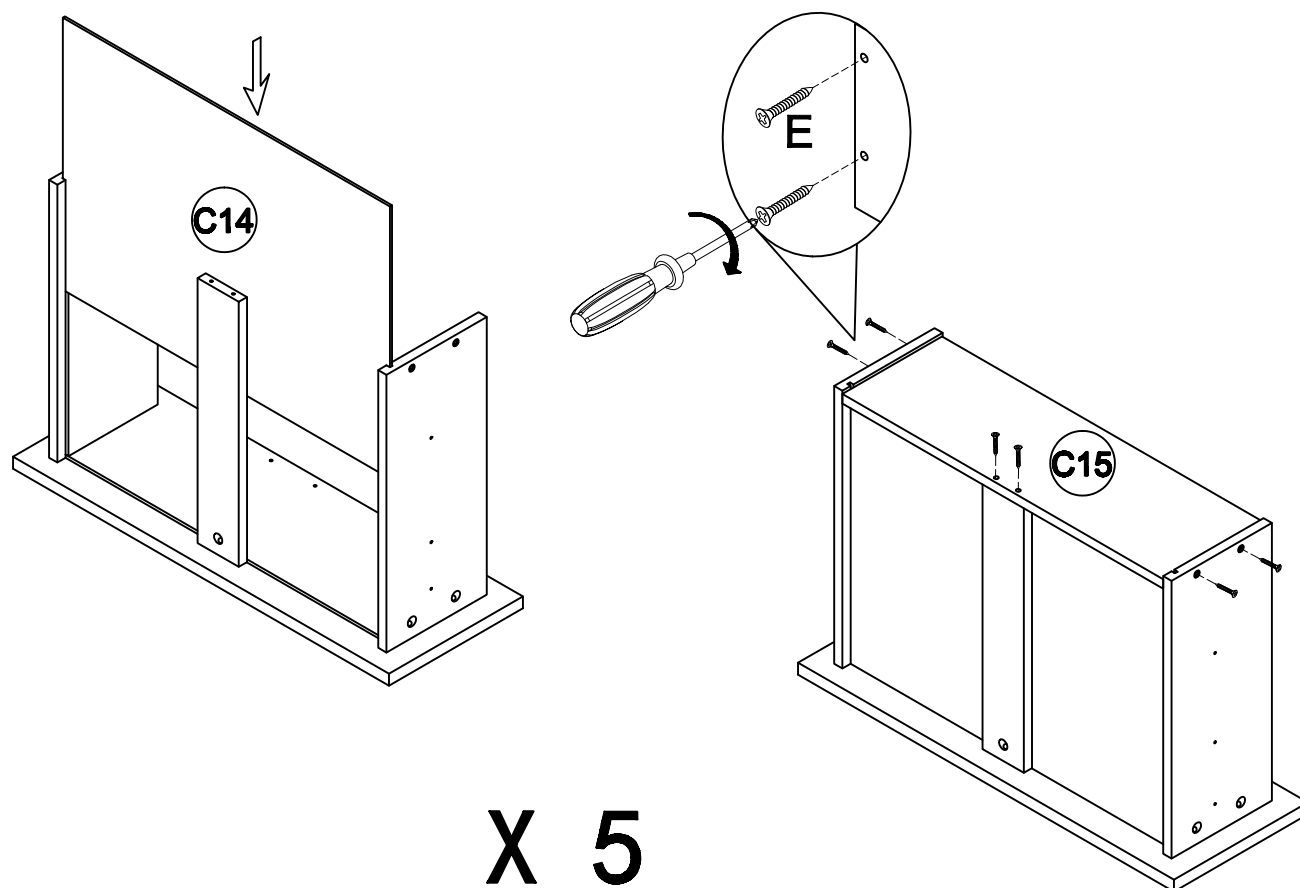

**X 5**

 **Step12: Use a Phillips Head Screwdriver to attach the Handles (J) to the Drawer Front Panel (C10) with Screw (H). Use a Phillips Head Screwdriver to attach the Runner Glides (L2) to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (C12) with Screw (D).**


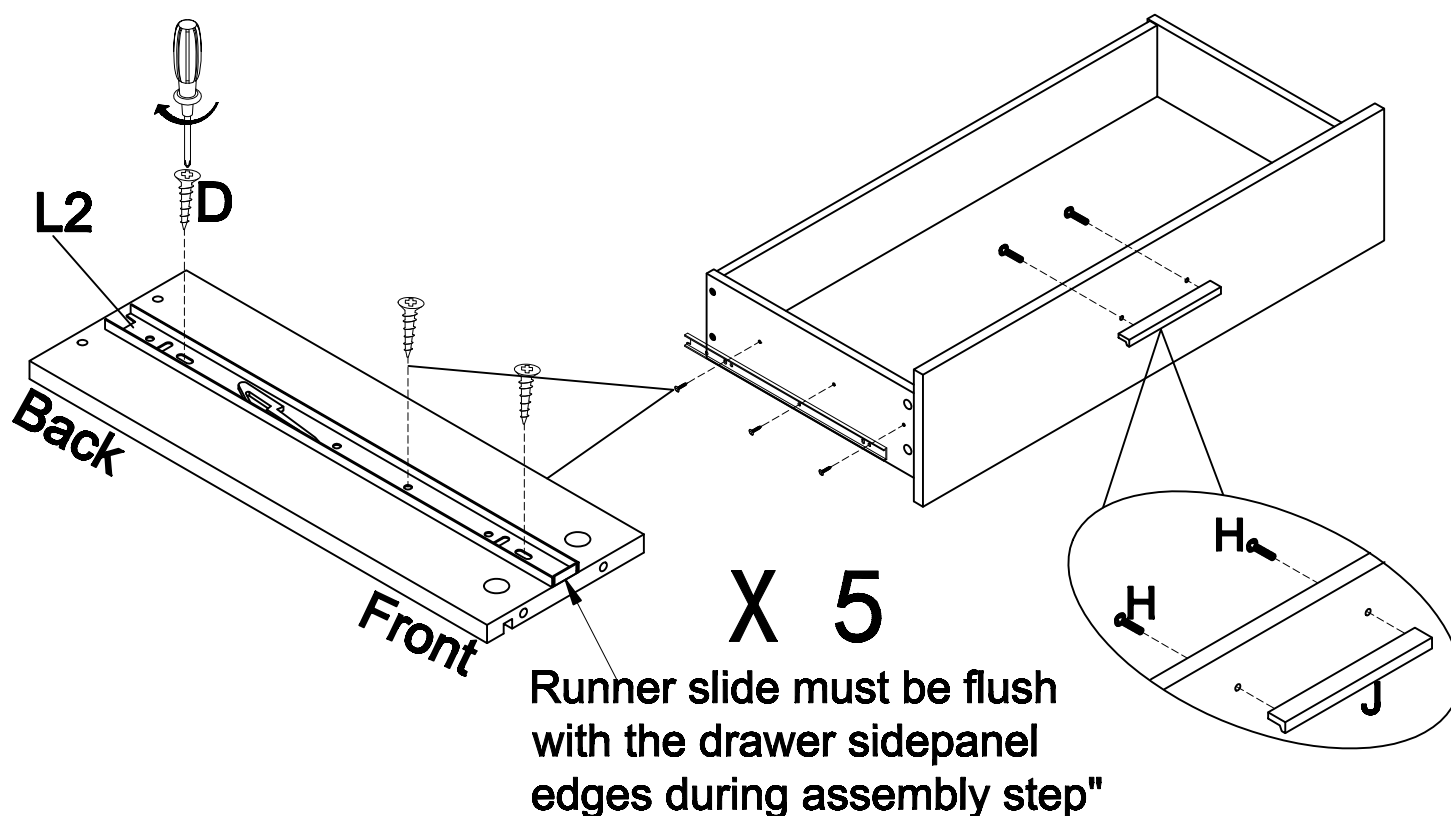


**X 5**


Runner slide must be flush with the drawer sidepanel edges during assembly step"

**74015**

  **Step13: Insert the Drawer to the body.**

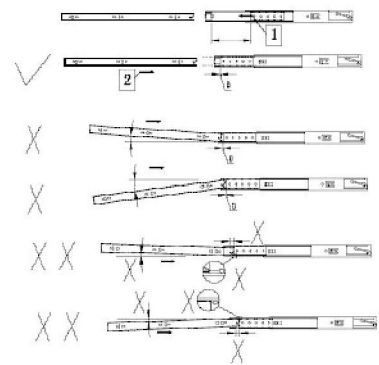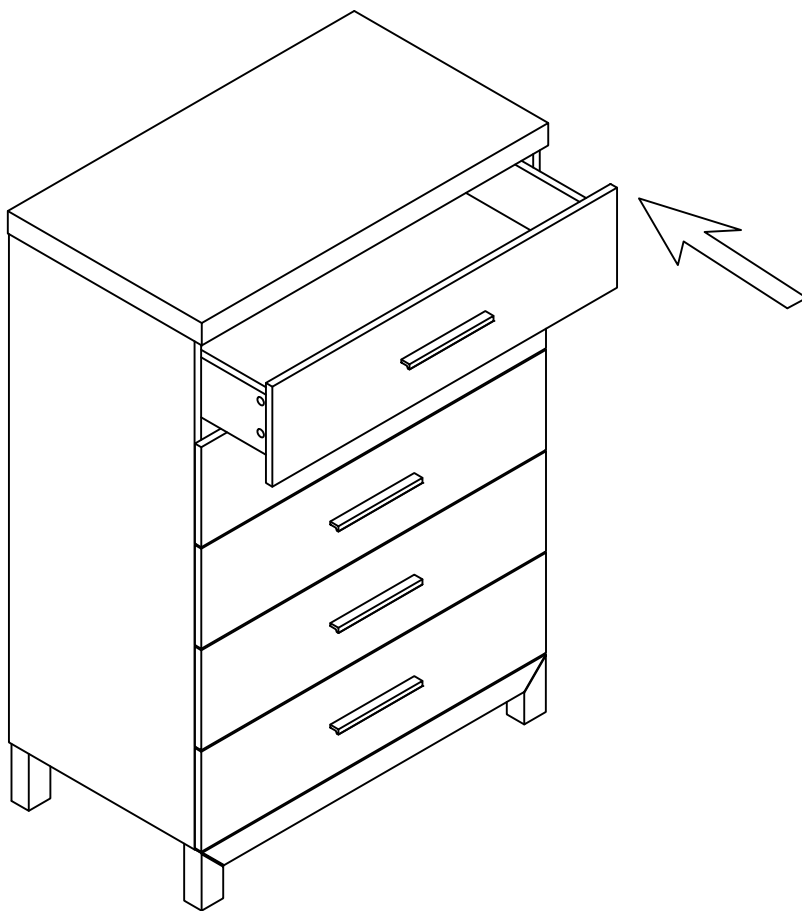


**Assembly is complete**

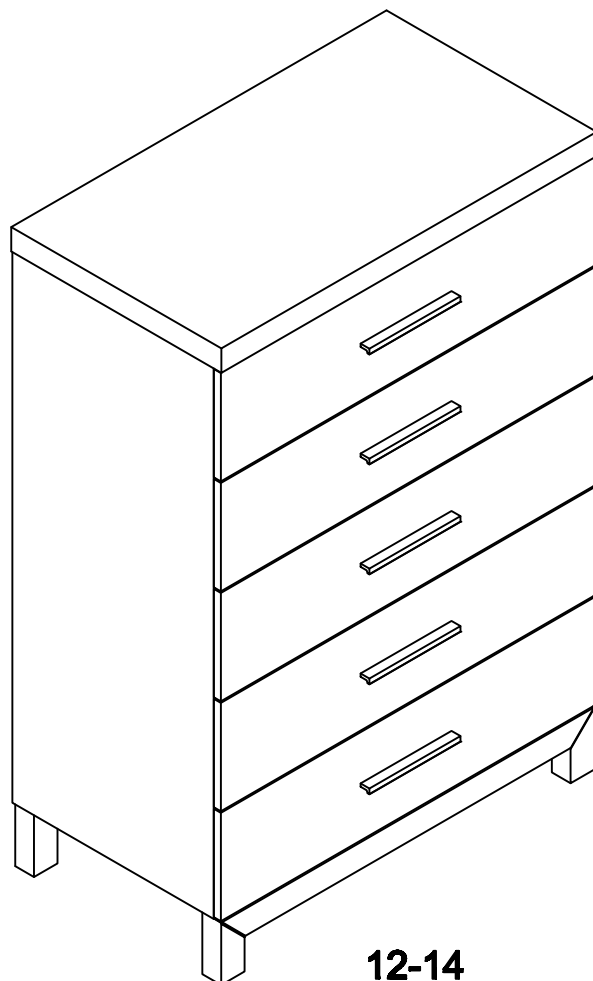 

**Note -**

 **Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.**

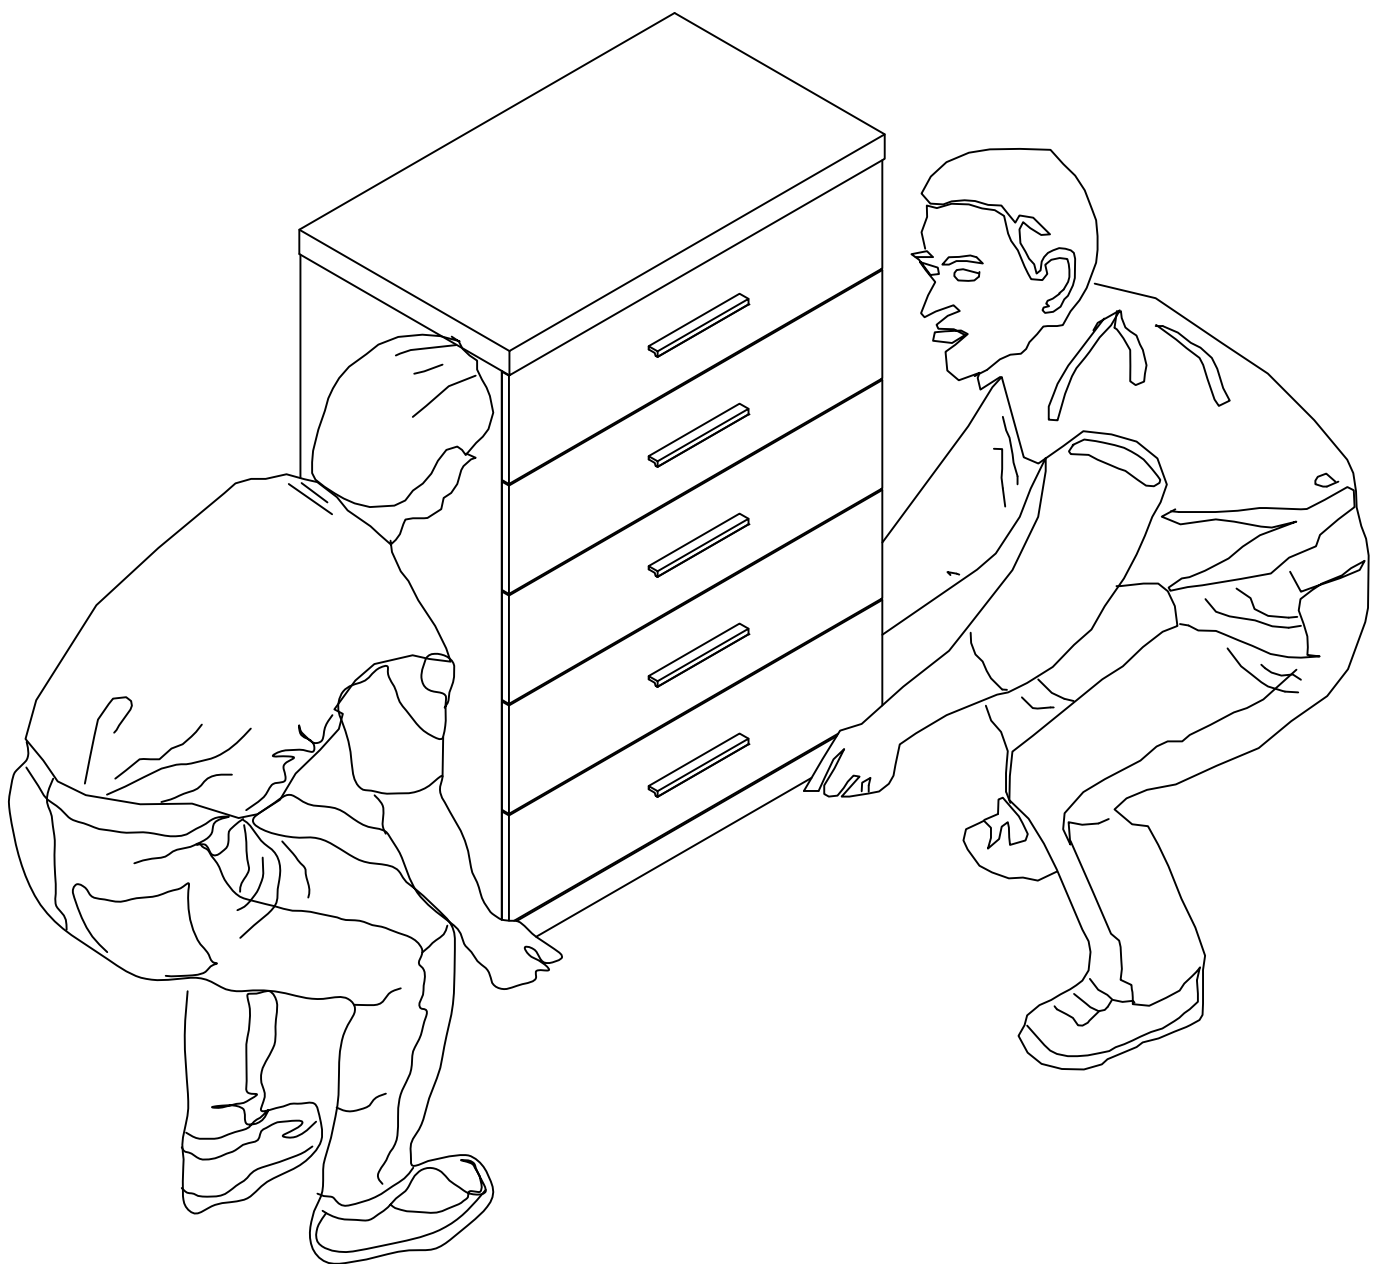

## SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

### HARDWARE



Mounting Plate x 2



 
Wall Strap x 1



Large Screw x2



Small Screw x2

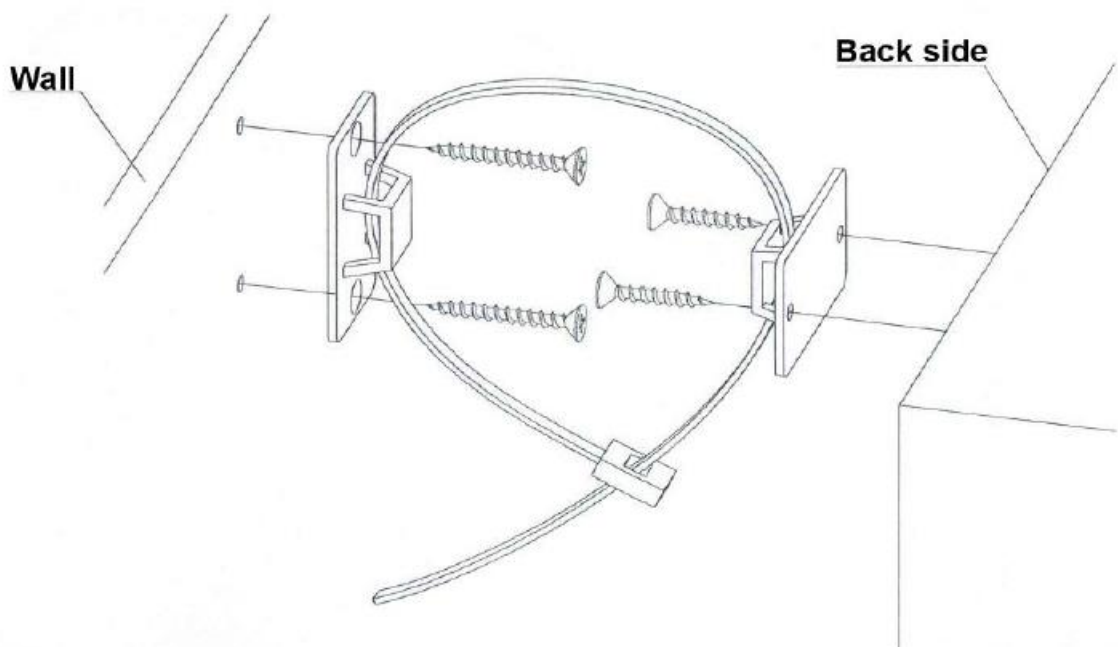

## **IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE**

*Congratulations! You have just purchased a quality product from Amart Furniture.*

*Please read on for important information regarding your purchase...*

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.

