




ASSEMBLY INSTRUCTION AZURA CERAMIC BUFFET ITEM CODE 73981

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

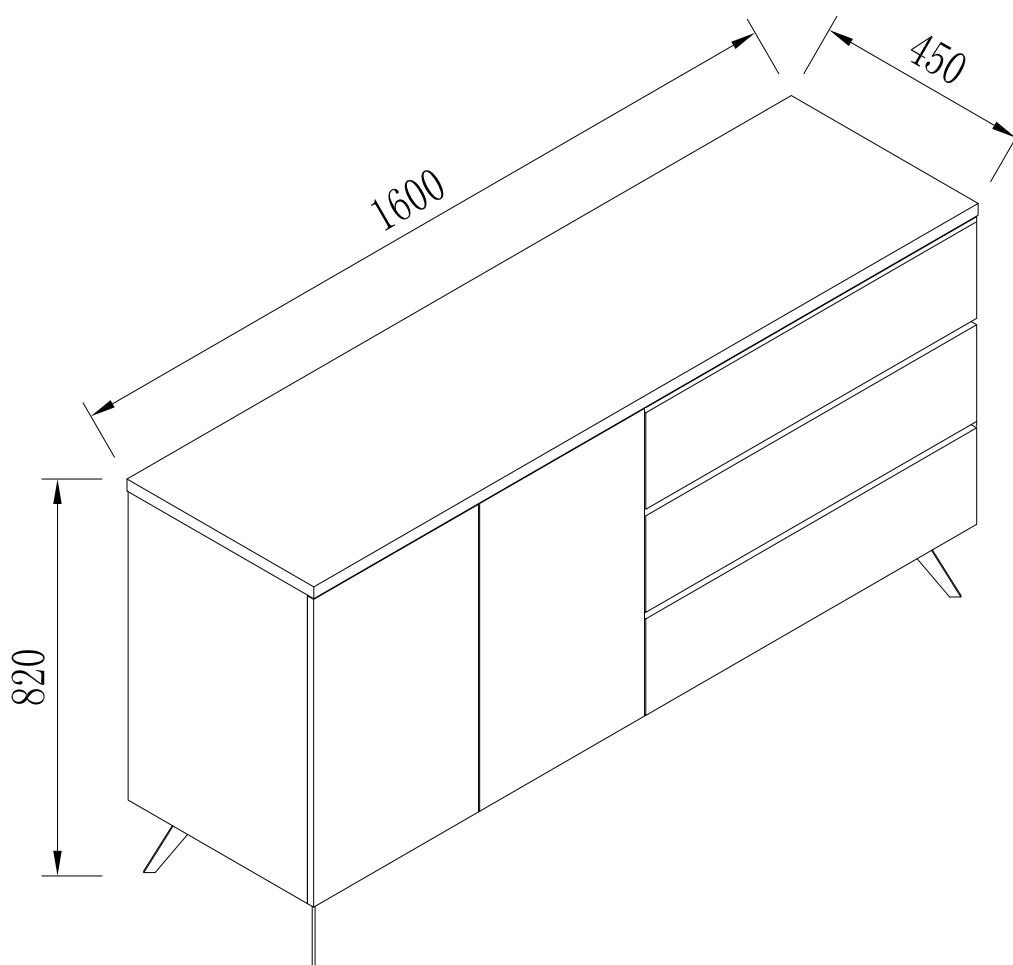


Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

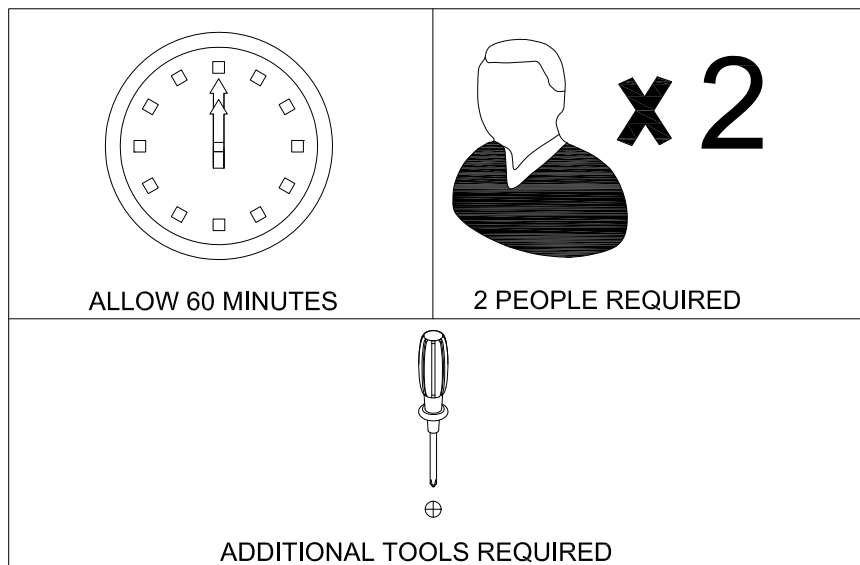

CAM Lock and Pins


step 1

HOW TO USE CAM LOCK FASTENERS


To assemble this product hardware called Cam Lock Fasteners are used.

The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

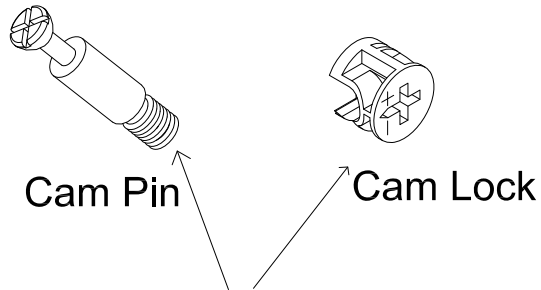

Ensure that you use the correct images that are representative of the hardware used in the product

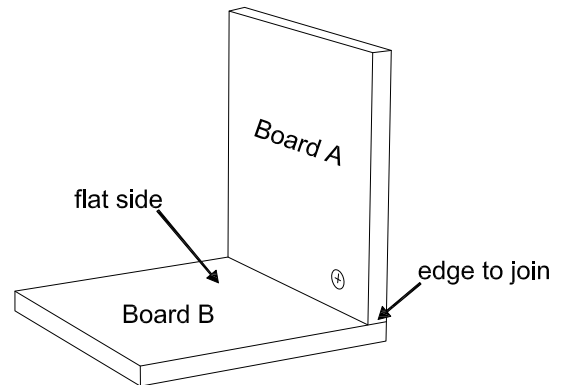


step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

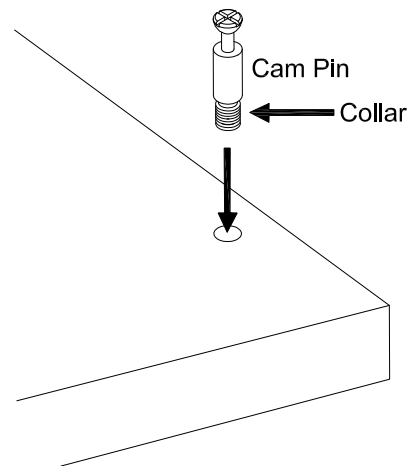

step 3

To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

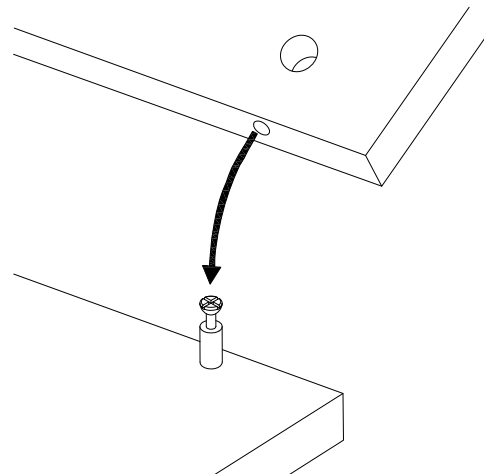


step 4

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

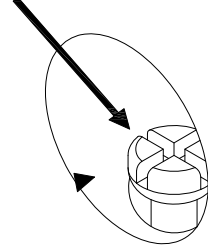

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

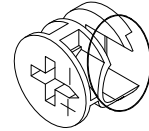

Cam Lock

step 5


To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

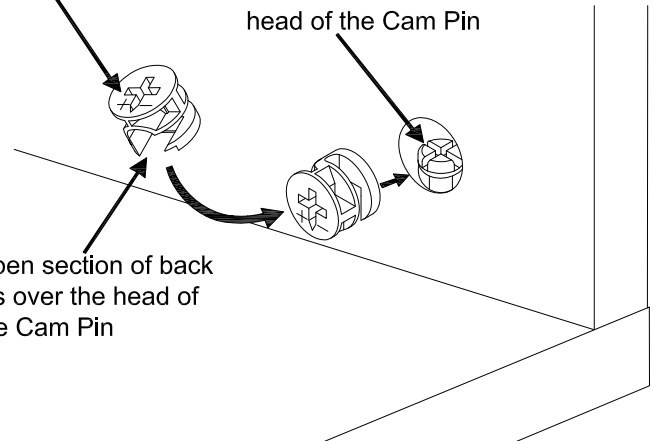


step 6

To use Cam Lock Fasteners


 

 
 
 


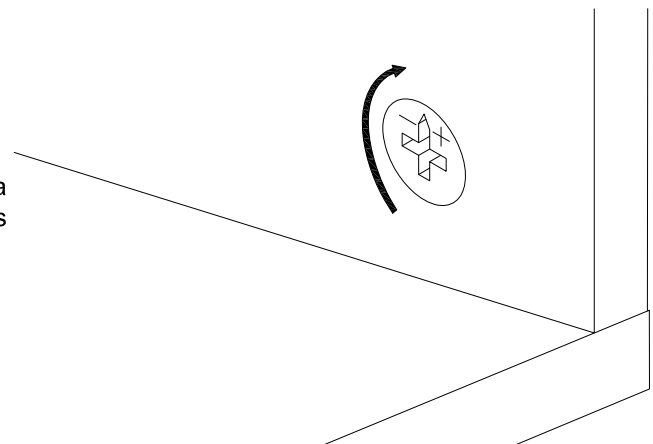


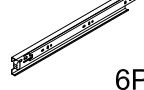
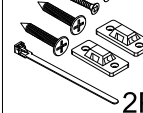
 
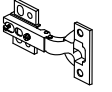
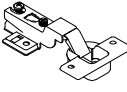
Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

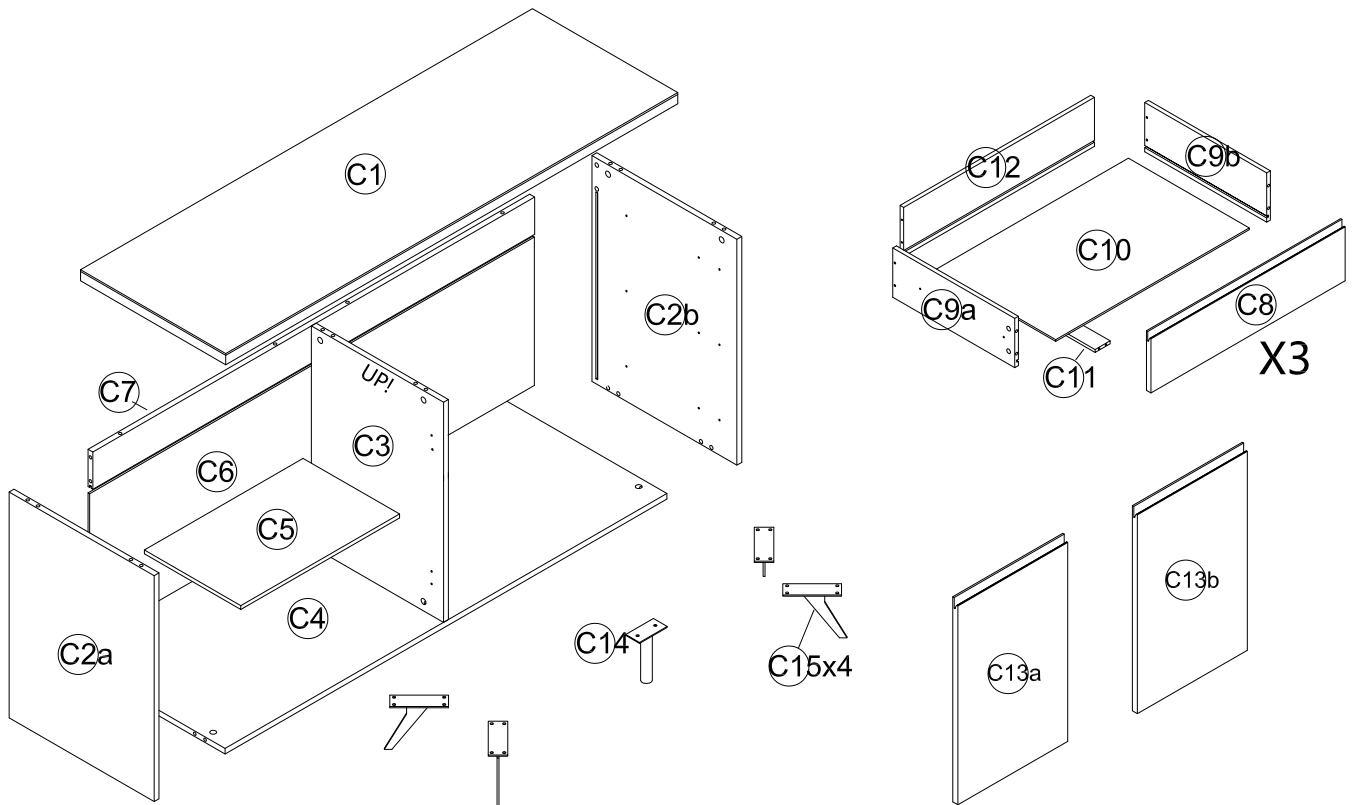

PARTS LIST



C1	Top Panel	C9a	Drawer Left Side Panel
C2a	Left Side Panel	C9b	Drawer Right Side Panel
C2b	Right Side Panel	C10	Drawer Bottom Panel
C3	Support Panel	C11	Drawer Connect Panel
C4	Bottom Panel	C12	Drawer Back Panel
C5	Shelf Panel	C13a	Door Panel
C6	Back Panel	C13b	Door Panel
C7	Back Rail Panel	C14	Middle Metal Leg
C8	Drawer Front Panel	C15	Metal Legs


<input type="checkbox"/> A.Cam lock and Cam pin Ø15X35  24PCS	<input type="checkbox"/> B.Dowel Ø8X30  16PCS	<input type="checkbox"/> C.Screw Ø3.5X12  36PCS	<input type="checkbox"/> D.Screw Ø3X18  6PCS	<input type="checkbox"/> E.Connector  6PCS	<input type="checkbox"/> F.Bolt M6x15  18PCS	<input type="checkbox"/> G.Cam lock and Cam pin Ø12X27  15PCS
<input type="checkbox"/> H.Washer  18PCS	<input type="checkbox"/> I.Hex key M4  1PCE	<input type="checkbox"/> J.Screw Ø3.5X30  18PCS	<input type="checkbox"/> K.Glue  1PC	<input type="checkbox"/> L.Runner 250mm  6PCS	<input type="checkbox"/> M.Belt  2PCS	<input type="checkbox"/> N.Screw Ø4X14  24PCS
<input type="checkbox"/> O.Hinge  2PCS	<input type="checkbox"/> P.Hinge  2PCS					

73981


step 1:

Runner slide separately($I=I1+I2$)

Carefully pull out the runner slide($I2$) and press plastic clip to fully separate runner slide as diagram shown

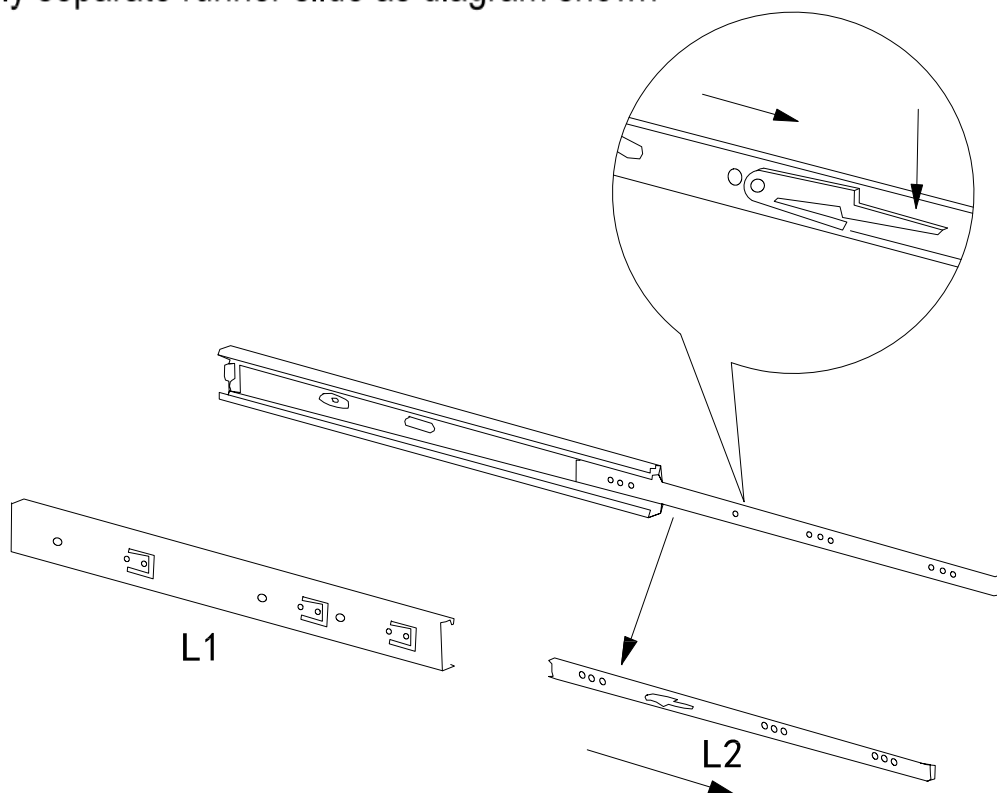


Step2: Insert the Dowel(B) to the Left side Panel(C2a) and Right side Panel(C2b) and Support Panel(C3). Use a Phillips Head Screwdriver to insert the Cam Pin(A) to the Left side Panel(C2a) and Right side Panel(C2b) and Support Panel(C3).

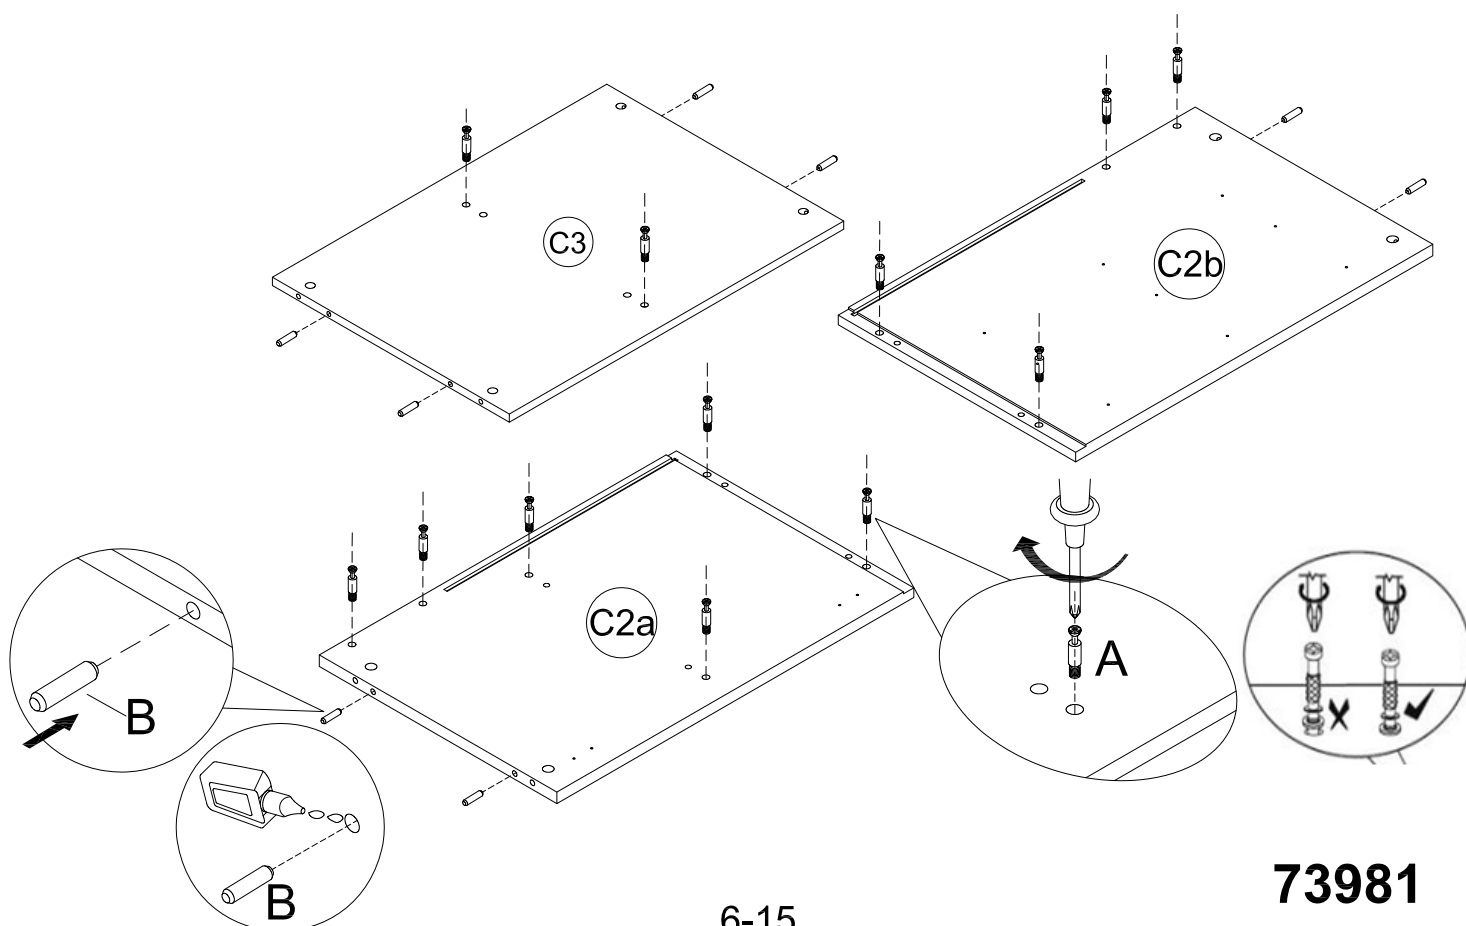


73981


Step3: Attach the runner (L1) to the right side panel (C2b) and the support panel (C3) using screw (C).

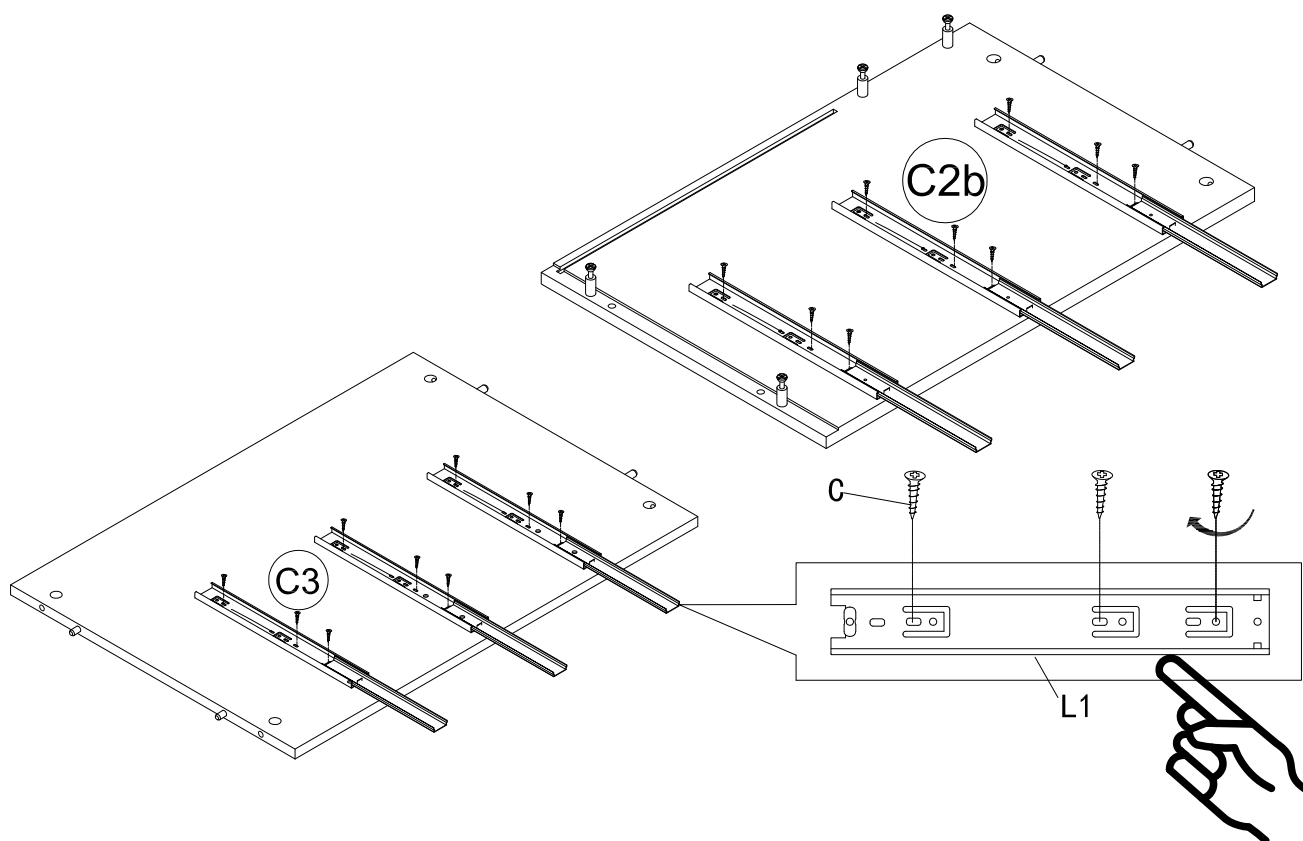


Step4: Insert the Dowel(B)to the Bottom Panel(C4).Use a Phillips Head Screwdriver to insert the Cam Pin(A) to the Top panel(C1) and Bottom Panel(C4).

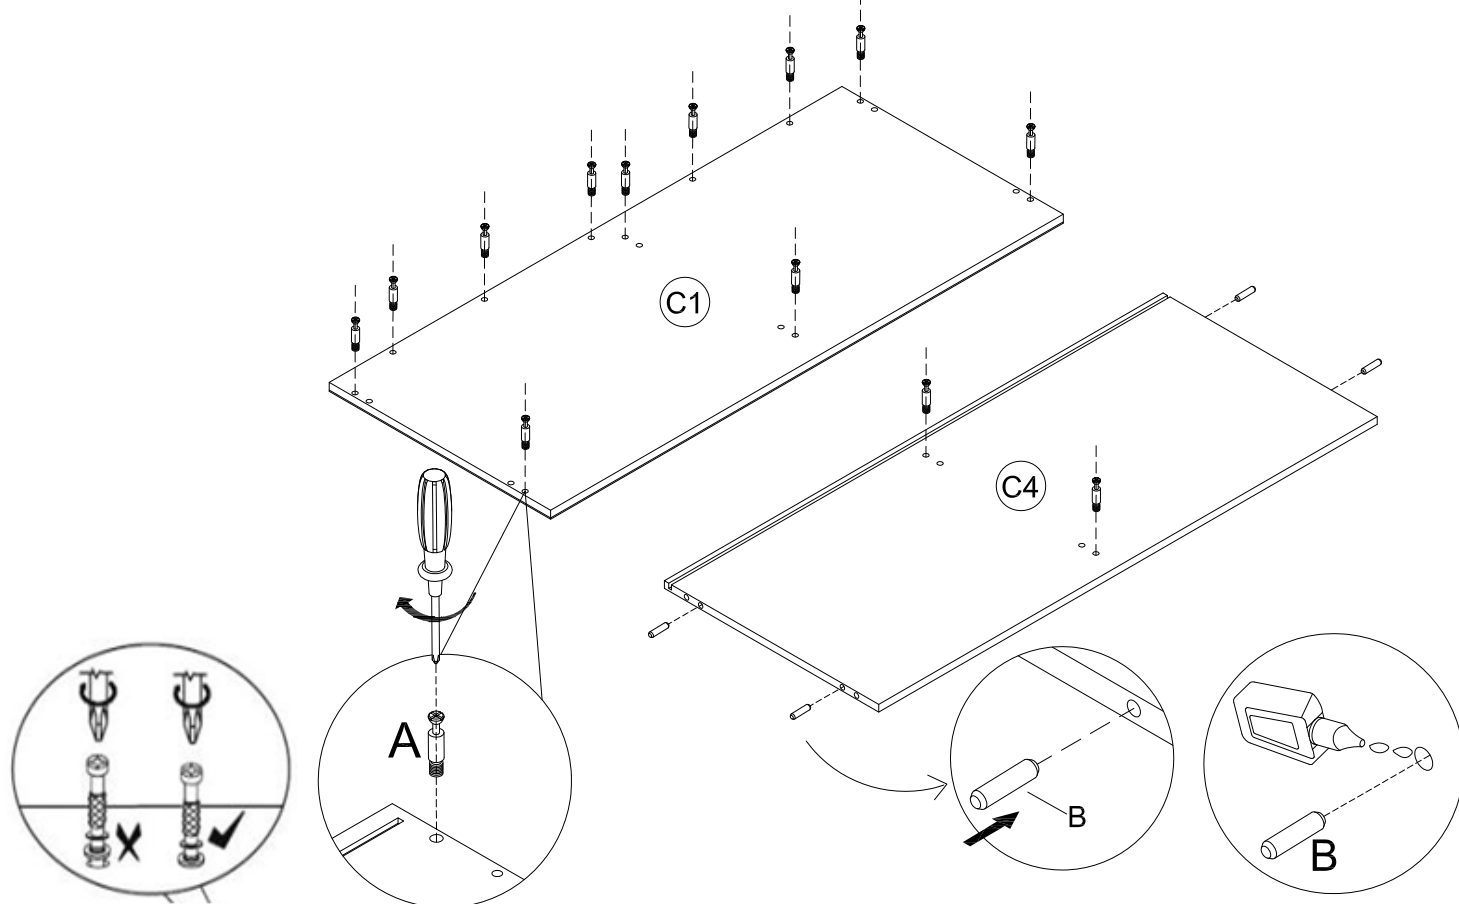


Step5: Attach the Support Panel(C3) to the Bottom Panel(C4).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock into the head of the Cam Pin(A).

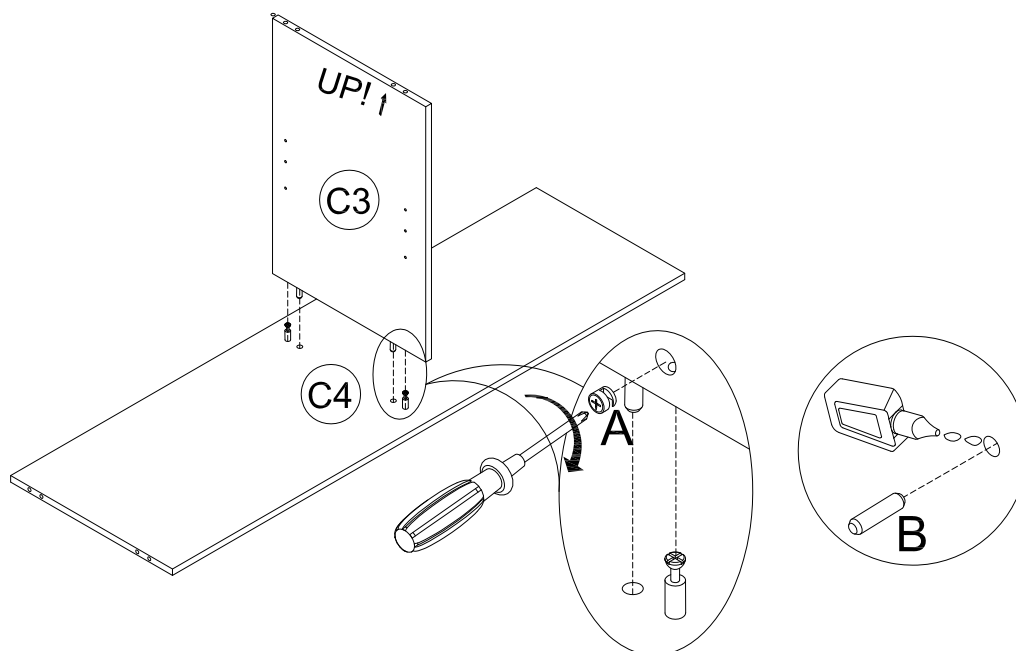


Step6: Attach the Left side Panel(C2a)and Back Panel(C6)and Back Rail Panel(C7) to the Bottom Panel(C4).Attach the Shelf Panel(C5) to the Left side Panel(C2a)and Support Panel(C3). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock into the head of the Cam Pin(A).

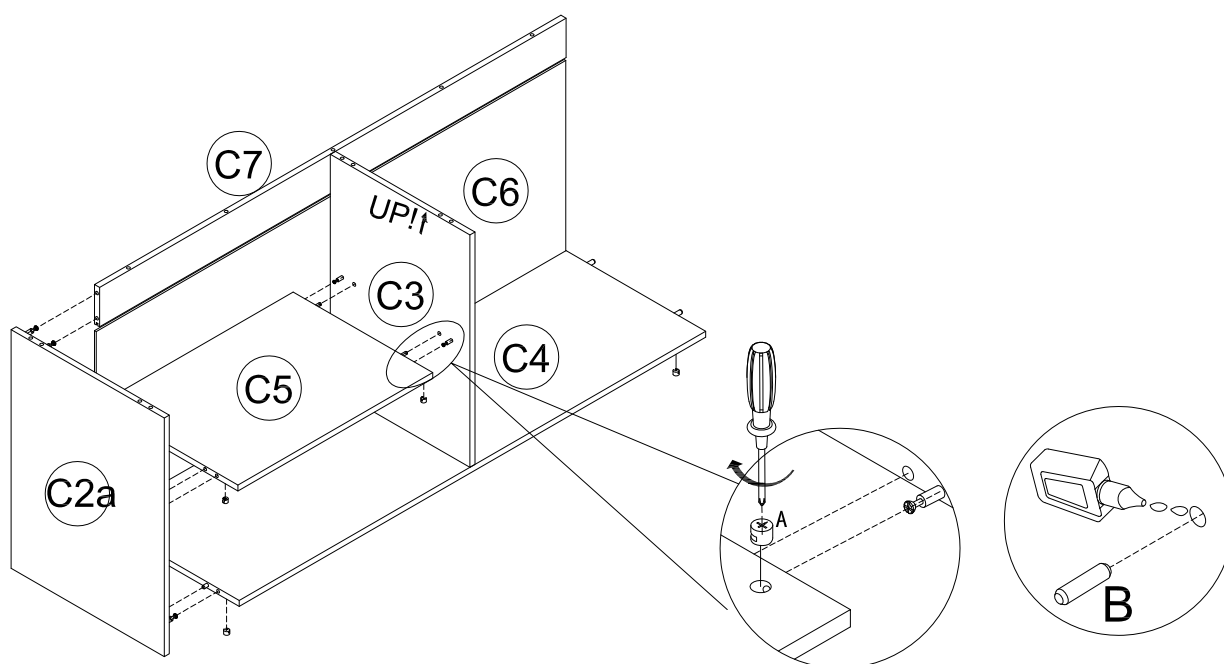


Step7: Attach the Right side Panel(C2b) to the Back Panel(C6)and Back Rail Panel(C7) and the Bottom Panel(C4). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock into the head of the Cam Pin(A).

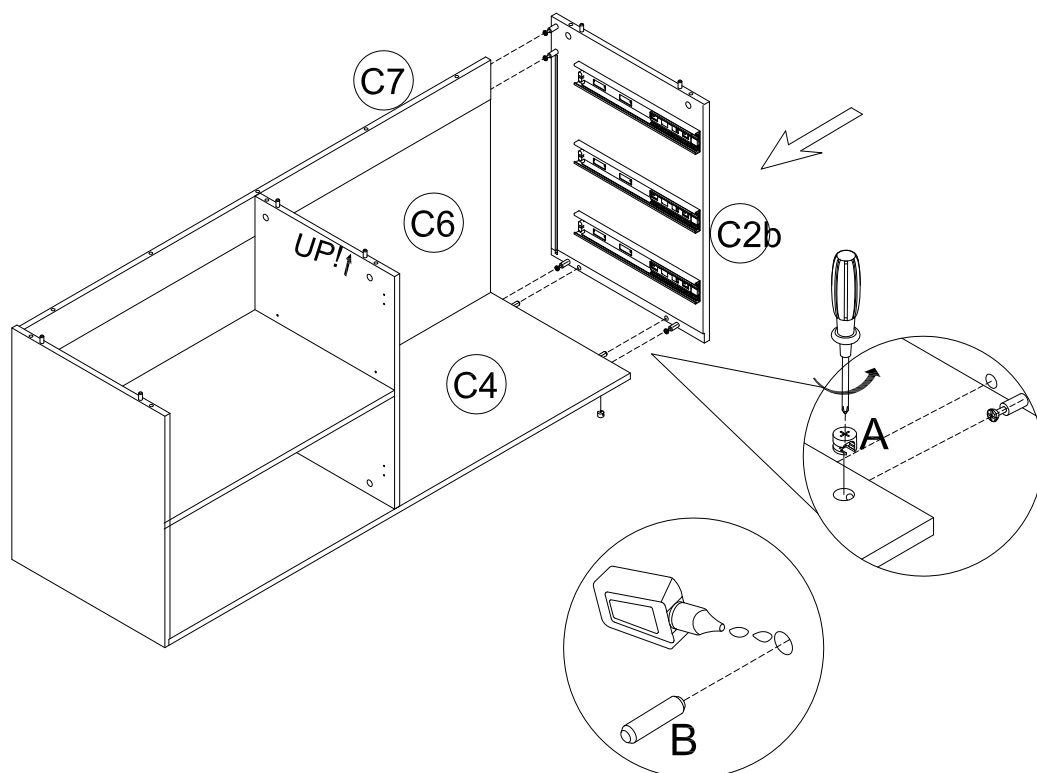


Step8: Attach the Top Panel(C1).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock into the head of the Cam Pin(A).

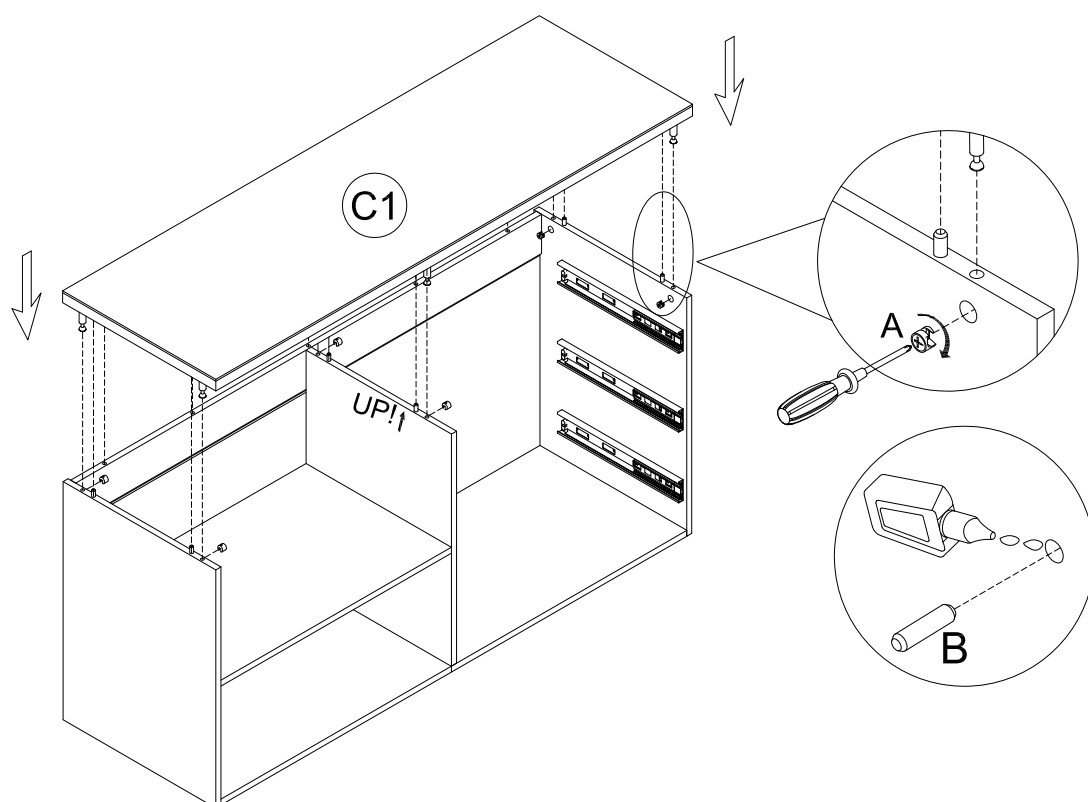


Step8: Use Hex Key(I) to attach the Middle Metal Leg(C14) and Metal Leg(C15) to the Bottom Panel(C4) with Bolt(F) and Washer(H).

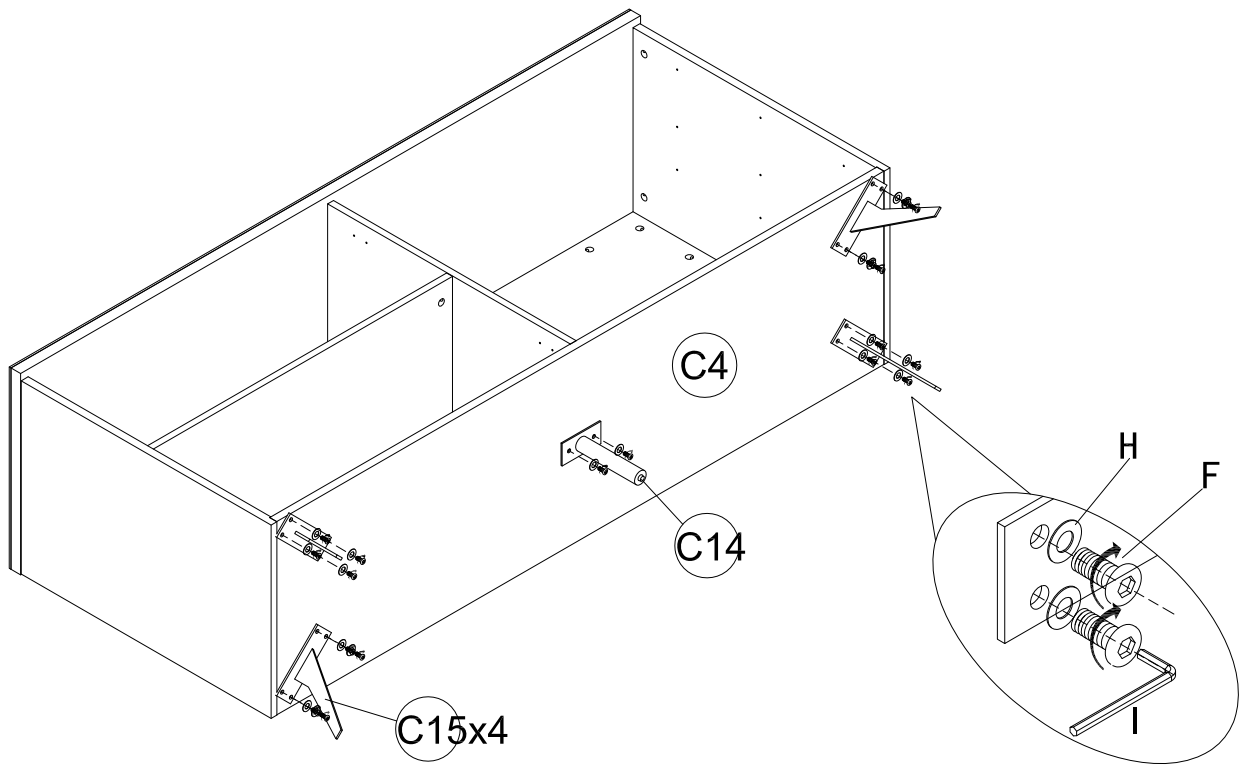


Step9: Use a Phillips Head Screwdriver to insert the Cam Pin(G) to the Drawer Front Panel(C8). Attach the Drawer Left side Panel(C9a) and the Drawer Right side Panel (C9b) and Drawer Connect Panel(C11) to the Drawer Front Panel(C8). Use a Phillips Head Screwdriver to turn the Cam Lock(G) to lock onto the head of Cam Pin(G).

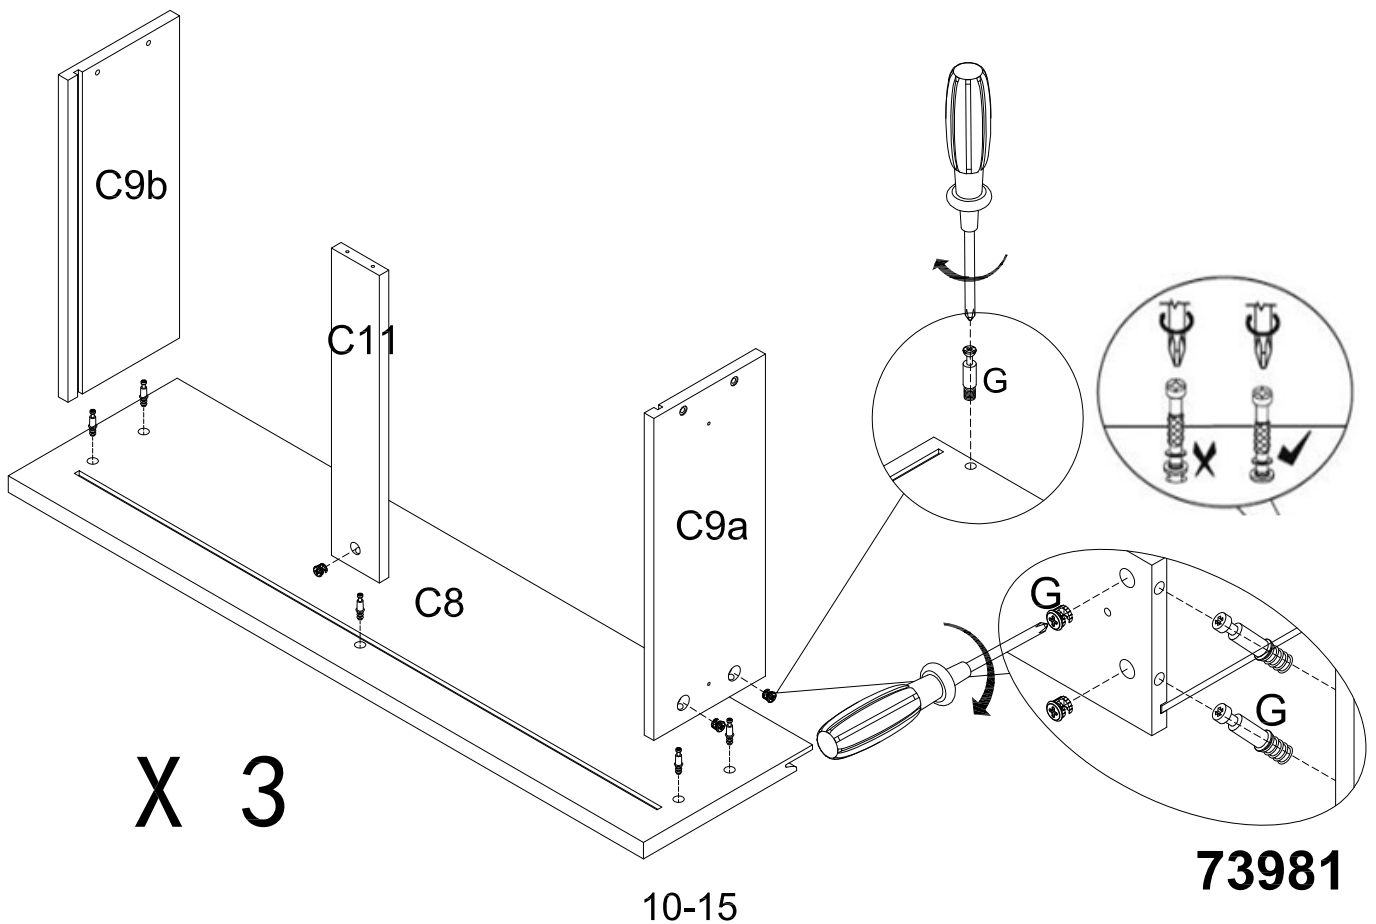

Step10: Insert the Drawer Bottom Panel(C10) to the groove.Use a Phillips Head Screwdriver to attach the Drawer Back Panel(C12) to the Drawer Left side Panel(C9a)and the Drawer Right side Panel (C9b) with Screw(J).

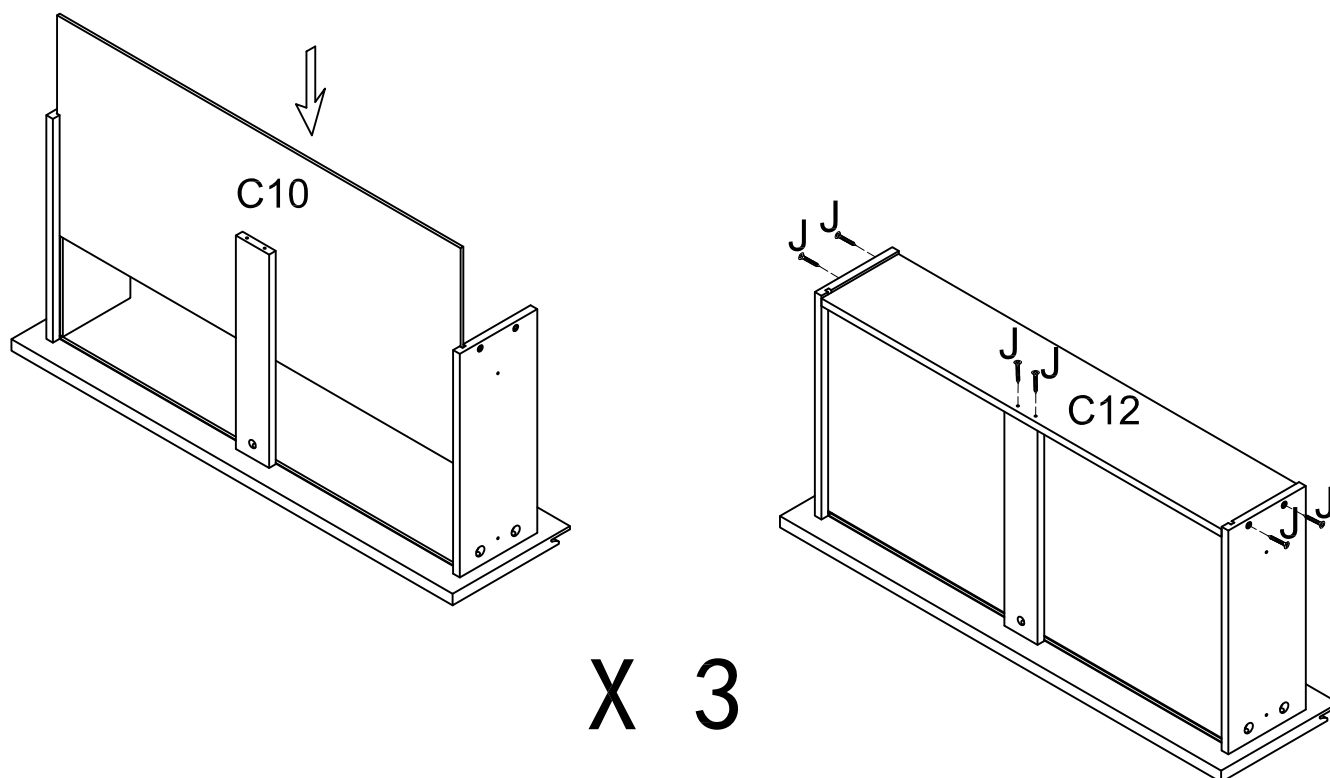


Step11: Use a Phillips Head Screwdriver to attach the Runner(L2) to the Drawer Left side Panel(C9a)and the Drawer Right side Panel (C9b) with Screw(C).

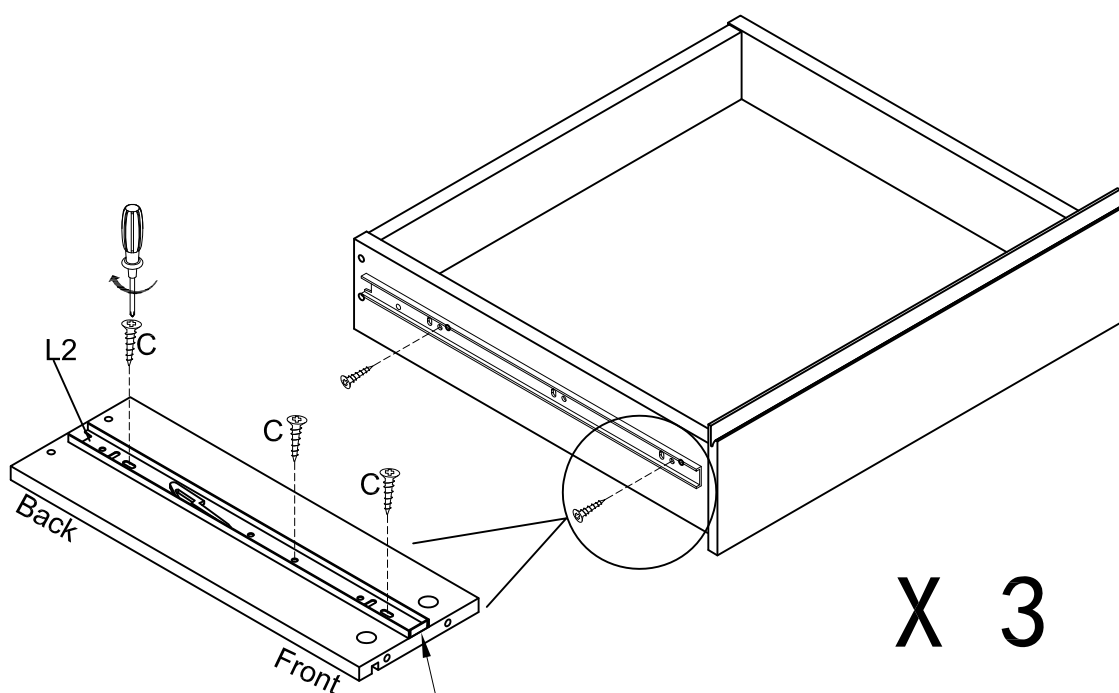


Runner slide must be flush with the drawer side panel edges during assembly step"



Step12: Use a Phillips Head Screwdriver to assemble Hinge(O) to the Door Panel(C13a) with Bolt(N).
Use a Phillips Head Screwdriver to assemble Hinge(P) to the Door Panel(C13b) with Bolt(N).

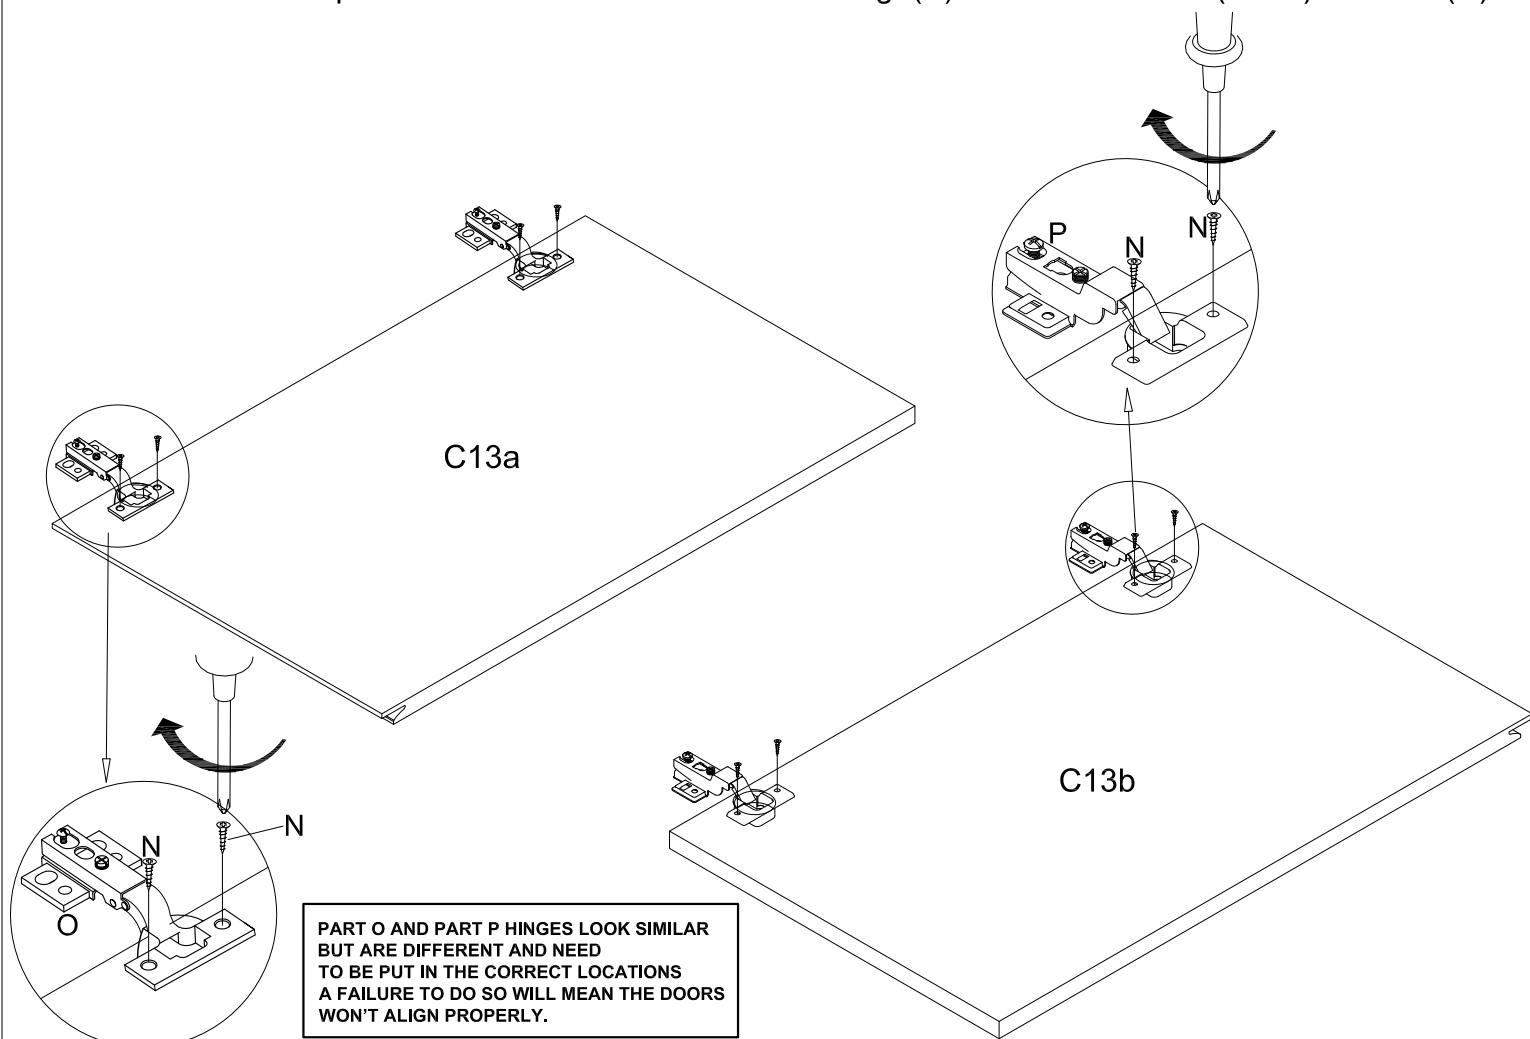


Step13: Use a Phillips Head Screwdriver to assemble Hinge(O) to the Left side Panel(C2a), to assemble Hinge(P) to the Support Panel(C3) with Bolt(N).

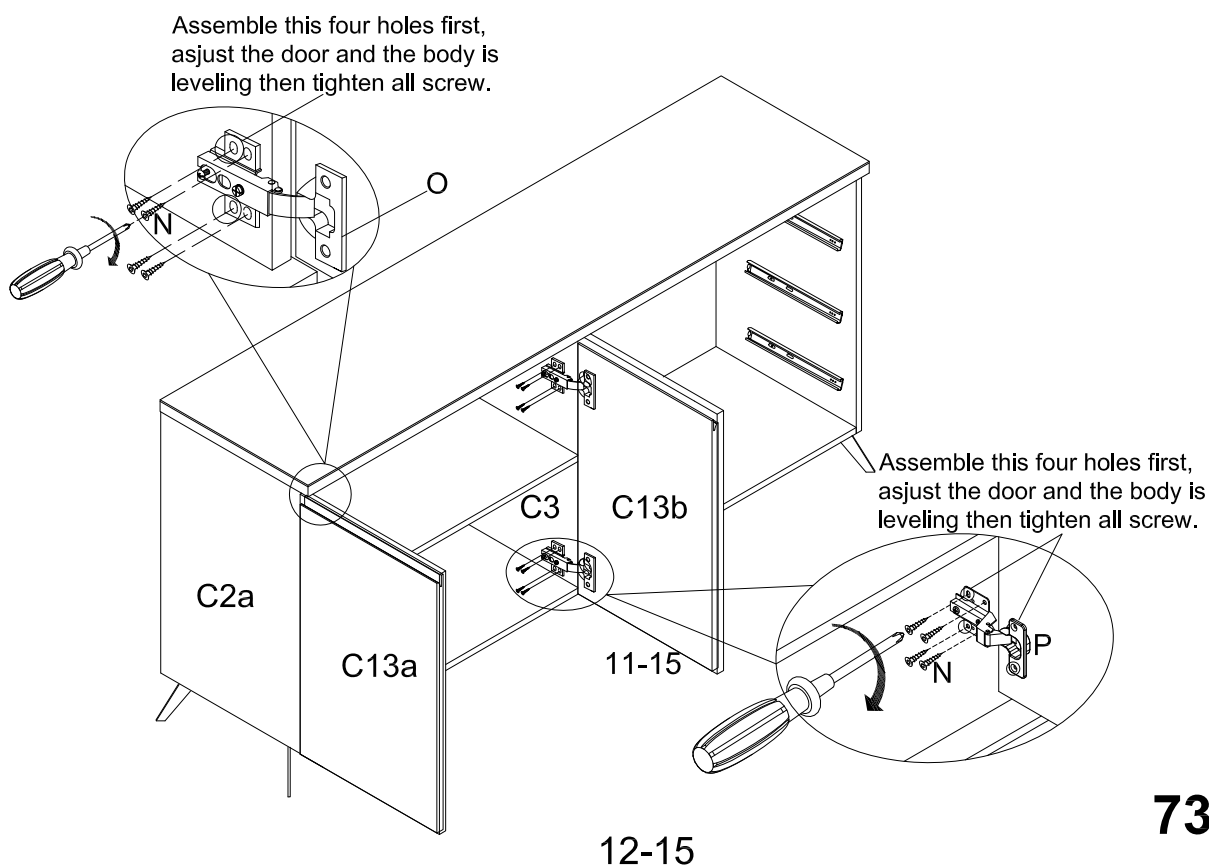

73981

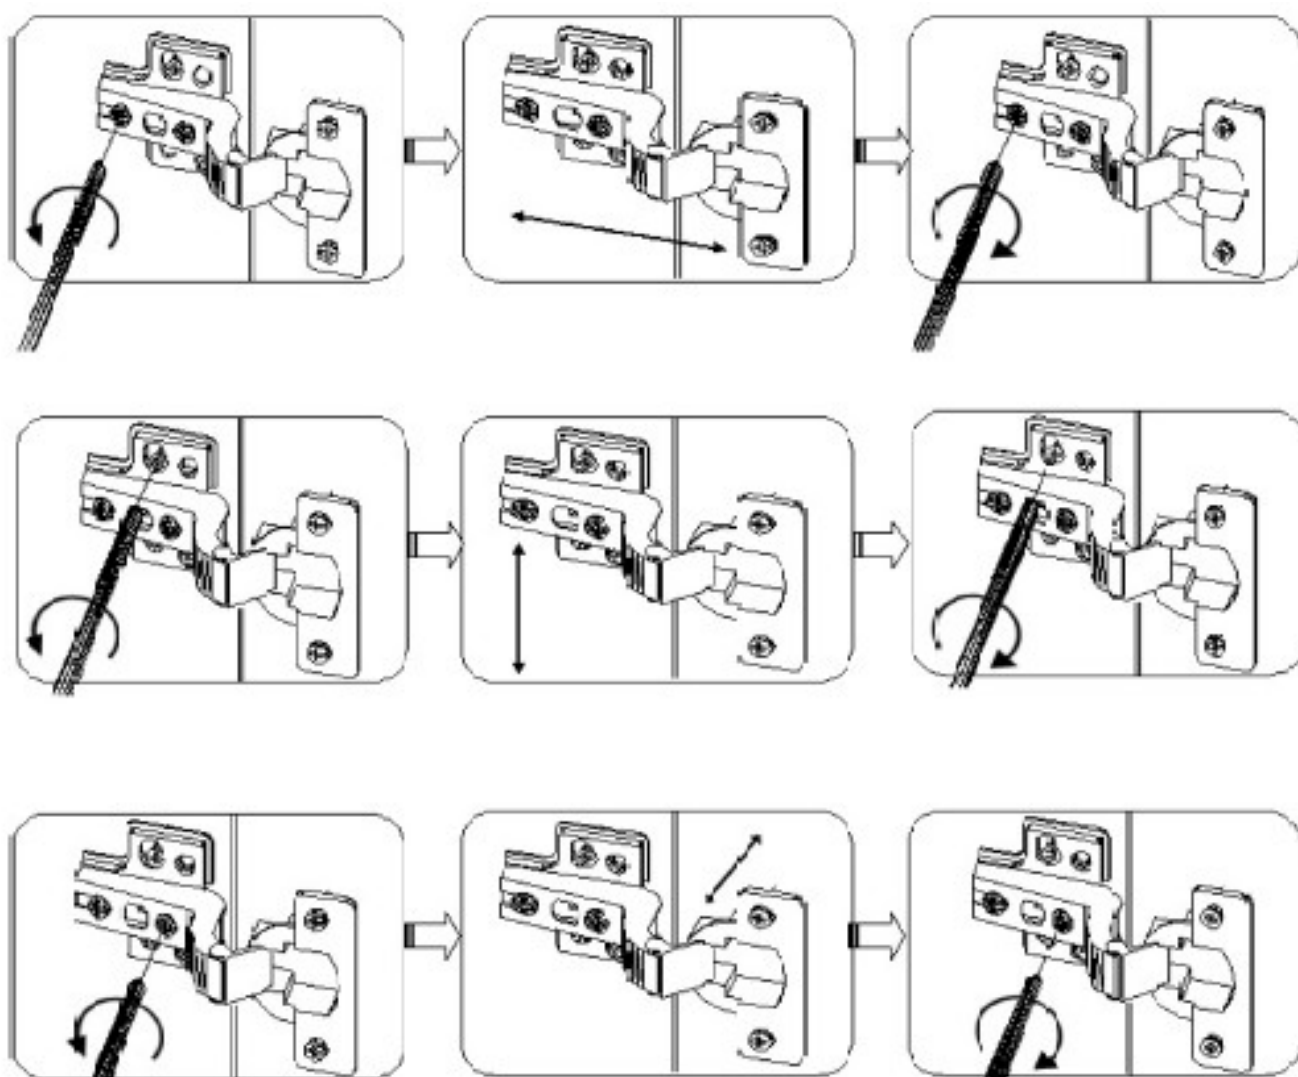
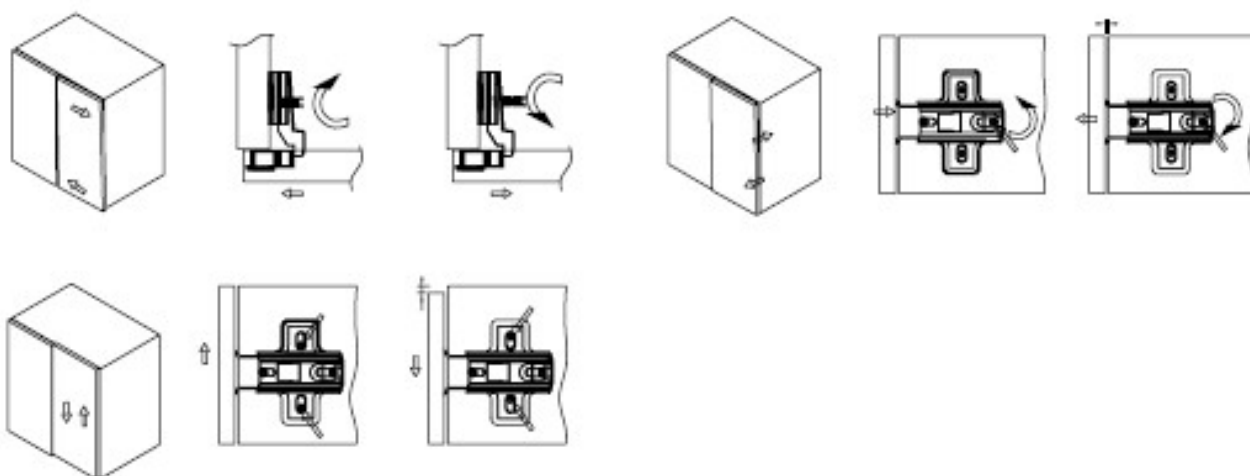


Step15: Use a Phillips Head Screwdriver to attach the connector(E) to the back corner with Screw(D).

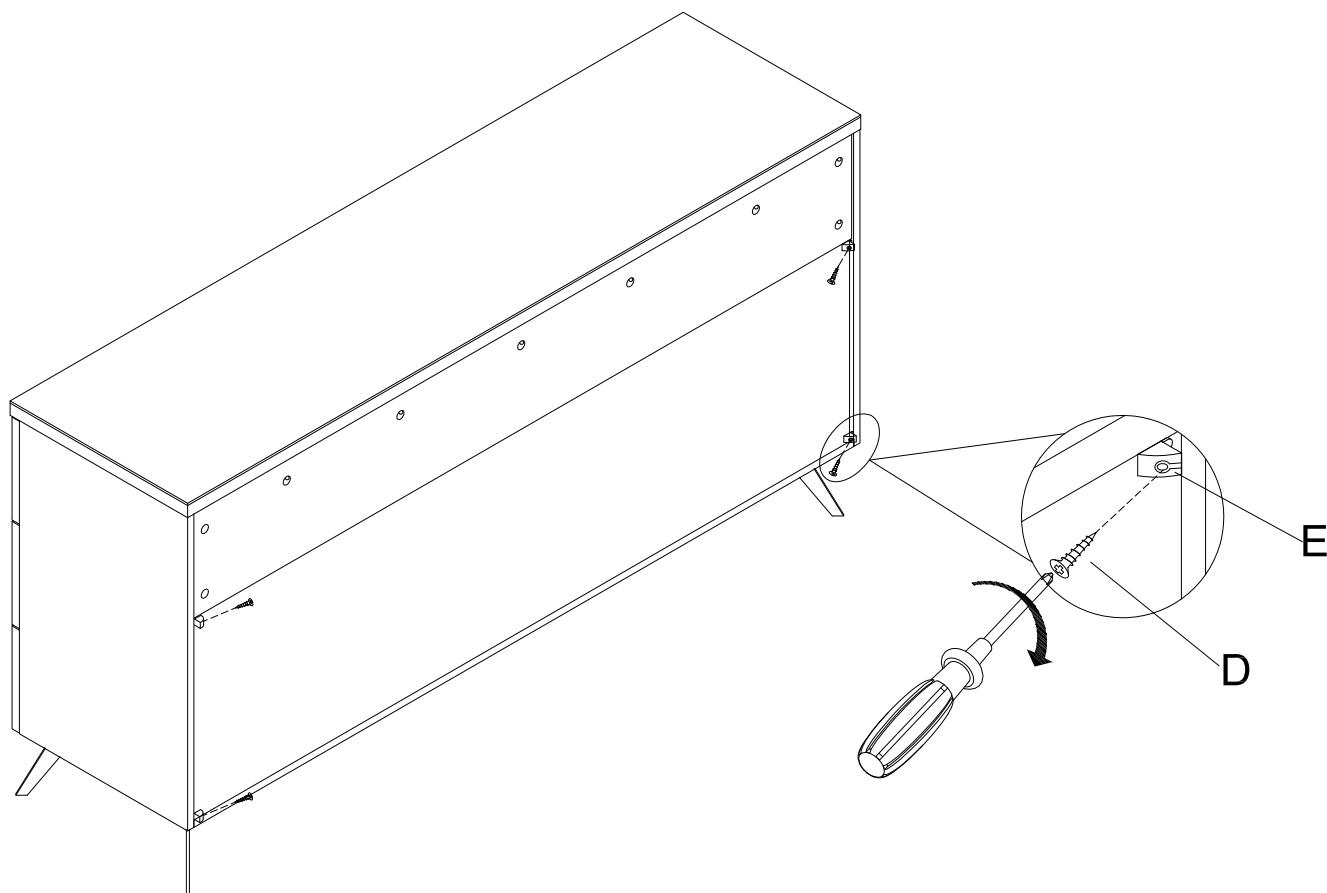

Step14: Insert the Drawers into the Body.

Assembly is complete

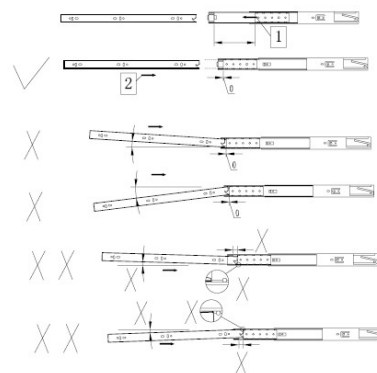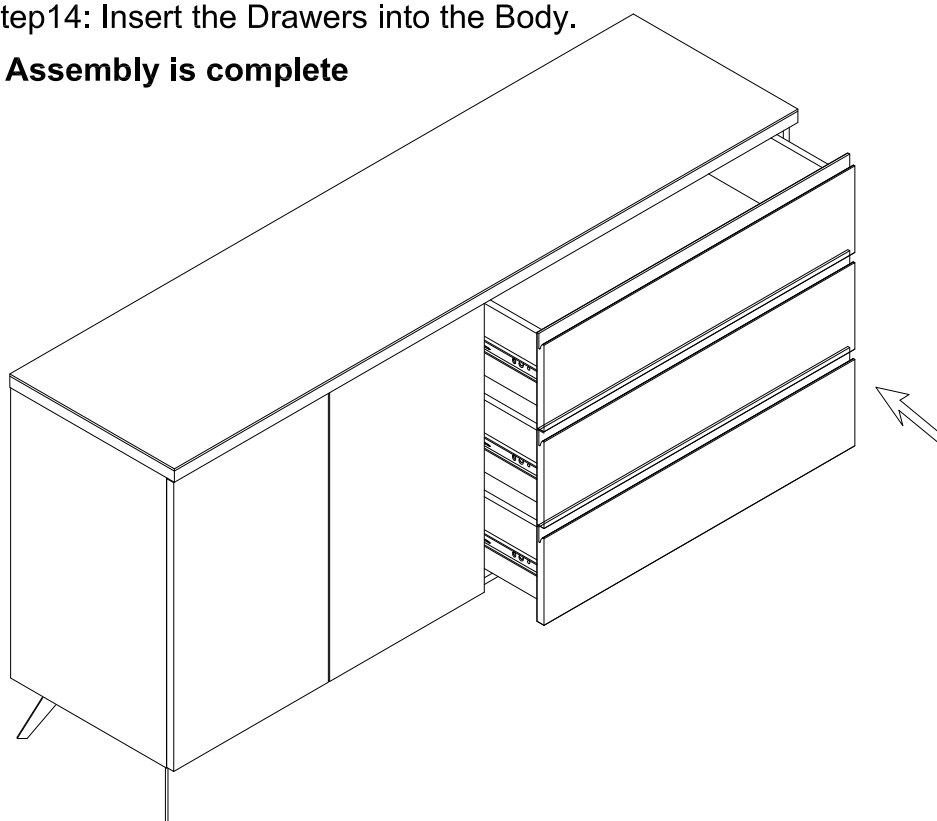


As wall materials vary, screws for fixing to wall are not included.
For advice on suitable screw systems, contact your local specialised dealer.

73981

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

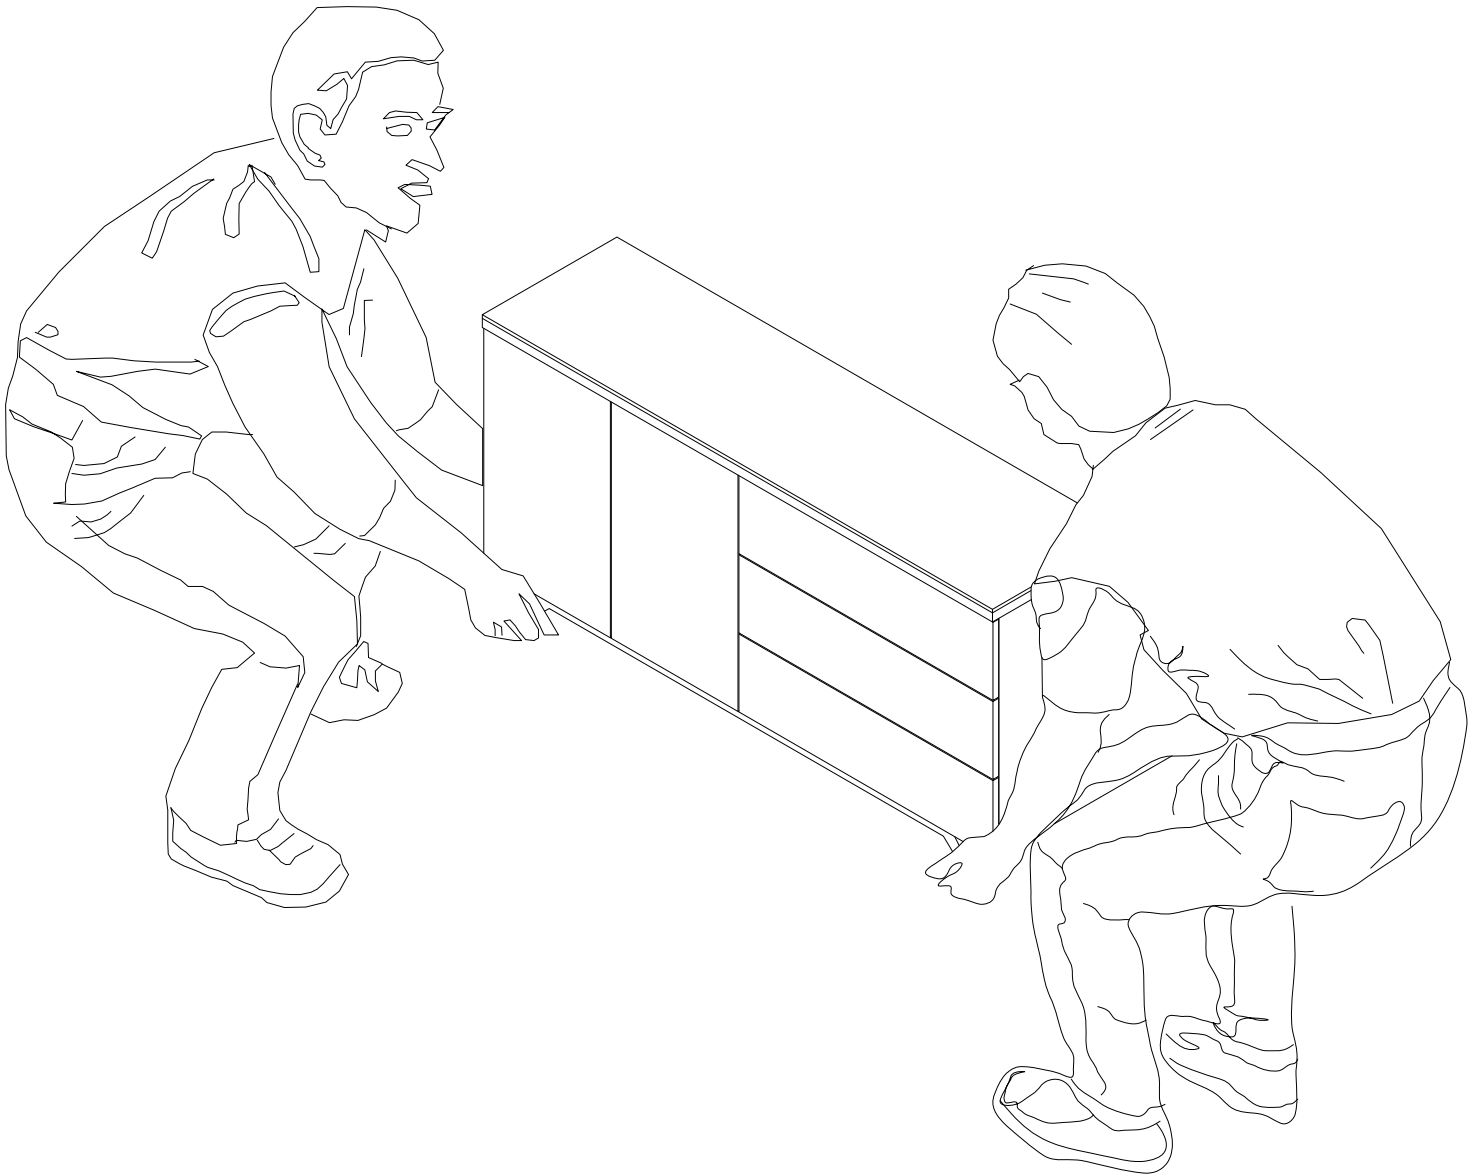

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

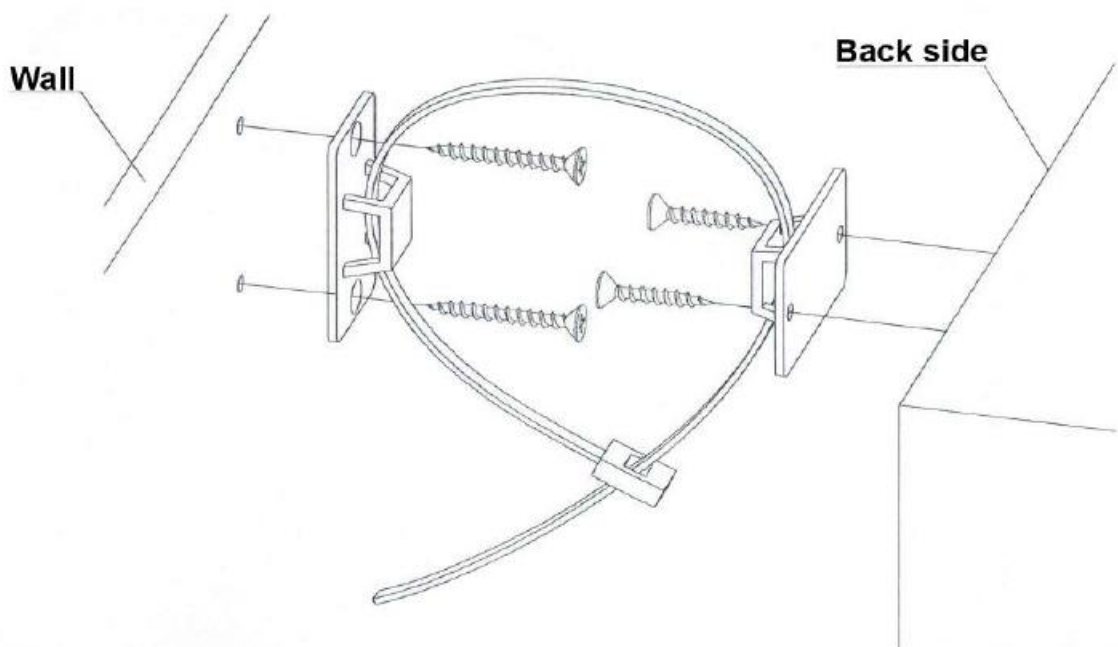

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void