 


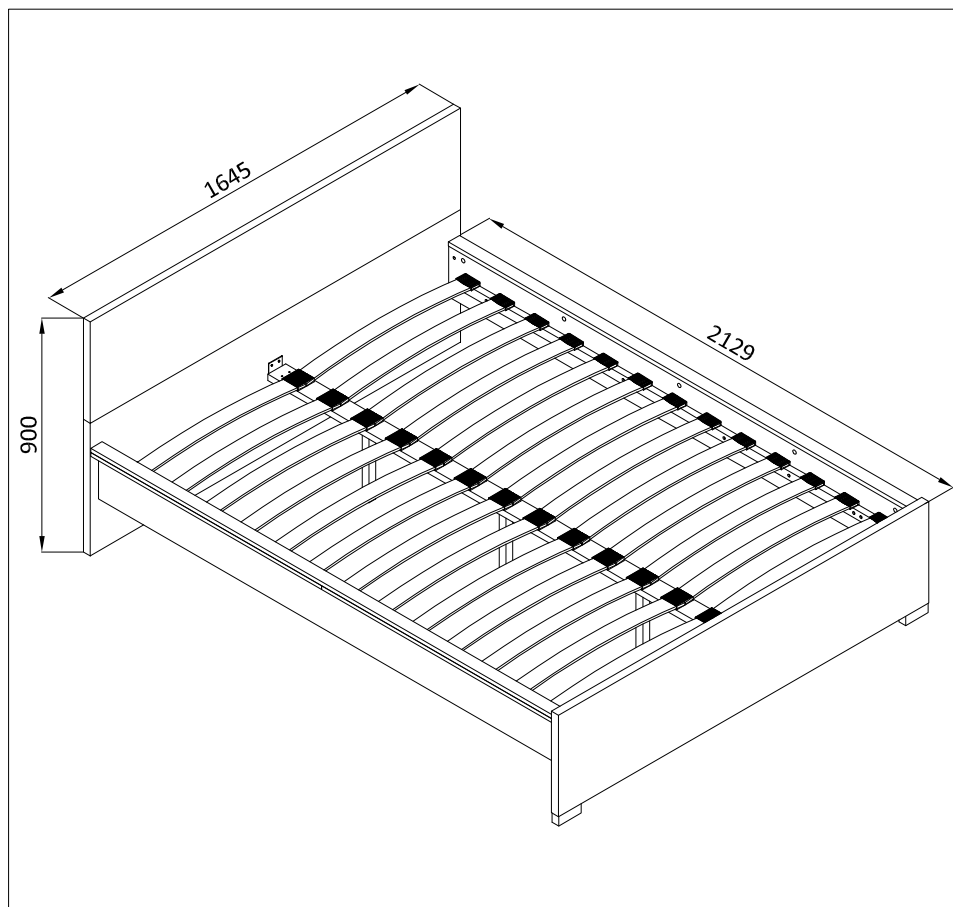

ASSEMBLY INSTRUCTION ALEXIA QUEEN BED ITEM CODE 54725

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

 
 


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia
For any assistant with assembly or for missing parts please phone
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

PRE- ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

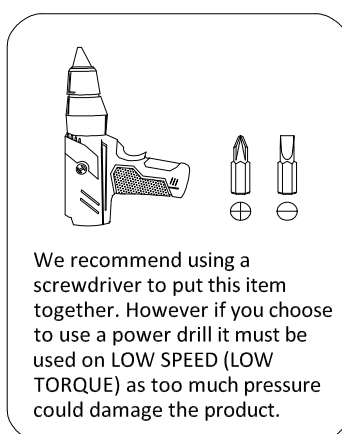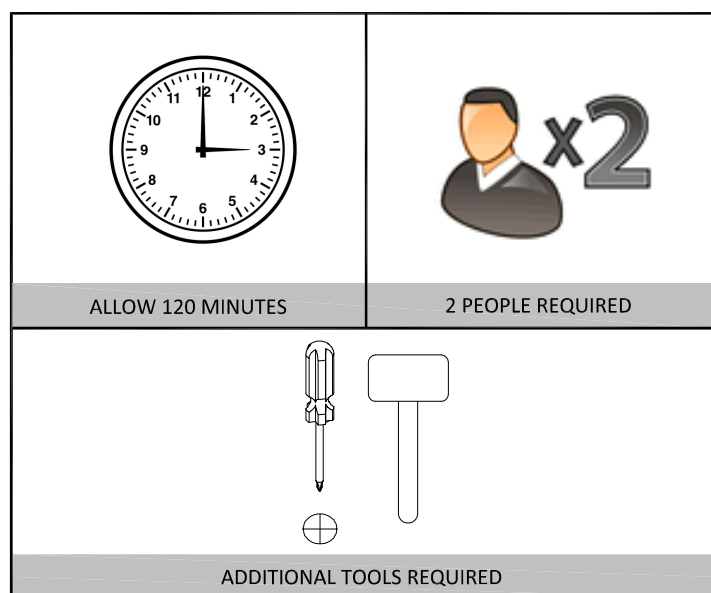

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

 
Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

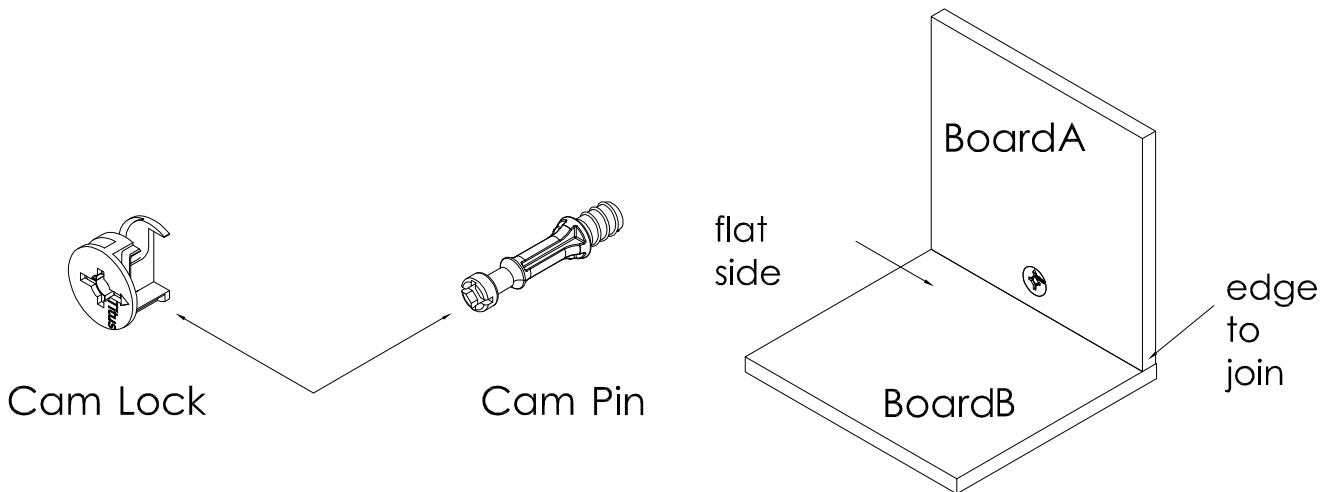

To use Cam Lock Fasteners


The Cam Pin is inserted into the flat side of a board, it is important that:

 - . The cam pin is kept vertical and is not put in on an angle.
- . Cam Pin is inserted up to the collar.
 - . Too far and it wont catch the Cam Lock (**Do not Over Tighten**).
 - . Not enough and the resulting product wont be stable.

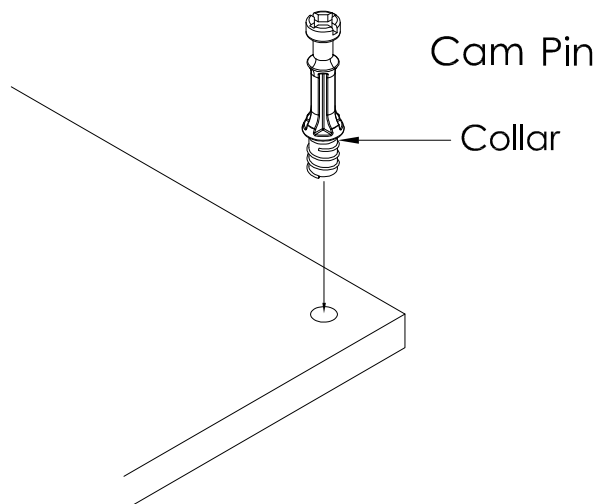

To use Cam Lock Fasteners

 
Now fit the hole in the edge of the joining board over the Cam Pin.

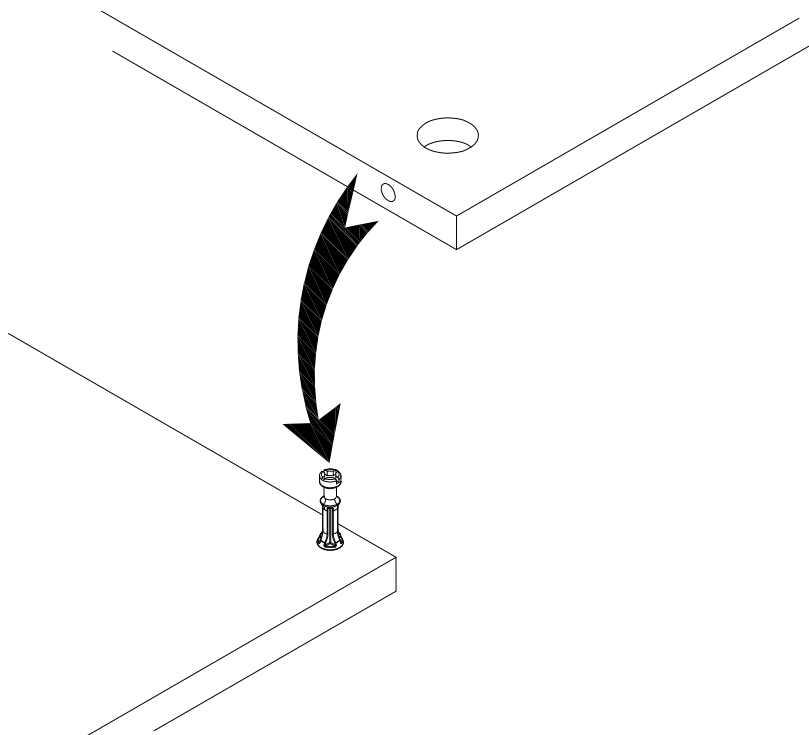

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board.

 head of the Cam Pin

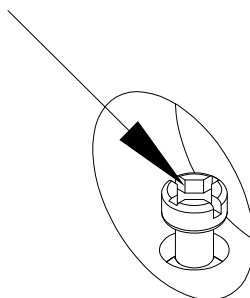

To use Cam Lock Fasteners

 Notice the Cam Lock has a "C" Shaped back.
An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin.

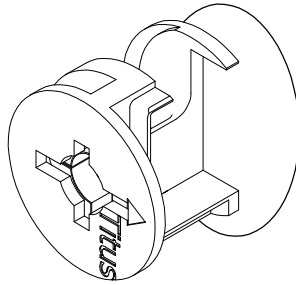


Cam Lock

To use Cam Lock Fasteners

Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.

 You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

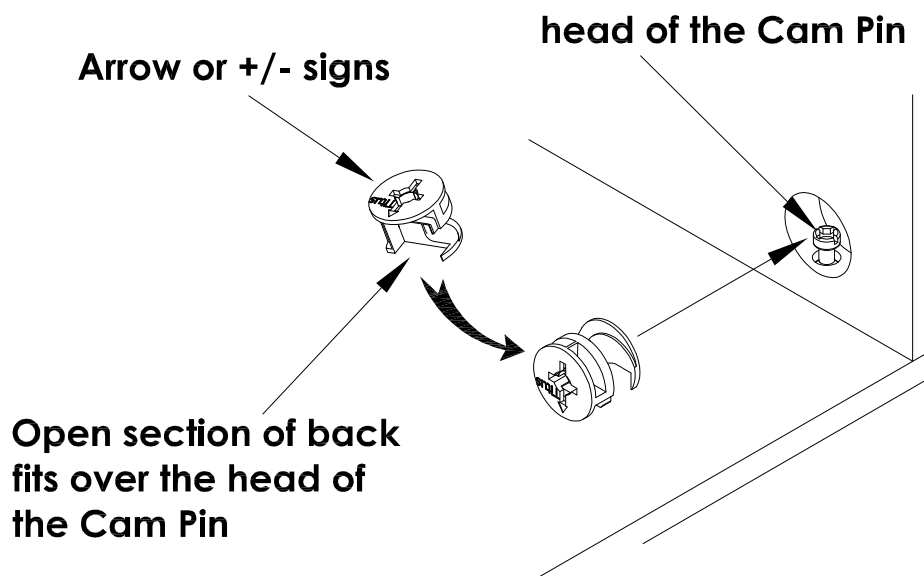


To use Cam Lock Fasteners


Use a flat screw driver to turn the Cam Lock clockwise one half a turn so it locks onto the head of the Cam Pin.

Turn only until it is snug- over- tightening could cause the Cam to bend or break.

  If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

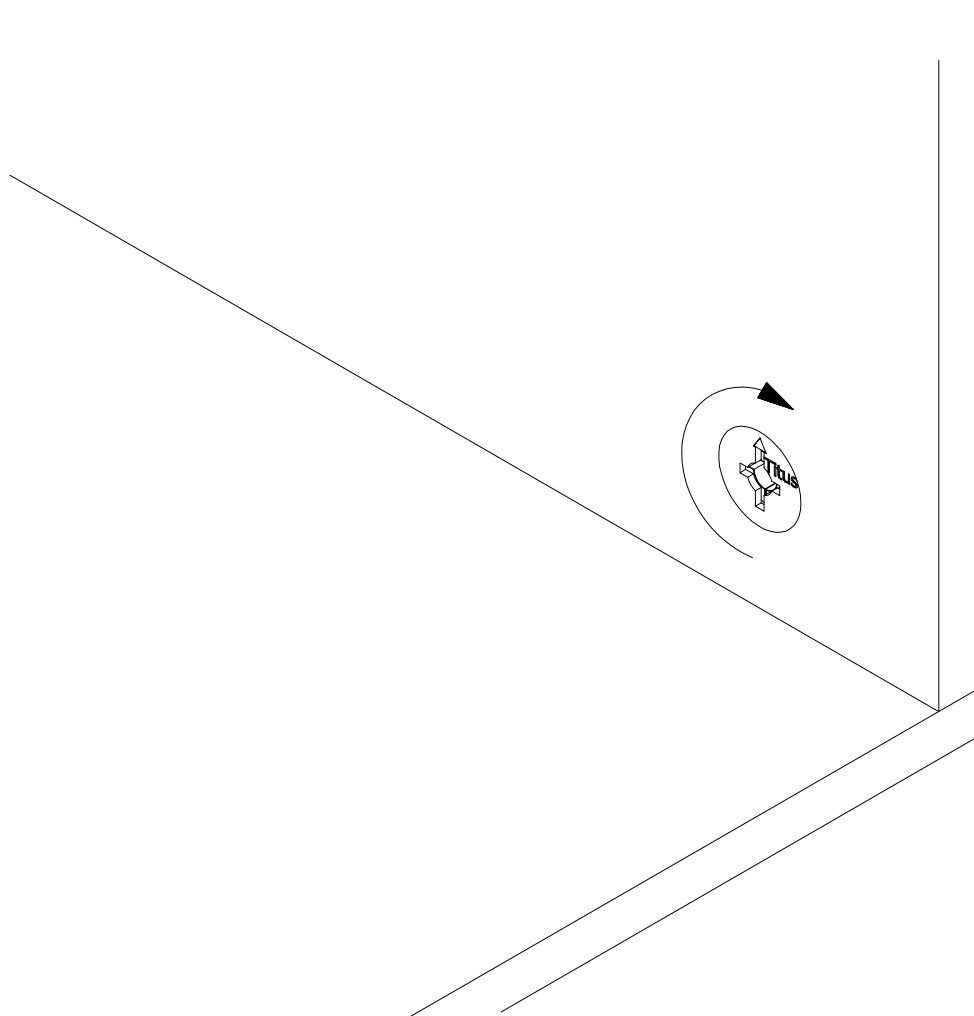
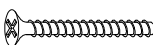





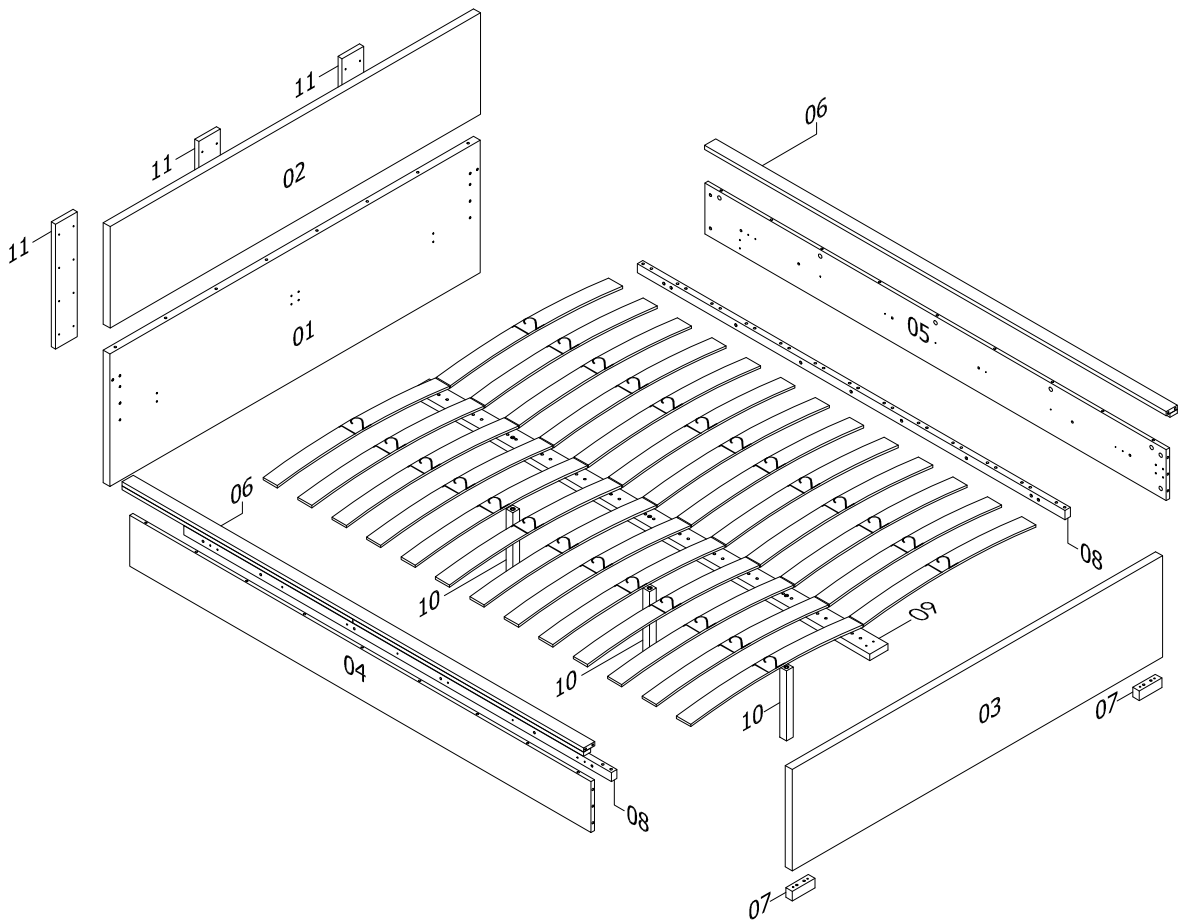

 



 
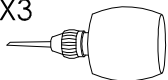
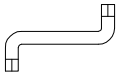
 
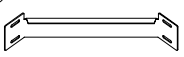
 
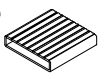


PARTS LIST

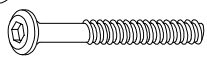



01	BOTTOM HEAD BOARD	X1	07	FOOT	X2
02	TOP HEAD BOARD	X1	08	TOP SIDE RAIL	X2
03	FOOT BOARD	X1	09	CENTRE RAIL	X1
04	LEFT SIDE RAIL	X1	10	SUPPORT LEG	X3
05	RIGHT SIDE RAIL	X1	11	HEAD BOARD SUPPORT	X3
06	TOP RAIL	X2	12	SLAT (63MM X 765MM)	X26

PARTS LIST
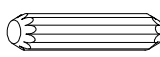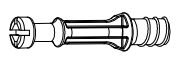
<p>A X24</p>  <p>CSK SCREW M4 X 30MM</p>	<p>B X4</p>  <p>SCREW M4.7 X 38MM</p>	<p>C X32</p>  <p>EURO SCREW M6 X 13MM</p>	<p>D X3</p>  <p>JCBC SCREW M6 X 40MM</p>
<p>E X4</p>  <p>JCBC SCREW M6 X 60MM</p>	<p>F X4</p>  <p>JRN STEEL NUT M6 X L13MM</p>	<p>G X4</p>  <p>MC SCREW M4 X 35MM</p>	<p>H X4</p>  <p>WASHER (M5)</p>
<p>J X4</p>  <p>NUT (M4)</p>	<p>K X20</p>  <p>WOOD DOWEL Ø8 X 25MM</p>	<p>L X12</p>  <p>WOOD DOWEL Ø8 X 50MM</p>	<p>M X14</p>  <p>BOLT-9607 PARALEL NECK DOWEL 24 X 8.5</p>
<p>N X14</p>  <p>CAM-9499 CAM 3000 15 X 12</p>	<p>P X3</p>  <p>ADJUSTABLE LEG (Ø6 X25mm)</p>	<p>Q X3</p>  <p>GLUE</p>	<p>R</p>  <p>ALLEN KEY M4</p>
<p>S X4</p>  <p>METAL L BRACKET (8 HOLES) (2 X 60 X 60MM)</p>	<p>T X2</p>  <p>METAL RECTANGULAR BRACKET (50 X 250mm)</p>	<p>U X26</p>  <p>SLAT SIDE HOLDER (35 X 68MM)</p>	<p>V X13</p>  <p>SLAT CENTER HOLDER (68 X 68MM)</p>





STEP 1:

  Take the foot board (3) and the top rails (6), using a drill on low speed/ torque or a philips head screw driver attach CAM PINS (M) as shown.

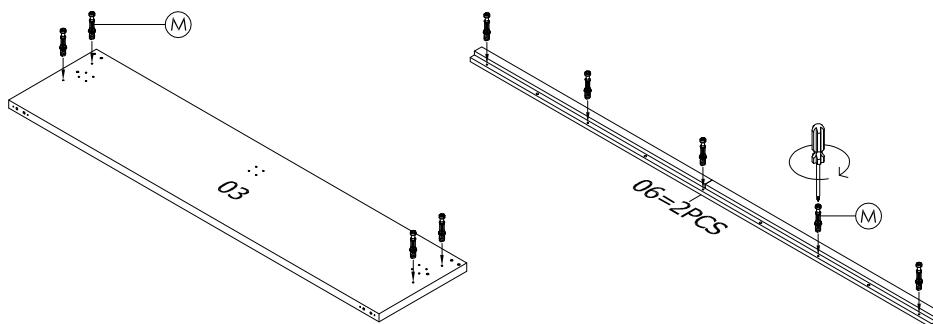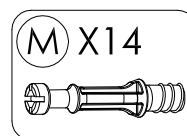





STEP 2:

    Attach L brackets (S) to the side rails (4 & 5) with euro screws (C).

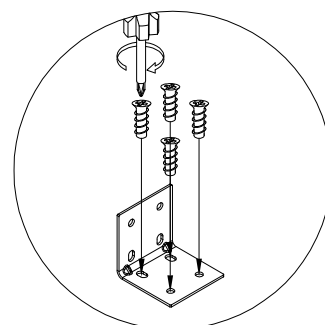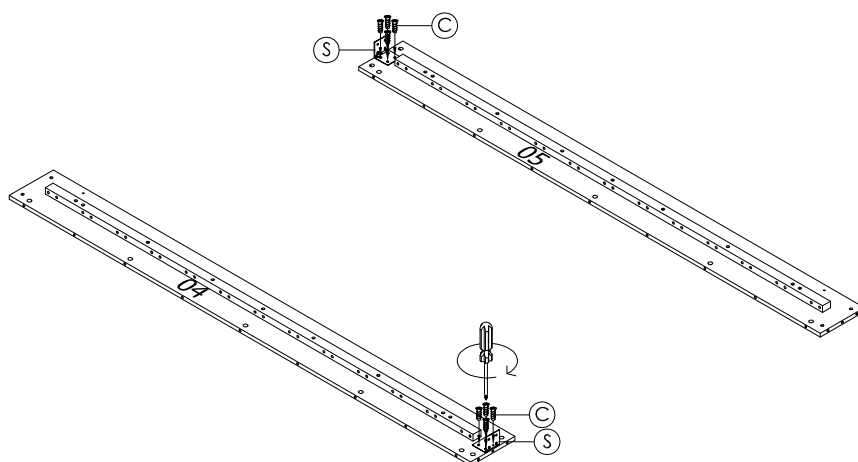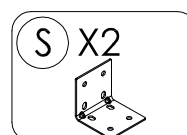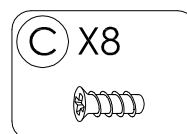






STEP 3:

    Attach L bracket (S) to the bottom head board (1) and foot board (3) using euro screws (C).

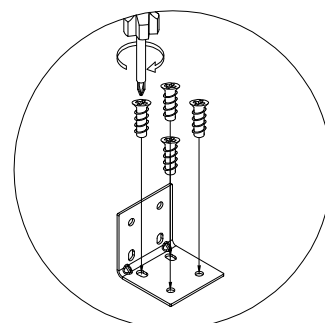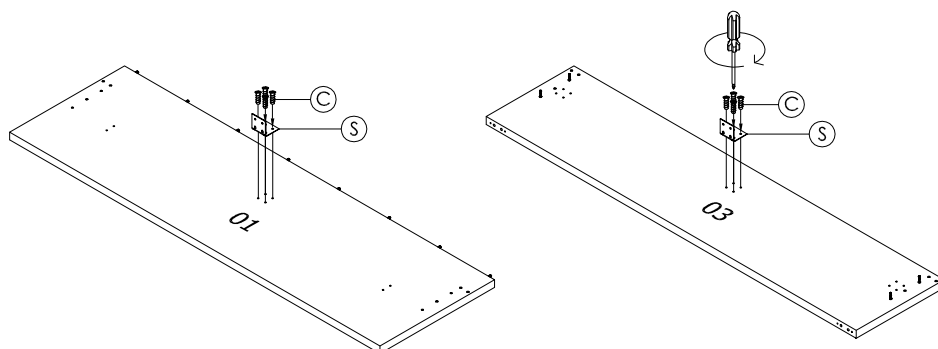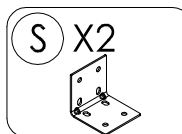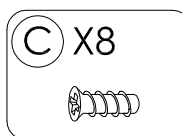

STEP 4:

     
Using glue (Q) insert dowel (K) & (L) into pieces (1, 4, 5, 6 & 7) as shown.

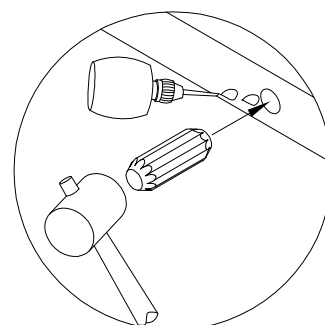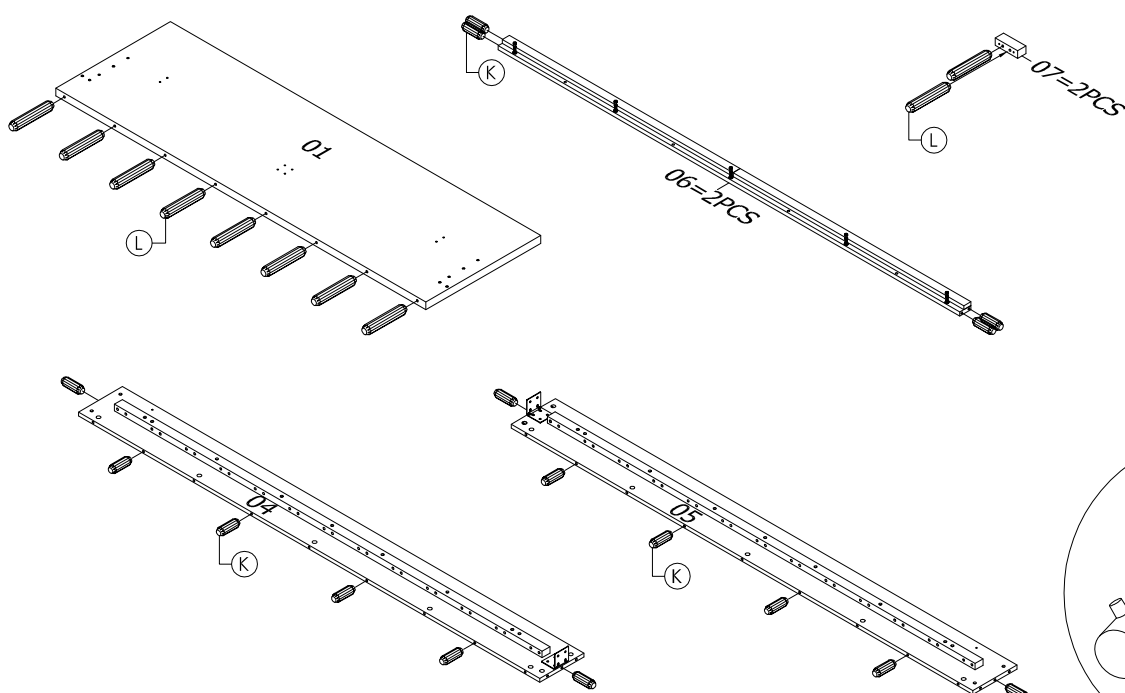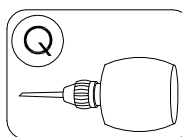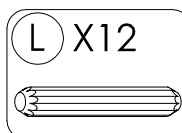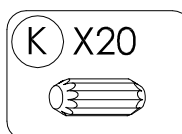




STEP 5:

Attach feet (7) with screw (B) and glue (Q) to the foot board (3).

 (B) X4




(Q)

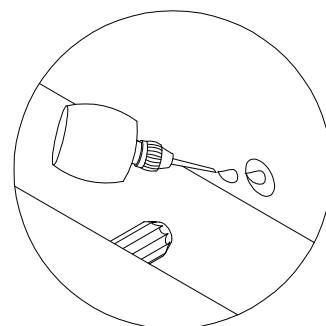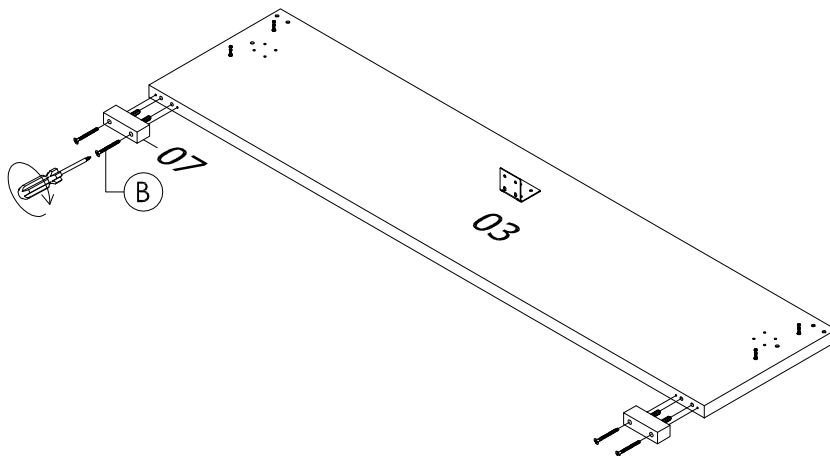   





STEP 6:

Using glue (Q) attach top rails (6) to side rails (4 & 5).
Fasten into place using CAM LOCKS (N) as shown.

 (N) X10









(Q)

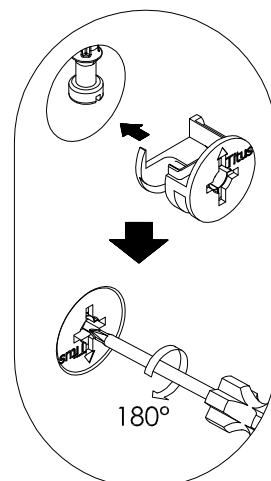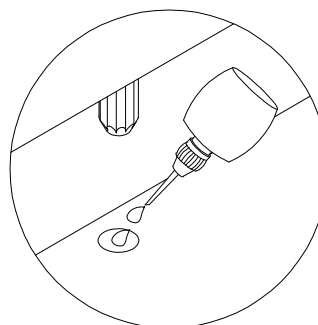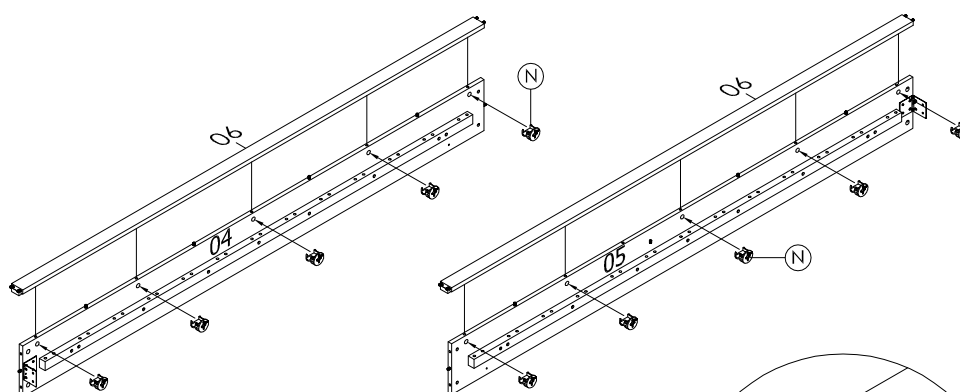    





STEP 7:

      Using glue (Q), attach with CAM LOCKS (N), JCN nuts (F) and screws (E) head board (1) and foot board (3) to the side rails (4 & 5).

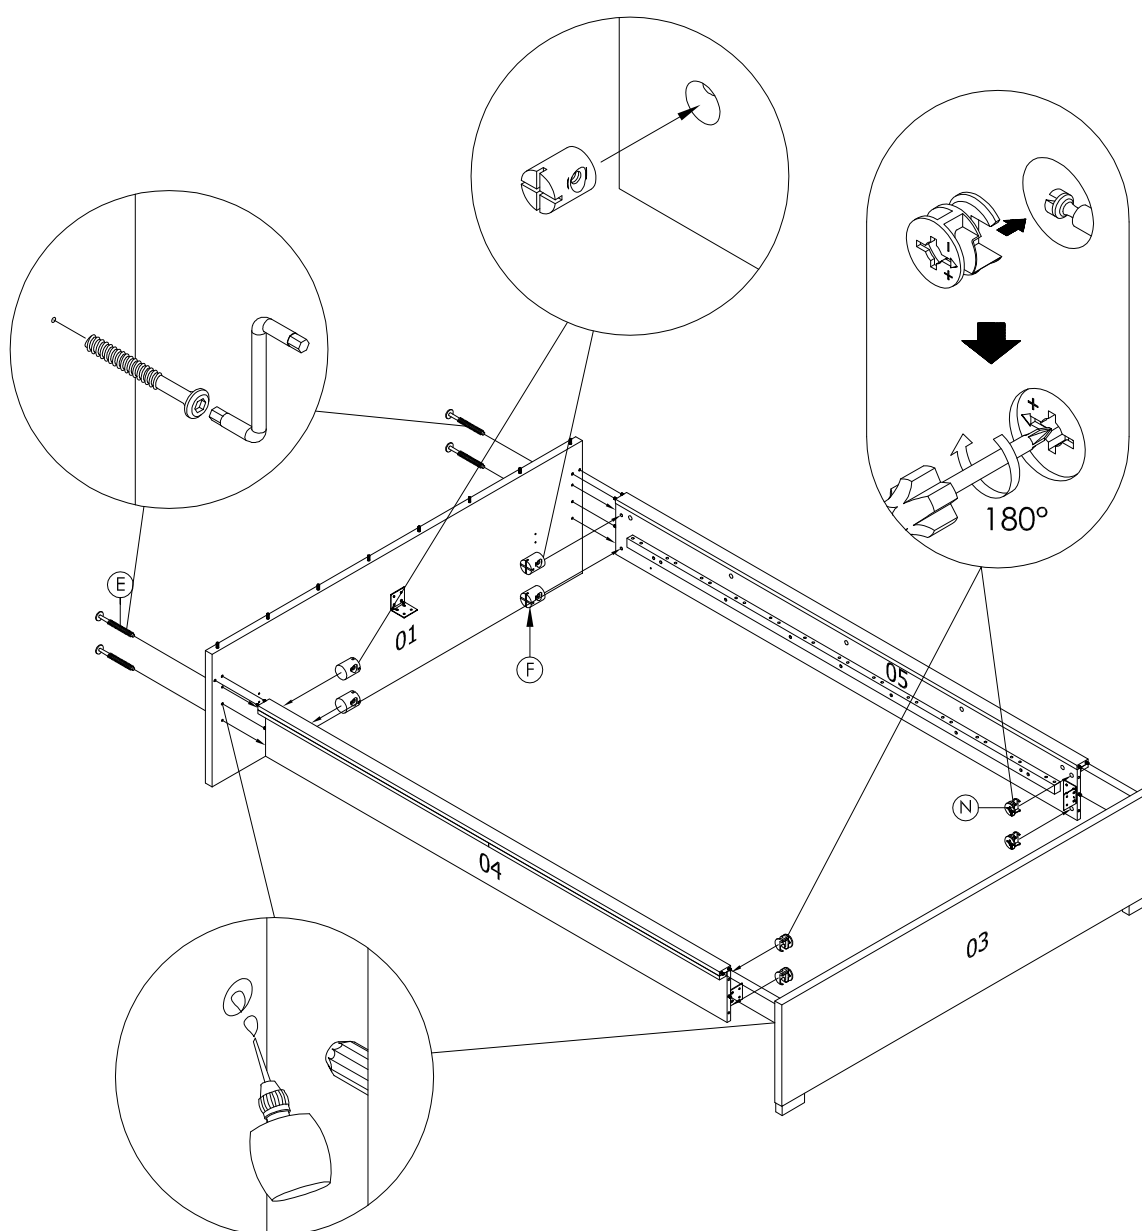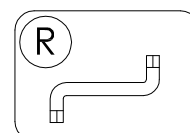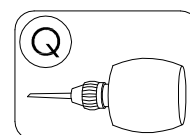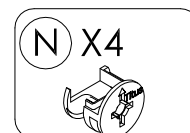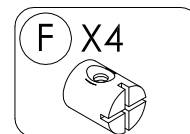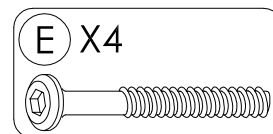




STEP 8:

    Attach rectangular bracket (T) to the bottom head board (1) and side rails (4 & 5) with euro screws (C).

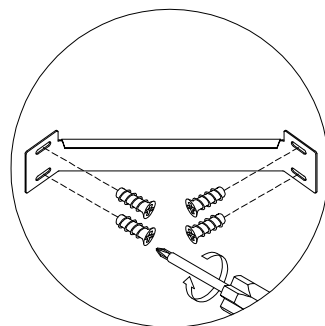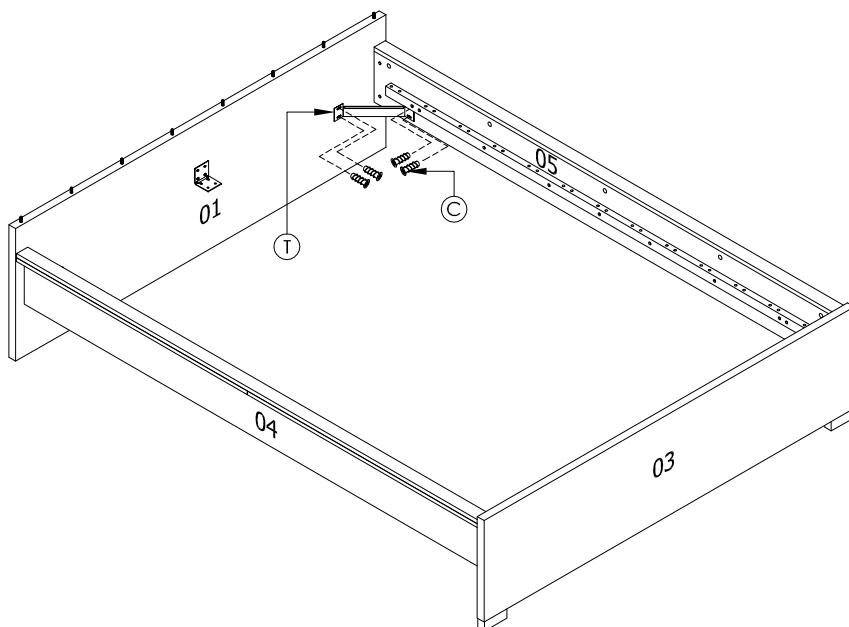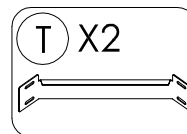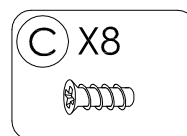

STEP 9:



 
 
 
Tighten L bracket (S) to foot board (3) with euro screws (C).

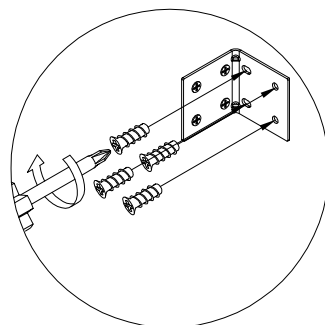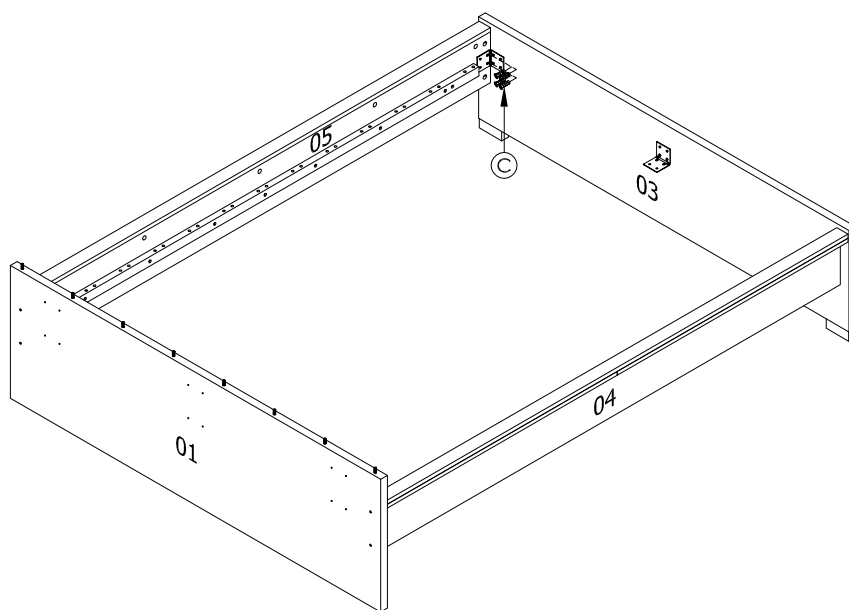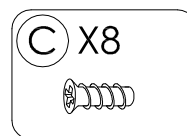

STEP 10:






Attach adjustable feet (P) to the support legs (10).

     Then attach the support legs (10) to centre rail (9) with screw (D) using allen key (R).

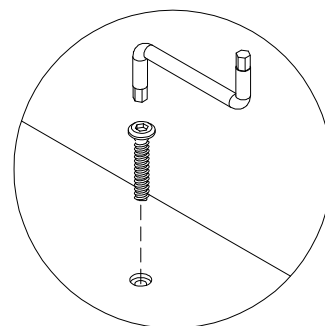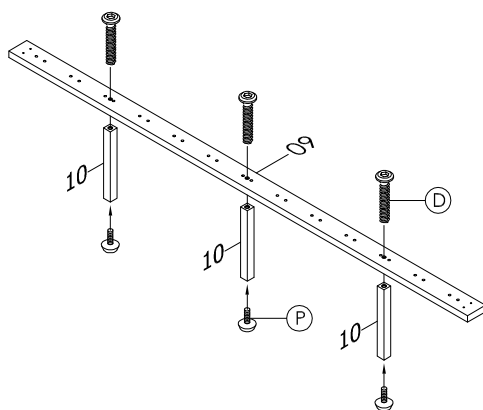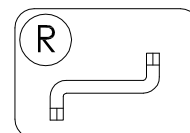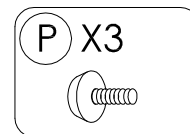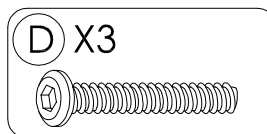



STEP 11:

     Attach centre rail (9) to the bottom head board (1) and foot board with screws (G), washers (H) and nuts (J).

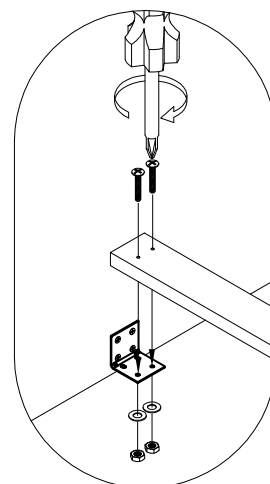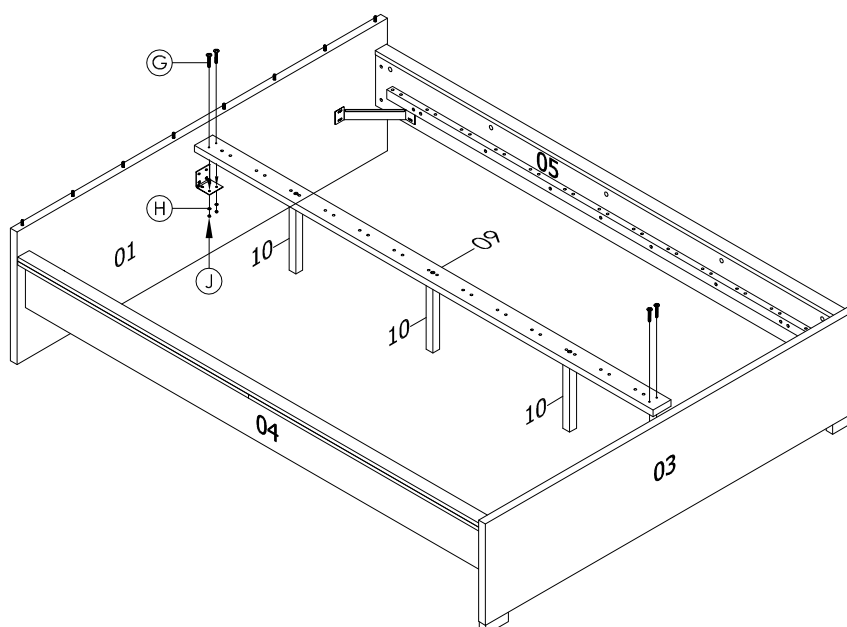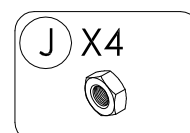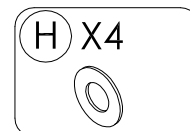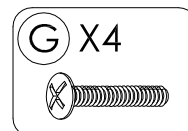



STEP 12:

  Attach head board supports (11) to bottom head board (1) with screws (A).

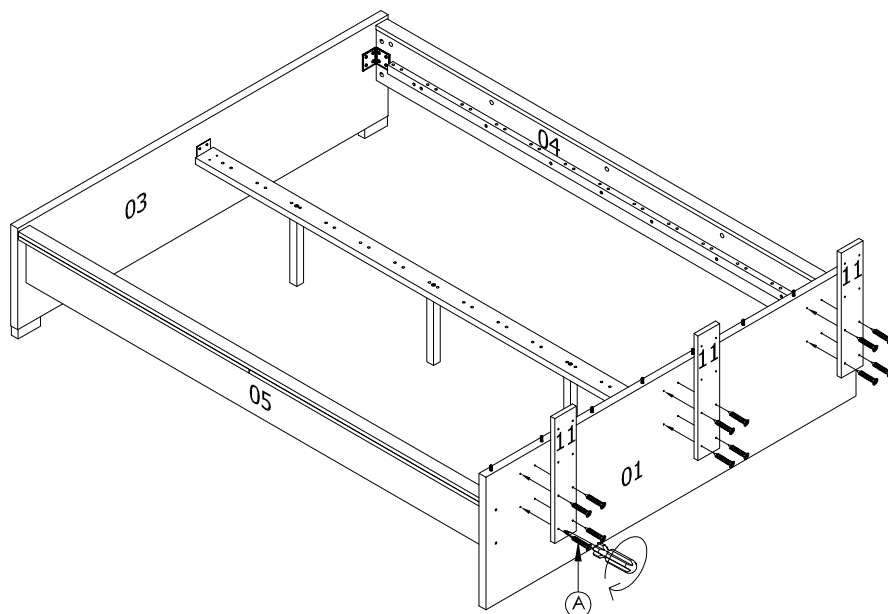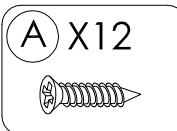

STEP 13:

 
 
Attach top head board (2) onto the bottom head board (1) and attach supports (11) with screws (A) to the top head board.

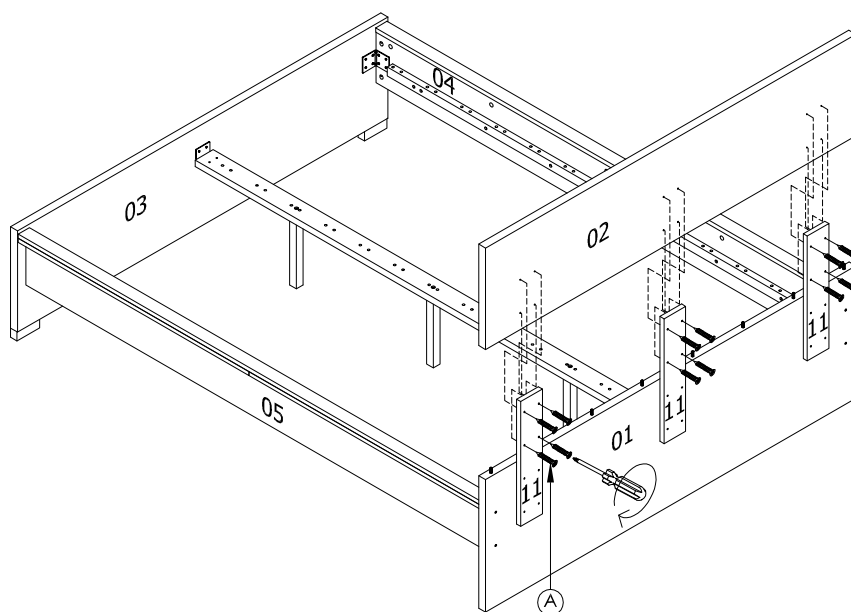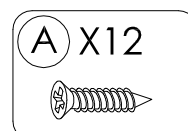


STEP 14:

Attach slat side holders (U) & centre holders (V) to slat (12) as shown.

  
Attach the holders into the holes on the side rails and the centre rail.

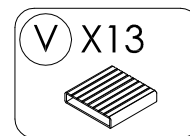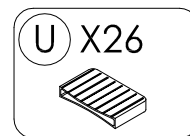


 
STEP 1

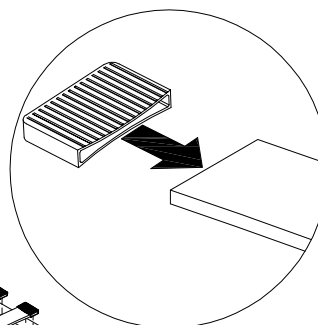



 
STEP 2

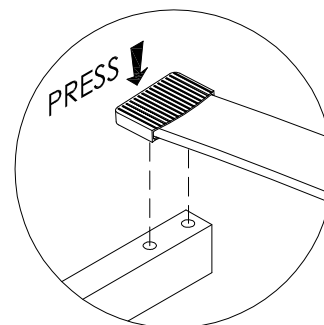

  STEP 3

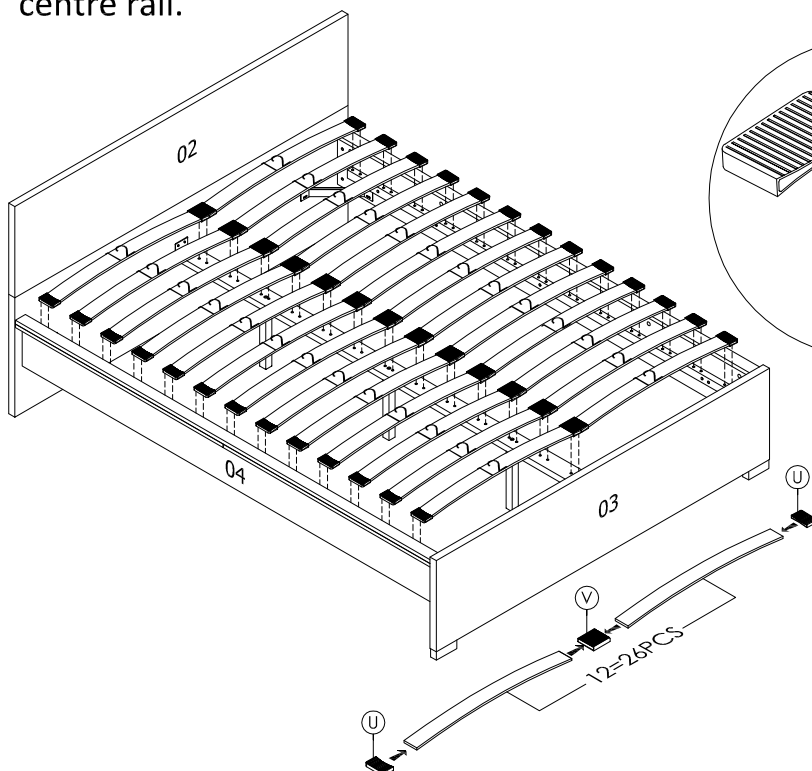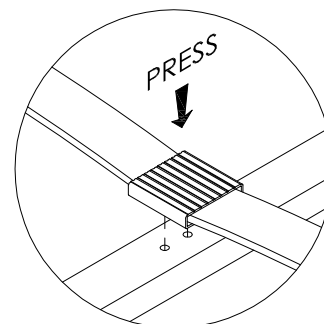

ASSEMBLY IS COMPLETE

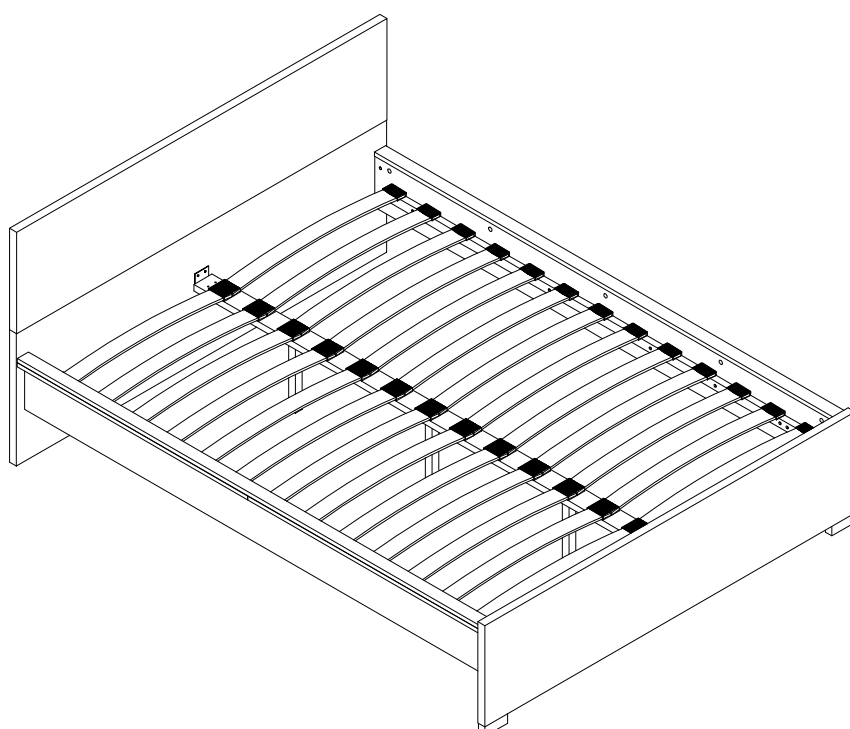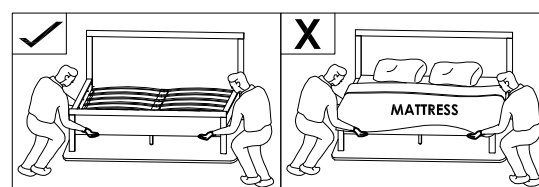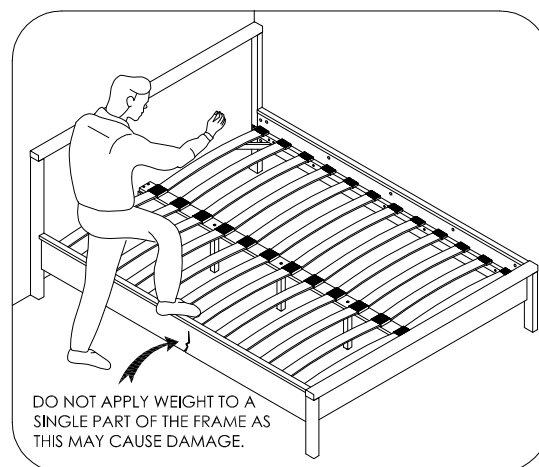   

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp , lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two or more people to lift carefully with caution from either end.

