


ASSEMBLY INSTRUCTIONGLACIAL FILING CABINET ITEM CODE 69413

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

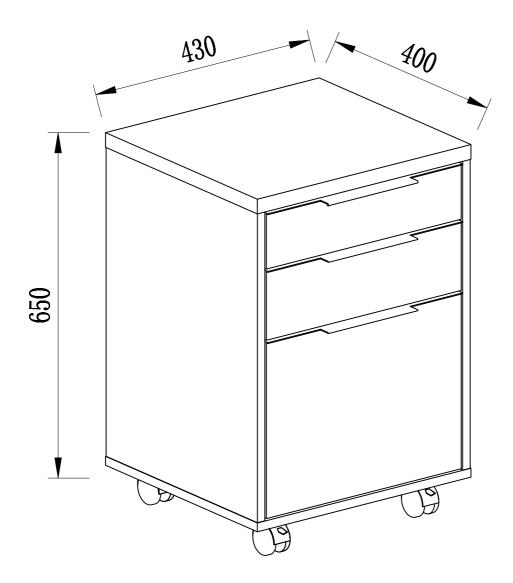

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.


For any assistance with assembly or for missing parts please phone Amart Furniture,

Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

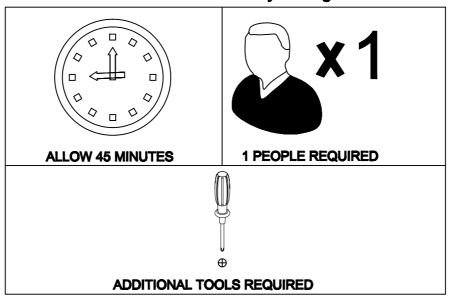




CAM Lock and Pins

step 1


HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

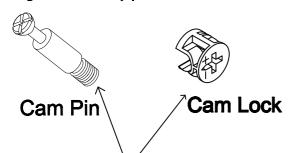

Ensure that you use the correct images that are representative of the hardware used in the product

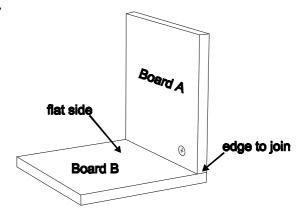


step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

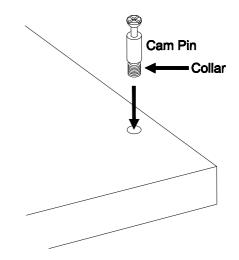

step 3

To use Cam Lock Fasteners


Now fit the hole in the edge of the joining board over the Cam Pin

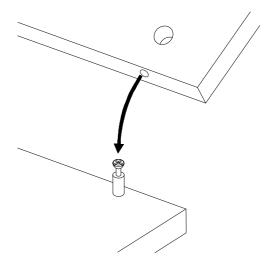

step 4

To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

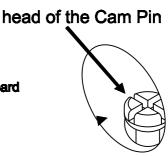

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin




Cam Lock

step 5

To use Cam Lock Fasteners


In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

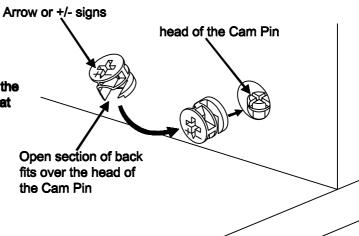


step 6

To use Cam Lock Fasteners


Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

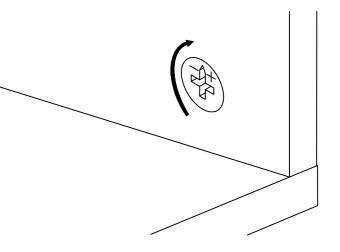


PARTS LIST

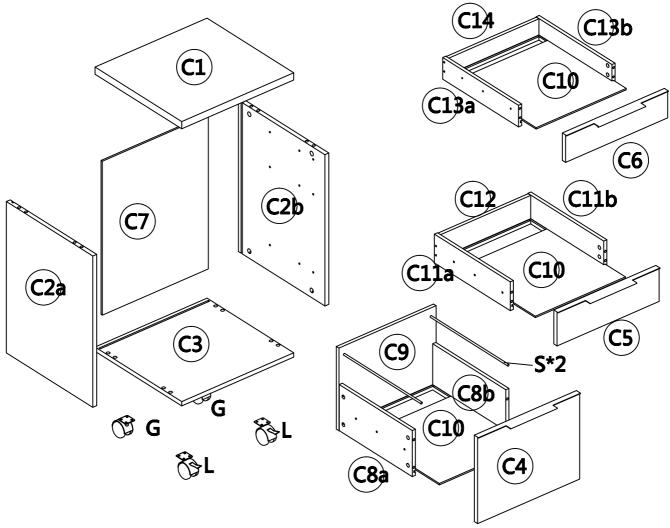


		<u> </u>
Top panel	C8b	Drawer Right Side Panel
Left Side Panel	C9	Drawer Back Panel
Right Side Panel	C10	Drawer Bottom Panel
Bottom Panel	C11a	Drawer Left Side Panel
Drawer Front Panel	C11b	Drawer Right Side Panel
Drawer Front Panel	C12	Drawer Back Panel
Drawer Front Panel	C13a	Drawer Left Side Panel
Back Panel	C13b	Drawer Right Side Panel
Drawer Left Side Panel	C14	Drawer Back Panel
	Left Side Panel Right Side Panel Bottom Panel Drawer Front Panel Drawer Front Panel Drawer Front Panel Back Panel	Left Side Panel C9 Right Side Panel C10 Bottom Panel C11a Drawer Front Panel C11b Drawer Front Panel C12 Drawer Front Panel C13a Back Panel C13b

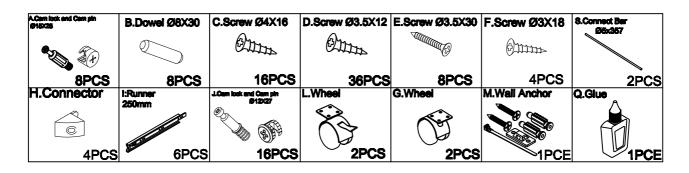


Runner slide separately(I=I1+I2)
Carefully pull out the runner slide(I2)and press plastic clip to fully separate runner slide as diagram shown

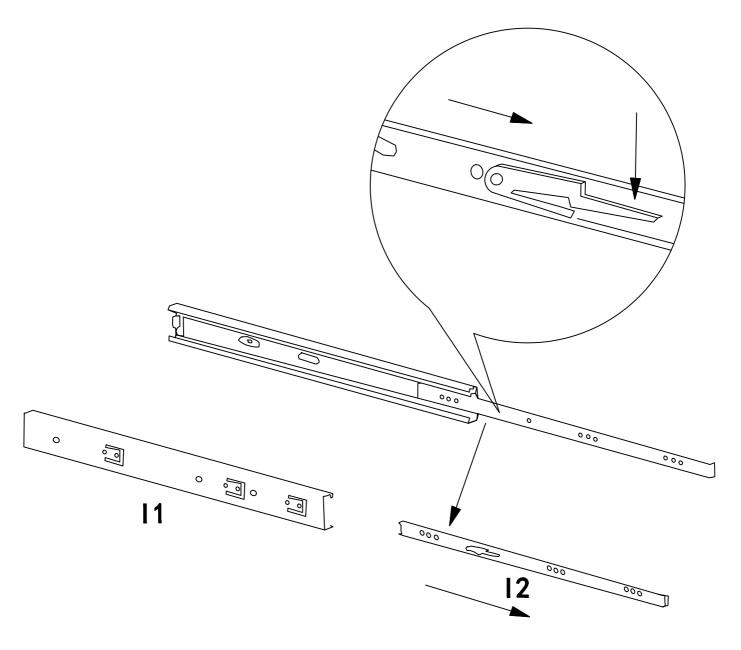


STEP 1: Place a small amount of glue on each dowel (B) and insert into the Side Panel(C2a,C2b), Use a Phillips Head Screwdriver to insert the Cam Pin(A) Bottom Panel(C3),Assemble the Side Panel(C2a,C2b) to the Bottom Panel(C3),Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).

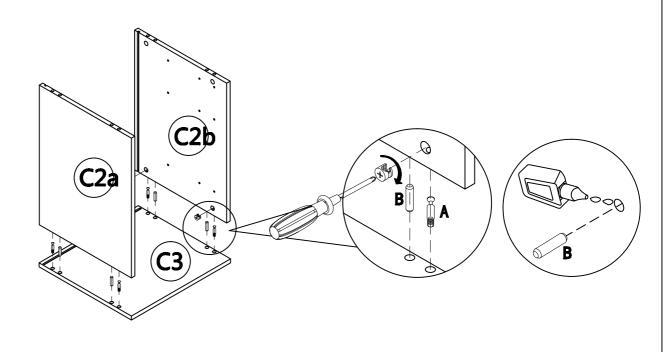


STEP 2: Slide the Back Panel (C7) into the slot of the Side Panels(C2a,Cab).

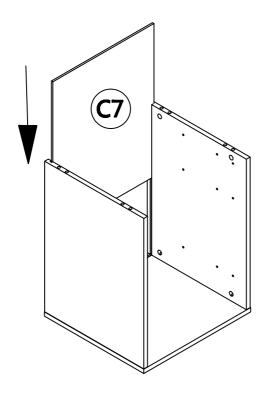


STEP 3: Place a small amount of glue on each dowel (B) and insert into the Side Panel(C2a,C2b), Use a Phillips Head Screwdriver to Insert the Cam Pin(A) to the Top Panel(C1), Assemble the Top Panel (C1) to Side Panels (C2a,C2b),Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).

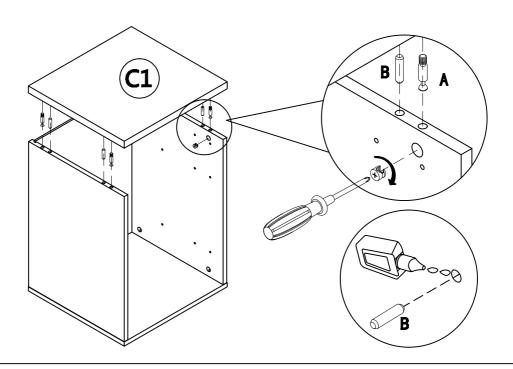


STEP 4: Attach the Wheel(L,G) to the Bottom Panel(C3) with Screw(C).

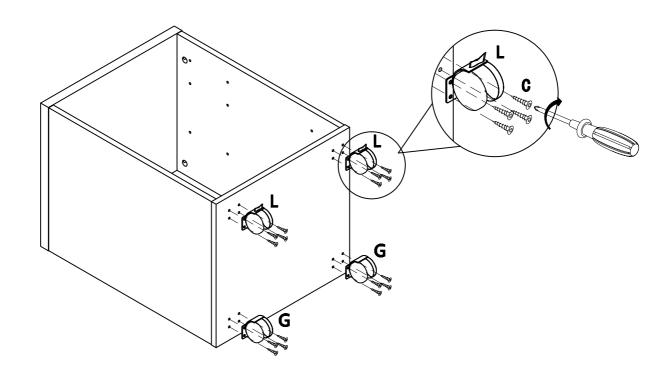


STEP 5: Attach the Connector(H) to the back corner with Screw(F)

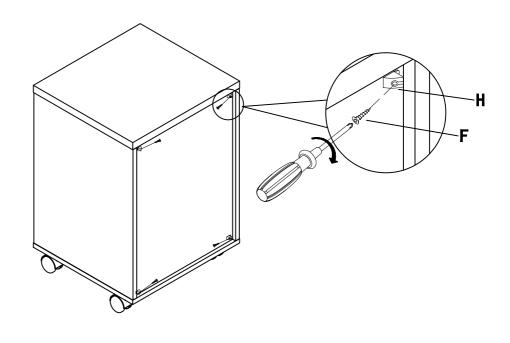


STEP 6: Attach the Runner(I) to the Side Panels (C2a,C2b) with Screw(D).

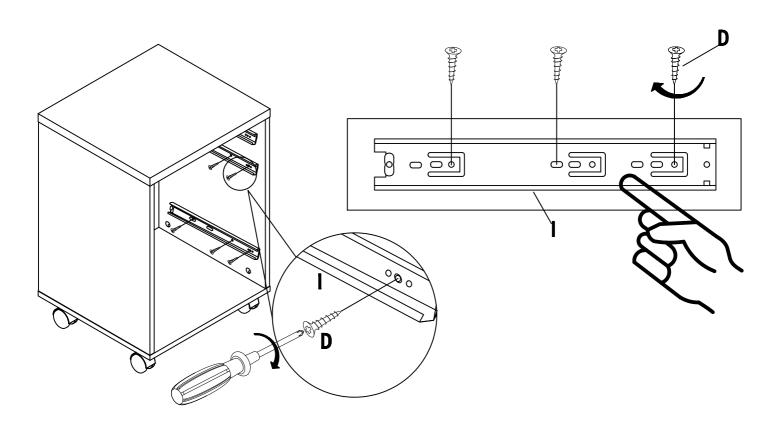

STEP 7: Attach the Drawer Side Panel (C13a,C13b) to the Drawer Back Panel (C14) with Screw(E), Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel (C13a,C13b), Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Front Panel (C6), Assemble the Drawer Side Panel (C13a,C13b) to Drawer Front Panel (C6), Use a Phillips Head Screwdriver to turn the Cam Lock(J)to lock onto the head of Cam Pin(J).

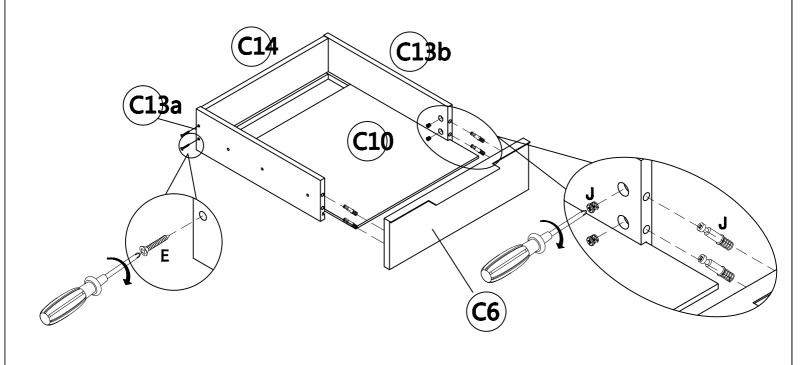


STEP 8: Attach the Runner(I) to the Drawer Side Panels (C13a,C13b) with Screw(D).

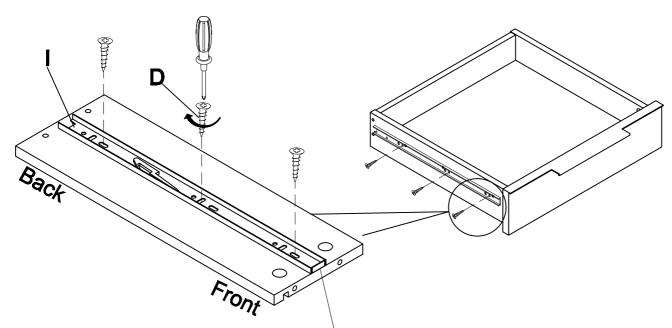


Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 9: Attach the Drawer Side Panel (C11a,C11b) to the Drawer Back Panel (C12) with Screw(E), Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel (C11a,C11b), Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Front Panel (C5), Assemble the Drawer Side Panel (C11a,C11b) to Drawer Front Panel (C5), Use a Phillips Head Screwdriver to turn the Cam Lock(J) to lock onto the head of Cam Pin(J).

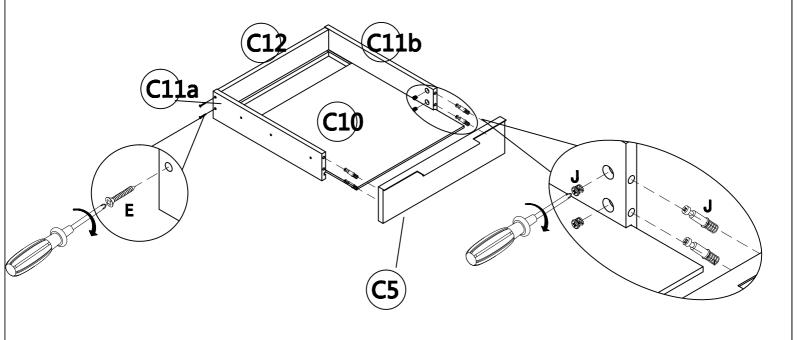


STEP 10: Attach the Runner(I) to the Drawer Side Panels (C11a,C11b) with Screw(D).

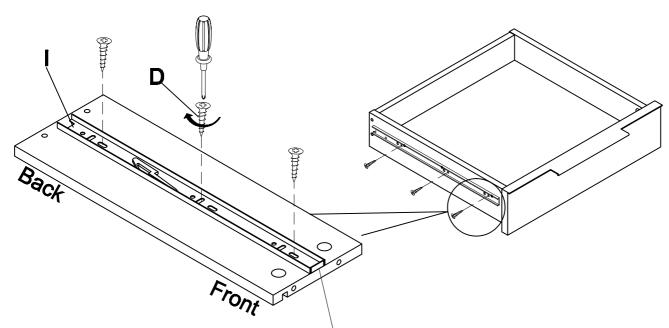


Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 11: Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Back Panel (C9) and Drawer Front Panel(C4), Assemble the Drawer Side Panel (C8a,C8b) to the Drawer Back Panel (C9),Use a Phillips Head Screwdriver to turn the Cam Lock(J) to lock onto the head of Cam Pin(J),Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel(C8a,C8b),insert the Connect Bar(I) to the Drawer Back Panel (C9) and Drawer Front Panel (C4),Assemble the Drawer Side Panel(C8a,C8b) to the Drawer Front Panel (C4),Use a Phillips Head Screwdriver to turn the Cam Lock(J) to lock onto the head of Cam Pin(J).

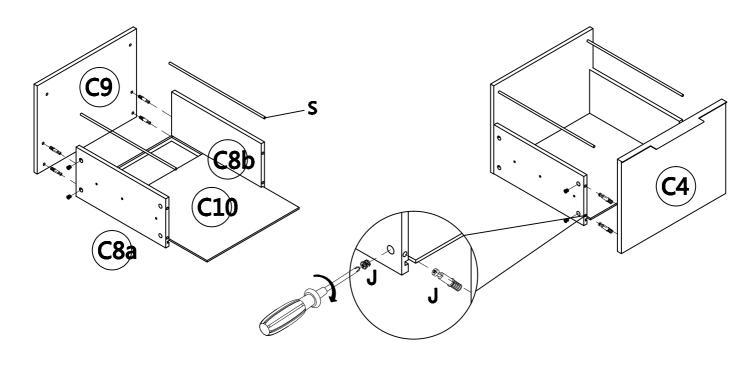


STEP 12: Attach the Runner(I) to the Drawer Side Panels (C8a,C8b) with Screw(D).

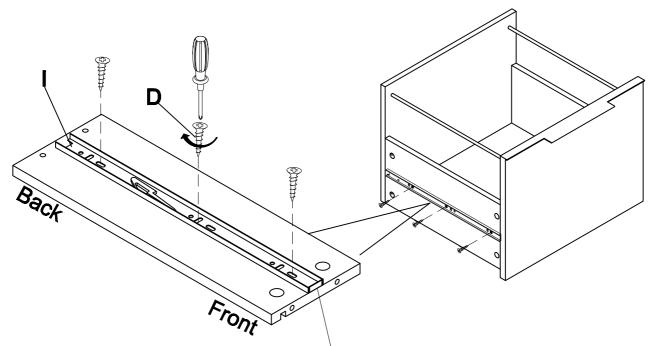

Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 13: Insert the Drawers into the Body.

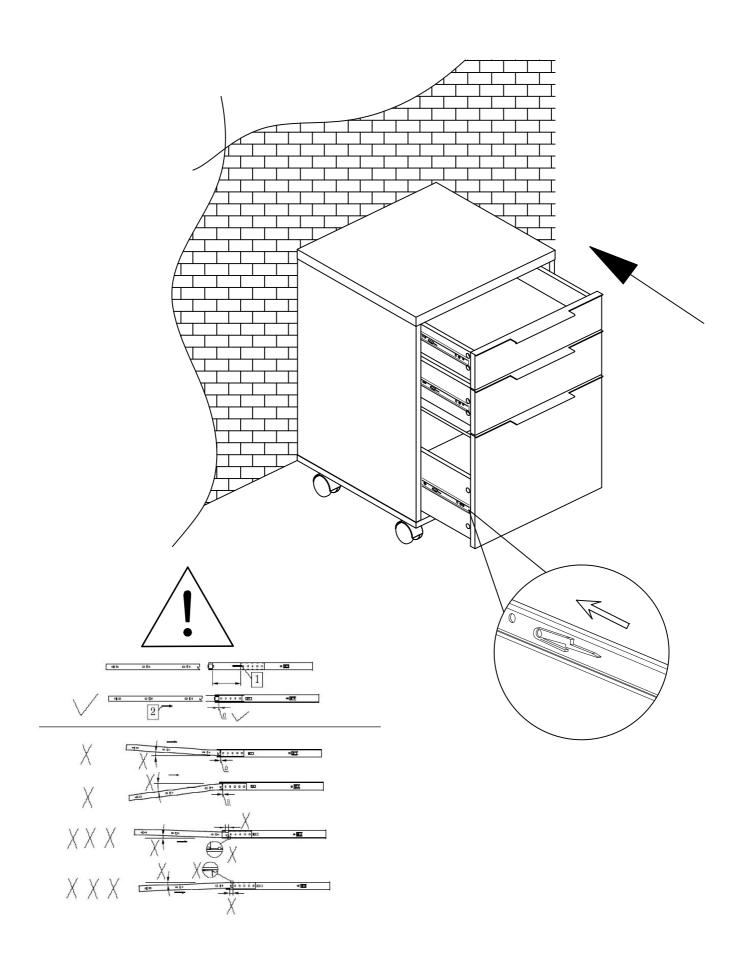


SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE

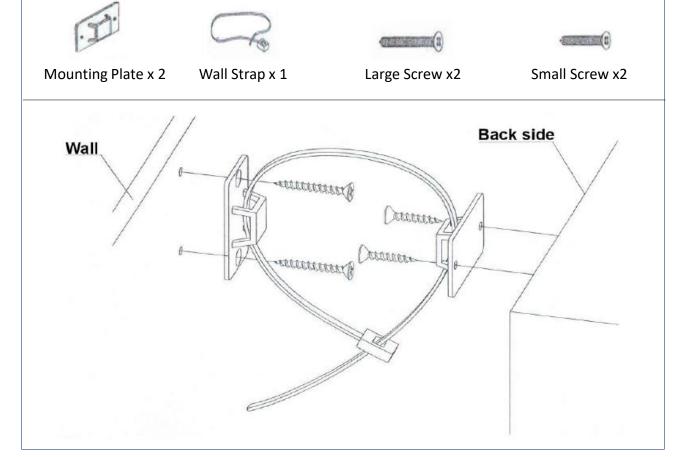

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from Amart Furniture.

Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or
 placemat. Lacquer finishes provide added scratch and heat resistance to our
 furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- <u>Do not expose your furniture to any liquids</u>. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These
 may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage
 the product. Instead use two people to lift carefully with caution from either
 end.

