



ASSEMBLY INSTRUCTION

 
SERGIO CHAISE CORNER

ITEM CODE 81190/81191/81192

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

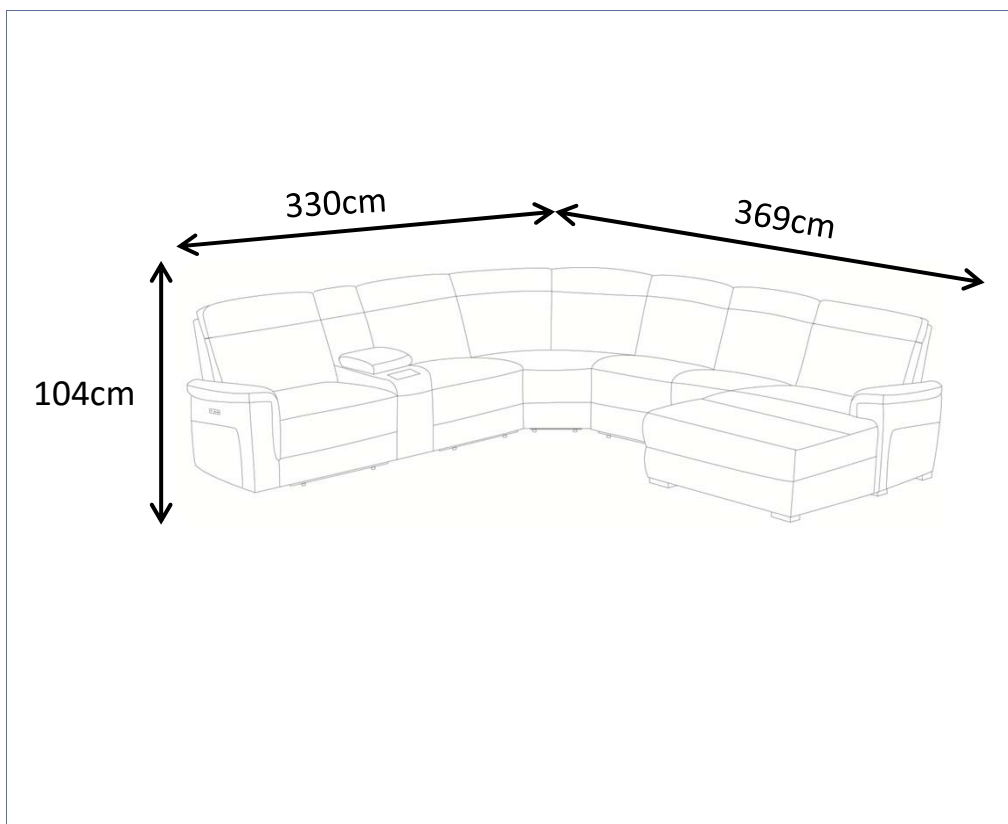

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.



For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

 
1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

 
 

	
ALLOW 30MINUTES	PEOPLE REQUIRED
ADDITIONAL TOOLS REQUIRED	

WARNING

 
- Do Not allow children to play on this mechanised furniture or operate the mechanism. Leg rest folds down on closing so that a child could possibly be injured. Always leave in an upright and closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it.

Step1: Locate the recliner power pack which is fixed on the mechanism at the bottom of left hand facing recliner.

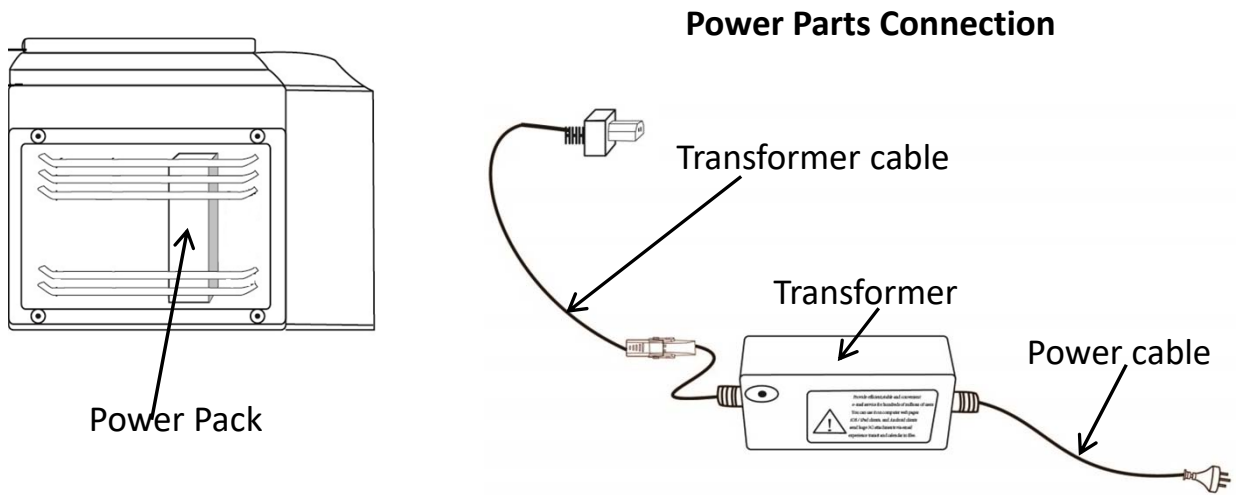 



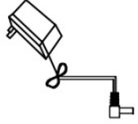 
<p>Transformer cable</p>  <p>1pcs</p>	<p>Transformer</p>  <p>1pcs</p>	<p>Power cable</p>  <p>1pcs</p>
---	---	---

Step2: Keep back rest in an upright position then slide receivers into steel mechanism posts at seat of the left hand facing recliner, Press both sides of the back firmly into place to ensure it is fully locked.

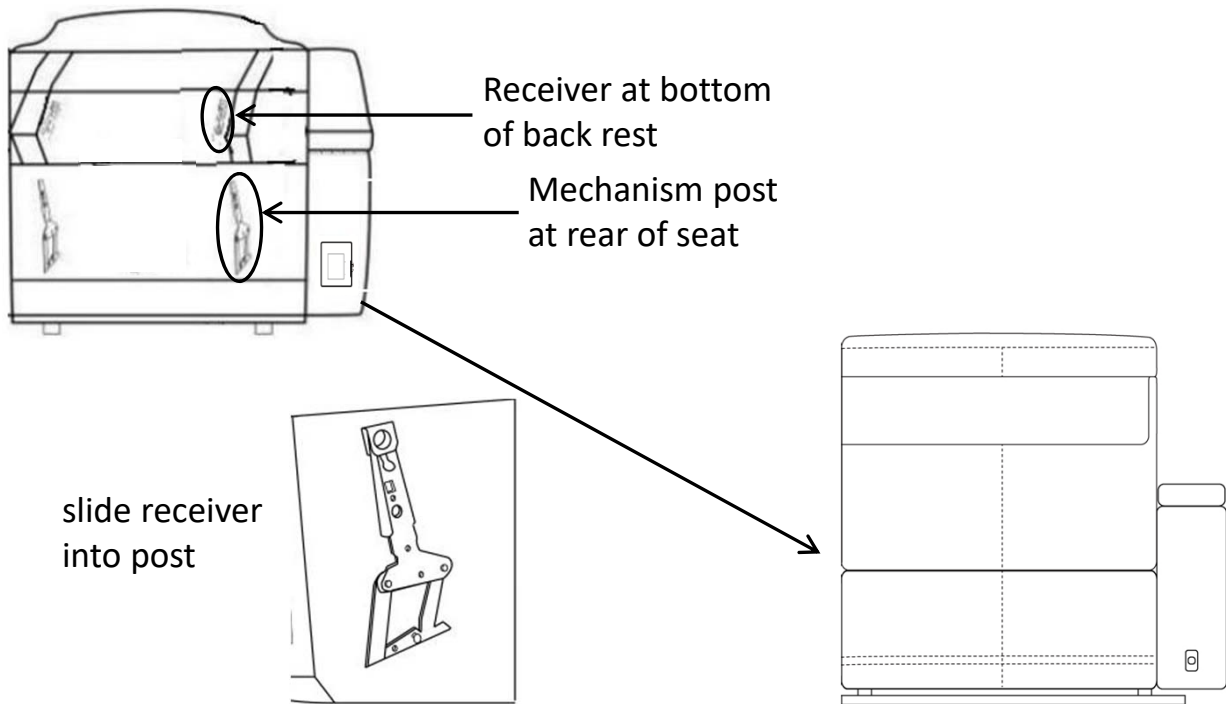 


Step3: Carefully locate and remove the Console Sofa Feet and the Console Power Cord from the zipper underneath the Console piece. Keep the Console Power Cord to the side, keeping note this is for the console.

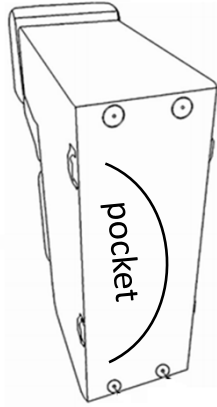

 
Plastic foot  4pcs	Console Power Cord  1pcs
--	--

Step4: Screw the 4 x Console Feet into the pre-drilled holes in the botom of the console by turning them in a clockwise direction to tighten.

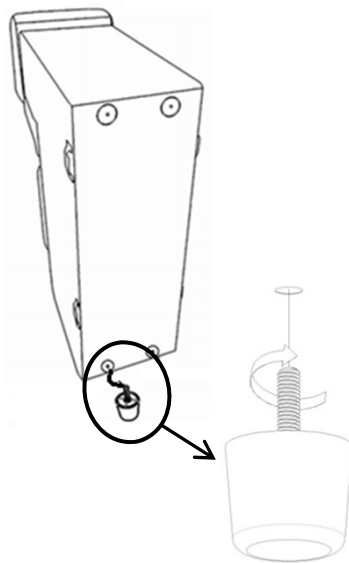 


 

Turn the plastic round feet clockwise to tighten

Step5: Locate the recliner power pack which is fixed on the mechanism at the bottom of armless recliner.

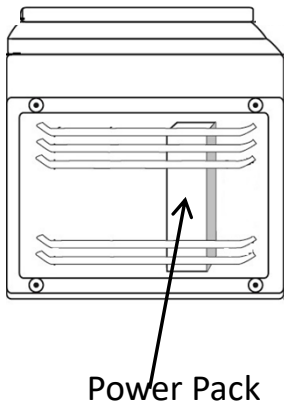 


Power Parts Connection

 
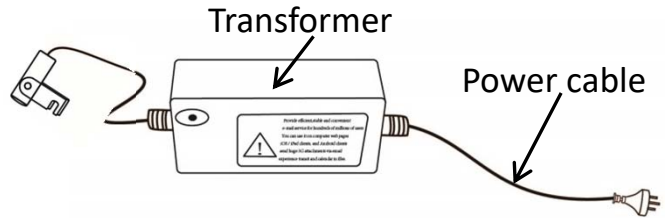 


<p>Transformer</p>  <p>1pcs</p>	<p>Power cable</p>  <p>1pcs</p>
---	---

 
Step6: Keep back rest in an upright position then slide receivers into steel mechanism posts at seat of the Armless Recliner, Press both sides of the back firmly into place to ensure it is fully locked.

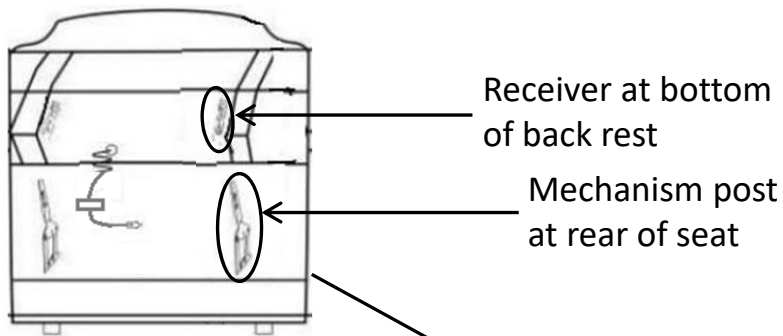

slide receiver into post

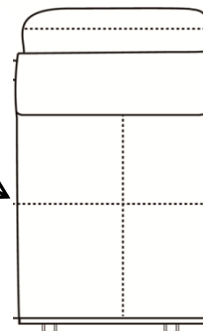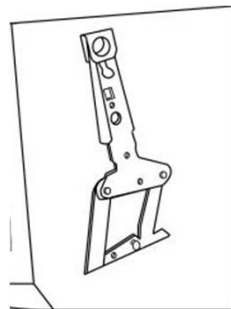

Step7: Carefully locate and remove the Wedge Sofa Feet from the zipper underneath the Wedge piece.

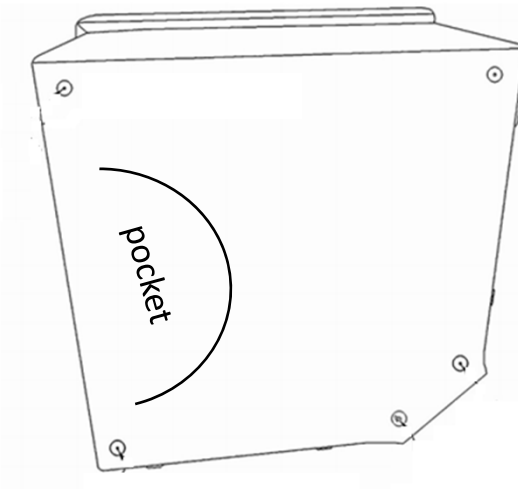 


Plastic foot



 
 
5pcs

Step8: Secure the 5 x plastic feet provided to the bottom of the Wedge piece, turning in clockwise direction to tighten.

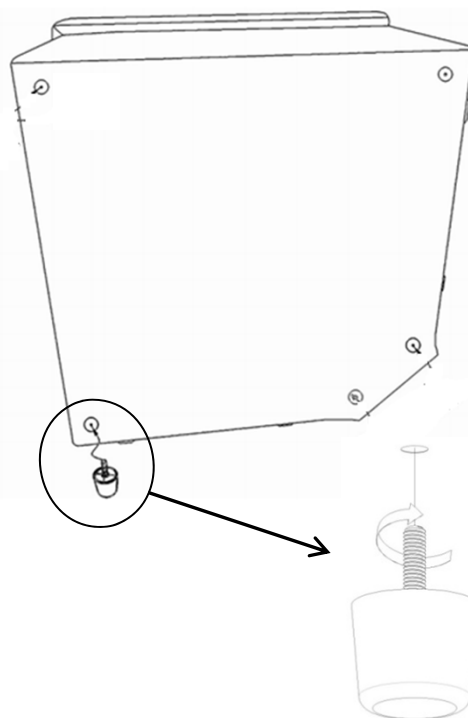 


Turn the plastic round feet clockwise to tighten

 
Step9: Carefully locate and remove the Armless Chair Sofa Feet from the zipper underneath Armless Chair seat.

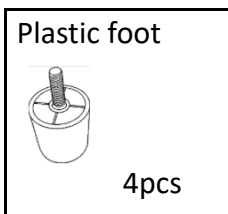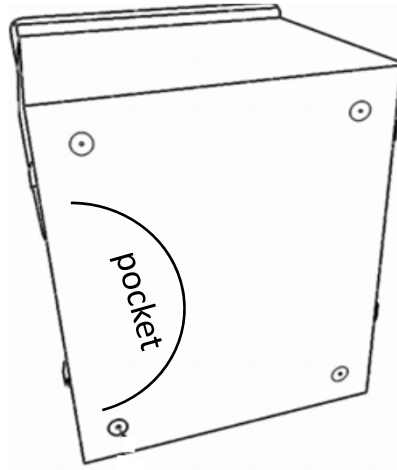
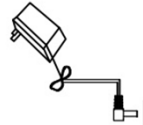 


Step10: Secure the 4 x plastic feet provided onto each corner of the Armless Chair Seat by placing the feet in the pre-drilled holes and turning the feet in a clockwise direction to tighten.

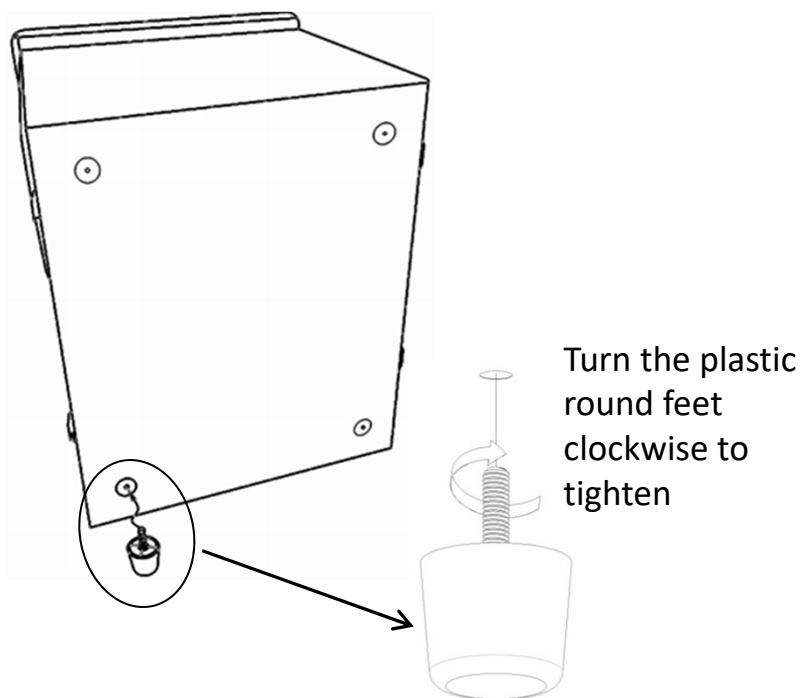 


Step11: Carefully locate and remove the Sofa Feet and Power Cord from the zipper underneath the Armless Chair with drop-down table piece. Keep the Power Cord to the side, keeping note this is for the Armless Chair with drop-down table.

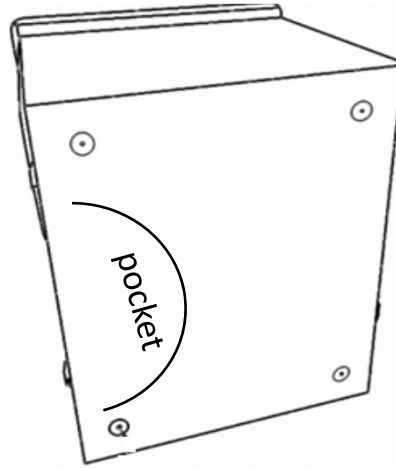 




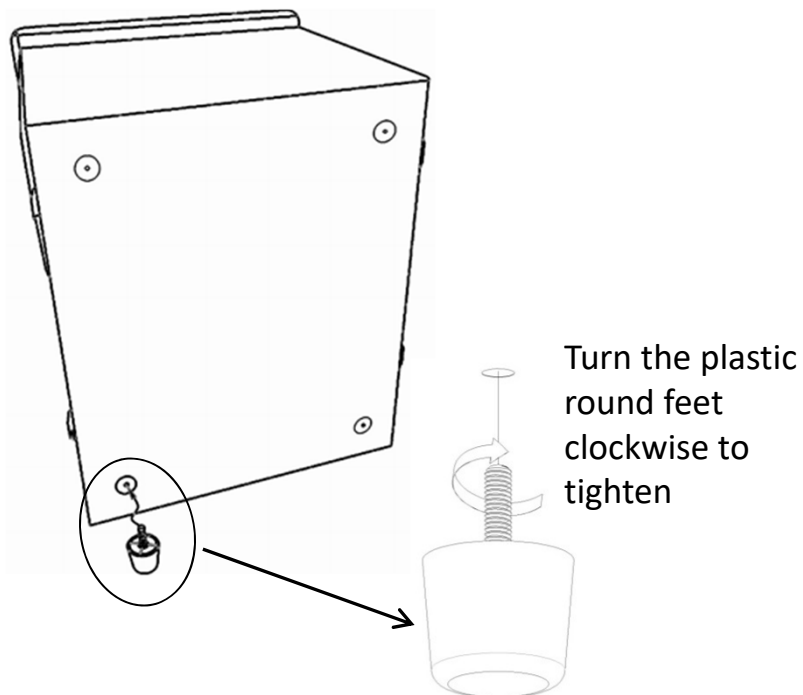

<p>Plastic foot</p>  <p>4pcs</p>	<p>Console Power Cord</p>  <p>1pcs</p>
--	--

Step12: Secure the 4 x plastic feet provided onto each corner of the Armless Chair Seat by placing the feet in the pre-drilled holes and turning the feet in a clockwise direction to tighten.

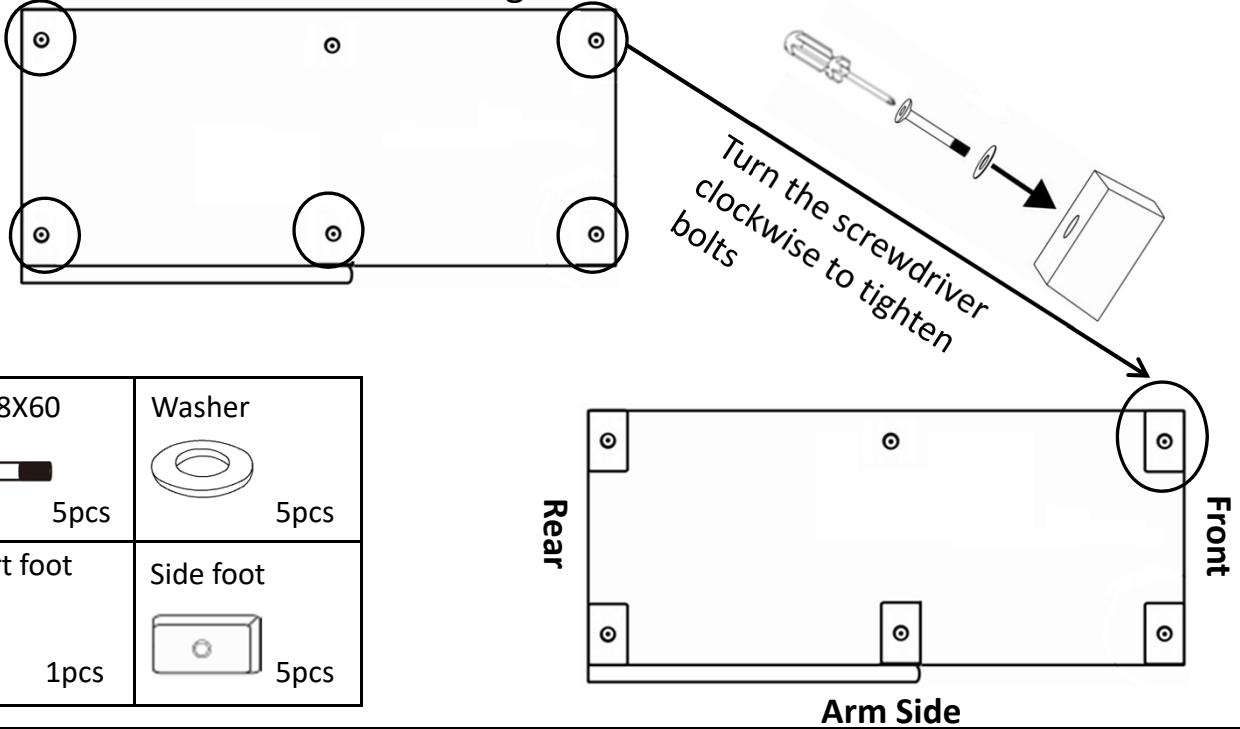 


Step13: Locate and remove the right hand facing chaise sofa feet box that is placed inside the zipper pocket underneath the chaise seat. Using the M8X60 bolts and washers, screw the squared feet into the pre-drilled holes in each corner at bottom of the chaise using a screwdriver.



 
Bolt M8X60  5pcs	Washer  5pcs
Support foot  1pcs	Side foot  5pcs

Step14: Screw rounded supporting chaise foot into the middle pre-drilled hole by turning the foot in a clockwise direction to tighten.

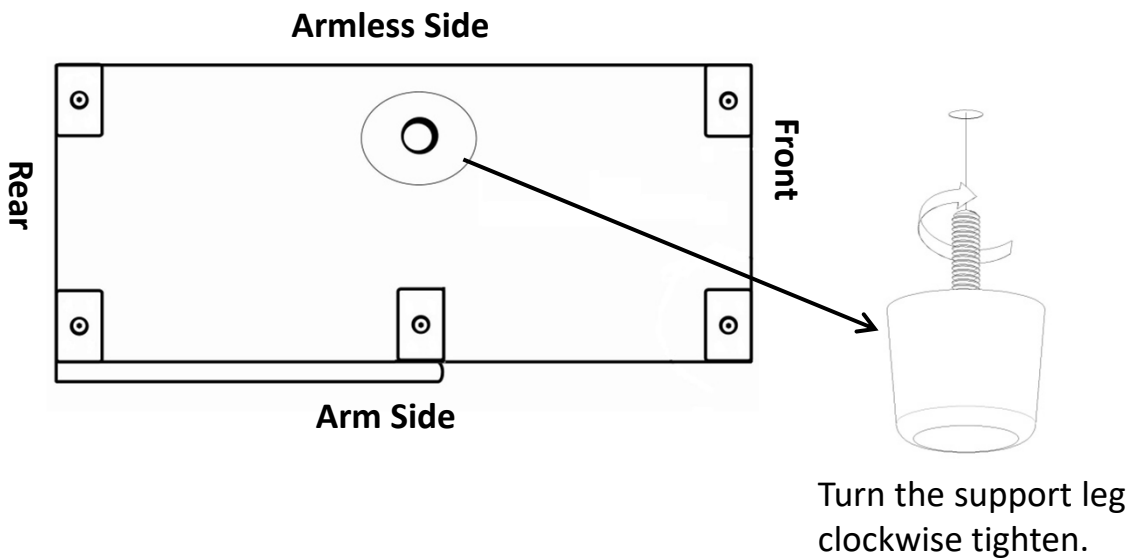 


Step15: Connect 7 pieces from right to left. Begin with the right hand facing chaise, then armless chairs, then wedge seat, then armless recliner, then console, then left hand facing recliner. Slide the base clips together then press the front and rear sides to ensure the clips are connected all the way to the bottom.

Note: the armless chairs and console can be swapped around.

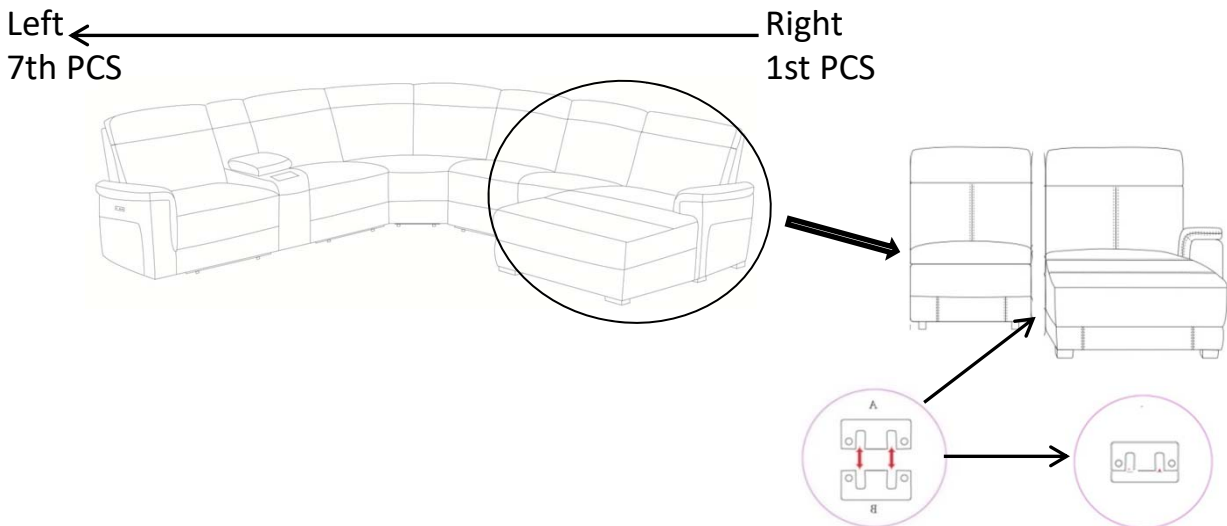 


Step16: Plug the left hand facing recliner power pack (refer to step 1) into the back socket of the left hand facing recliner.

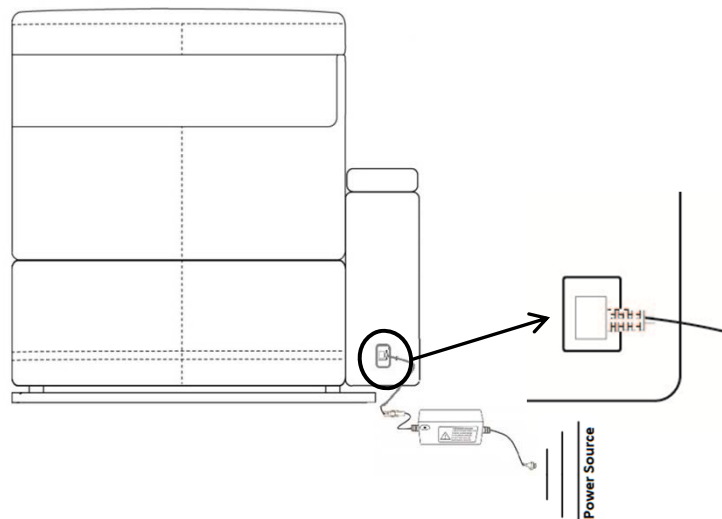

SAFETY NOTE:
PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

 
Step17: Plug console power cord into the socket at the back panel of console.

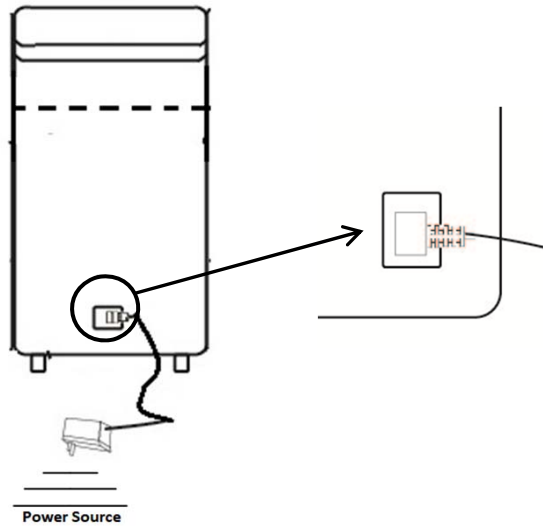

SAFETY NOTE:

PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

 
Step18: Connect Armless recliner power pack (refer to step 5) with the plug covered by back flip.

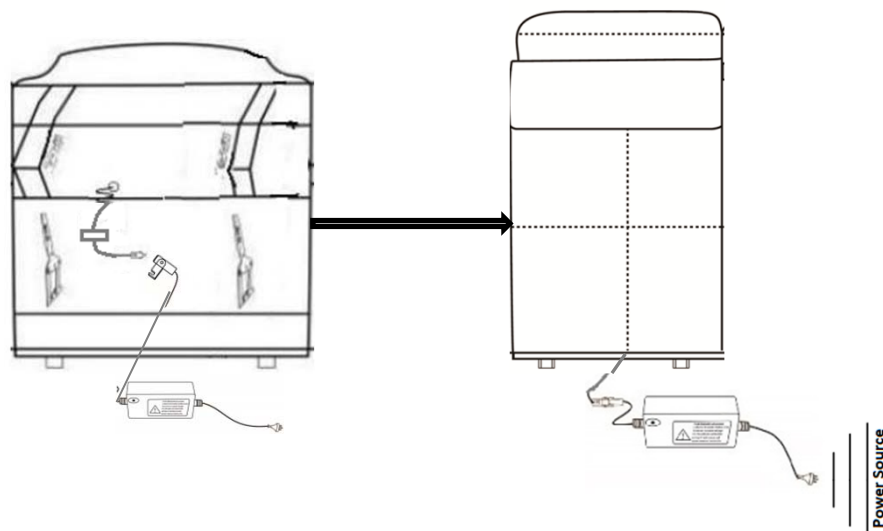

SAFETY NOTE:

PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

Step19: Plug power cord into the socket at the back panel of Armless Chair with drop-down table piece.

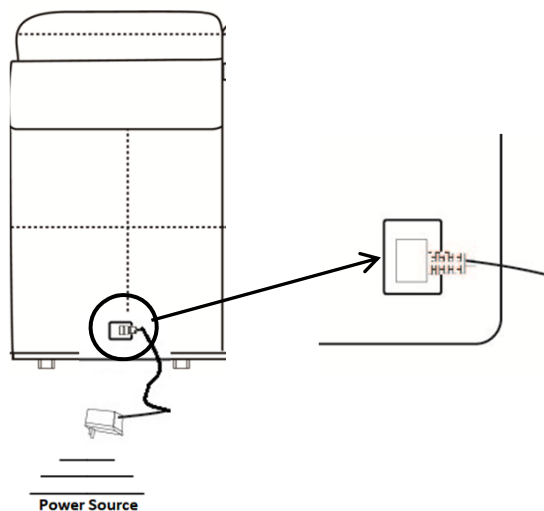

SAFETY NOTE:

PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

 
READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE:

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:
Always unplug from electric outlet before cleaning.

WARNING: RISK OF INJURY
Keep children away from extended footrest and any moving parts.

CAUTION:

- Do not allow children to play on this electric recliner or operate the powered mechanism. The leg rest folds when closing and could possibly cause injury to a child. Always leave the recliner in an upright and closed position when not in use. Keep hands and feet clear of mechanism. Only the occupant should operate it.
- Do ensure fully enter the normal sitting position before using of the recliner. Improper sitting, such as sitting in the front of recliner may result in damage to both mechanism and motor drive bar.

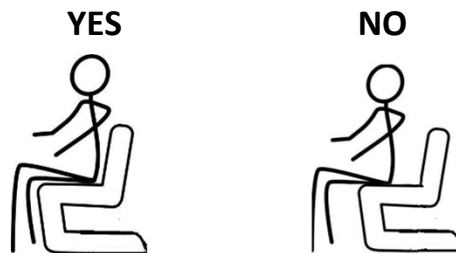

POWER CORD SAFETY

WARNING: Unplug and remove power cord from wall when not in use and store out of reach of children.

Take care when moving recliner that wall and transformer cords are not under the base or they may get damaged.

- NEVER OPERATE ELECTRIC RECLINER IF IT HAS A DAMAGED CORD OR PLUG.

WARNING: TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY TO PERSONS:

- Use only for its intended purpose
- Never press or activate control switch if you are not seated in recliner
- Only the occupant should activate the control switch
- Never operate with more than one person occupying seat
- Never sit or stand on the footrest

CARE AND MAINTENANCE

FABRIC CARE

REGULAR CARE: PROTECT FROM DIRECT SUNLIGHT.
VACUUM REGULARLY USING LOW SUCTION.
ROTATE REVERSIBLE CUSHIONS REGULARLY.

CLEANING:

DO NOT REMOVE CUSHION COVERS FOR SEPARATE
CLEANING EVEN THOUGH THEY HAVE ZIPPERS.

DO NOT WASH

DO NOT DRY CLEAN

DO NOT SHAMPOO CLEAN

CLEAN WITH HOT-WATER EXTRACTION MACHINE.

(HOT) PROFESSIONAL CLEANING RECOMMENDED.

DO NOT USE DISHWASHING OR LAUNDRY DETERGENTS.

USE ONLY UPHOLSTERY DETERGENTS

DO NOT WET FILLING

DRY IN SHADE AWAY FROM DIRECT HEAT AND SUNLIGHT

ALLOW TO DRY THOROUGHLY BEFORE RE-USE

SPOT CLEANING:

DO NOT RUB

DO NOT SPOT CLEAN WITH ANY SOLVENT.

TREAT SPILLS AND STAINS AS SOON AS POSSIBLE.

GENTLY SCRAPE ANY SOIL OR MOP ANY LIQUID FROM THE SURFACE OF THE
FABRIC.

APPLY PROPRIETARY CLEANING AGENTS STRICTLY
ACCORDING TO INSTRUCTIONS TO REMOVE THE
RESIDUE OF THE SPILL.

DO NOT SATURATE THE FABRIC OR INTERIOR WITH
WATER OR OTHER CLEANING LIQUIDS.

WARNING: APPLY ONLY WATER-BASED SOIL RESIST
(FABRIC PROTECTION) TREATMENTS. DO NOT USE
AEROSOL PRODUCTS.