 





ASSEMBLY INSTRUCTION KORI DINING TABLE ITEM CODE 60242

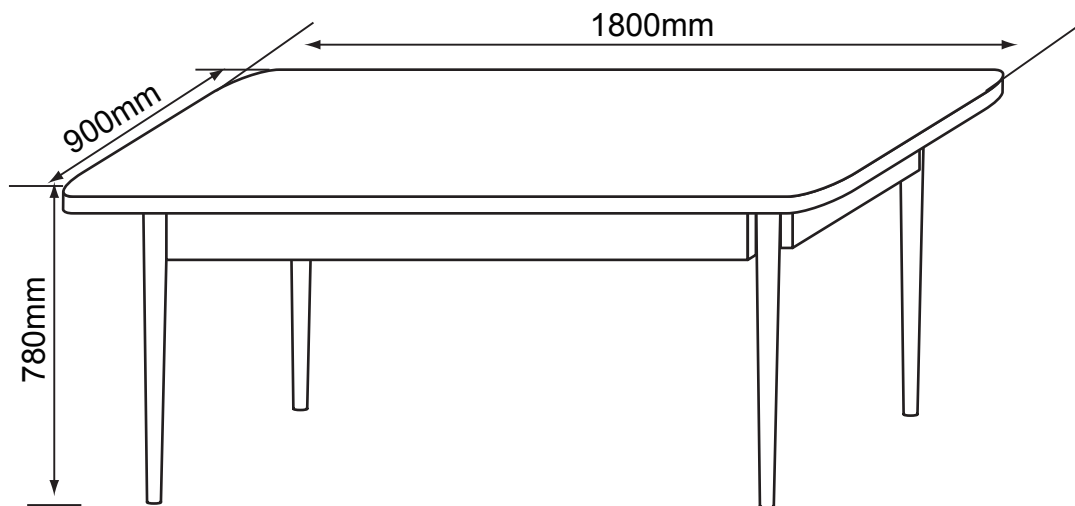


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084



  Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

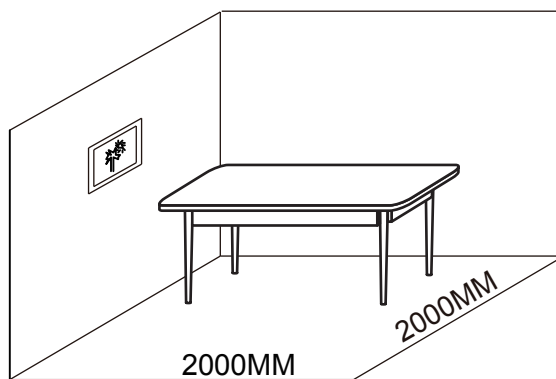




<p>ALLOW 60 MINUTES</p>	<p>PEOPLE REQUIRED</p>
<div style="display: flex; justify-content: space-around; align-items: center;">    </div>	
<p>ADDITIONAL TOOLS REQUIRED</p>	

Assembly is to be carried out by a competent adult only.
During assembly children should be kept away from the product due to possible risk of injury.
Do not use this item if any components are missing or damaged.
Please keep these instructions for future reference.

 EXPLODED EXAMPLE

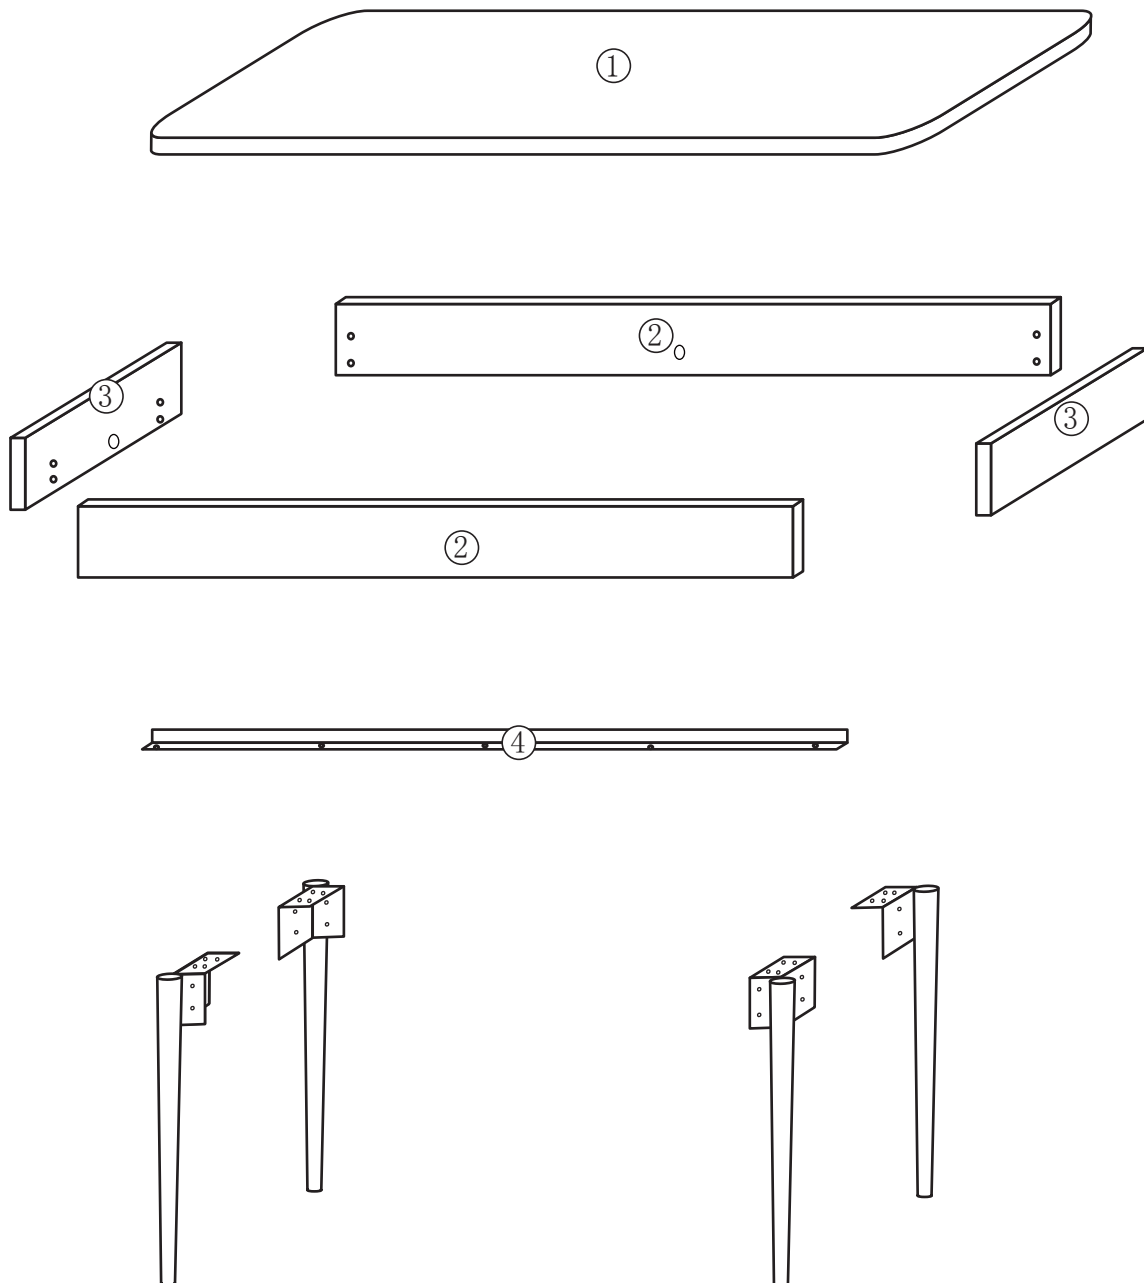








CHECKLIST

 
Before you start.....

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard. Please keep out of reach of small children at all times.
5. Do not over tighten the bolts as this may damage the thread.




A <input type="checkbox"/> screw  M8x20mm 37xA	B <input type="checkbox"/> round washers  37xB	C <input type="checkbox"/> metal leg  4xC	D <input type="checkbox"/> spring washers  37xD	E <input type="checkbox"/> wrench  1xE
F cam pin  M7x39mm 4xF	G cam lock  4xG			

 
CAM LOCK INSTALL METHOD AS FOLLOWS

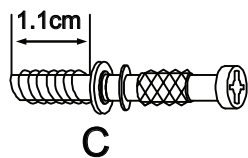

 
Step 1

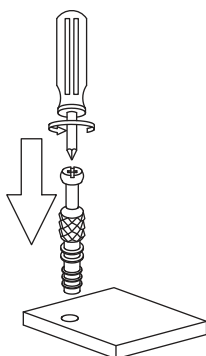

 
Step 2

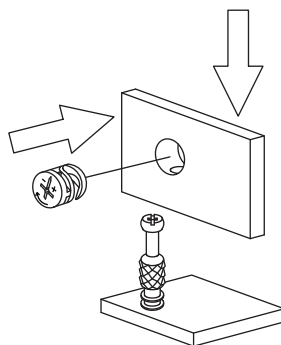

 Step 3

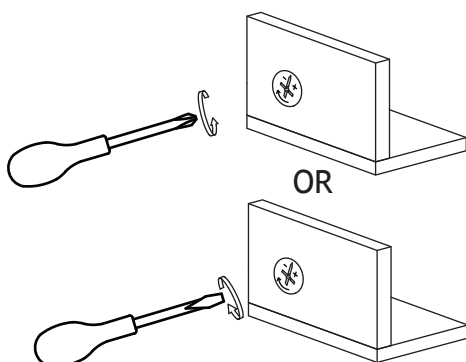


Lock

 

Fix cam nut into the bottom of hole then tighten it.



PART NUMBER	QTY	DIMENSIONS (MM)
1	1	1800x900x25
2	2	1420x70x25
3	2	625x70x25

 1

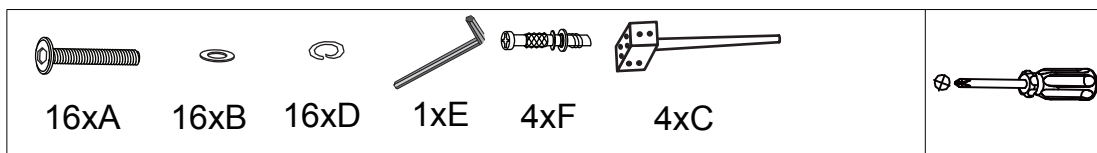

STEP 1: Fix cam pin(F) to top panel(1).

  
Fix metal leg (C) to top panel(1) with screw(A) and washer (B)& (D) using wrench(E).

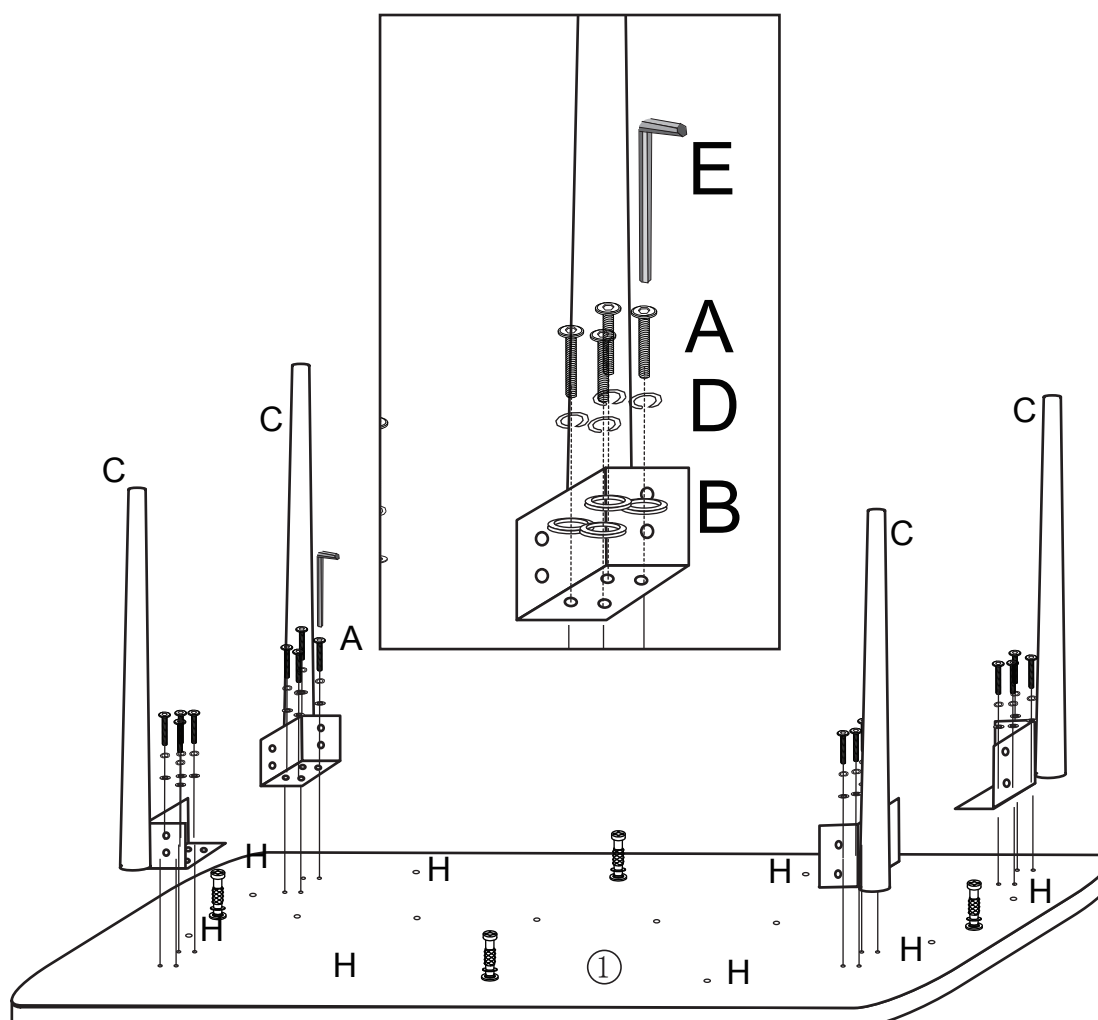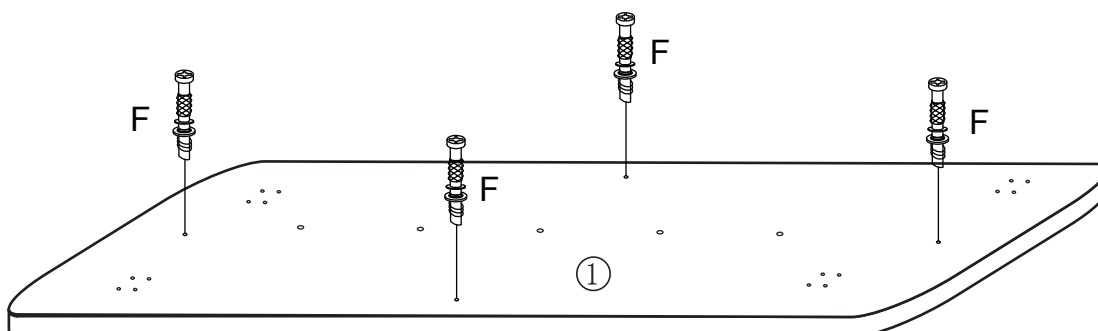


2



 STEP 2: Put panel(2)(3) onto top .

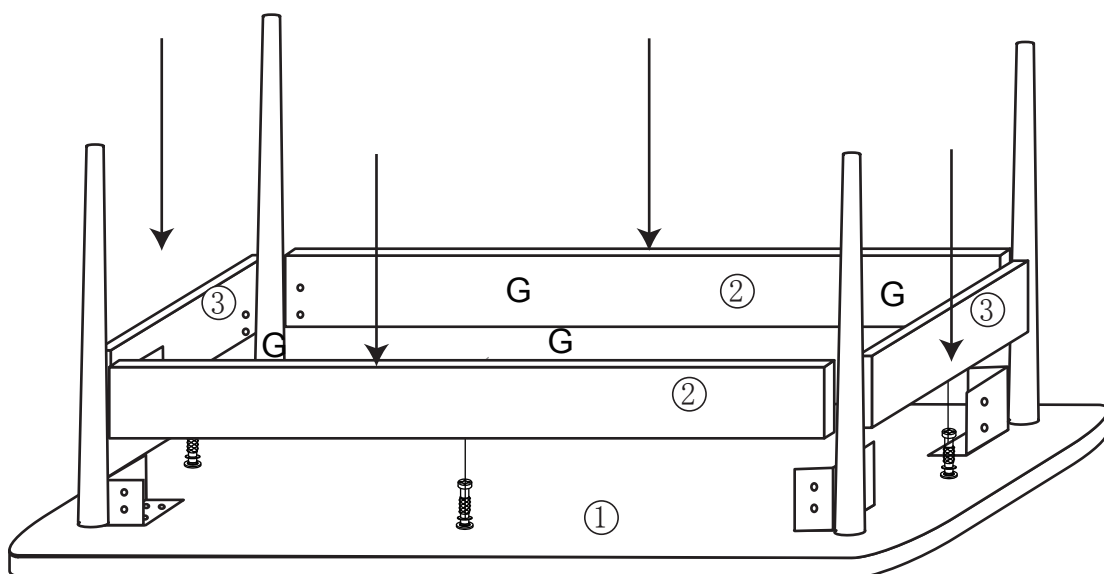


3

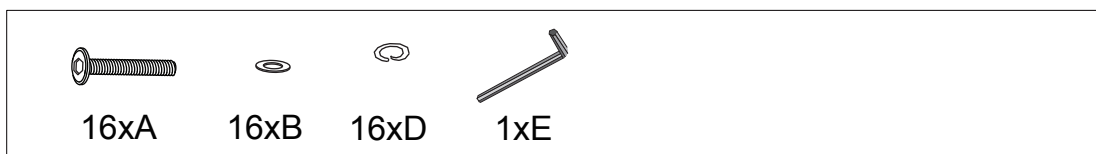 

STEP 3: Fix metal leg to panel (2)(3) with screw(A) and washers (B)(D) using wrench(E).

 After locating all screws, finally fasten screws tightly.

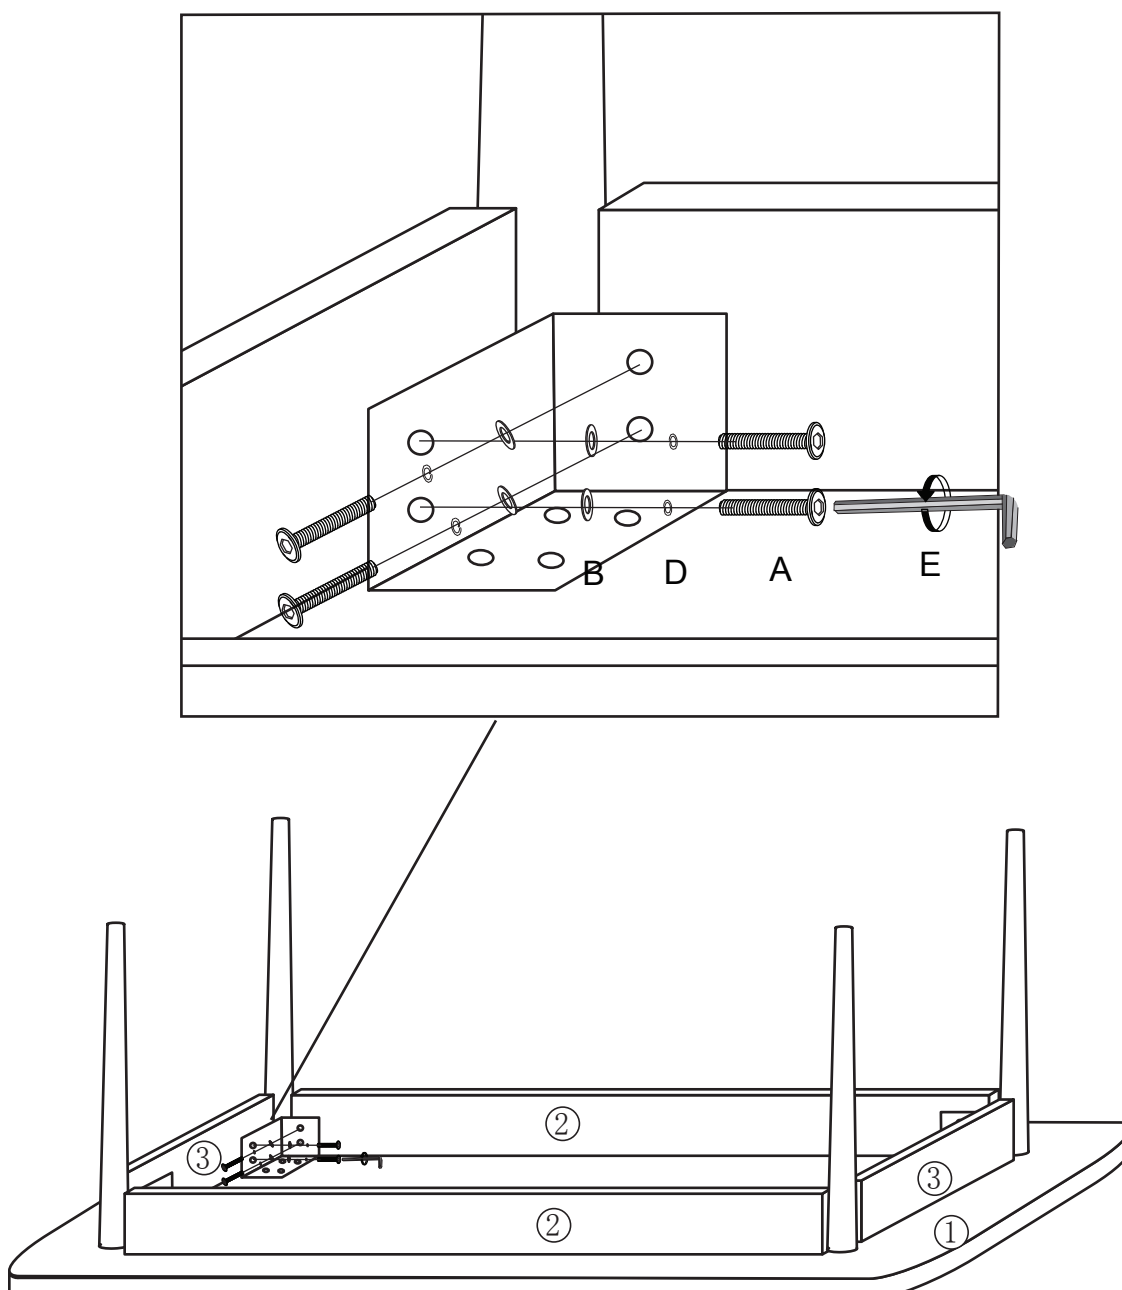


4




4xG



 
STEP 4: Fix panel(2)(3) to top with cam lock part(F)and(G).

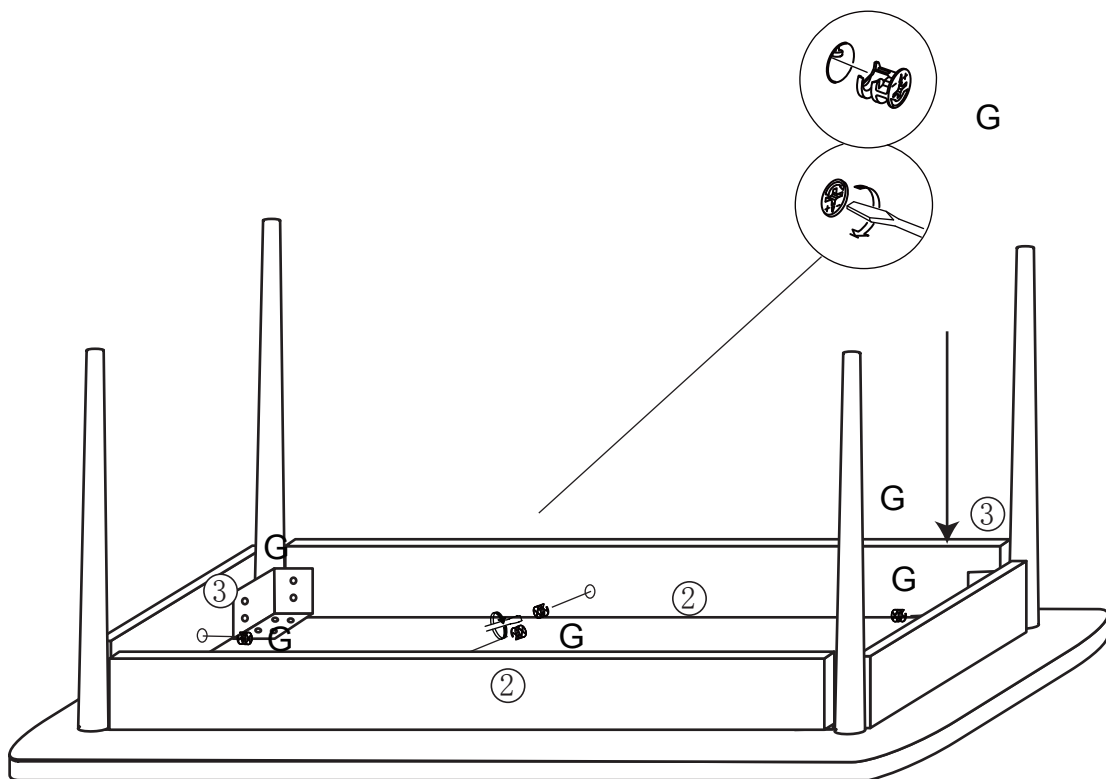

5

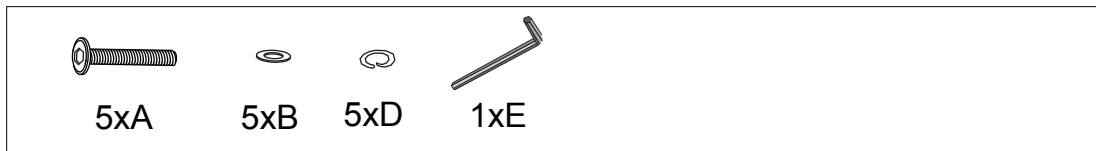 

 
STEP 4: Fix metal supporter(4) to top with screw(A) and washers (B)(D) using wrench(E).

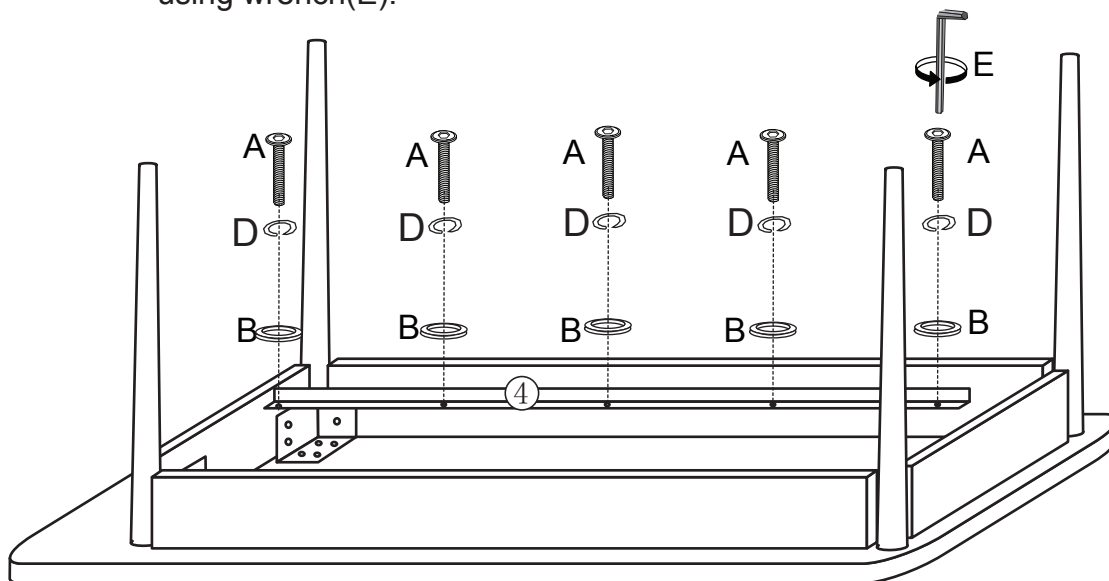

6



 ASSEMBLY COMPLETE

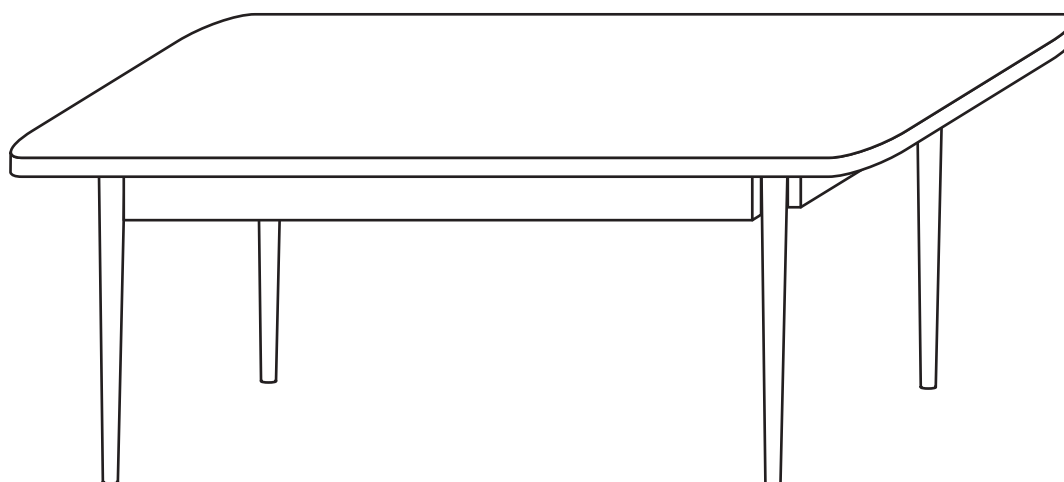

PRODUCT CARE:

To protect your furniture, we suggest the following:

- *Avoid placing your furniture in direct sunlight.

- *Do not place furniture directly under windows.

- *Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

- *Protective padding is strongly recommended when using your furniture .

- *Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

- *Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.