


ASSEMBLY INSTRUCTION GEOVANA QUEEN BED ITEM CODE 79750

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

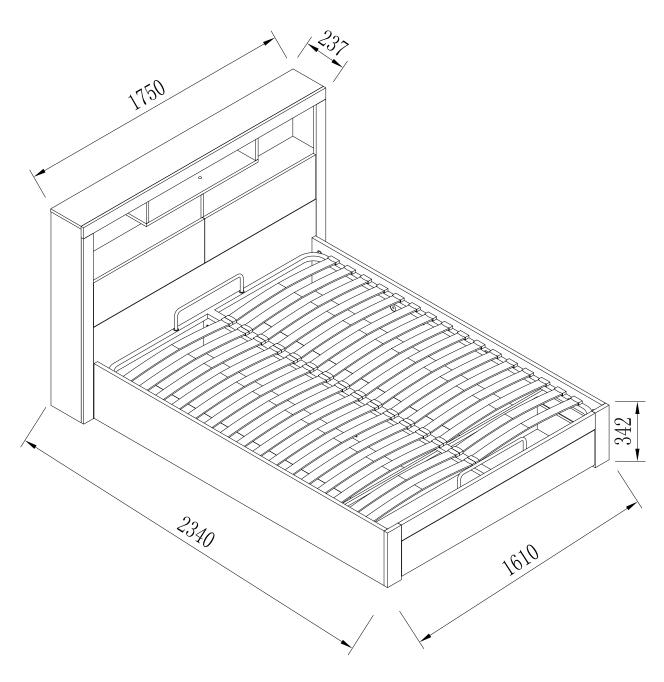


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean,level.spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

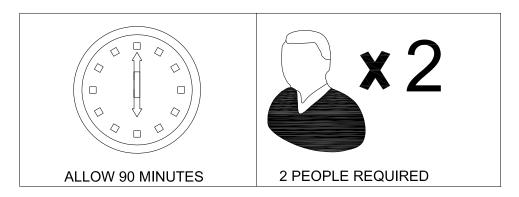



Do not allow children to play on this mechanised furniture or operate the mechanism. Children should always be supervised when using furniture. Always ensure that the locking mechanism is utilised during the operation of this furniture. Please keep your body clear of the mechanism when opening and closing-a failure to do this could result in serious injury.

CAM Lock and Pins


step 1

HOW TO USE CAM LOCK FASTENERS


To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together,

usually the edge of one board(A) to the flat side of another board(B)

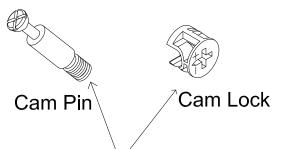

Ensure that you use the correct images that are representative of the hardware used in the product

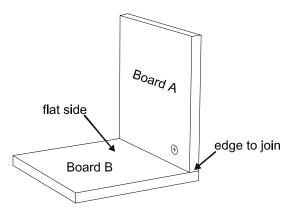


step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- The cam pin is kept vertical and is not put in on an angle
- Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

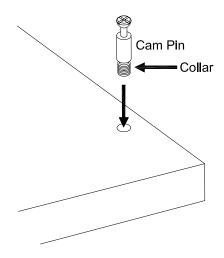

step 3

To use Cam Lock Fasteners


Now fit the hole in the edge of the joining board over the Cam Pin

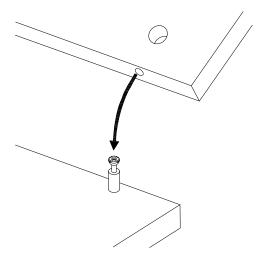

step 4

To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

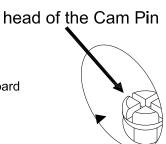

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin




Cam Lock

step 5

To use Cam Lock Fasteners


In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

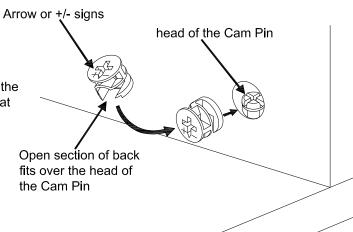


step 6


To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount,turn the Cam Pin out (counter-clockwise)one full turn,and try the Cam Lock again.

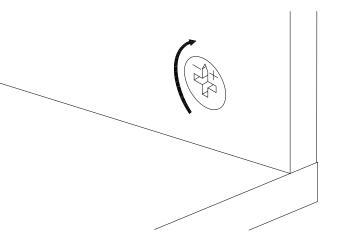


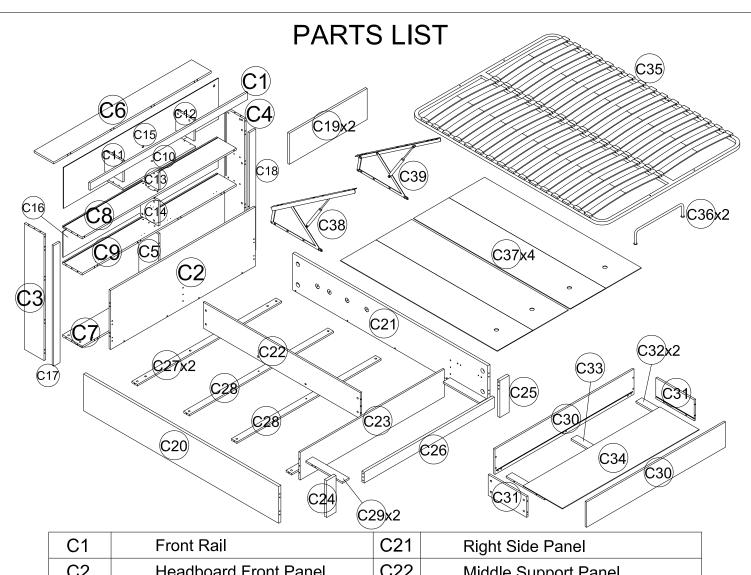


C1	Front Rail	C21	Right Side Panel
C2	Headboard Front Panel	C22	Middle Support Panel
C3	Headboard Left Side Panel	C23	Footboard Panel
C4	Headboard Right Side Panel	C24	Left Connect Panel
C5	Middle Support Panel	C25	Right Connect Panel
C6	Headboard Top Panel	C26	Front Connect Panel
C7	Headboard Bottom Panel	C27	Rail
C8	Shelf Panel	C28	Rail
C9	Shelf Panel	C29	Connect Panel
C10	Shelf Panel	C30	Drawer Panel
C11	Support Panel	C31	Drawer Side Panel
C12	Support Panel	C32	Drawer Support Panel
C13	Support Panel	C33	Drawer Middle Support Panel
C14	Support Panel	C34	Drawer Bottom Panel
C15	Back Panel	C35	Slats
C16	Back Panel	C36	Handle
C17	Left Front Panel	C37	Bottom Panel
C18	Right Front Panel	C38	Gas Lift
C19	Drawer Front Panel	C39	Gas Lift
C20	Left Side Panel		

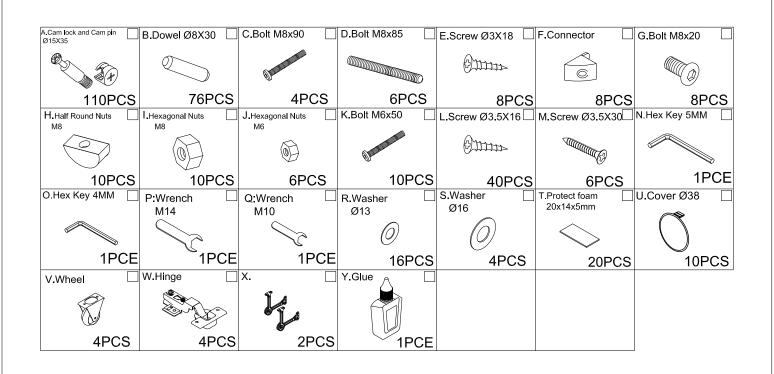

Step 1: Insert the Dowel(B) into the Top Panel(C6) and Headboard Bottom Panel(C7) and Shelf Panel(C8). Use Phillips Head Screw to Top Panel(C6) and insert the Cam Pin(A) to the Headboard Top Panel(C6) and the Headboard Bottom Panel(C7) and Shelf Panel(C8) and Shelf Panel(C10).

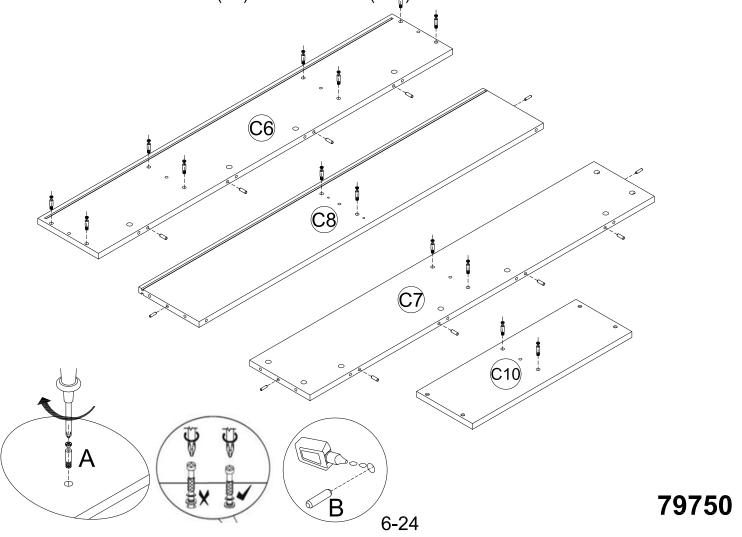


Step 2: Insert the Dowel(B) into the Middle Support Panel(C5) and Shelf Panel(C9)and Support Panel(C11/C12). Use Phillips Head Screw to insert the Cam Pin(A) to the Shelf Panel(C9) and the Front Rail(C1).

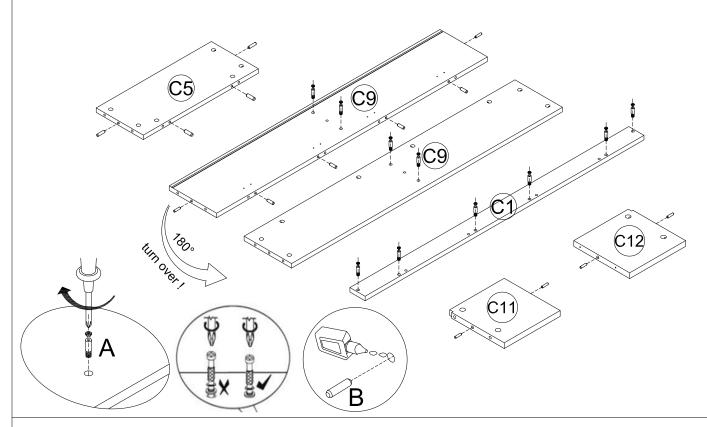


Step 3: Insert the Dowel(B) into Headboard Front Panel(C2) and Footboard Panel(C23) and Left Front Panel(C17) and Right Front Panel(C18).


Use Phillips Head Screw to insert the Cam Pin(A) to the Headboard Front Panel(C2) and Footboard Panel(C23) and Left Front Panel(C17) and Right Front Panel(C18).

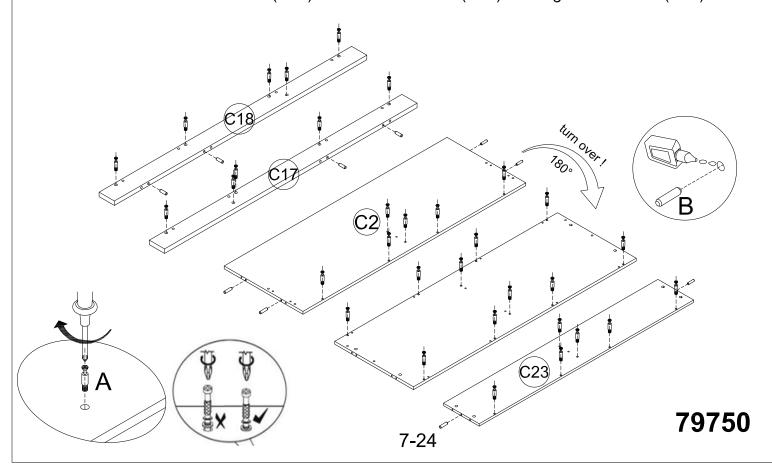


Step 4: Insert the Dowel(B) into the Headboard Left Side Panel(C3)and
Headboard Right Side Panel(C4) and Support Panel(C13/C14) and
Middle Support Panle(C22).Use Phillips Head Screw to insert the Cam Pin(A) to the
Headboard Left Side Panel(C3)and Headboard Right Side Panel(C4)

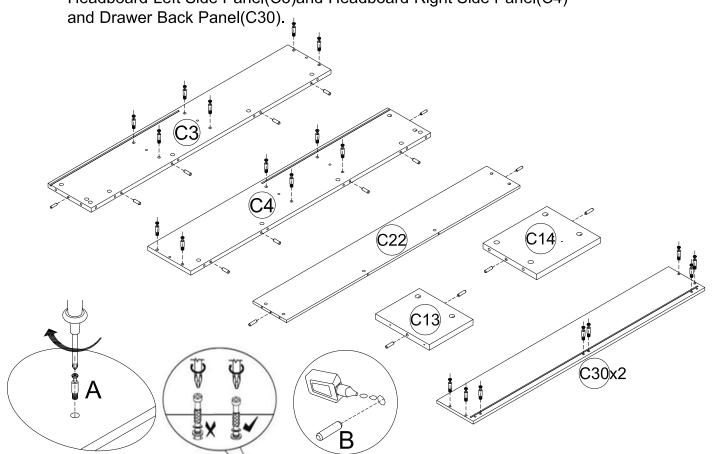

Step 5: Use Phillips Head Screw to insert the Cam Pin(A) to the Left Side Panel(C20)and Right Side Panel(C21) and Rail(C28). Insert the Dowel(B) into the Left Connect Panel(C24) and Right Connect Panel(C25) and Connect Panel(C29). And attach Bolt(D) to Left Connect Panel(C24) and Right Connect Panel(C25) and tighten it by hand.

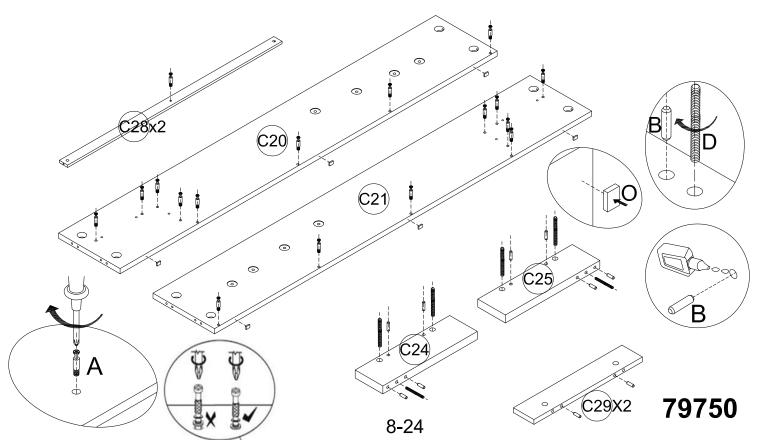


Step 6: Attach Support Panel(C11/C12) to the Shelf Panel(C10). Use a Phillips Head Screw to attach Support Panel(C13) to the Shelf Panel(C10) with Screw(M). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A). Use a Phillips Head Screw to attach Shelf Panel(C8) to the Support Panel(C13) with Screw(M).

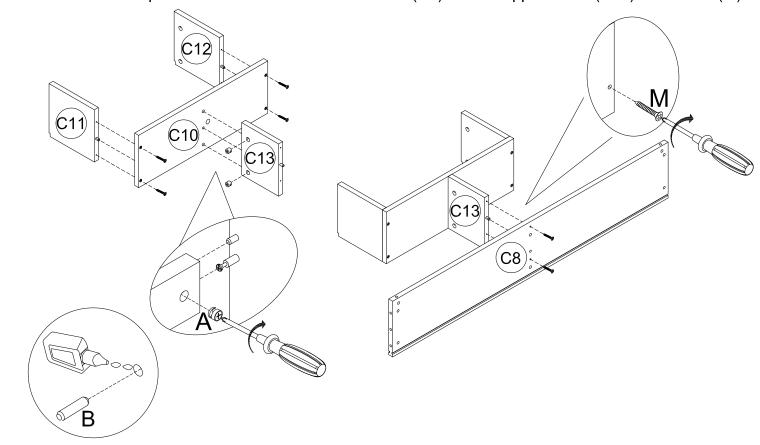


Step 7: Attach Support Panel(C14) and Middle Support Panel(C5) to the Shelf Panel(C9).

And then attach Headboard Bottom Panel(C7) to the Support Panel(C5).Use a


Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

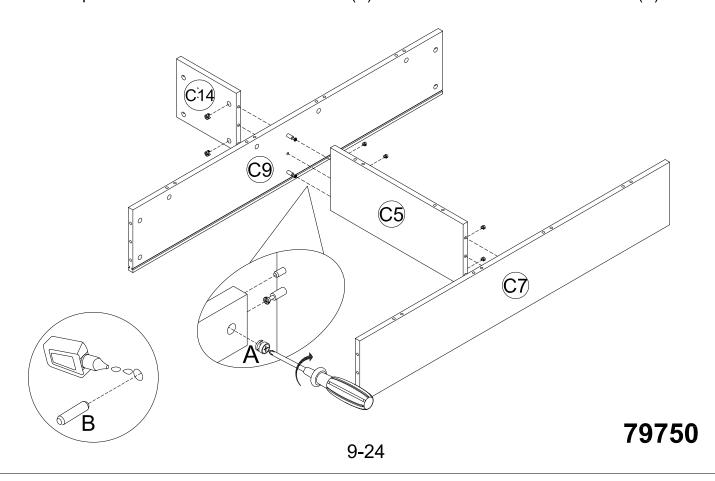


Step 8: Attach Shelf Panel(C8) to the Support Panel(C14). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

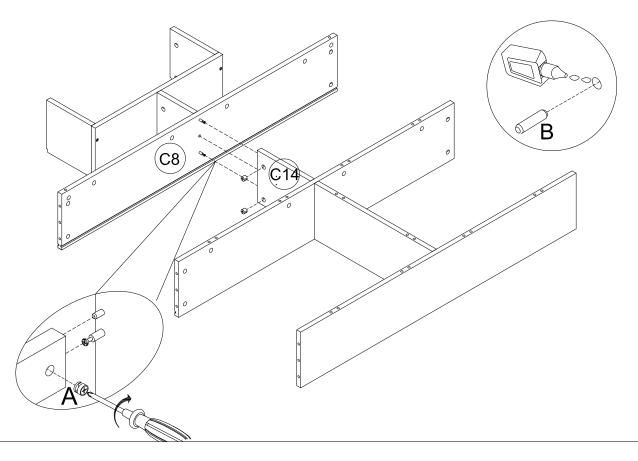


Step 9: Attach Headboard Right Side Panel(C4) to the Headboard Bottom Panel(C7) and Shelf Panel(C8/C9). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

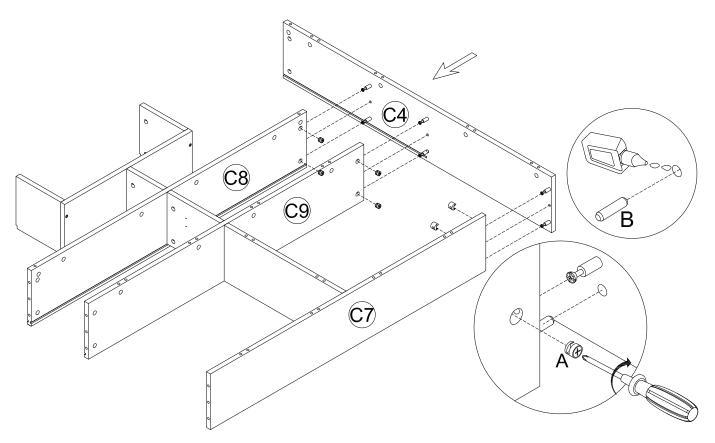


Step 10: Insert the Back Panel(C16) to the groove. And attach Protect Foam(O) to the Headboard Bottom Panel(C7).

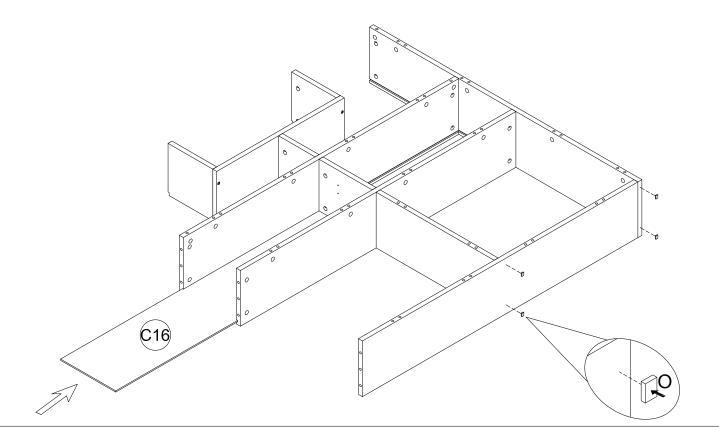


Step 11: Attach Headboard Left Side Panel(C3) to the Headboard Bottom Panel(C7) and Shelf Panel(C8/C9). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

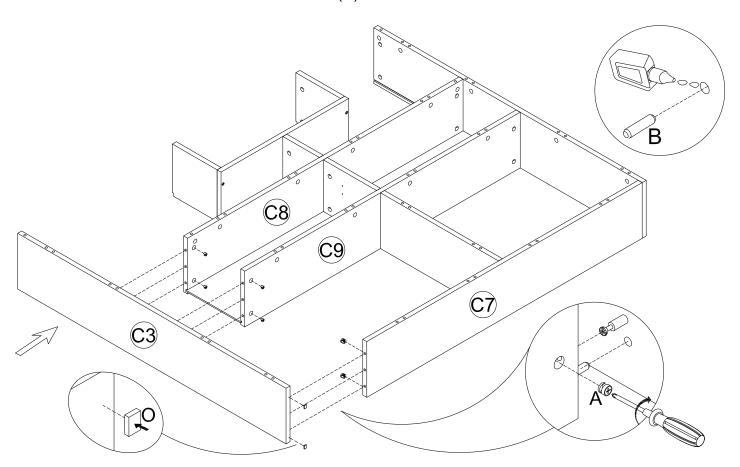


Step 12: Insert the Back Panel(C15) to the groove.

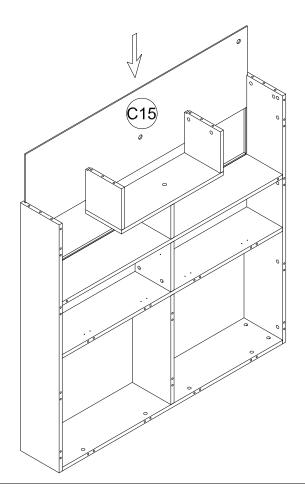

Step 13: Attach the Headboard Top Panel(C6) to the Headboard Left Side Panel(C3) and Headboard Right Side Panel(C4) and Support Panel(C11/C12). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

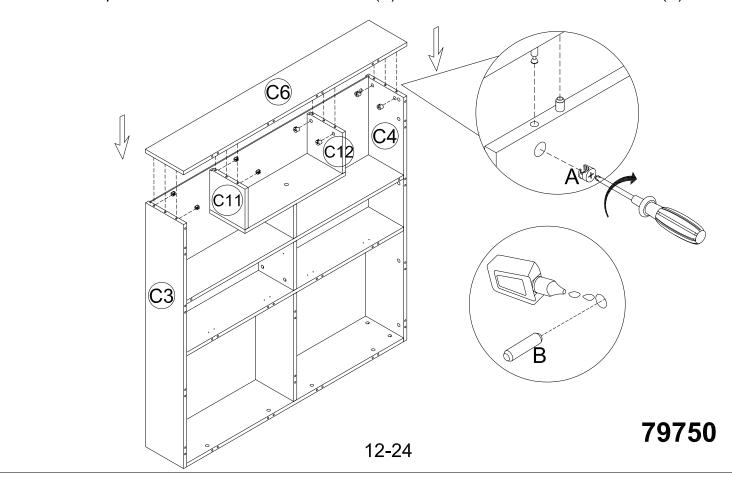


Step 14: Attach Front Rail(C1) to the Headboard Left Side Panel(C3) and Headboard Right Side Panel(C4) and Support Panel(C11/C12). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

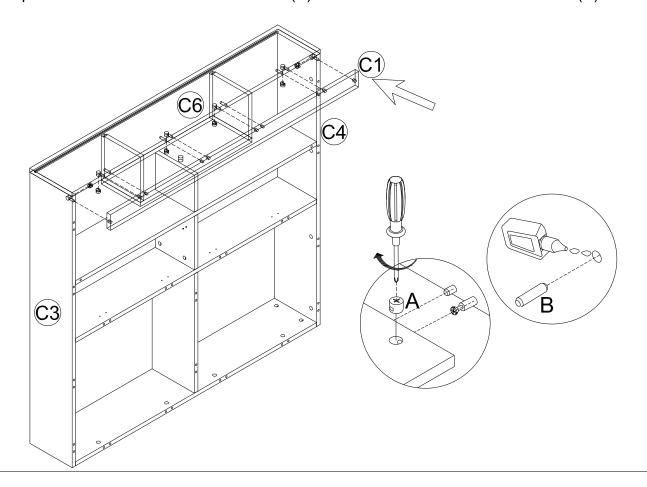


Step 15: Attach Left Front Panel(C17) and Right Front Panel(C18) to the Headboard Front Panel(C2).


And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

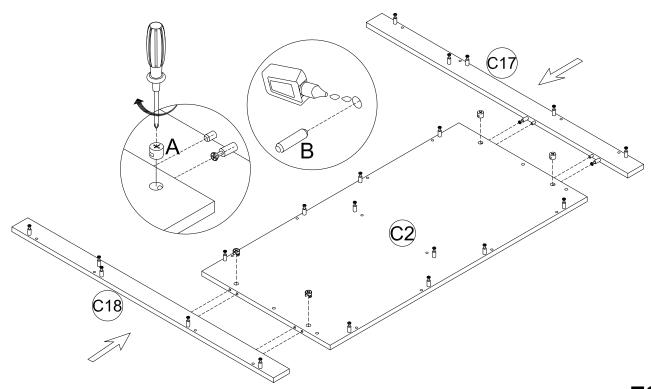


Step 16: Attach Left Front Panel(C17) and Right Front Panel(C18) and Headboard Front Panel(C2) to the Headboard Left Side Panel(C3) and Headboard Right Side Panel(C4) and Shelf Panel(C8/C9). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

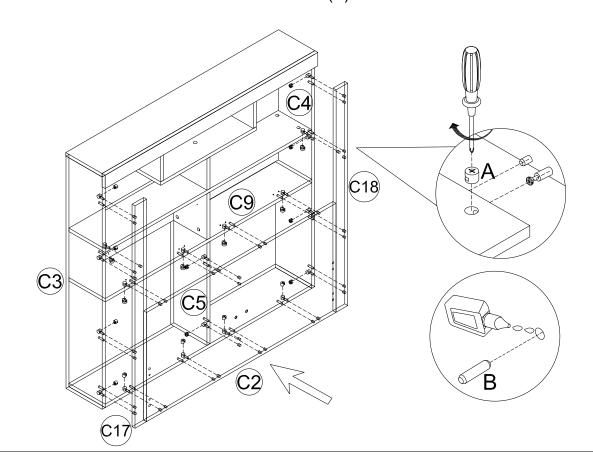


Step 17: Use a Phillips Head Screw to attach the Connector(F) to the back corner with Screw(E).

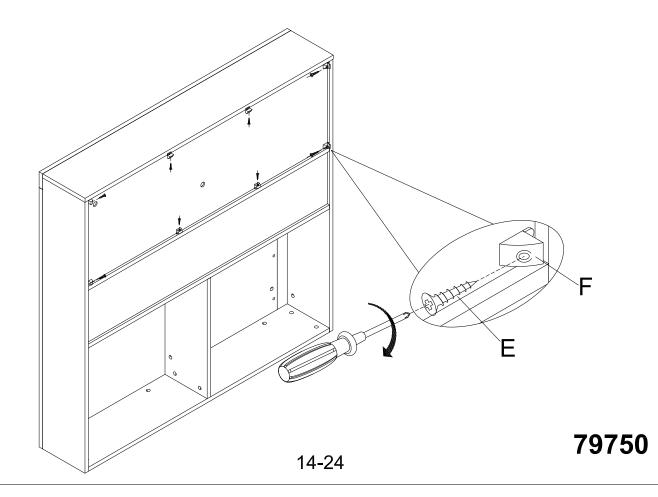


Step 18: Use a Phillips Head Screw to attach Hinge(W/X) to the Drawer Front Panel(C19) by Screw(L).

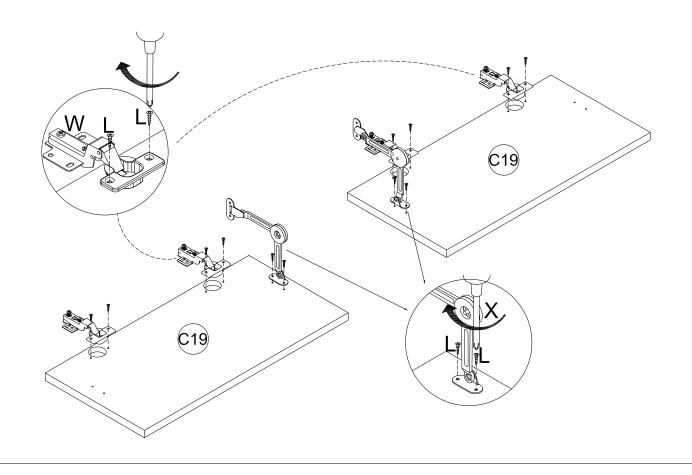


Step 19: Use a Phillips Head Screw Driver to attach hinge (W) to the shelf panel(C9). Adjust and level door panels first before attaching hinge (X). Please see below for adjustment direction.

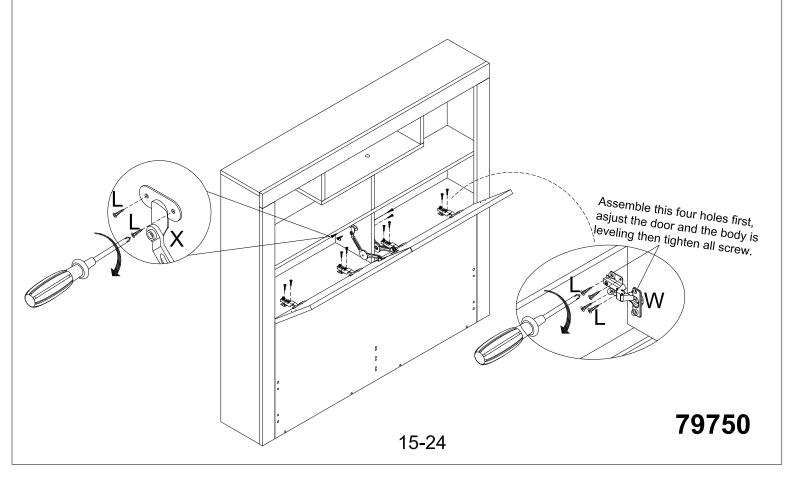


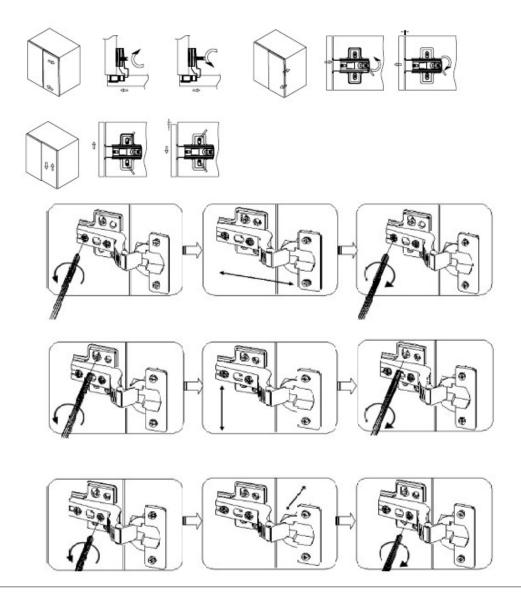


Step 20: Attach Rail(C28) to the Middle Support Panel(C22) and attach Rail(C27) to the Footboard Panel(C23). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

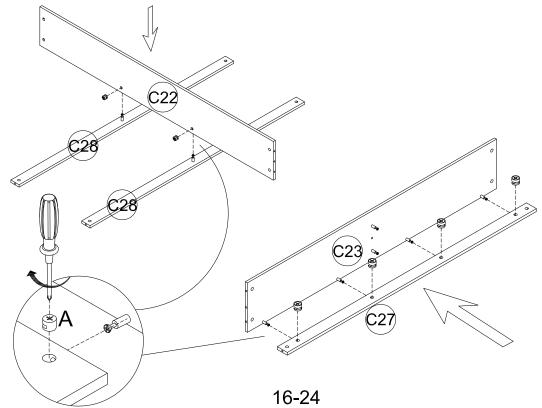


Step 21: Attach Footboard Panel(C23) to the Middle Support Panel(C22). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

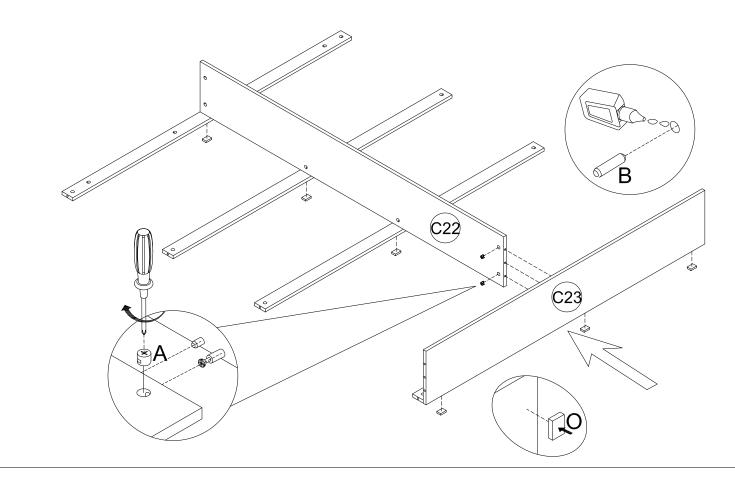

Step 22: Attach Right Side Panel(C21) to the Rail(C27/C28) and Footboard Panel(C23). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

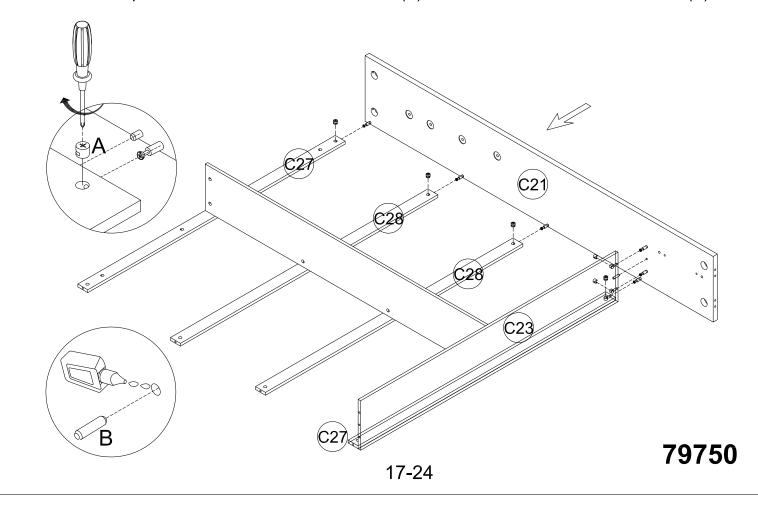


Step 23: Attach Left Side Panel(C20) to the Rail(C27/C28) and Footboard Panel(C23). And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

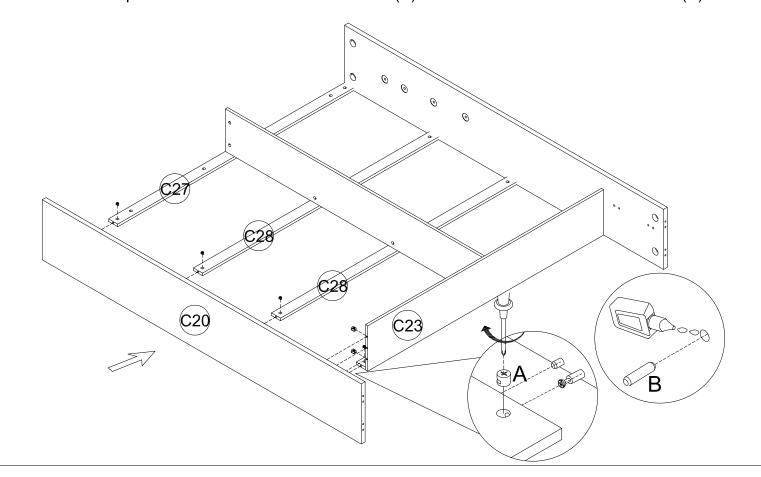


Step 24: Attach Connect Panel(C29)to the Left Side Panel(C20) and the Right Side Panel(C21).


And use a Phillips Head Screw to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

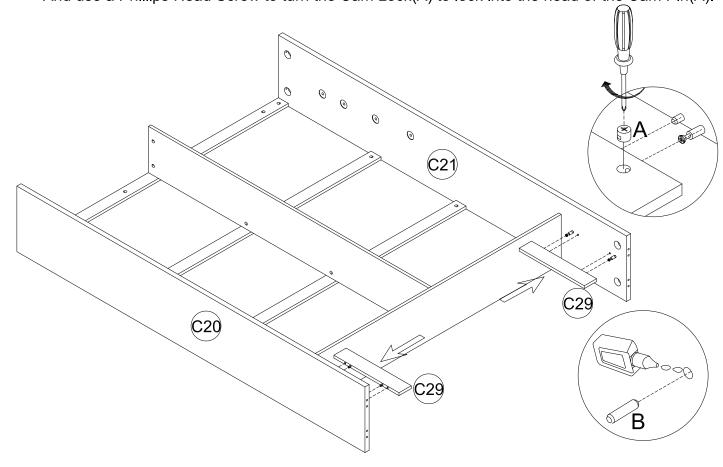


Step 25: Attach the Left Connect Panel(C24)and Right Connect Panel(C25) to the Front Connect Panel(C26). Use Wrench(P) to secure Half Round Nuts(H) and Hexaganal Nuts(I).

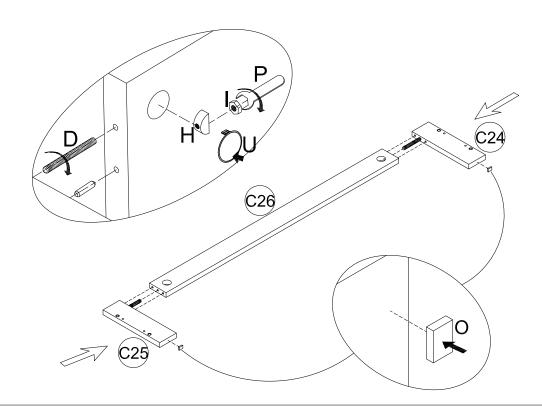


Step 26: Attach the Left Connect Panel(C24)and Right Connect Panel(C25) to the Left Side Panel(C20) and the Right Side Panel(C21). And use Wrench(P) to secure Half Round Nuts(H) and Hexaganal Nuts(I).

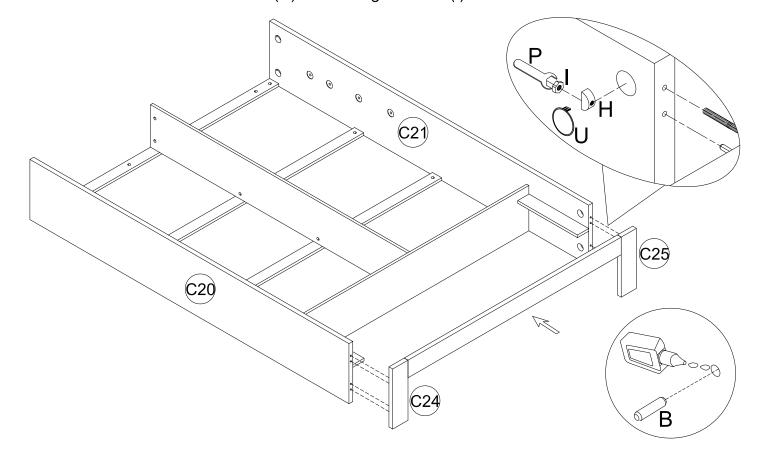


Step 27: Align the Dowels(B) in the Headboard to the Left Side Panel(C20) and the Right Side Panel(C21). Use Wrench(P) and Hey key(N)to secure Bolt(C) and Half Round Nuts(H) and Hexaganal Nuts(I).

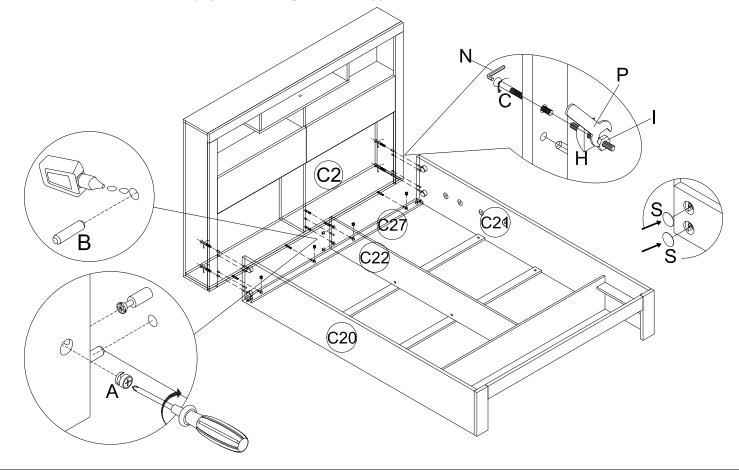


Step 28: Use Hex Key(O) to attach the Handle(C36) to the Slats(C35) with Bolt(K) and Washer(R).

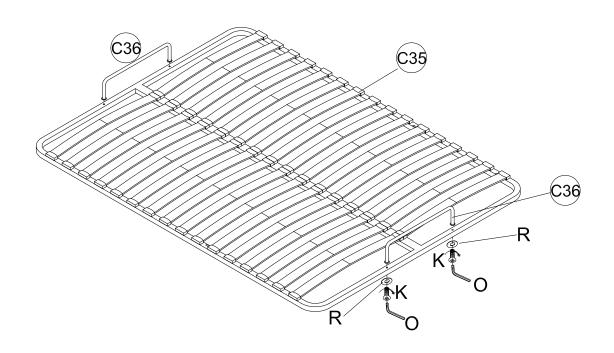

Step 29: Use Hex Key(N) to attach the Gas Lift(C38/C39) to the Left Side Panel(C20) and the Right Side Panel(C21) with Bolt(G) and Washer(S).

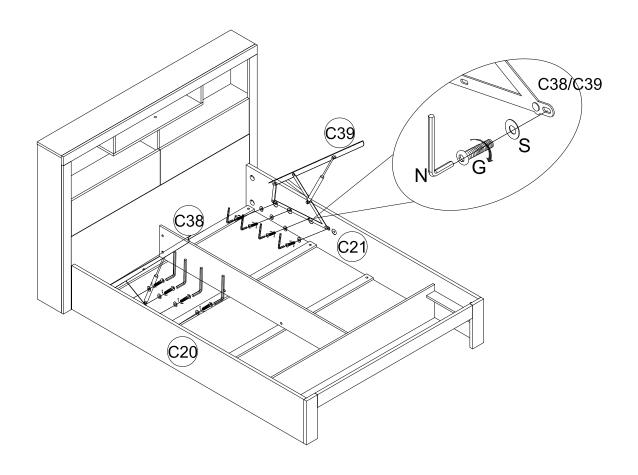


Step 30: Use Hex Key(R) and Wrench(N) to attach Slats(C35) and Gas Lift(C38/C39) with Bolt(K) and Washer(R) and Hexagonal Nuts(J).

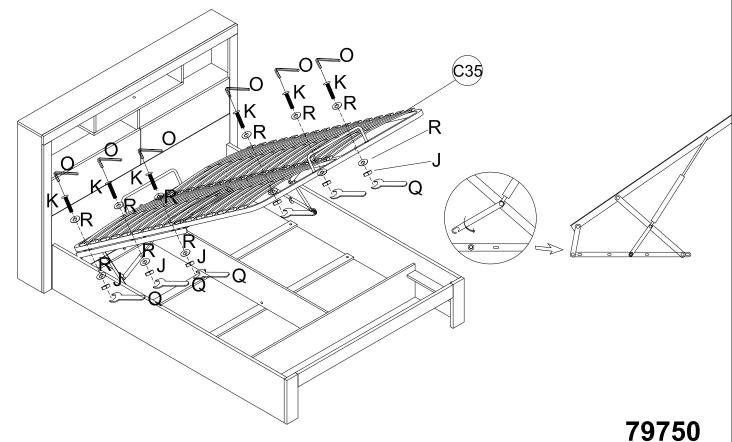


21-24


Step 31: Put Bottom Panel(C31) into the Bedframe.

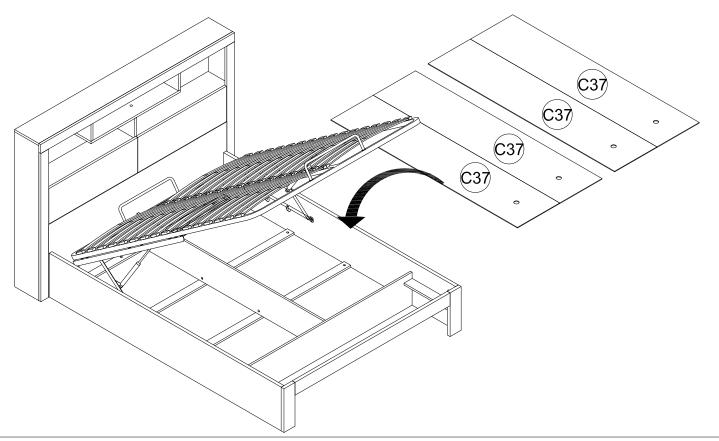


Step 32: Use Phillips Head Screw to insert Cam Pin(A) to the Drawer Side Panel(C31) and Drawer Support Panel(C32). Then attach the Drawer Side Panel(C31) and Drawer Support Panel(C32) to the Drawer Bottom Panel(C34), and attach Drawer Middle Support Panel(C33) to the Drawer Bottom Panel(C34). Attach Drawer Panel(C30) to the Drawer Side Panel(C31) and Drawer Panel(C30). Final, Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock into the head of the Cam Pin(A).

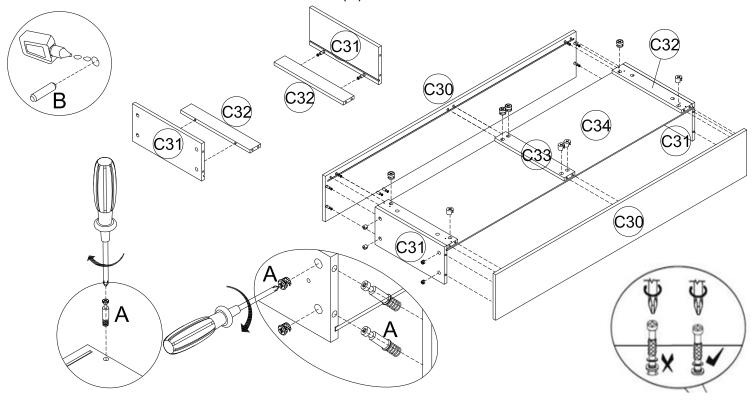


Step 33: Use Use a Phillips Head Screwdriver to attach Wheel(V) to the Drawer Support Panel(C32) with Screw(L).

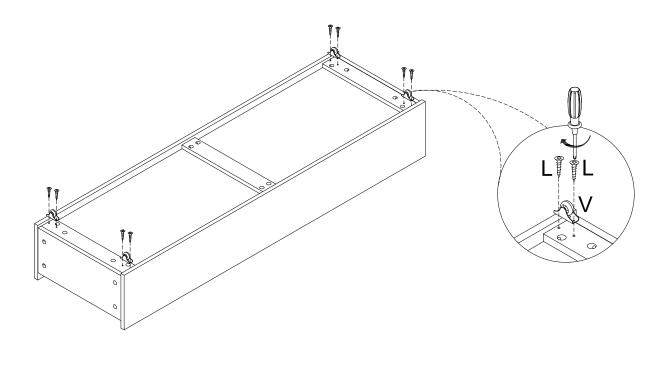

Step 34: Put the Drawer to the Bedframe.

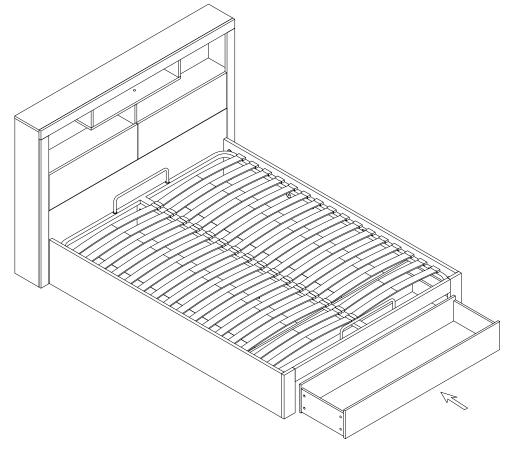

Assembly is complete

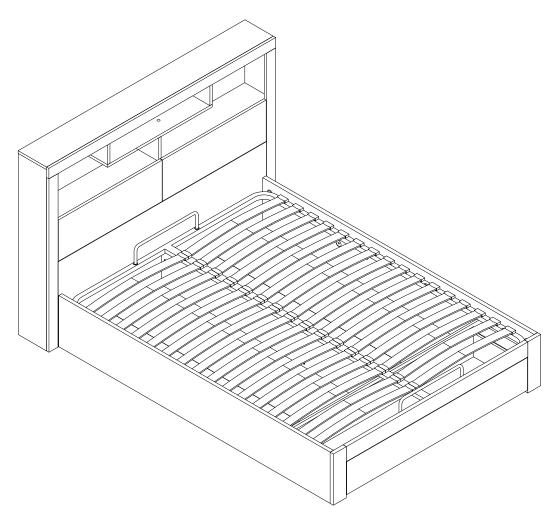

IMPORTANT NOTE:

Once the bed is positioned and the support legs are adjusted to touch floor, the slats can then be laid down and secured before putting on the mattress. DO NOT push or pull the bed if there is a need for re-positioning as this may result in broken support legs for the centre rail.

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from

Amart Furniture, Australia's largest discount furniture retail store.

Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or
 placemat. Lacquer finishes provide added scratch and heat resistance to our
 furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These
 may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage
 the product. Instead use two people to lift carefully with caution from either
 end.

