 
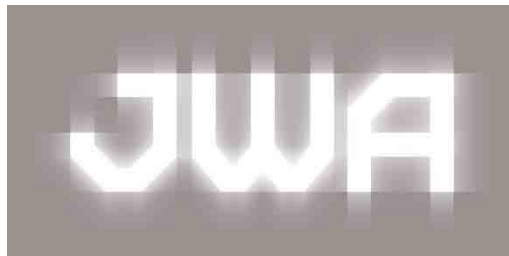 


ASSEMBLY INSTRUCTION

AGUILAR

ENTERTAINMENT UNIT

ITEM CODE 84197/84229

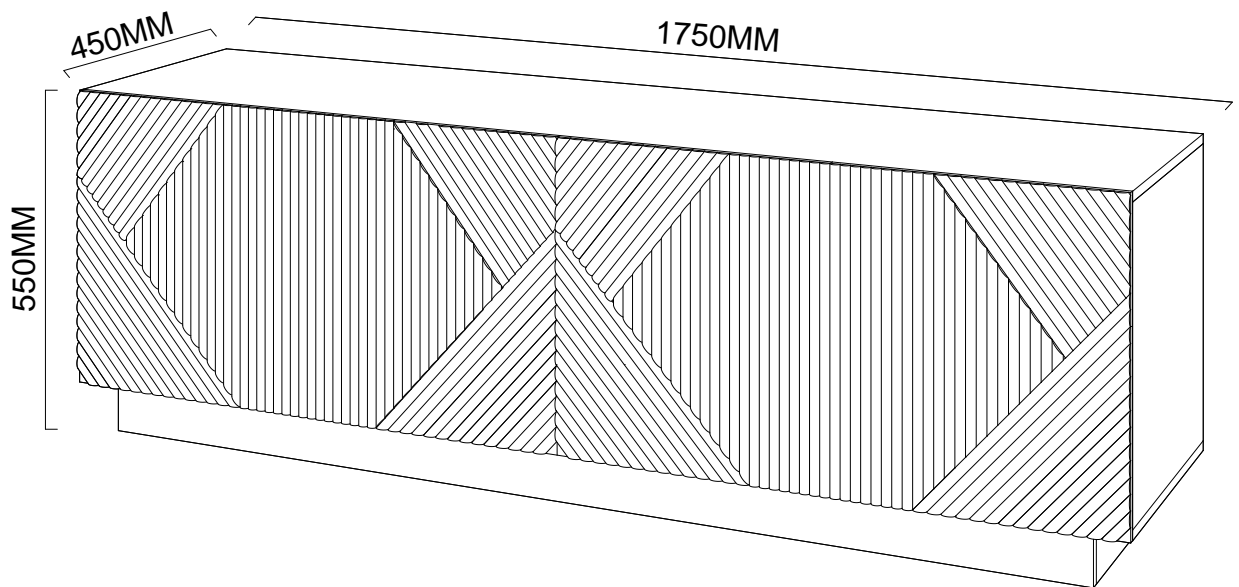

 



Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION


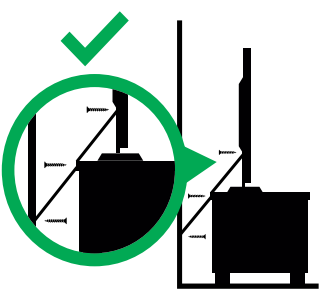 
Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

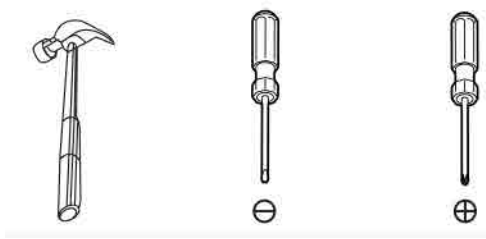
		
Allow 40 min	For 2 person	Additional tools required



  
 

 

 
 
 




WARNING

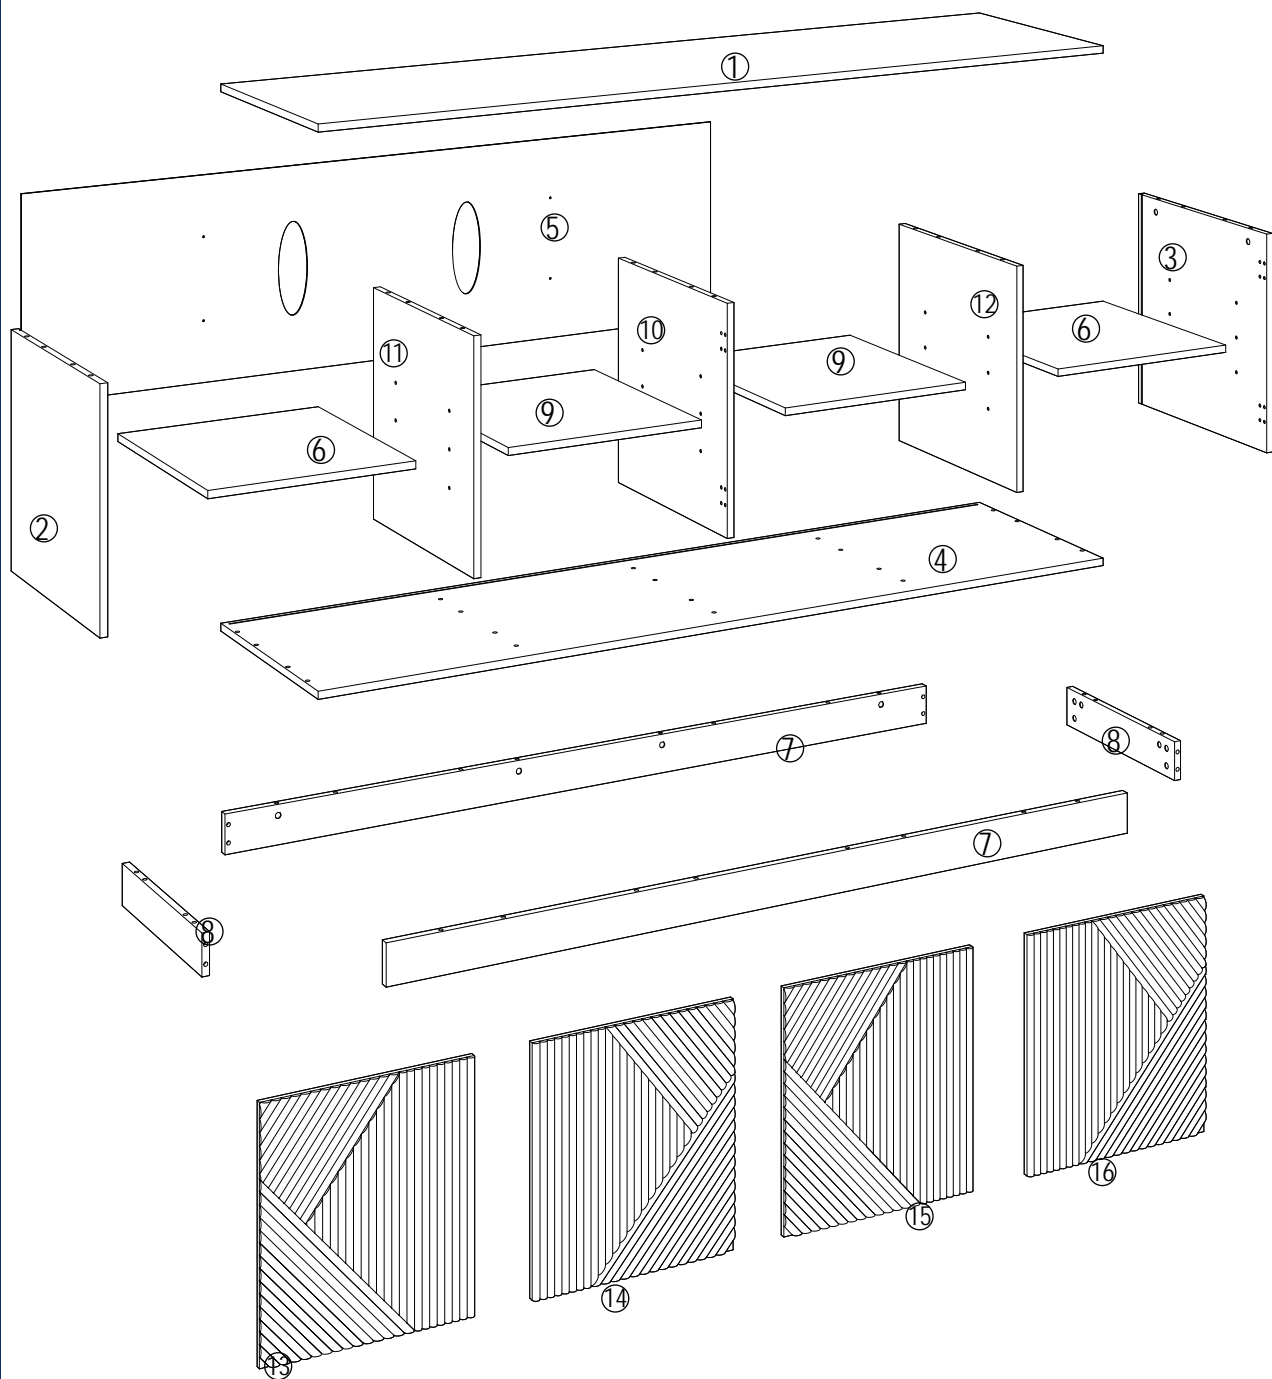		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• ALWAYS secure your television with an anchor device or mount the television on a wall. <p>This is a permanent label. Do not remove!</p>
---	---	---

PARTS LIST





PARTS LIST



NO.	ITEM	QTY	NO.	ITEM	QTY
A	 Φ 6*35	30PCS	H		4PCS
B	 Φ 15*10	30PCS	I		8PCS
C	 Φ 6*30	32PCS	J	 Φ 3*16	8PCS
D	 Φ 4*40	10PCS	K		4PCS
E		2PCS	L	 Φ 4*14	48PCS
F		16PCS	M	 Φ 2.5*12	6PCS

NO.	ITEM	QTY	NO.	ITEM	QTY
①	TOP PANEL	1 PC	⑨	SHELF PANEL	2 PCS
②	LEFT SIDE PANEL	1 PC	⑩	MIDDLE PANEL	1 PC
③	RIGHT SIDE PANEL	1 PC	⑪	LEFT MIDDLE PANEL	1 PC
④	BOTTOM PANEL	1 PC	⑫	RIGHT MIDDLE PANEL	1 PC
⑤	BACK PANEL	1 PC	⑬	LEFT DOOR PANEL	1 PC
⑥	SHELF PANEL	2 PCS	⑭	RIGHT DOOR PANEL	1 PC
⑦	LEG	2 PCS	⑮	LEFT DOOR PANEL	1 PC
⑧	LEG	2 PCS	⑯	RIGHT DOOR PANEL	1 PC

  
STEP 1:

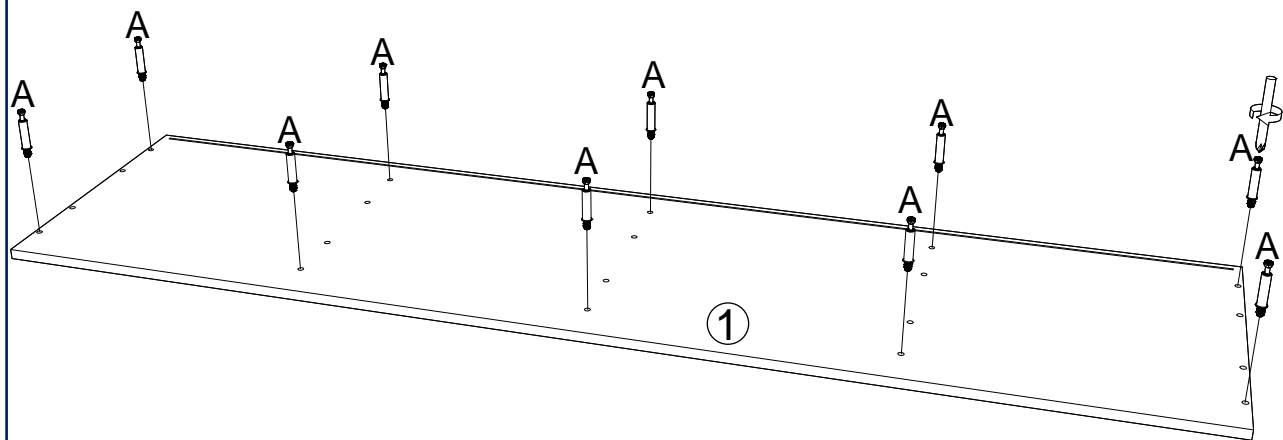

  
STEP 2:

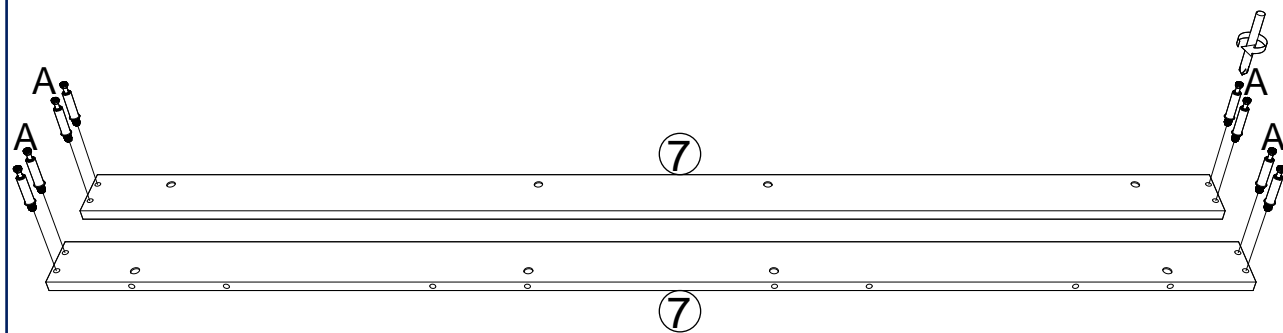

 
STEP 3:

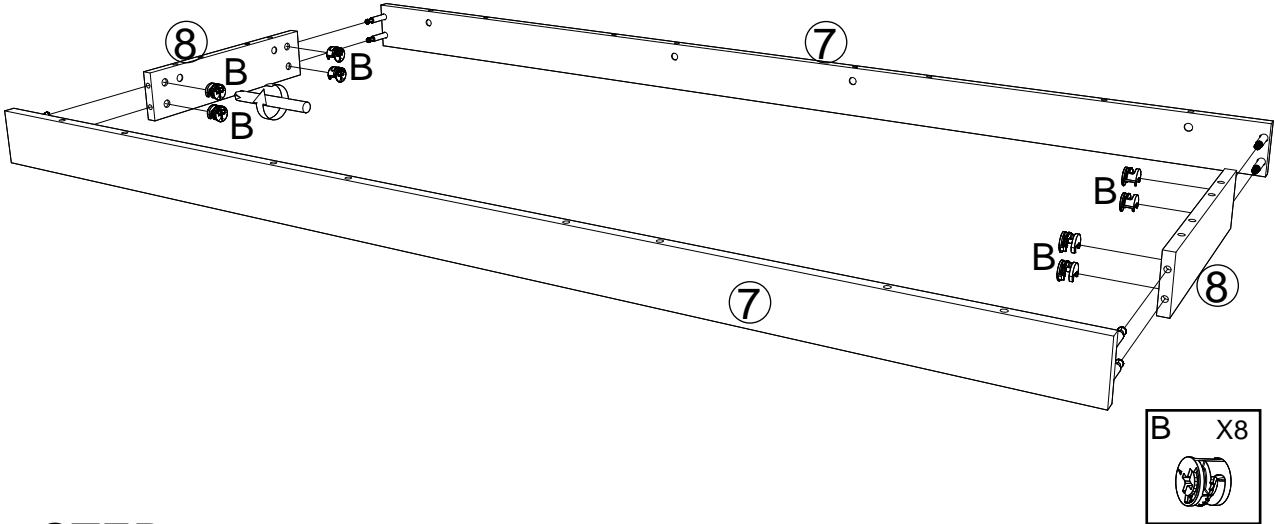

 
STEP 4:

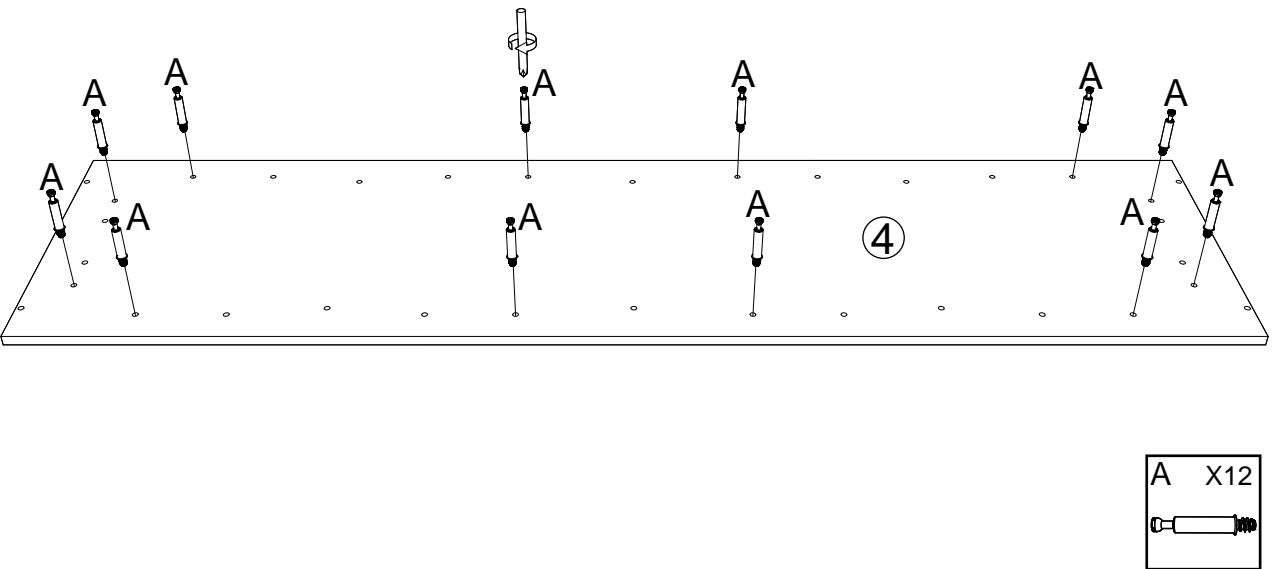

 
STEP 5:

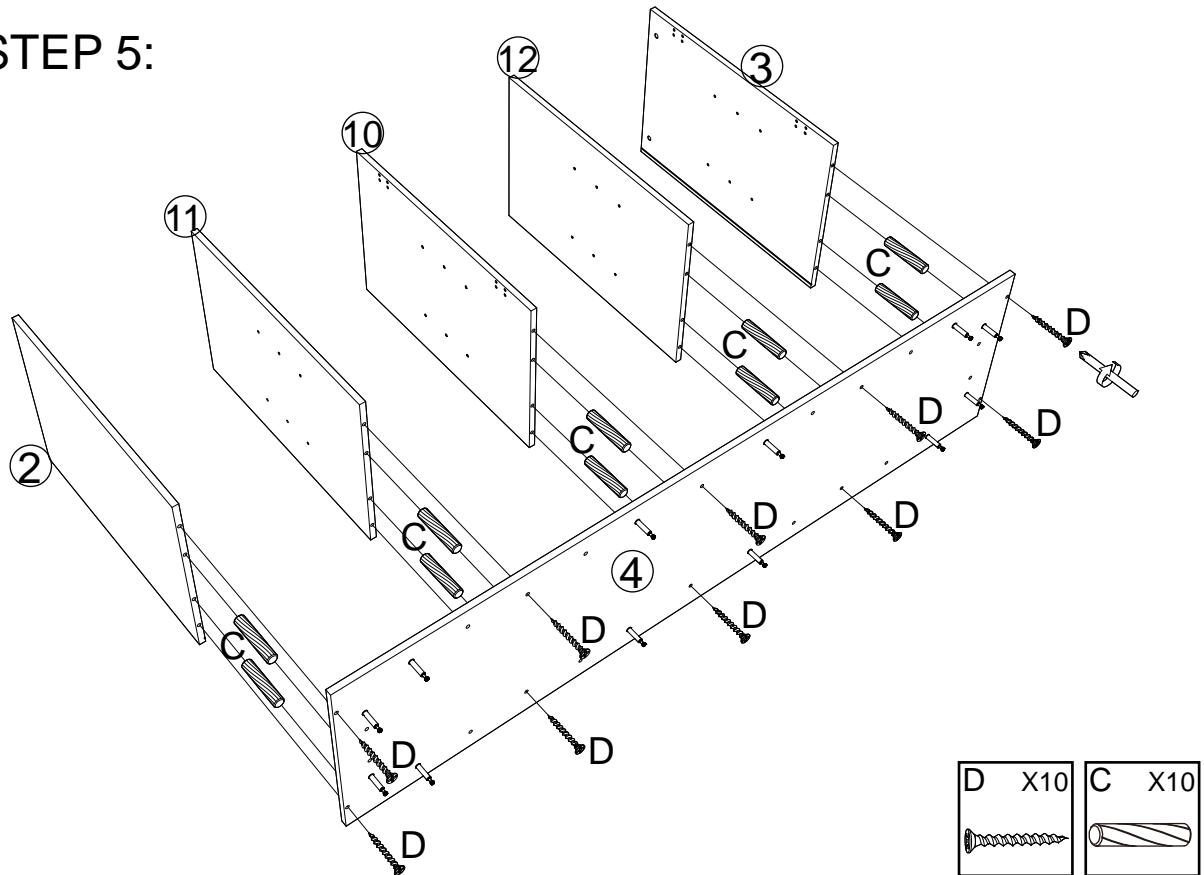

 
STEP 6:

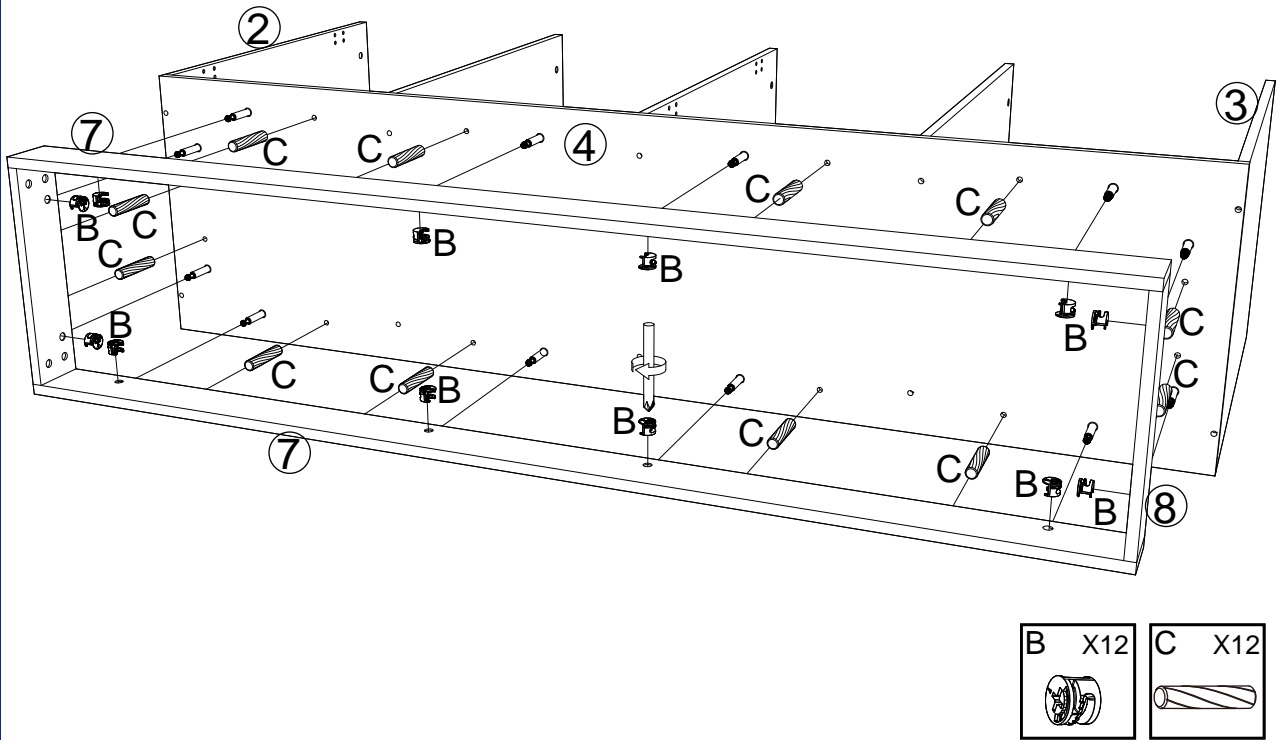

 
STEP 7:

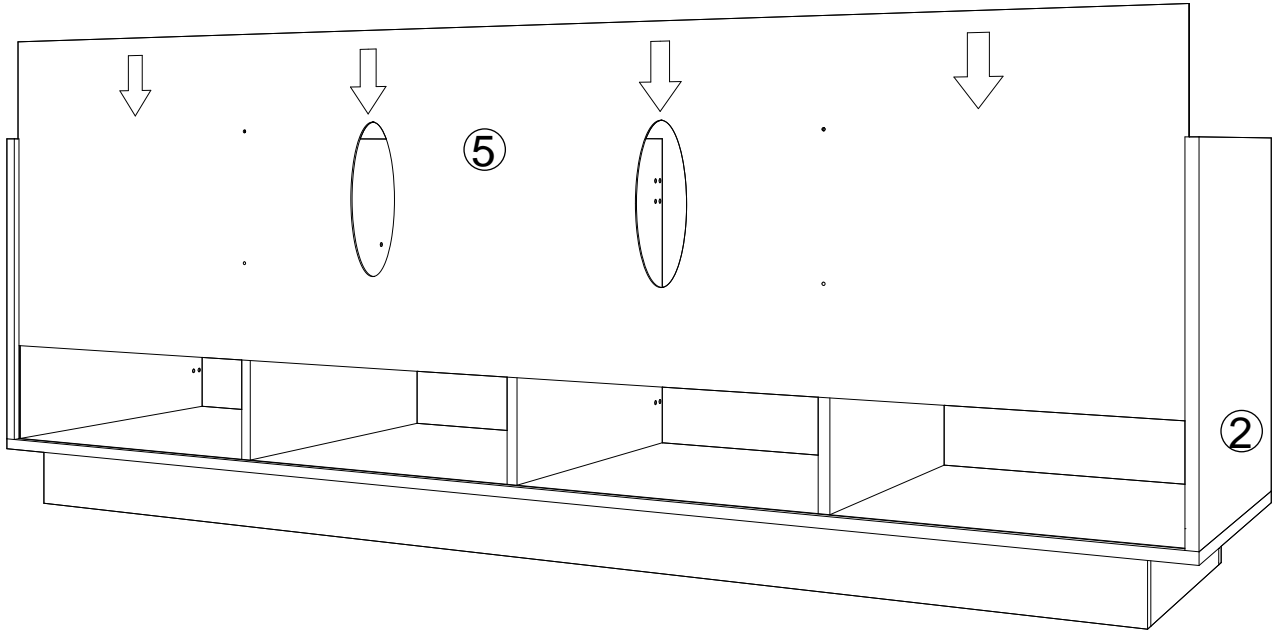

 
STEP 8:

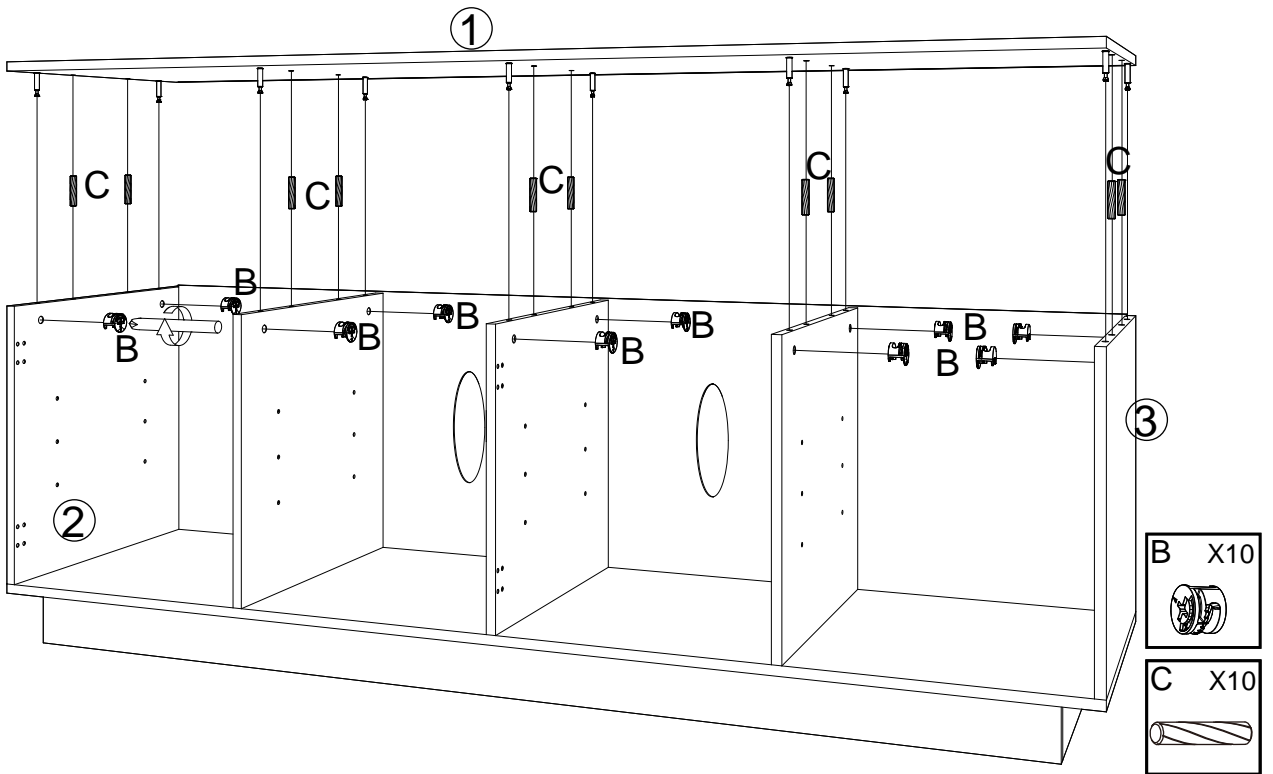


 
STEP 9:

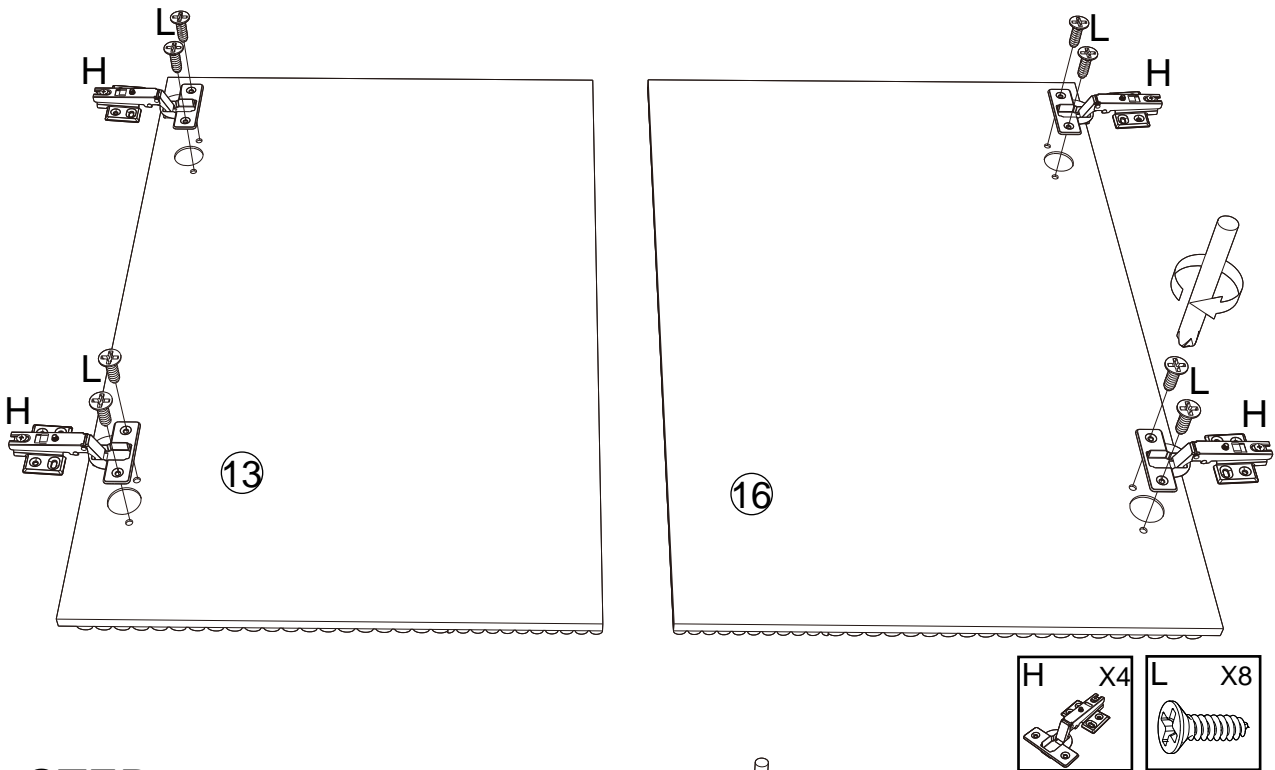

 STEP 10:

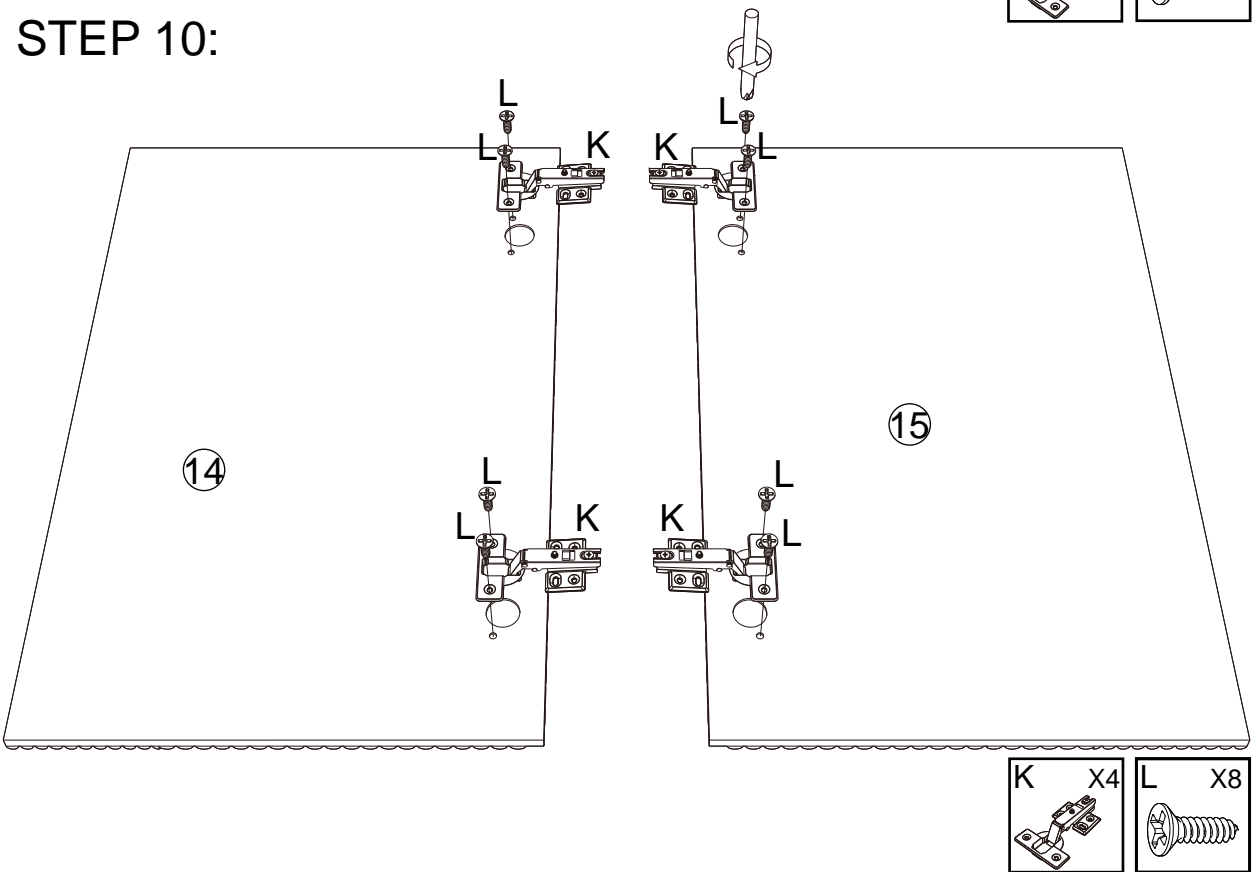


  STEP 11:











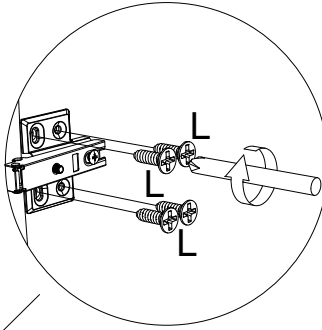



Assemble these four holes first, adjust the door and ensure it is level, then tighten all screws.


 
How to adjust the door and ensure it is level, please see the below information.

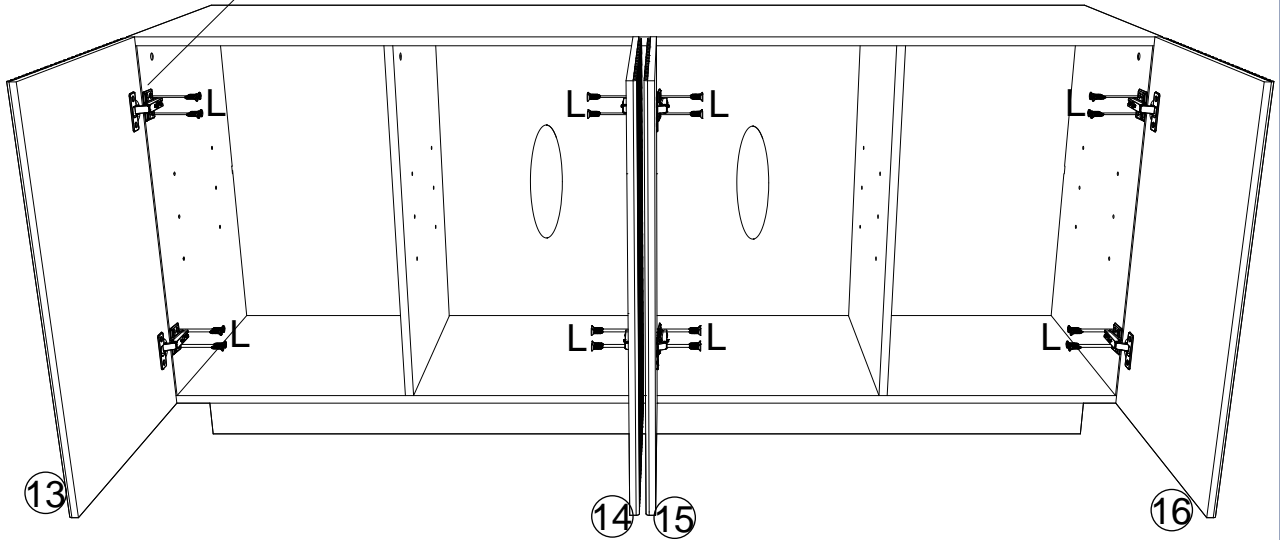





INFORMATION

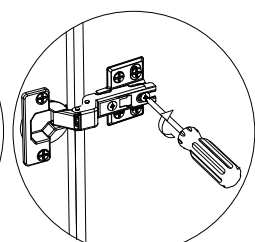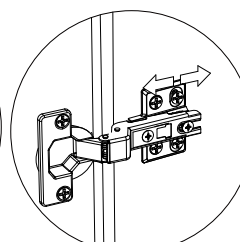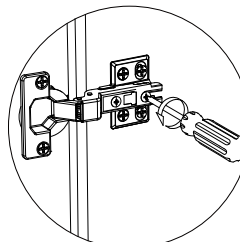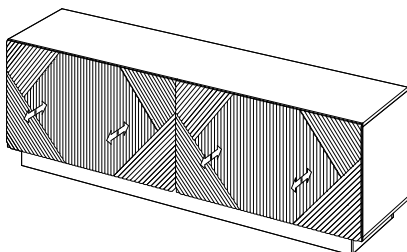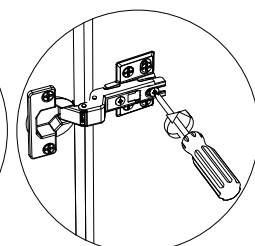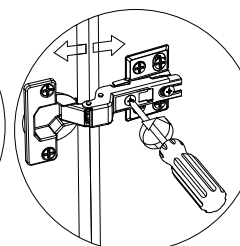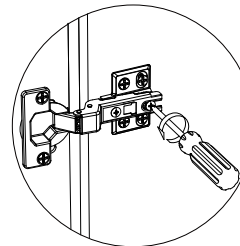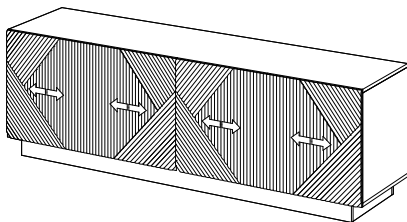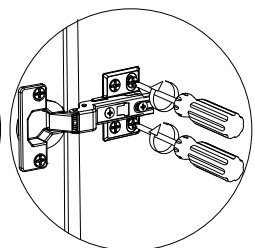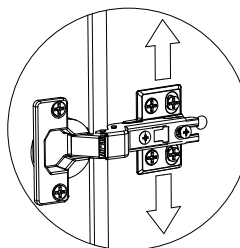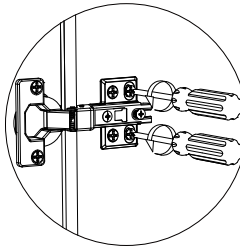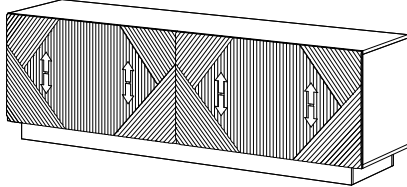            



 
 
STEP 12:

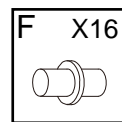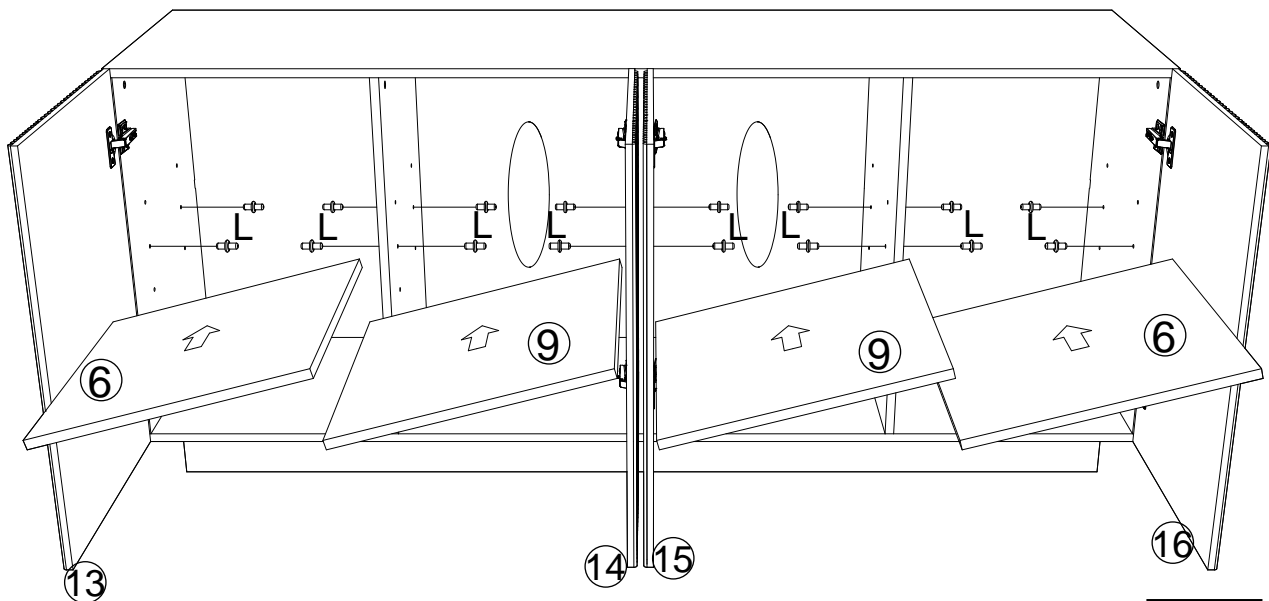

    
STEP 13:

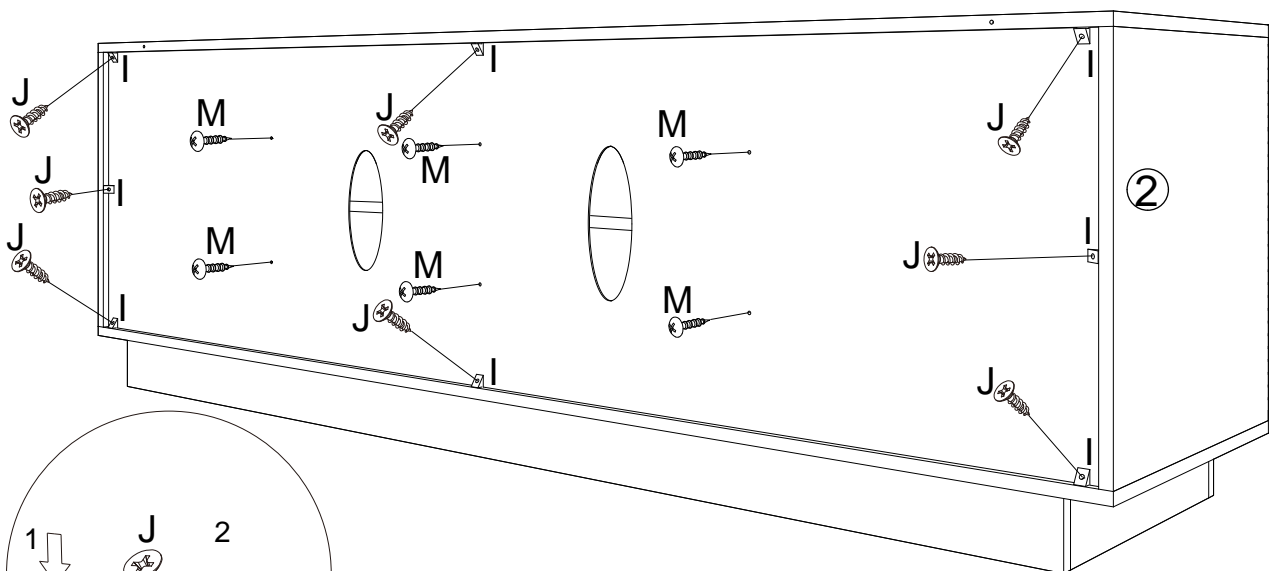

    STEP 14: WALL

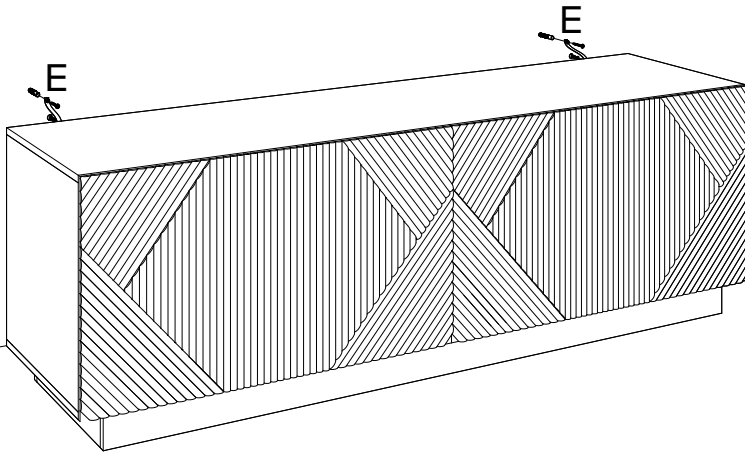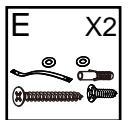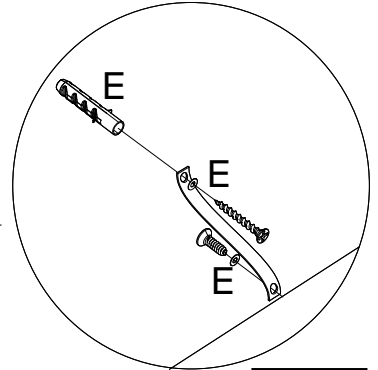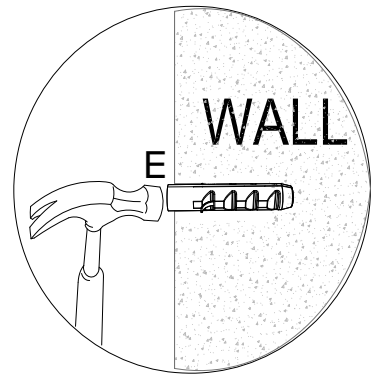

ASSEMBLY IS COMPLETE

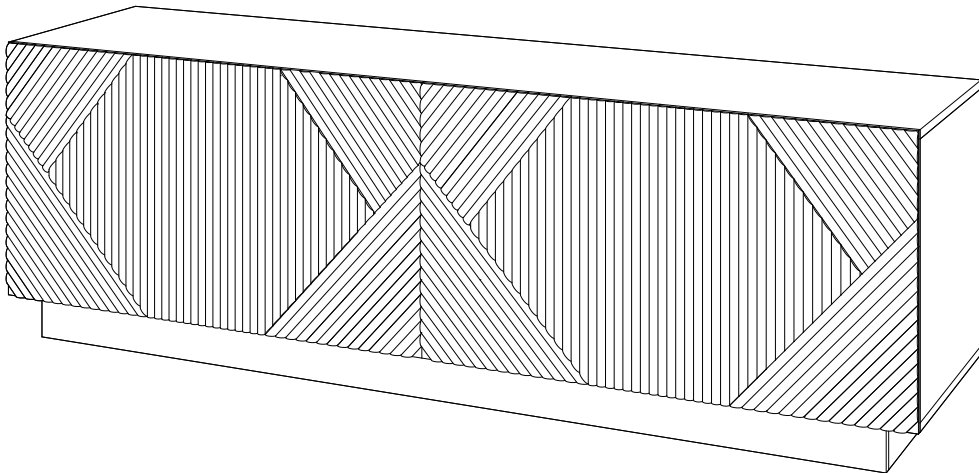 

DO NOT DRAG:

Do not drag the item as this may cause damage to the legs.
Instead, use 2 people to lift carefully and with caution from either end.

SAFETY BRACKETS INSTRUCTIONS

1. Attach the strap to the furniture frame with the small screw and washer.
2. Move the furniture to its final position. Attach the strap to the wall with the large screw and washer. If mounting into brick or masonry you will need to acquire wall anchors.
3. Make sure that the strap is firmly attached to the wall and furniture and that the wall strap is snug.

HARDWARE



Anti-tilt Strap X1



SCREWS X1



 
SCREWS X1



Expanded plastic pipe X1



washer X2

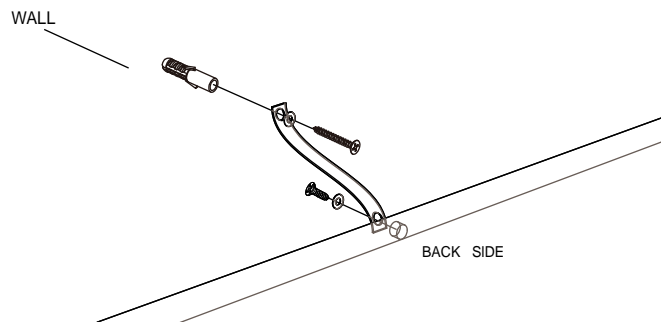

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void