

ASSEMBLY INSTRUCTION

 
Spacesaver Combo Robe 3 Door 2 Drawer

ITEM CODE 49226

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 937 566

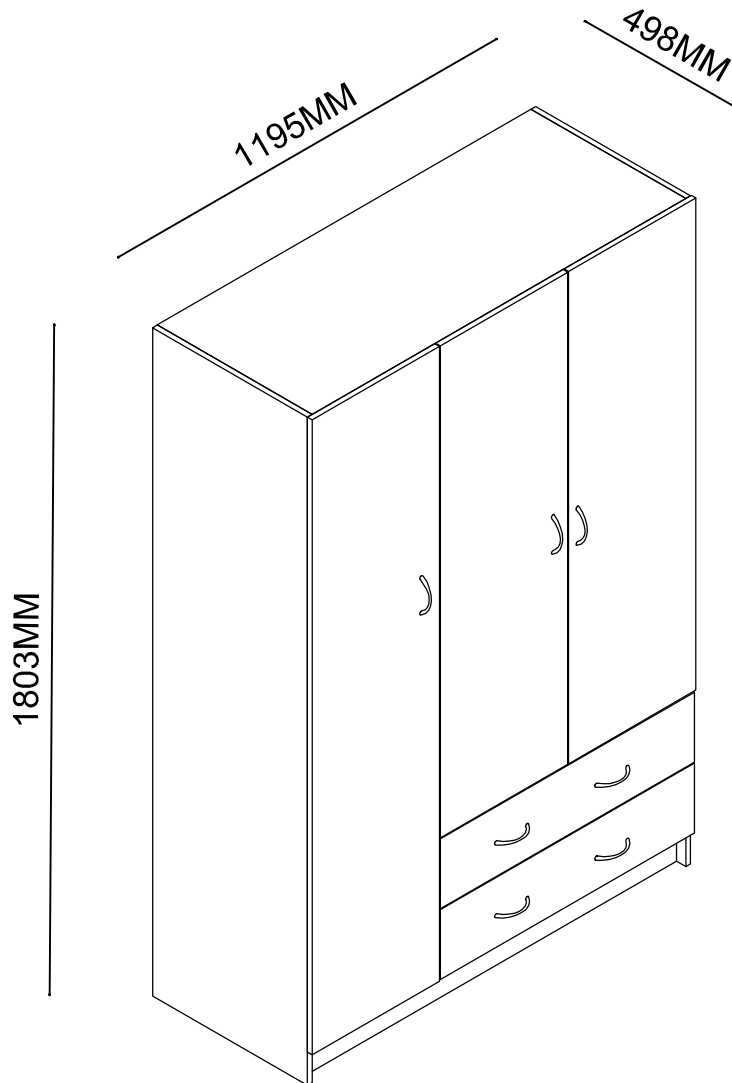

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.


 
 

 
 

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 937 566


PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

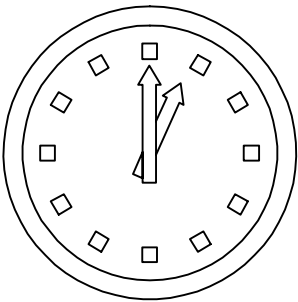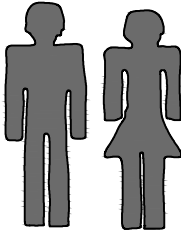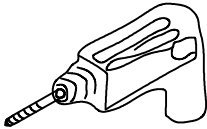 120min	 2 People Required	IF REQUIRED  Low speed (Ø6mm)
    ADDITIONAL TOOLS REQUIRED		

 WARNING

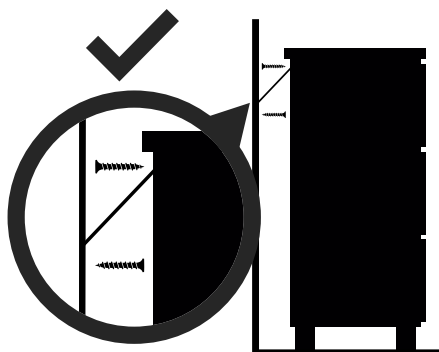

Children have died from furniture tipover.

 
- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

**NEVER put a TV
on this furniture**




**This is a permanent label.
Do not remove!**

TO USE CAM LOCK FASTENERS

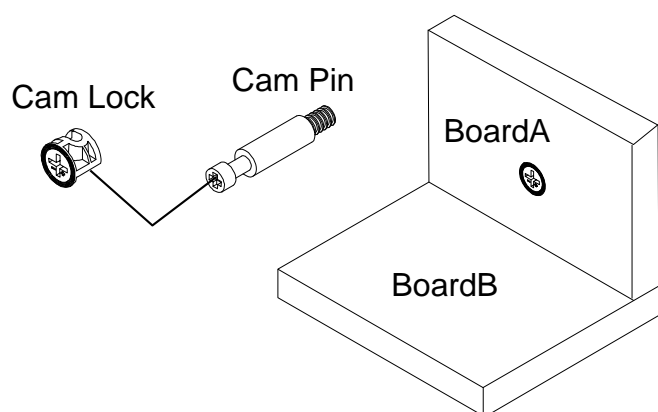

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

 Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

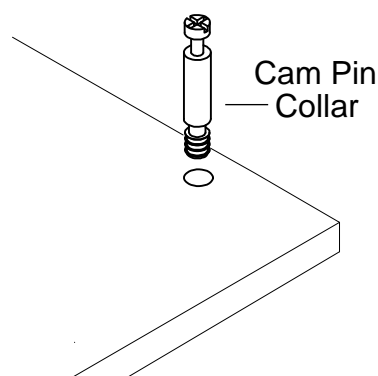


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle.



Cam pin is to be inserted up to collar

Too far and it won't catch the Cam Lock (Do Not Overtighten)

 
Not enough and the resulting product will not be stable.

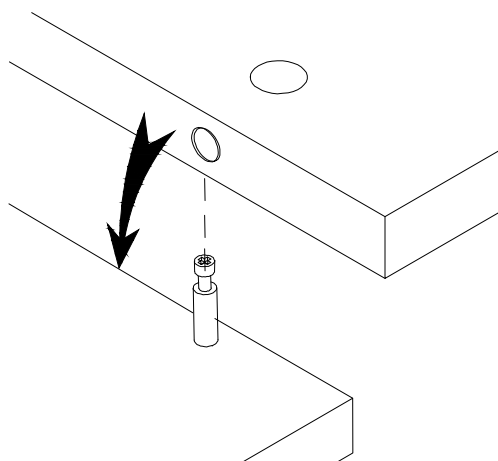

  
Now fit the hole in the edge of the joining board over the Cam Pin.

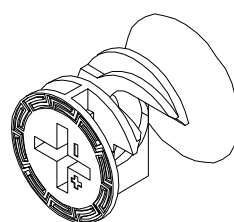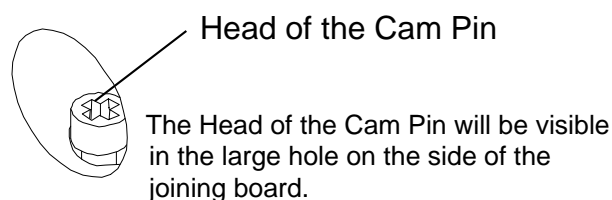

 
Notice the Cam Lock has a "C" Shaped Back. An arrow or +/- signs on the front indicate the open section on the back of the Cam Pin.

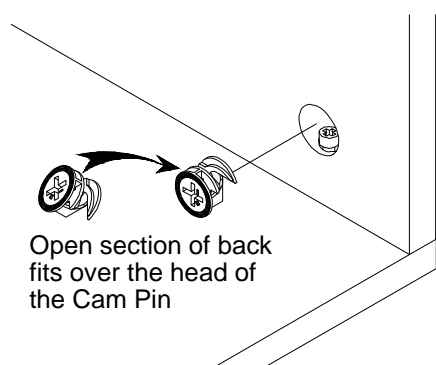

 Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

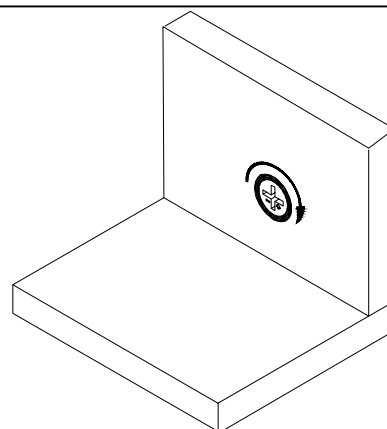

 Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

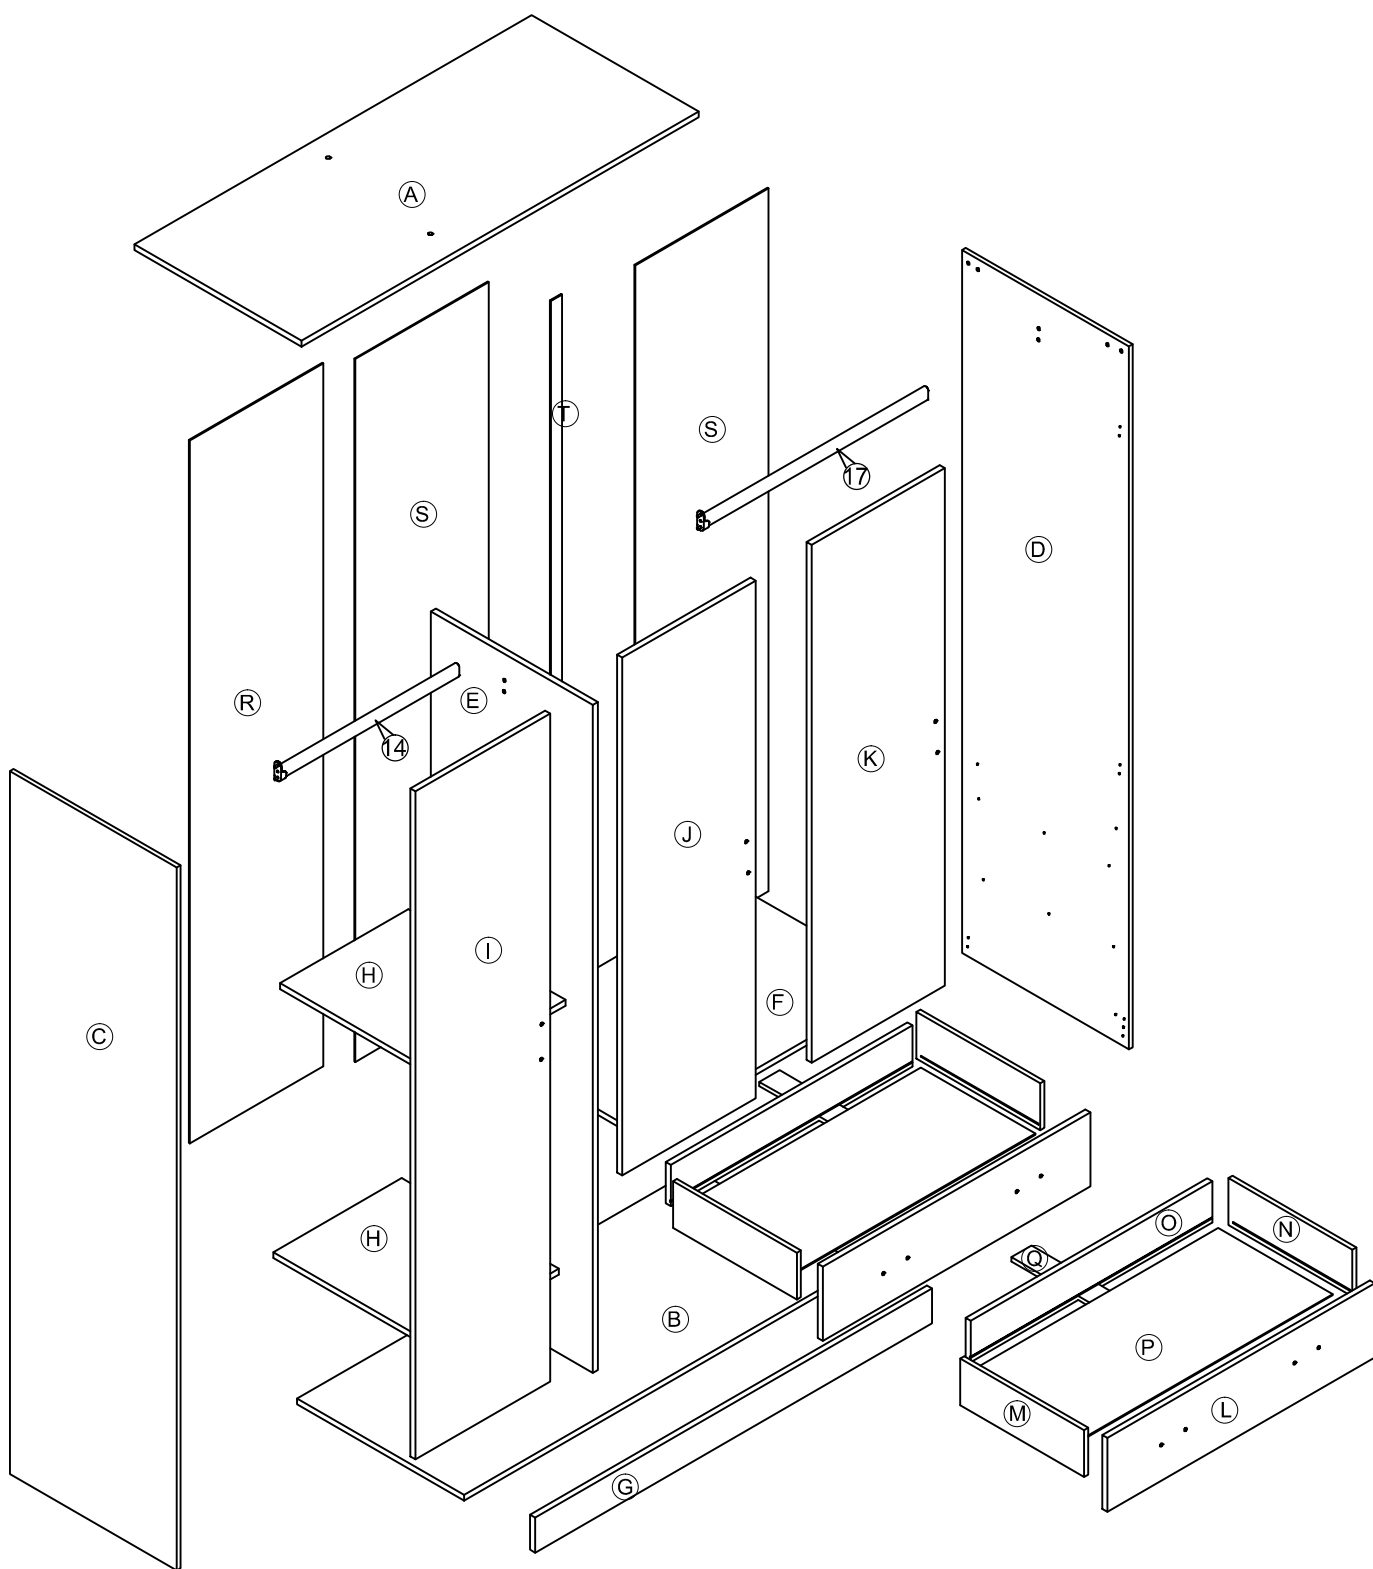


Item Code- 49226


Panel(Mark)	Packing carton	Quantily	Picture	Dimension
A	(Box 2)	1 PC		1165 x 480 x 15mm
B	(Box 2)	1 PC		1165 x 480 x 15mm
C	(Box 1)	1 PC		480 x 1803 x 15mm
D	(Box 1)	1 PC		480 x 1803 x 15 mm
E	(Box 1)	1 PC		480 x 1682 x 15 mm
F	(Box 2)	1 PC		765 x 480 x 15mm
G	(Box 3)	1 PC		1165 x 90 x 15mm
H	(Box 2)	2 PCS		383 x 478 x 15mm
I	(Box 3)	1 PC		397 x 1713 x 15mm
J	(Box 3)	1 PC		396 x 1328 x 15mm
K	(Box 3)	1 PC		396 x 1328 x 15mm
L	(Box 3)	2 PCS		792 x 188 x 15mm
M	(Box 3)	2 PCS		350 x 116 x 15mm
N	(Box 3)	2 PCS		350 x 116 x 15mm
O	(Box 3)	2 PCS		710 x 116 x 15mm
P	(Box 3)	2 PCS		721 x 345 x 3mm
Q	(Box 3)	2 PCS		334 x 60 x 15mm
R	(Box 3)	1 PC		1710 x 406 x 3mm
S	(Box 3)	2 PCS		1710 x 392 x 3mm
T	(Box 3)	1 PC		1680 x 15 x 7mm



Please note - All Hardwares in box 2.

① 10 PCS Ø15 x 12 mm	② 10 PCS Ø6 x 34 mm	③ 20 PCS Ø8 x 30 mm	④ 16 PCS Ø10 x Ø7 x 50 mm	⑤ 14 PCS Ø15 x Ø3 x 7 mm	⑥ 2 Sets 16"	⑦ 14 PCS Ø8 x M4 x 18 mm	⑧ 7 PCS 115 x 10 x30 mm
⑨ 12 PCS Ø8 x Ø4 x 33 mm	⑩ 7 Sets Ø35 mm	⑪ 32 PCS Ø6 x Ø3.5 x 14 mm	⑫ 58 PCS Ø4 x Ø2 x15 mm	⑬ 4 PCS 40 x 18 x10 mm	⑭ 1 PC 377 x 15 x 28 mm	⑮ 28 PCS Ø4 x 14 mm	⑯ 8 PCS Ø5 x 22 x 9 x 17 mm
⑰ 1 PC 757 x 15 x 28 mm	⑱ 10 PCS Ø13 x Ø1.4 x 17mm	⑲ 8 PCS Ø9 x Ø3 x 14 mm	⑳ 2 PCS 20 x 40 x 1,2mm	㉑ 2 PCS Ø9 x Ø6 x 25mm	㉒ 2 PCS Ø9 x Ø4 x 15mm	㉓ 2 PCS Ø9 x Ø4 x25mm	

 



1

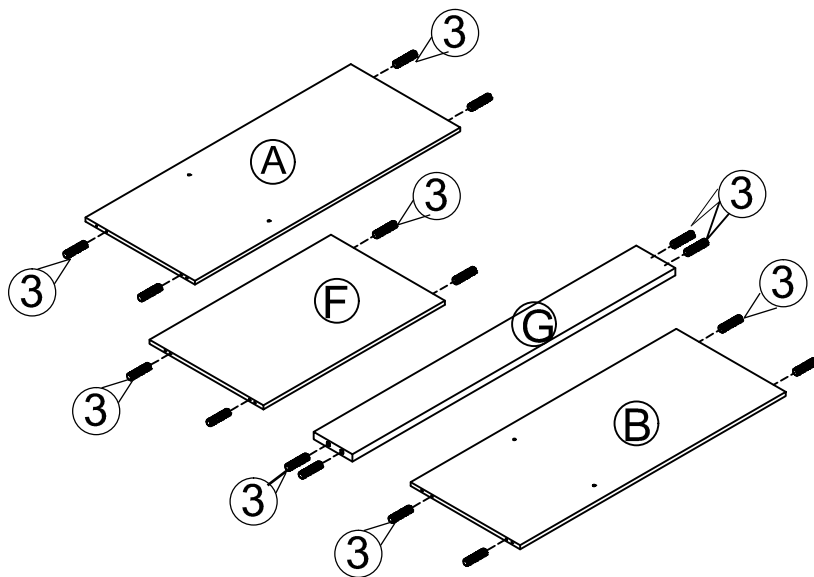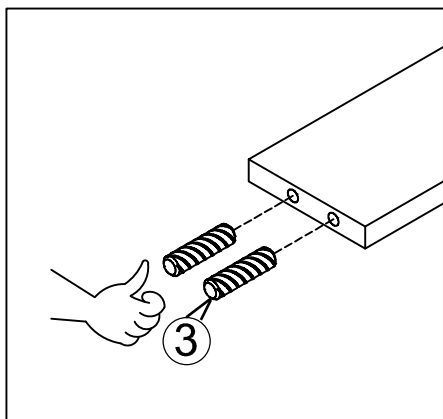  
 ③ x 16






2

 ⑪ x 1



 
 ⑬ x 1

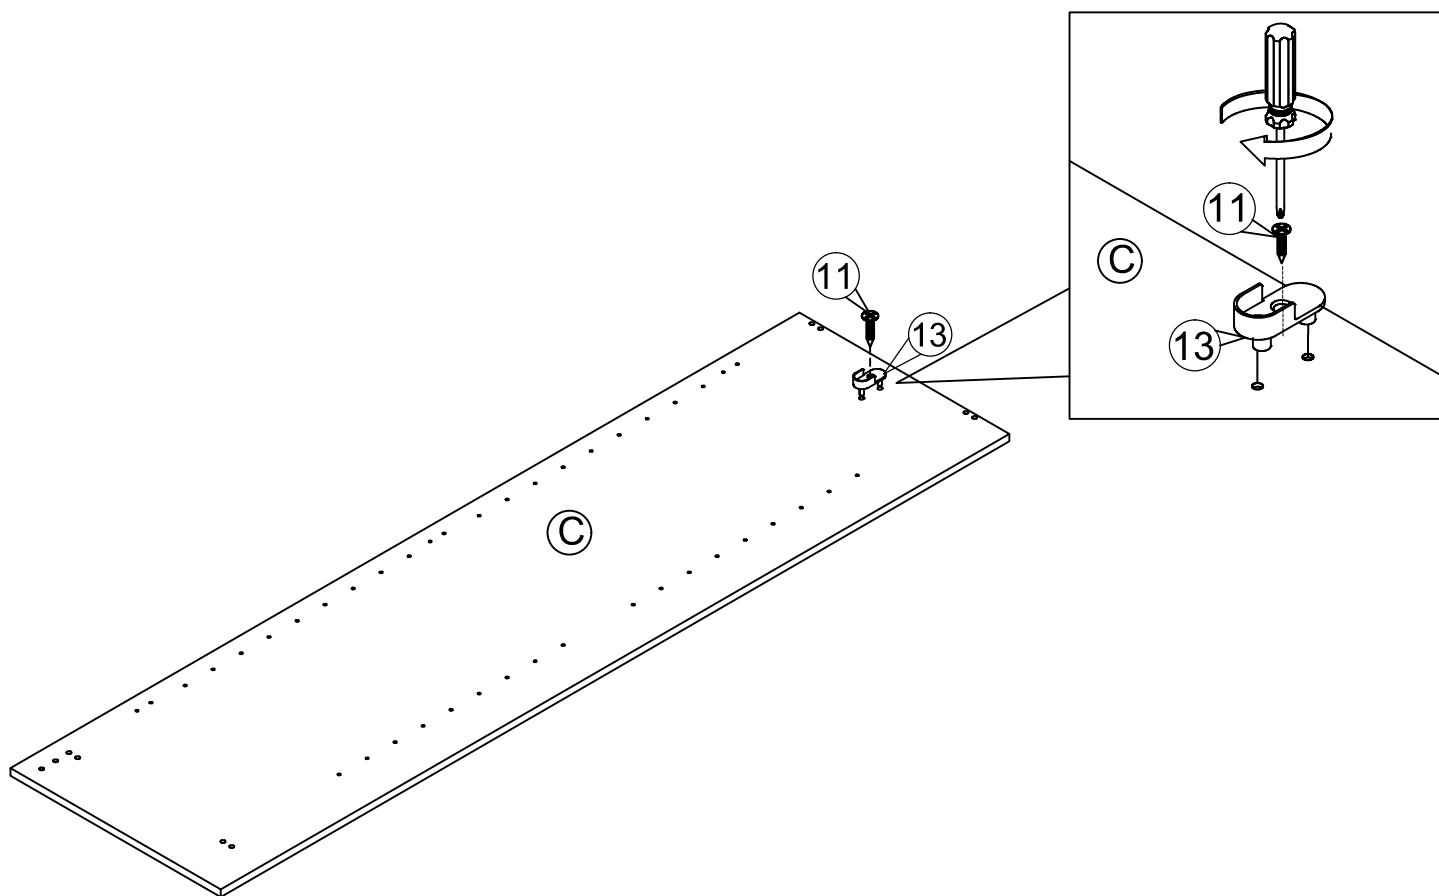



3

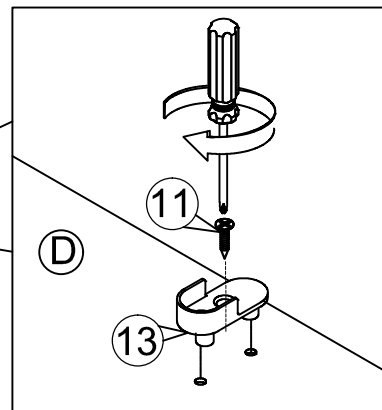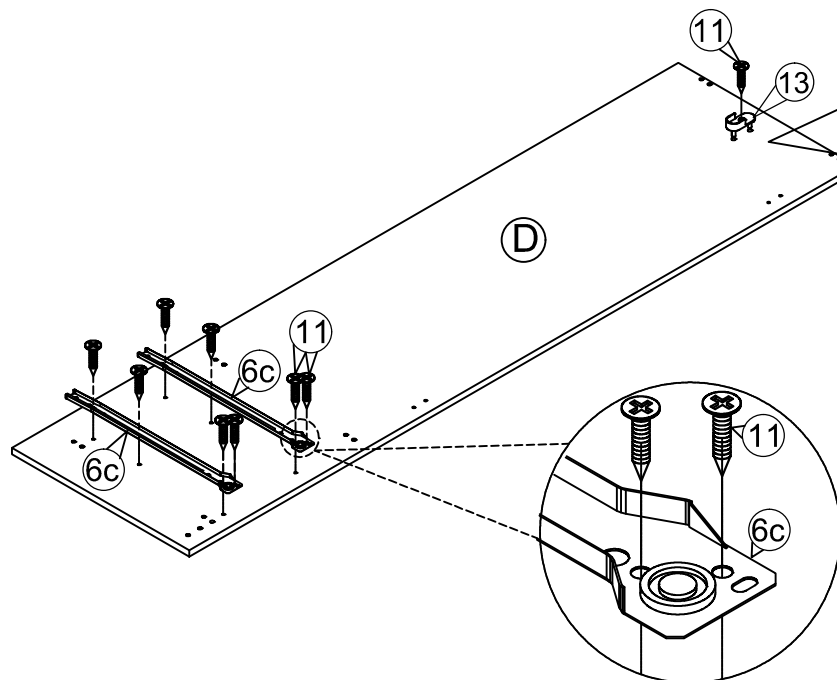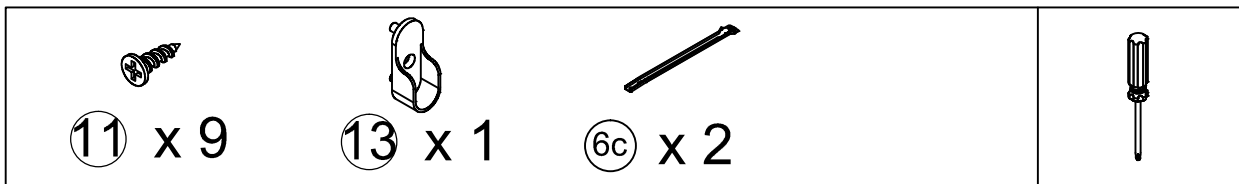   



4

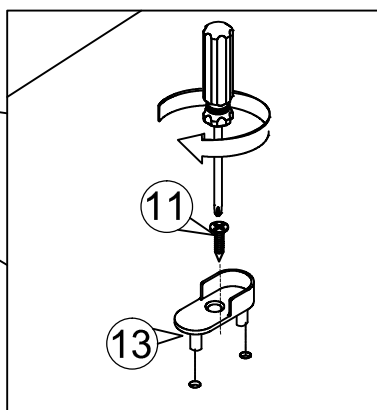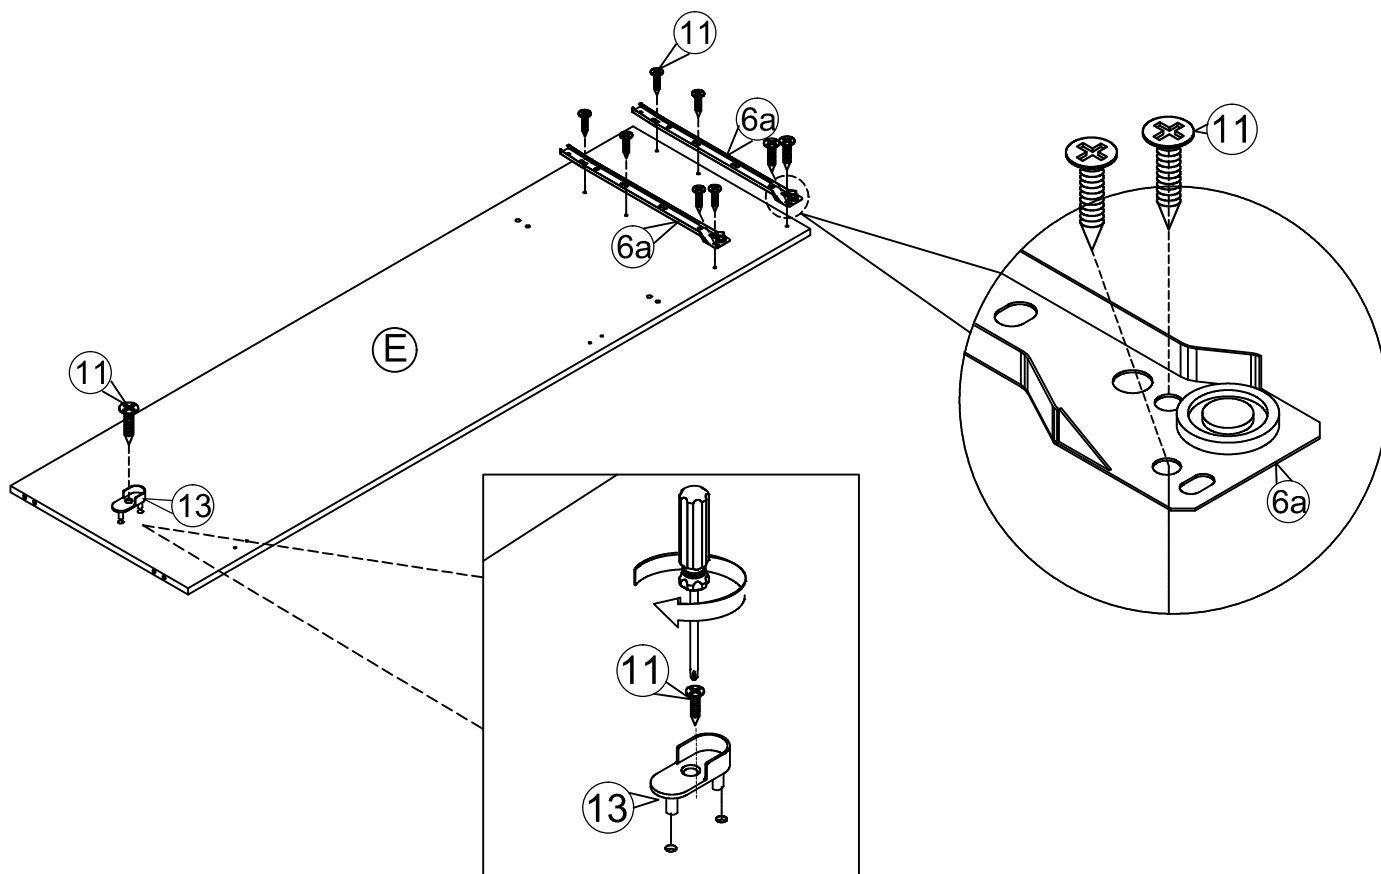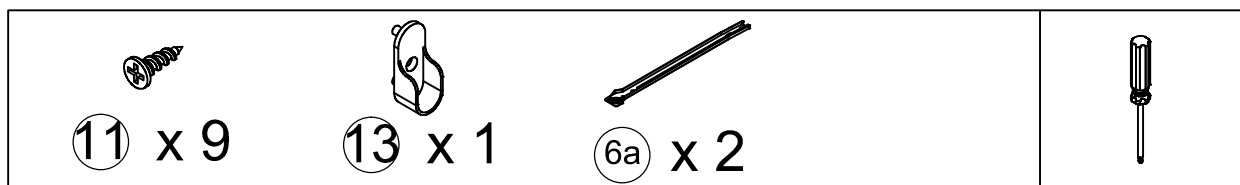   

5

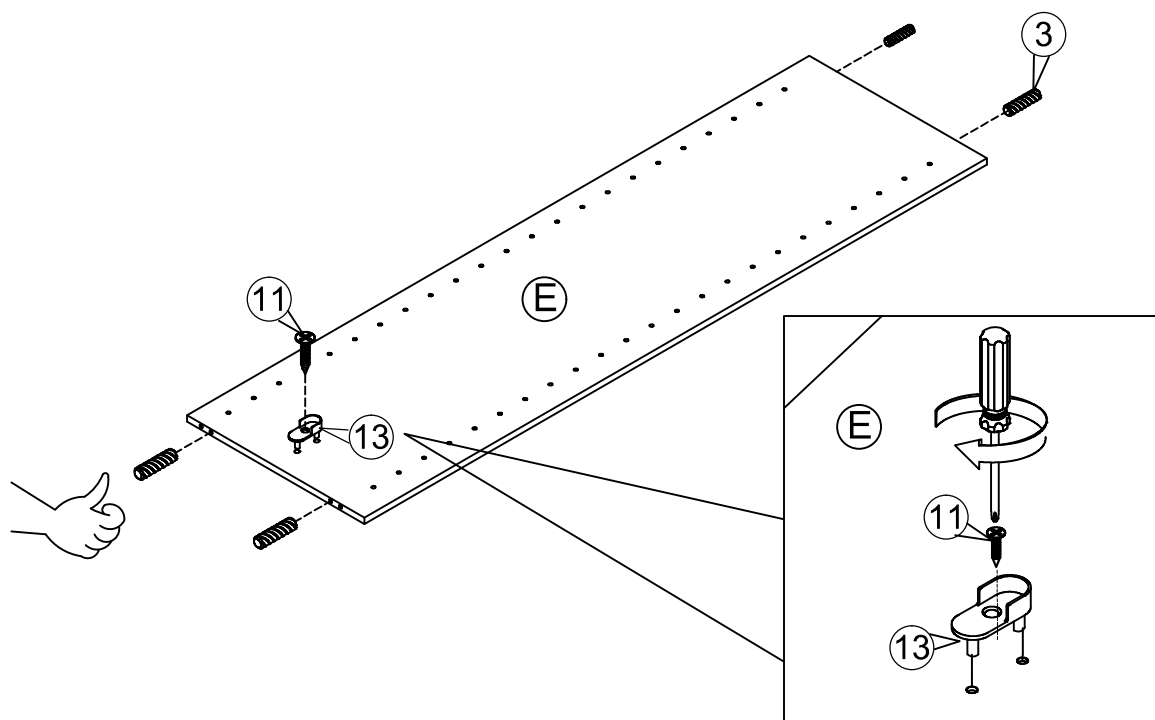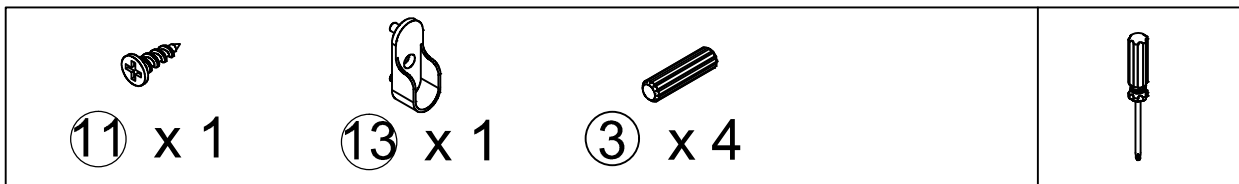  


6

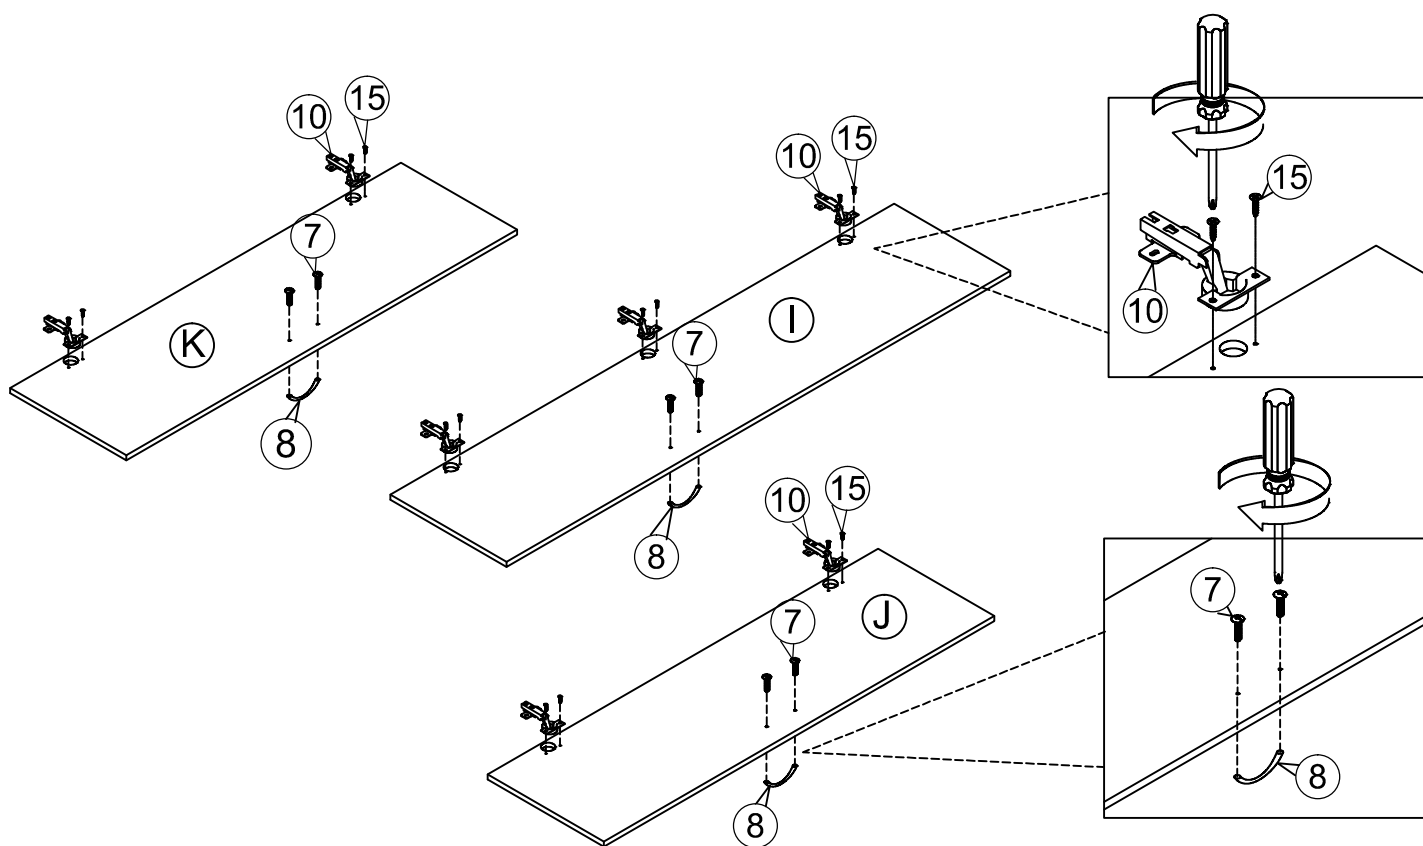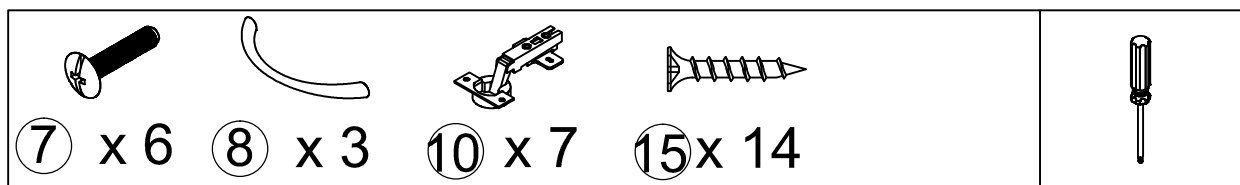  


7

 ④ x 2

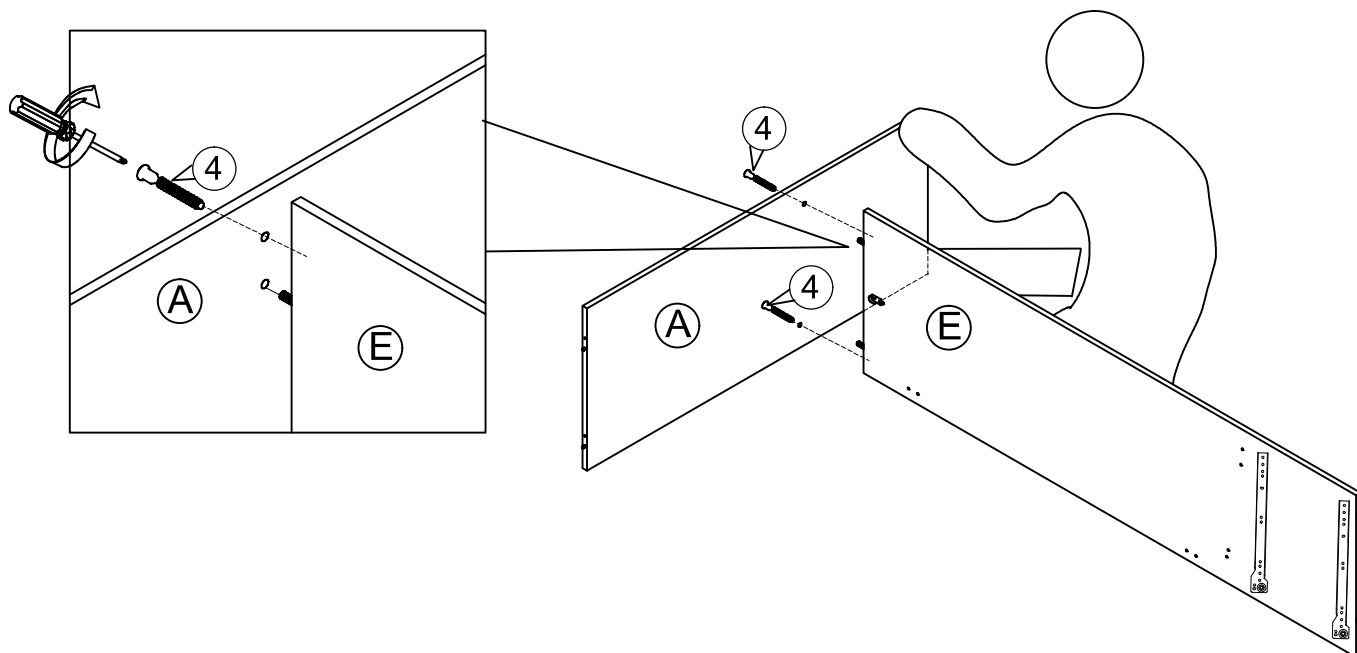


8

 ④ x 2

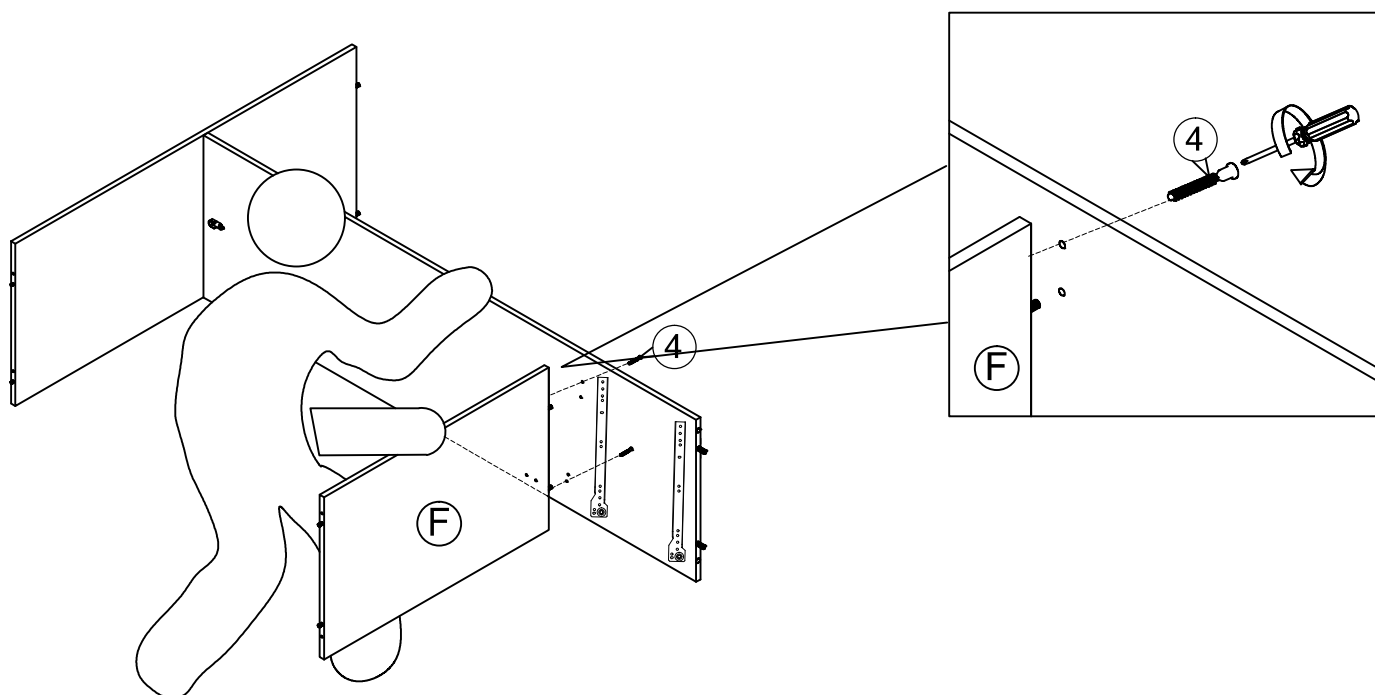


9

 ④ x 2

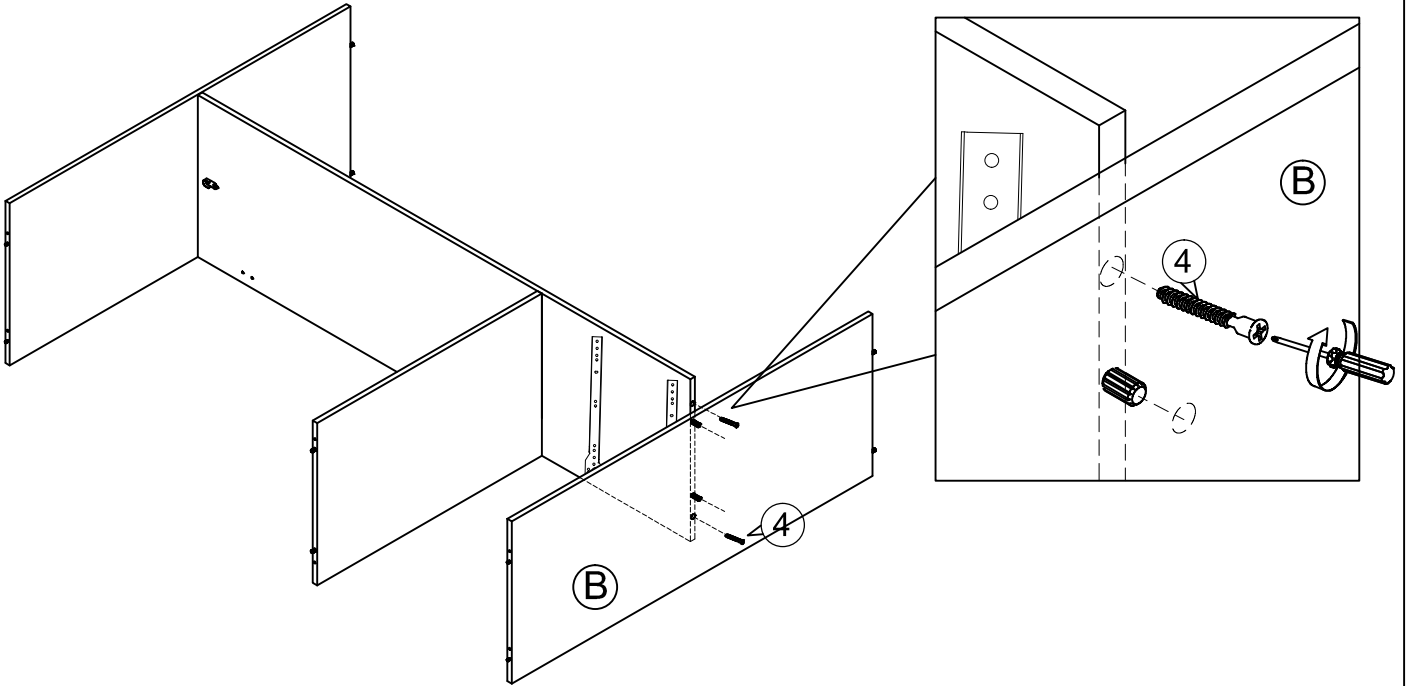


10


 
④ x 6

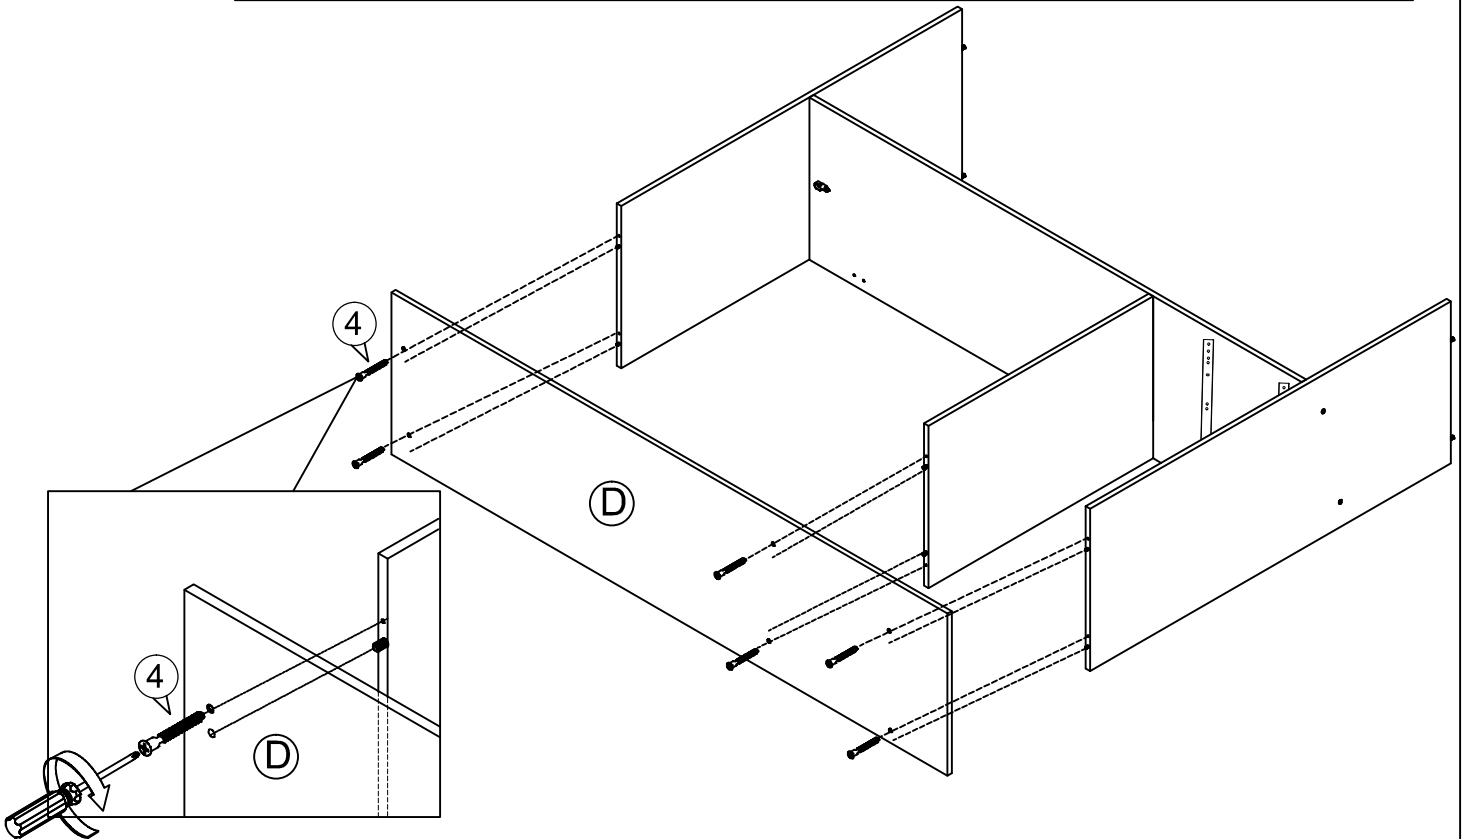

11

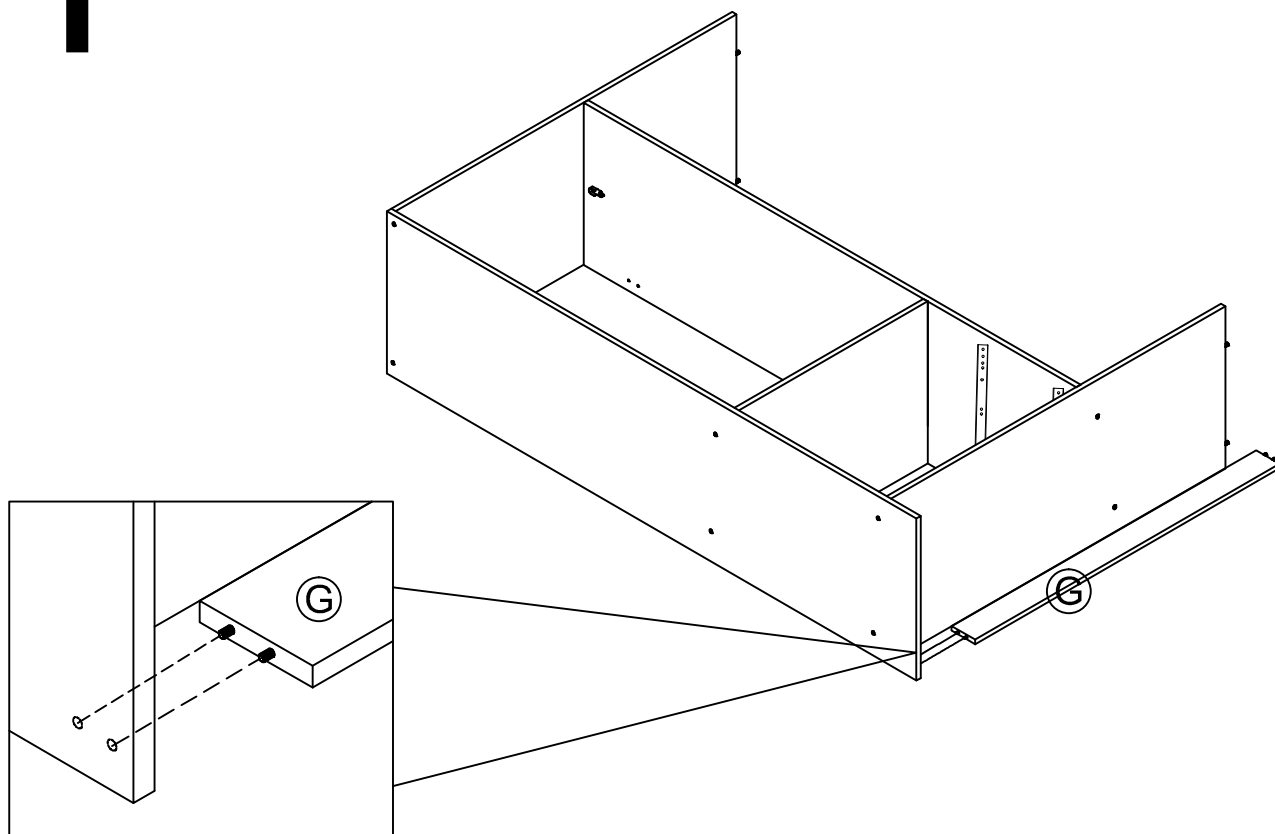 


12

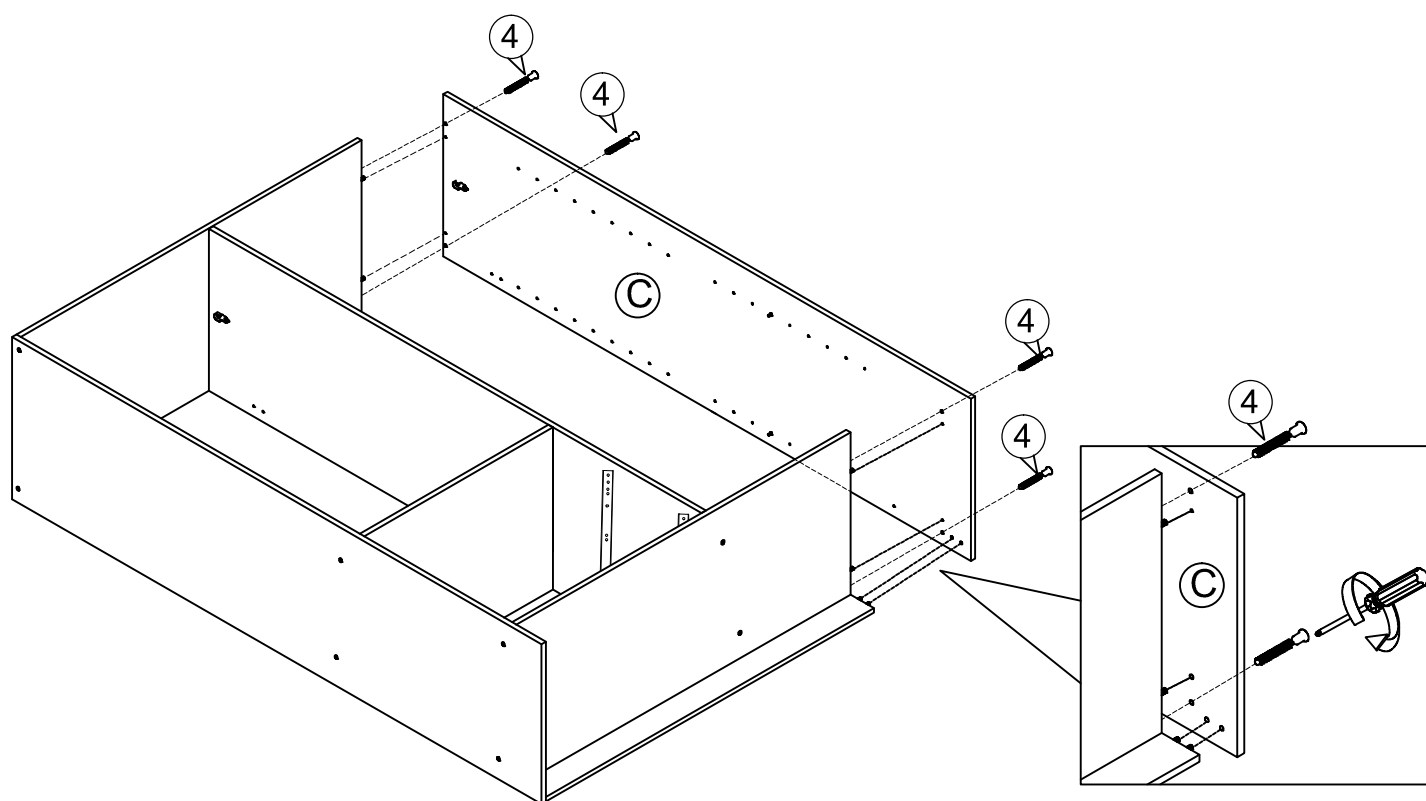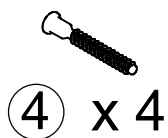  


13

 
5 x 14

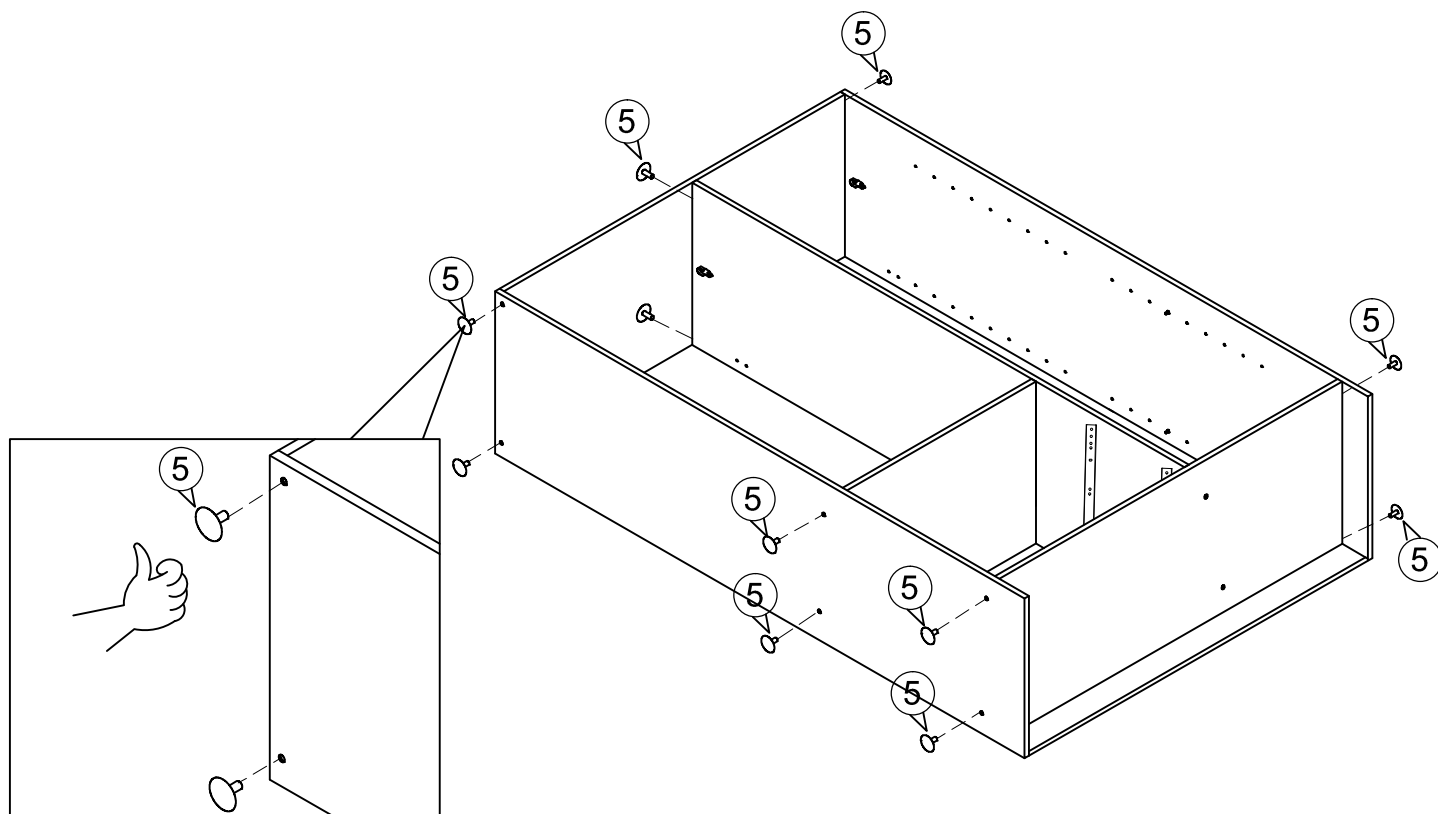

14

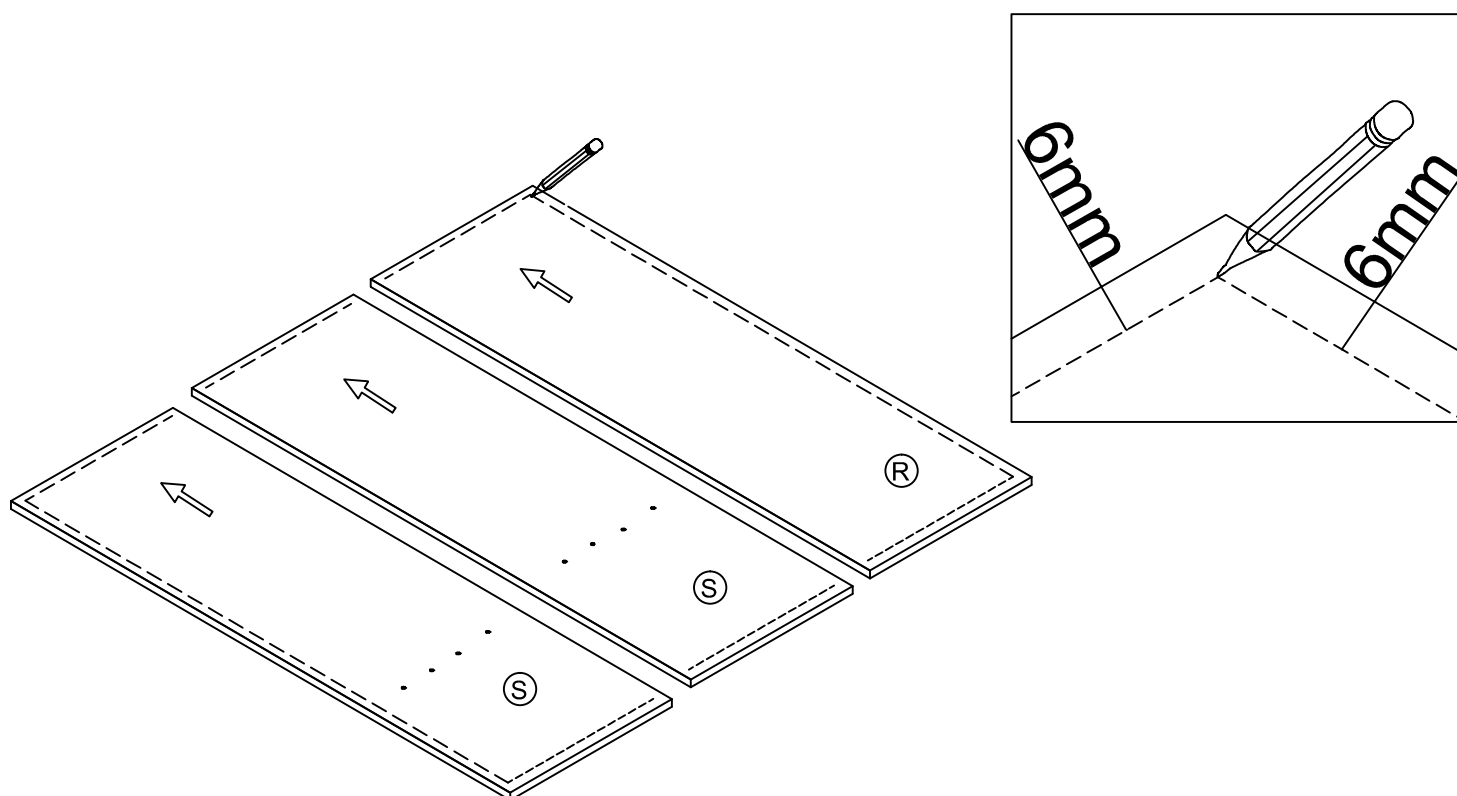 



15

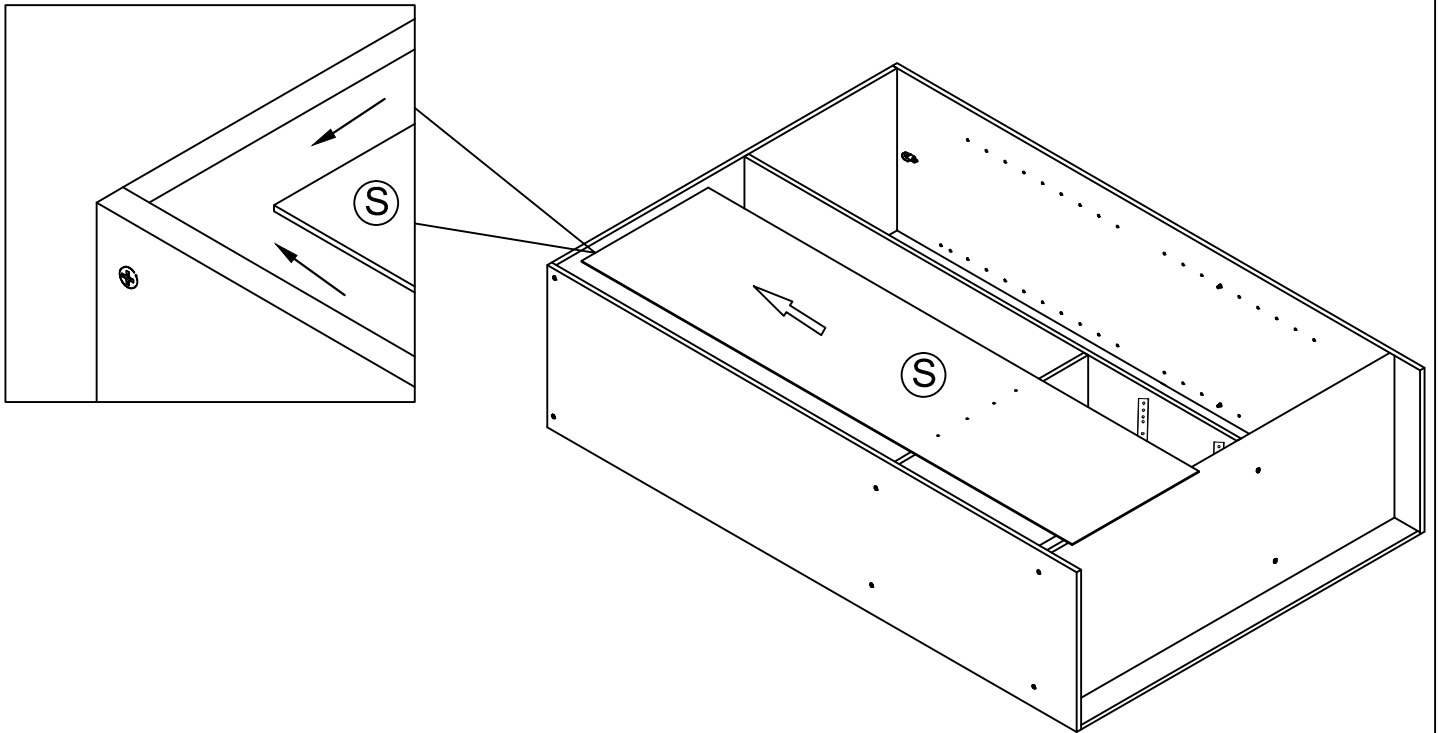 


16

⑫ x 25

  
⑰ x 4

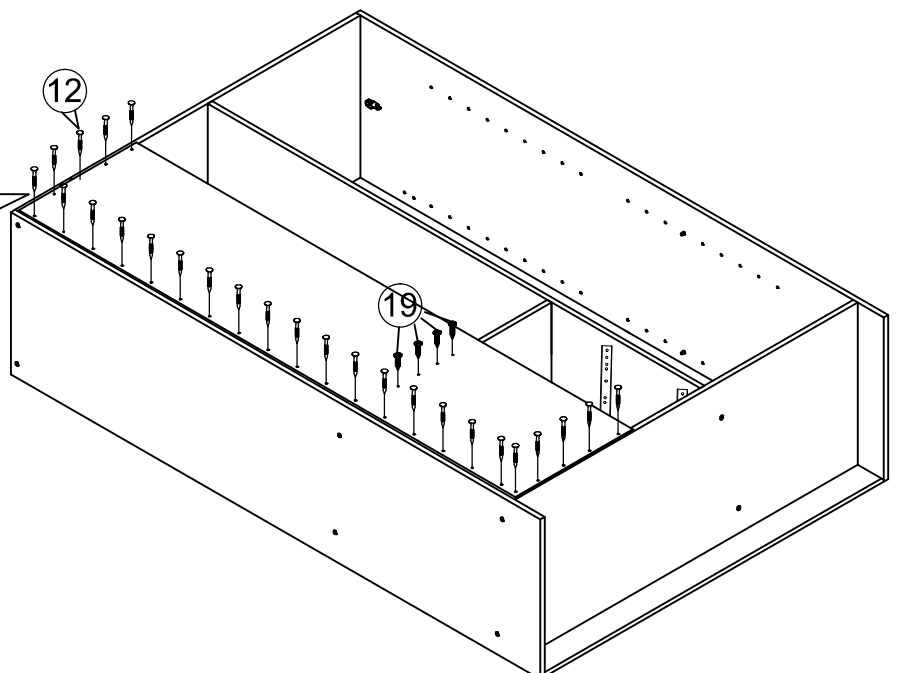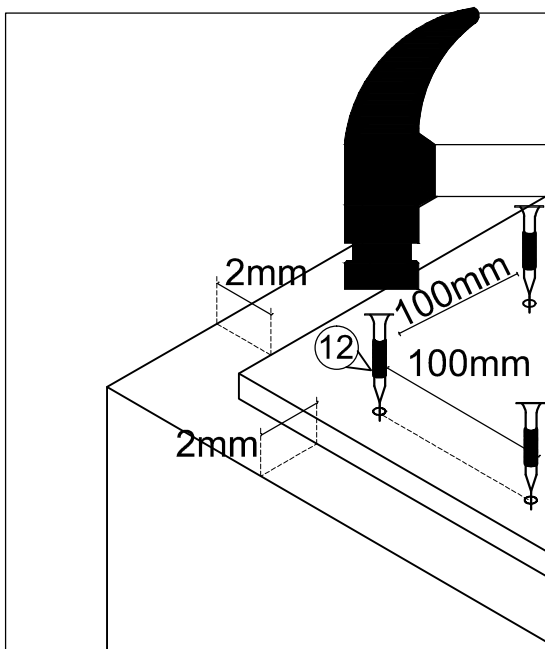


17

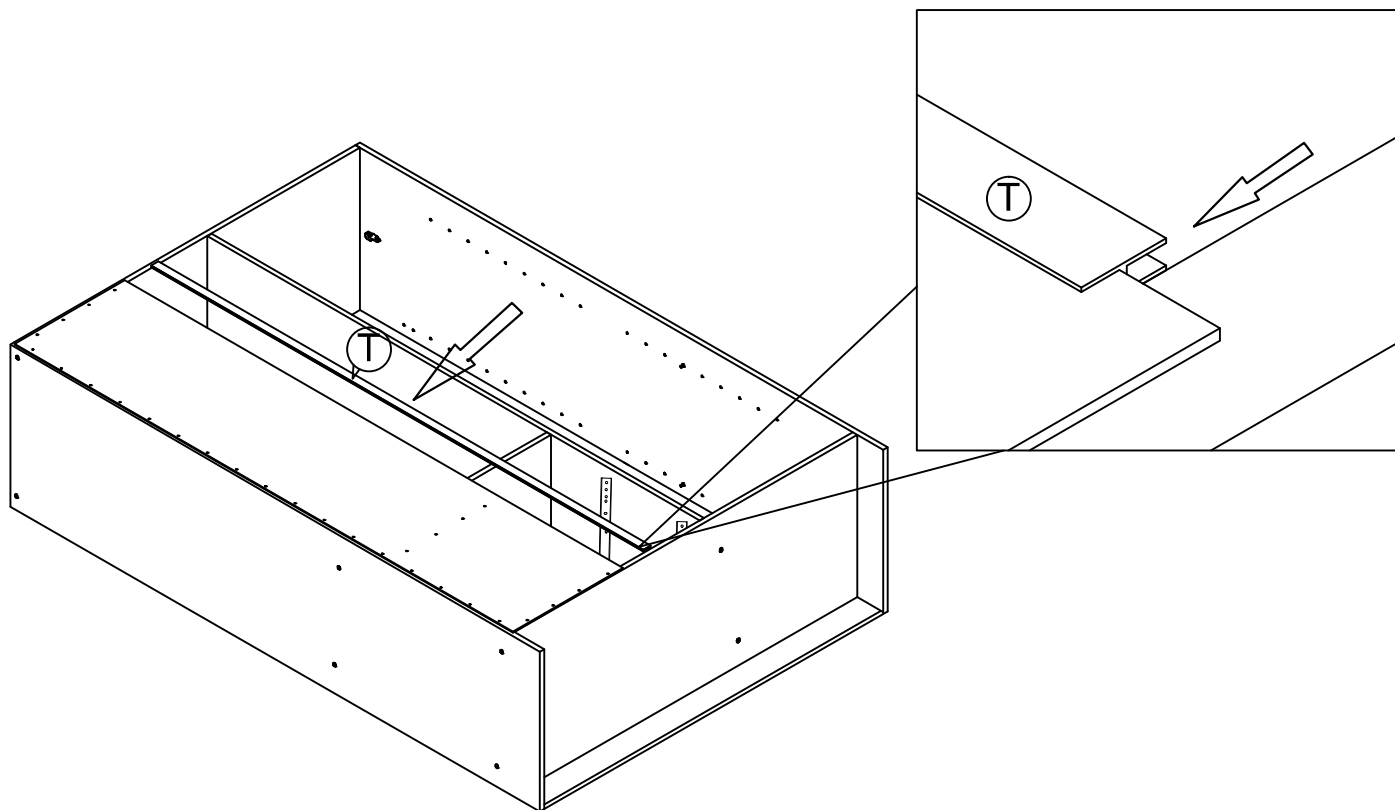 

 
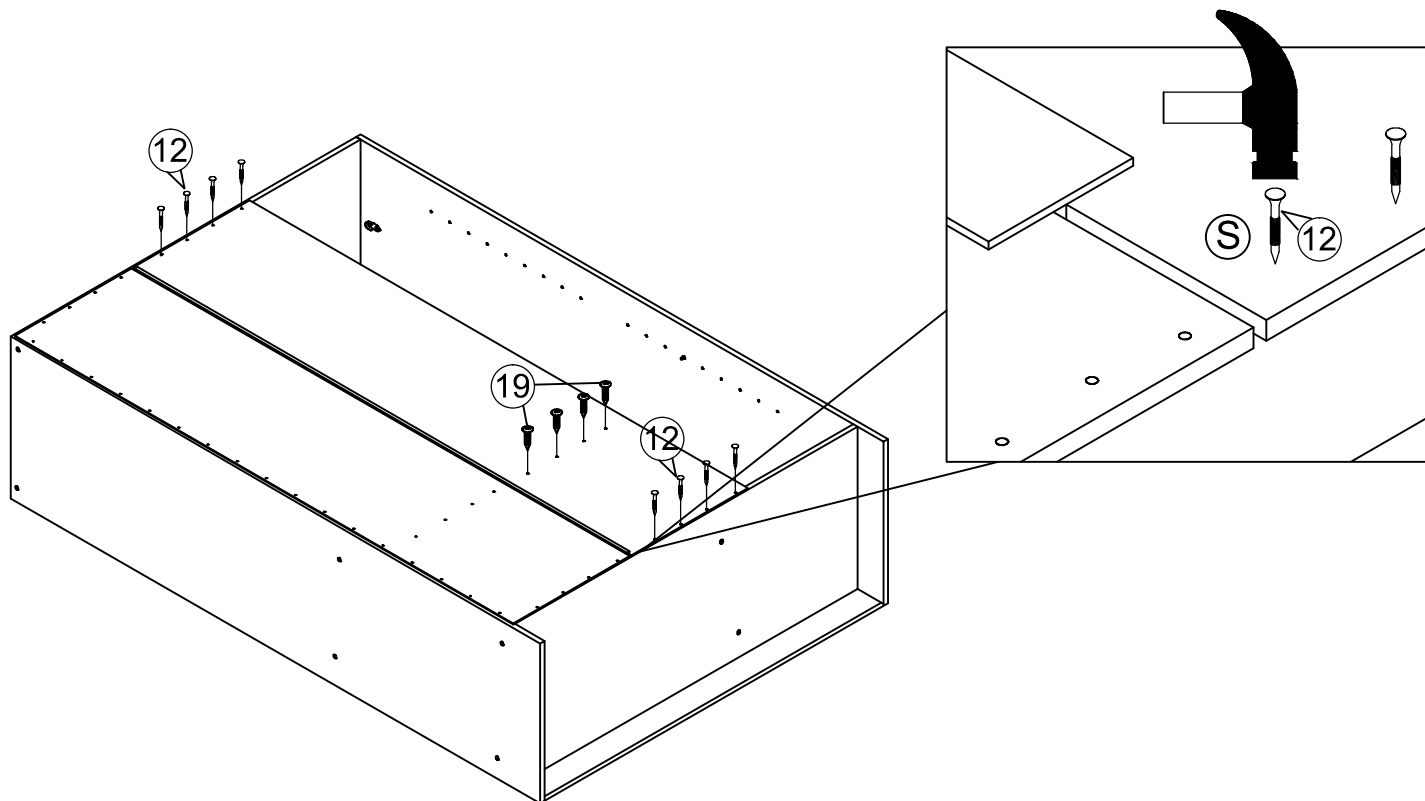 
18

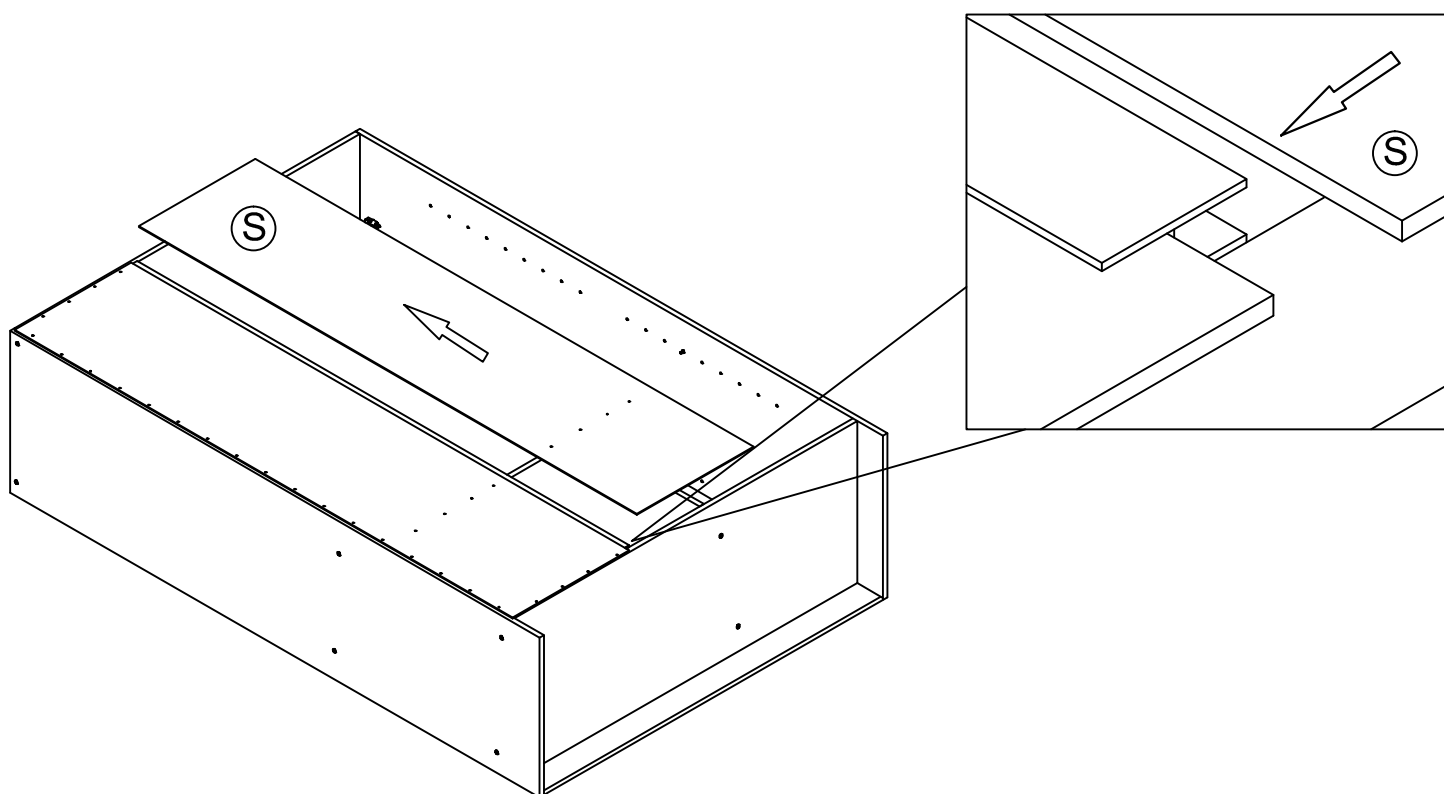


19

 x 8


 x 4





   20

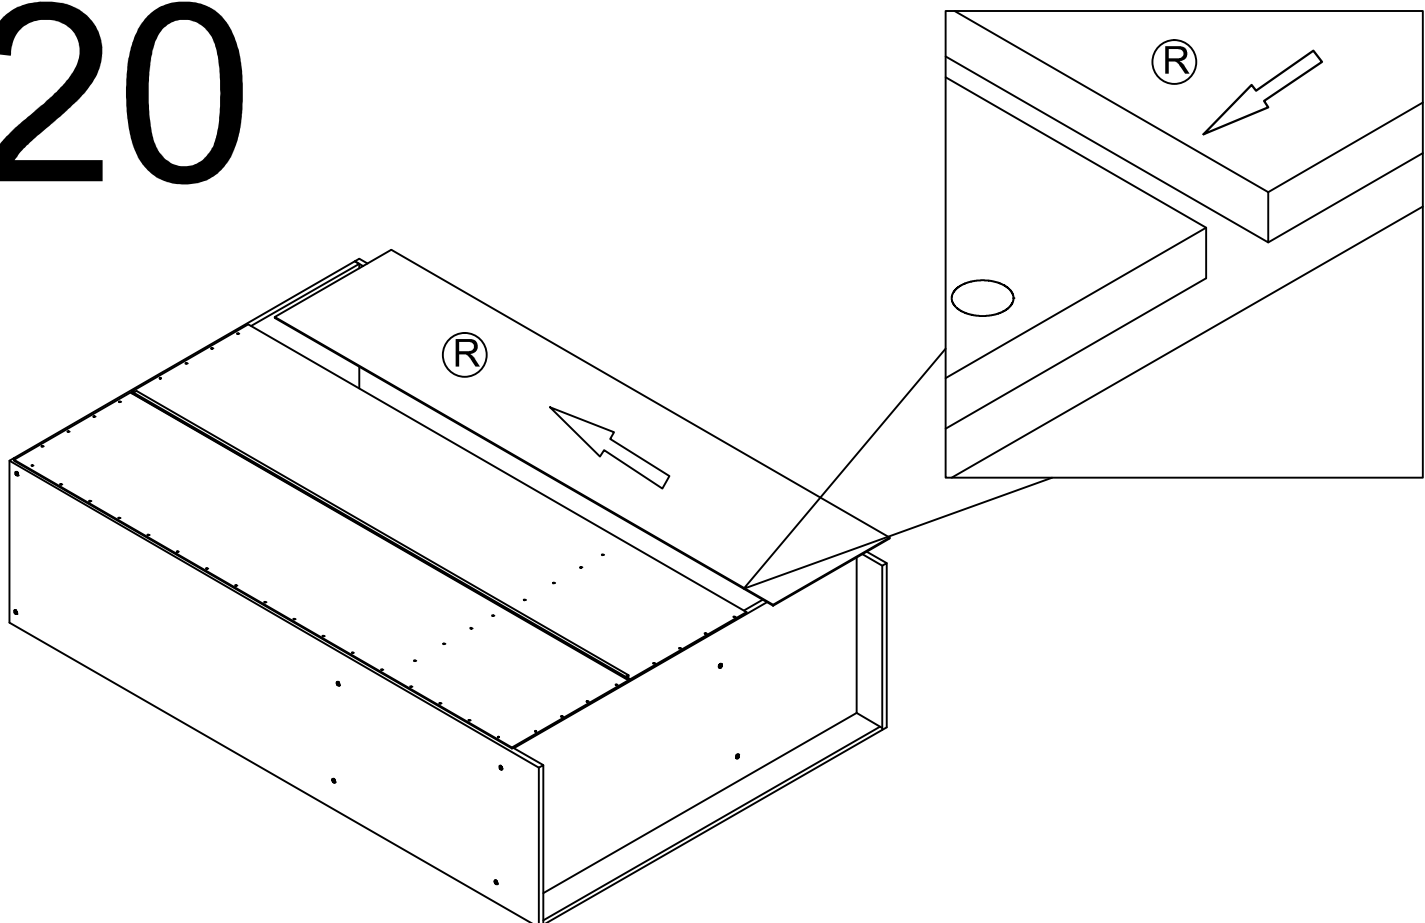


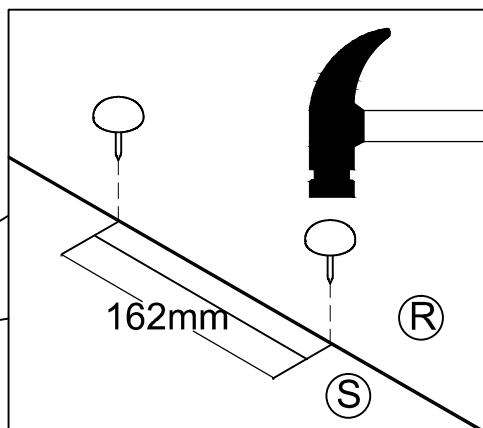 
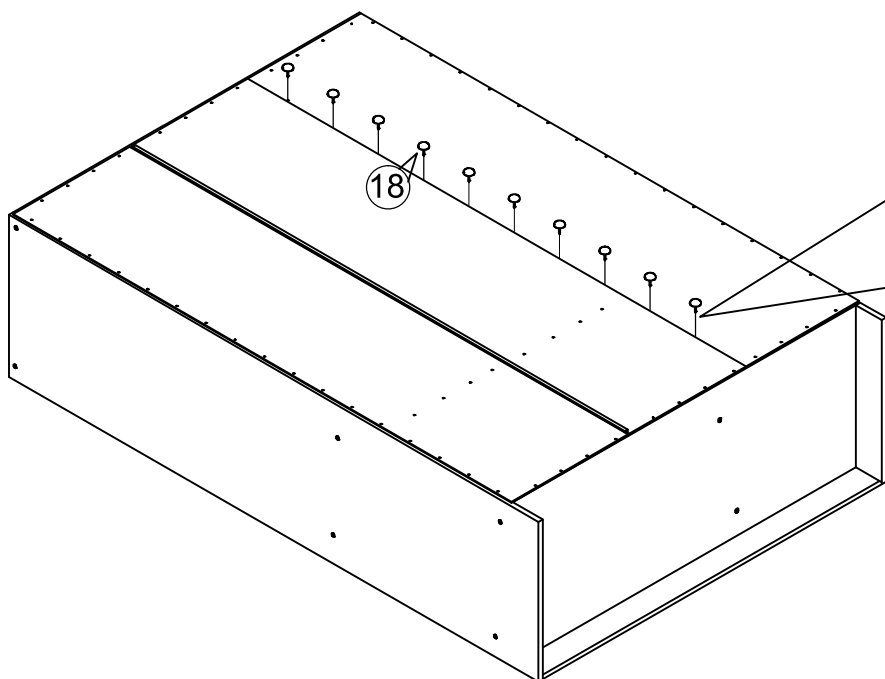 
21


 12 x 25

 
 
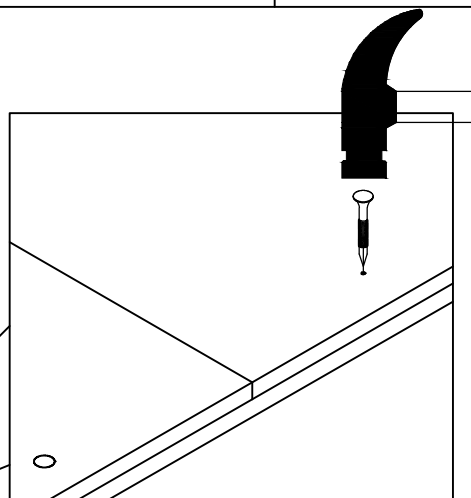 
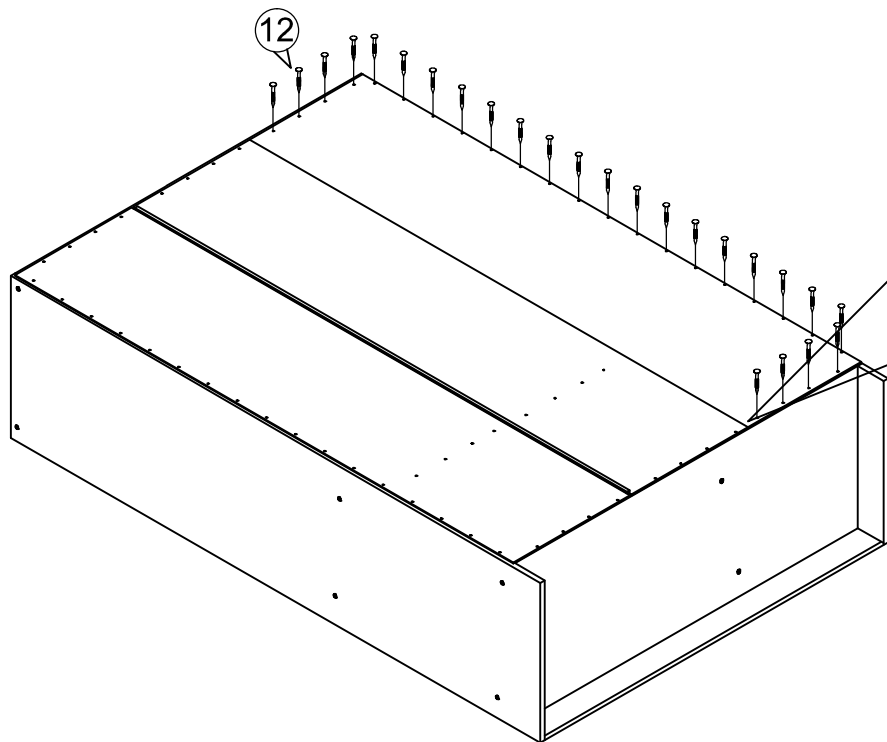 


22






 18 x 10




23

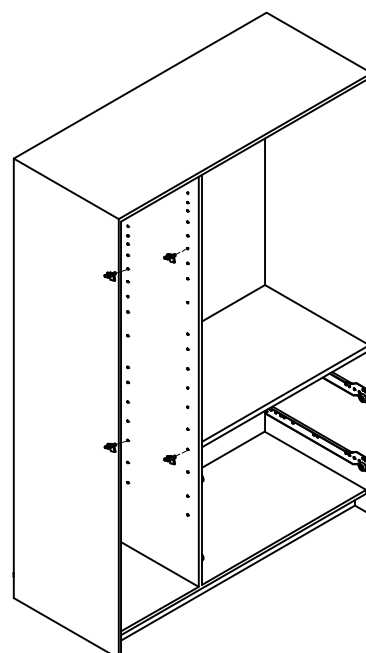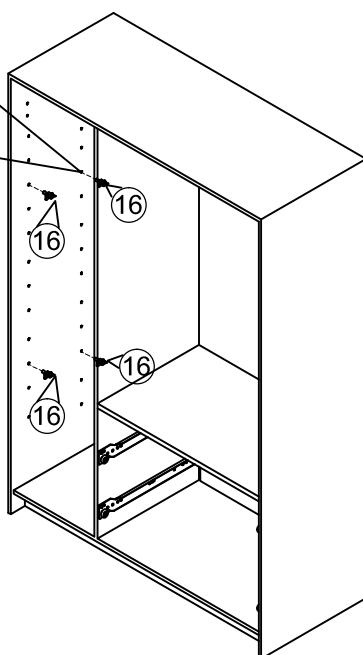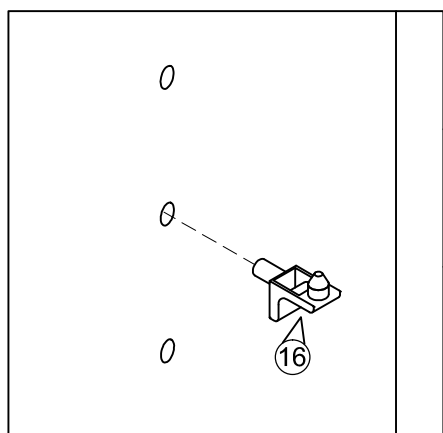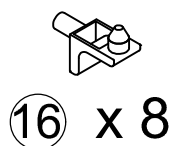

24

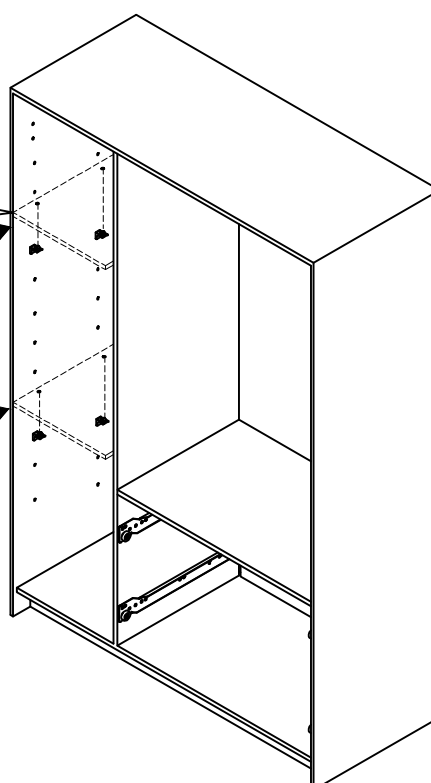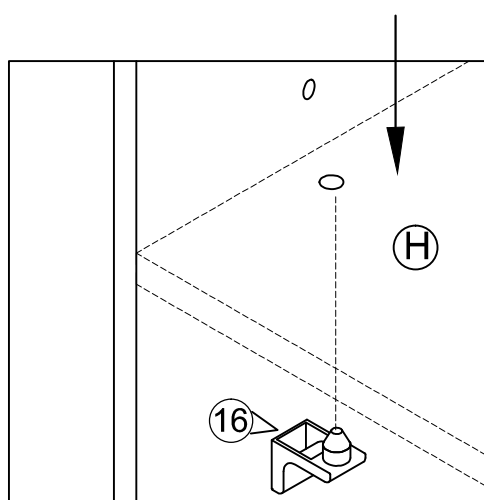    


25

 

② x 5



 
⑦ x 4




⑧ x 2



 X 2

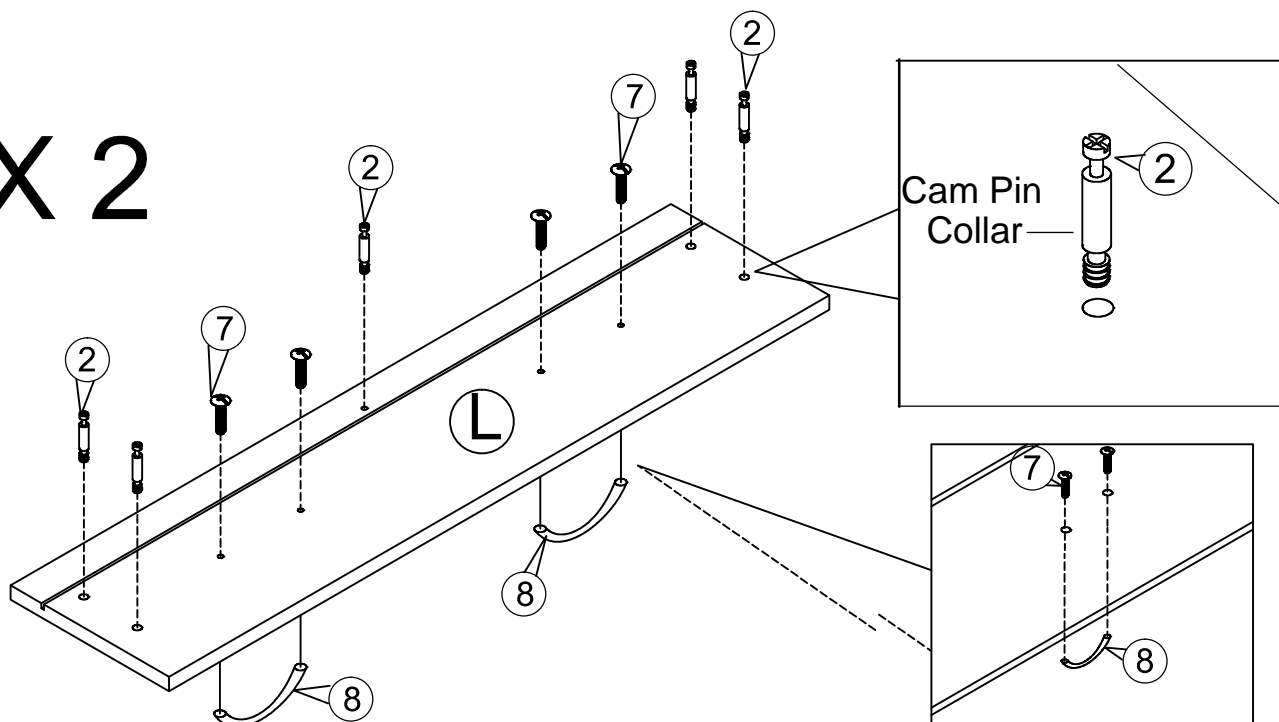


26

 

⑨ x 6




 X 2


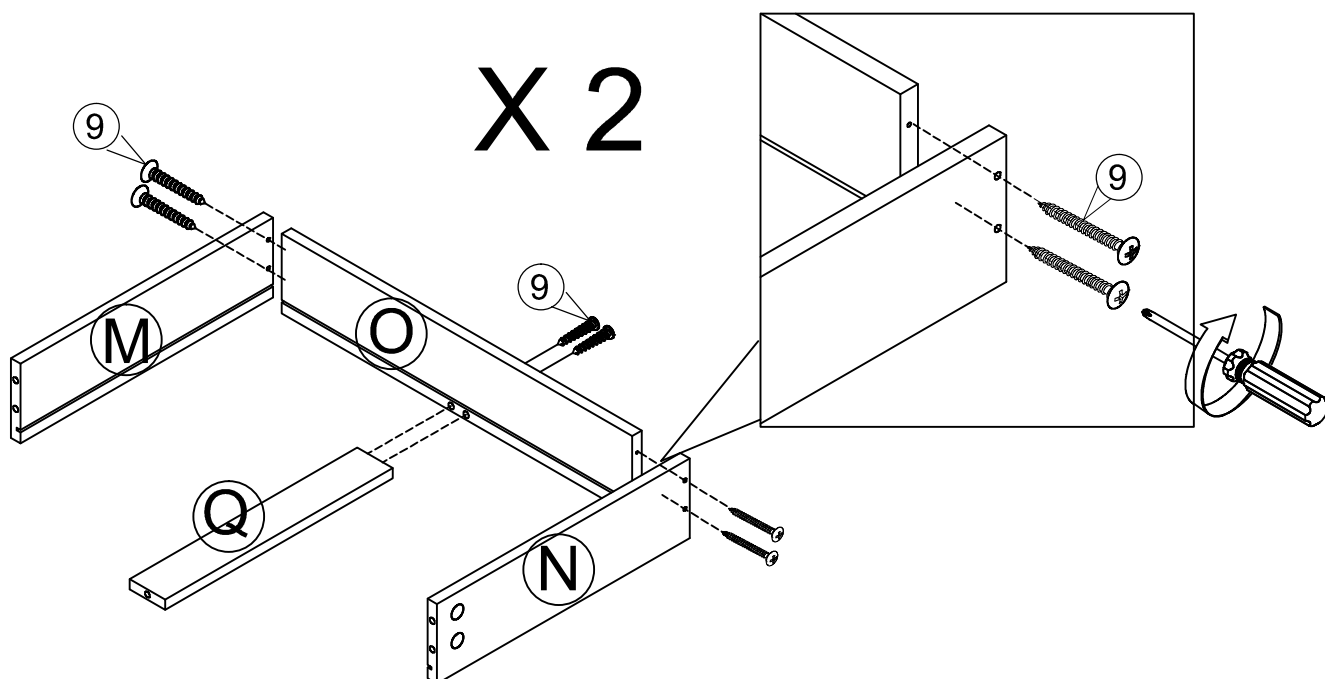


27

 X 2

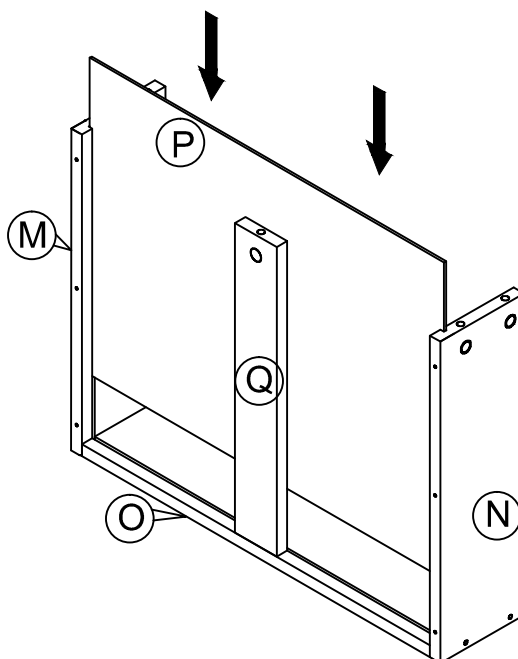


28

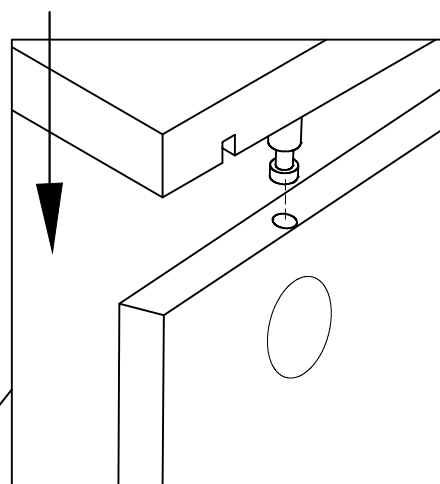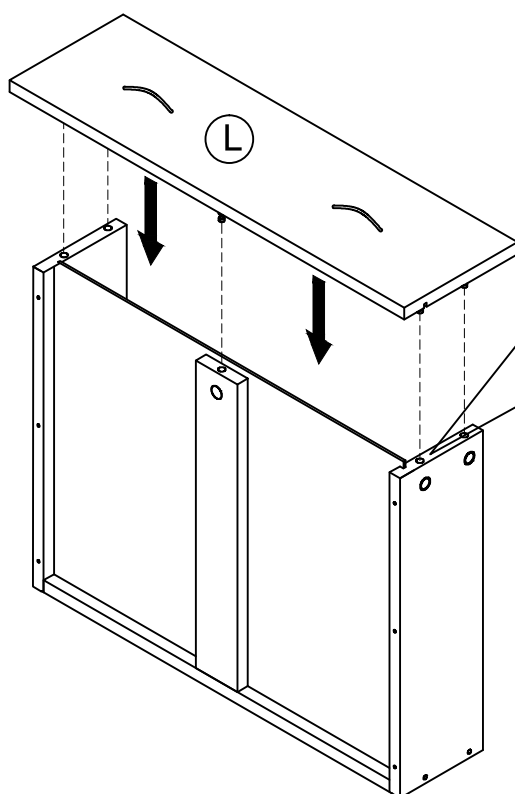  

X 2

 
29

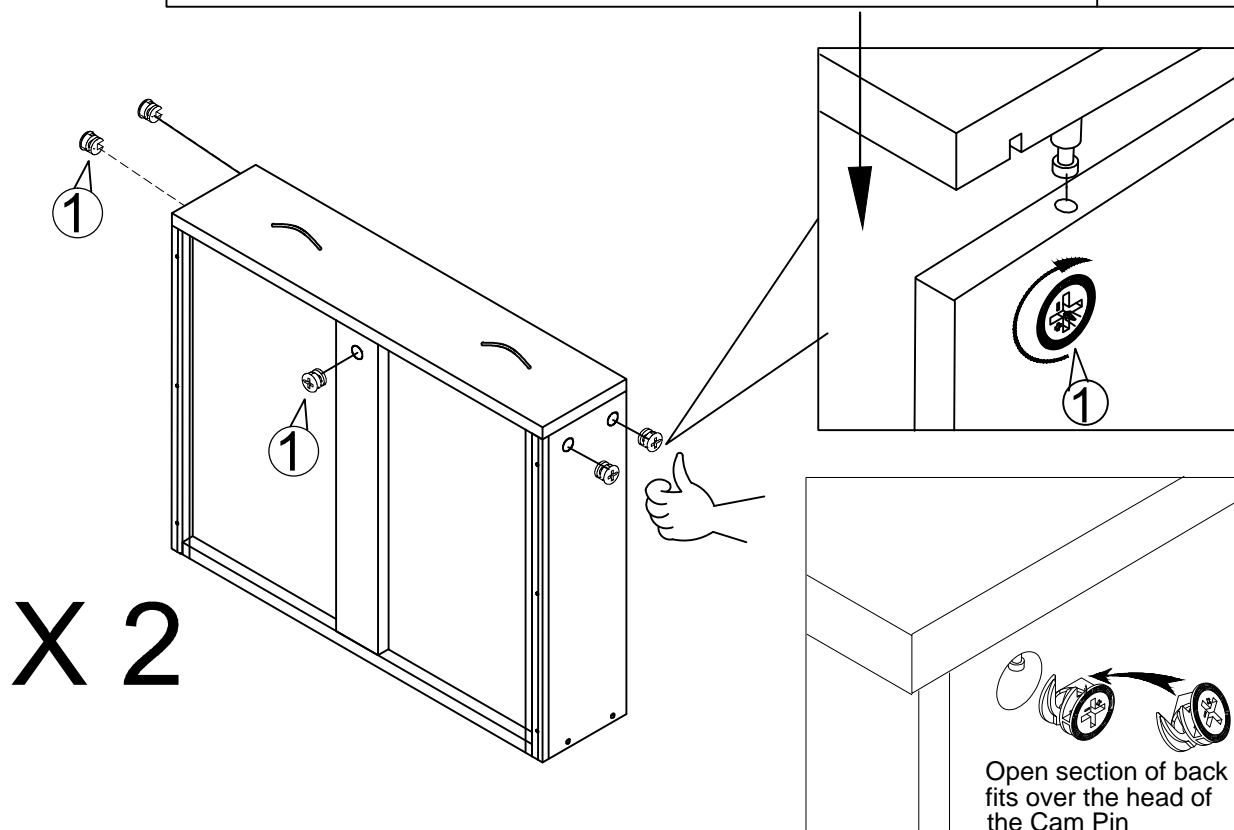

① x 5




 30



⑪ x 4

 
⑥b x 1

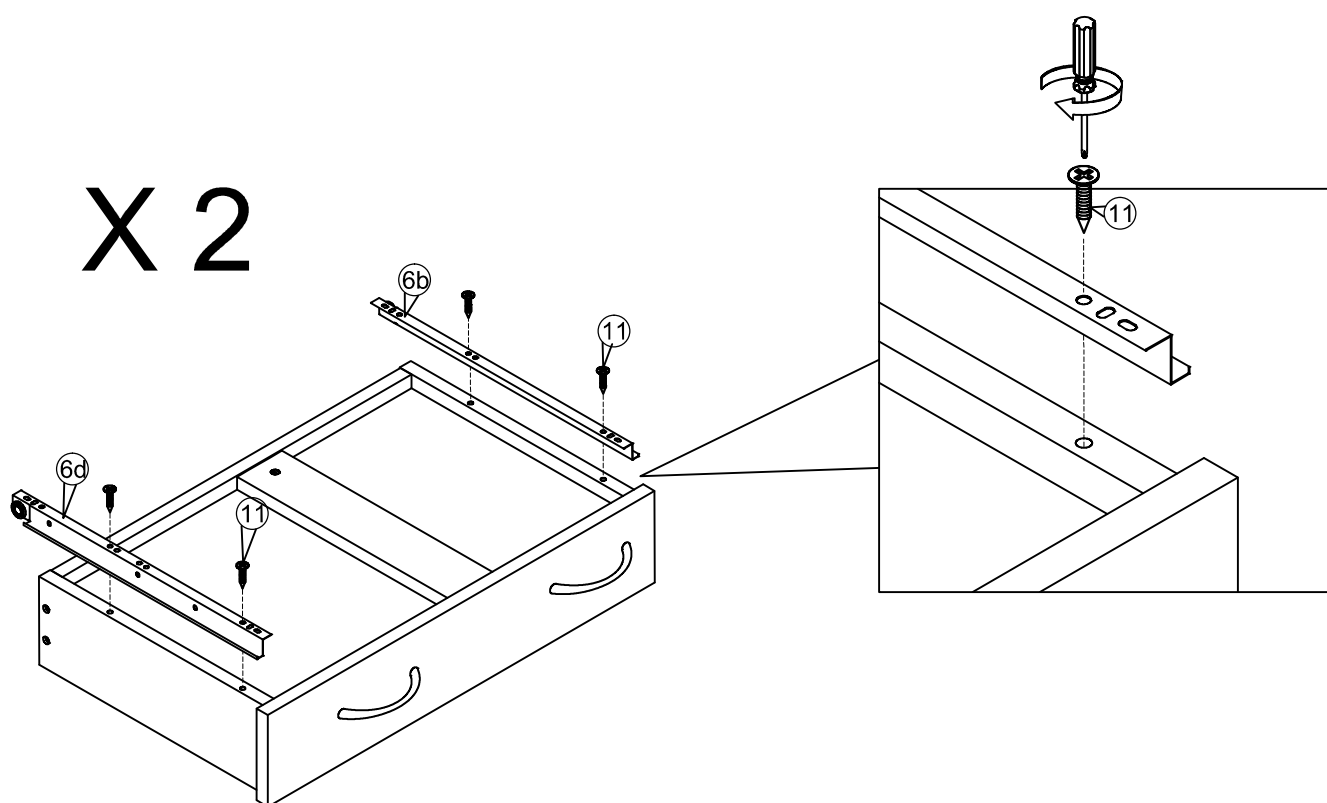

⑥d x 1

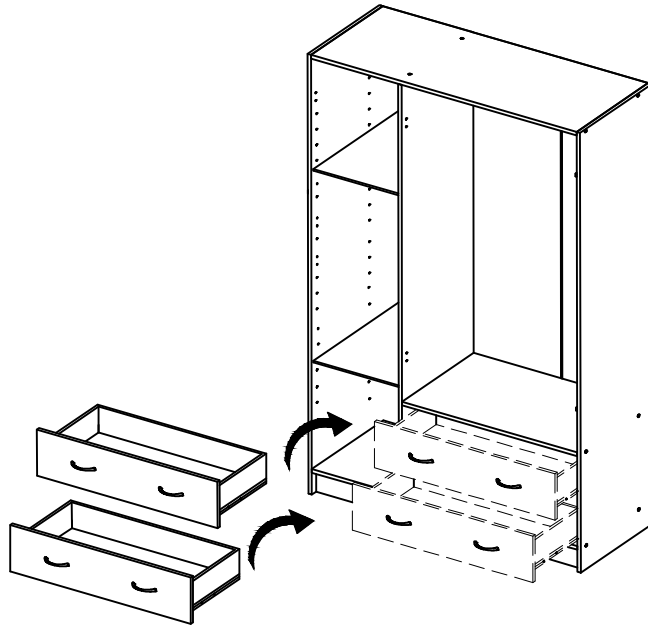 



31




32

 
 x 1

 x 1

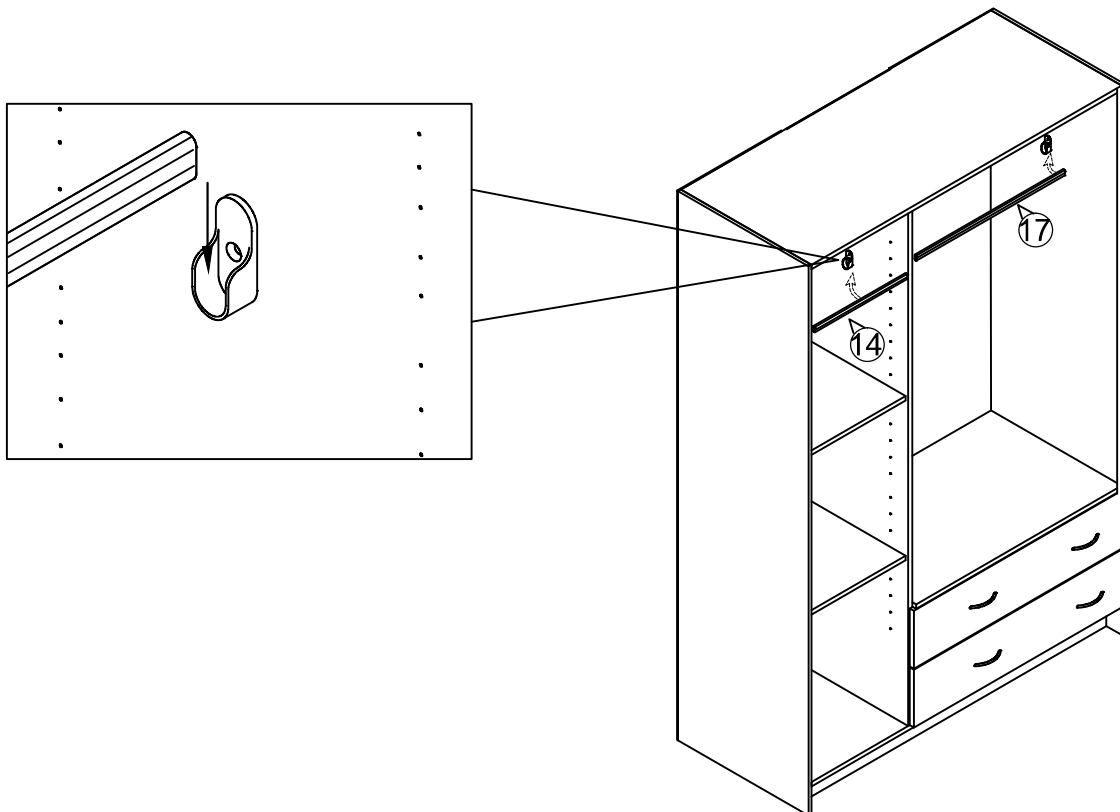 

 
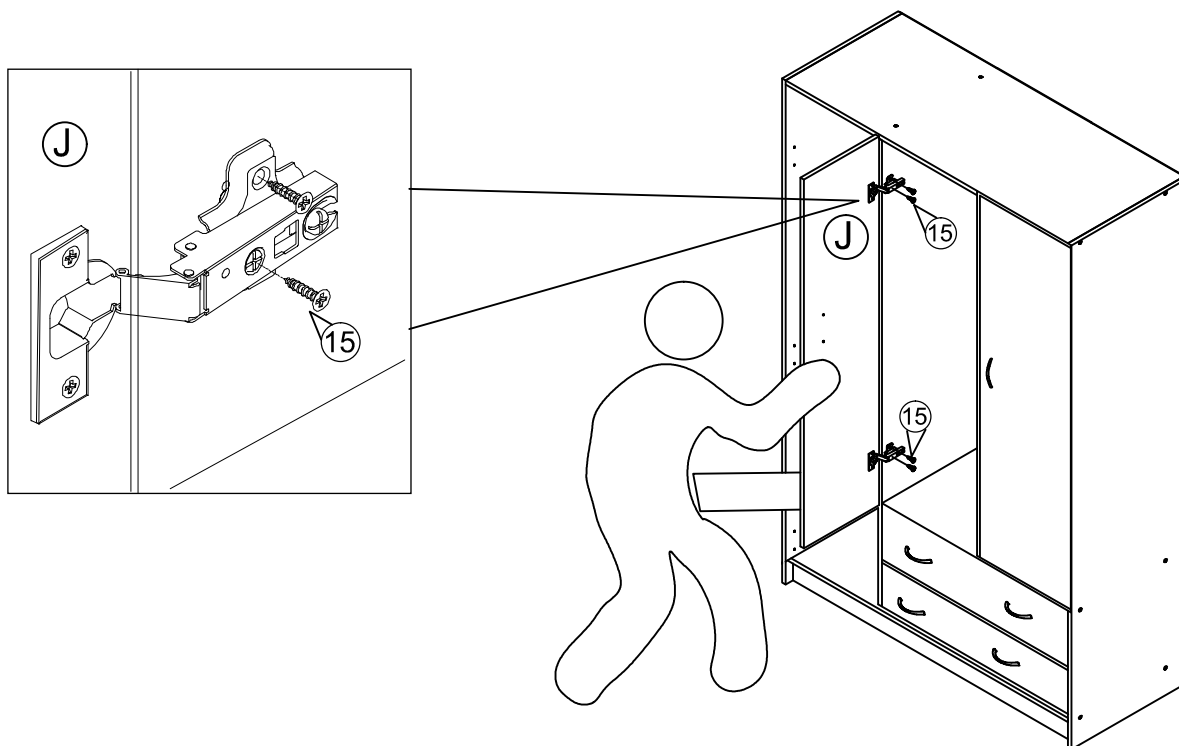 
33

 15 x 4

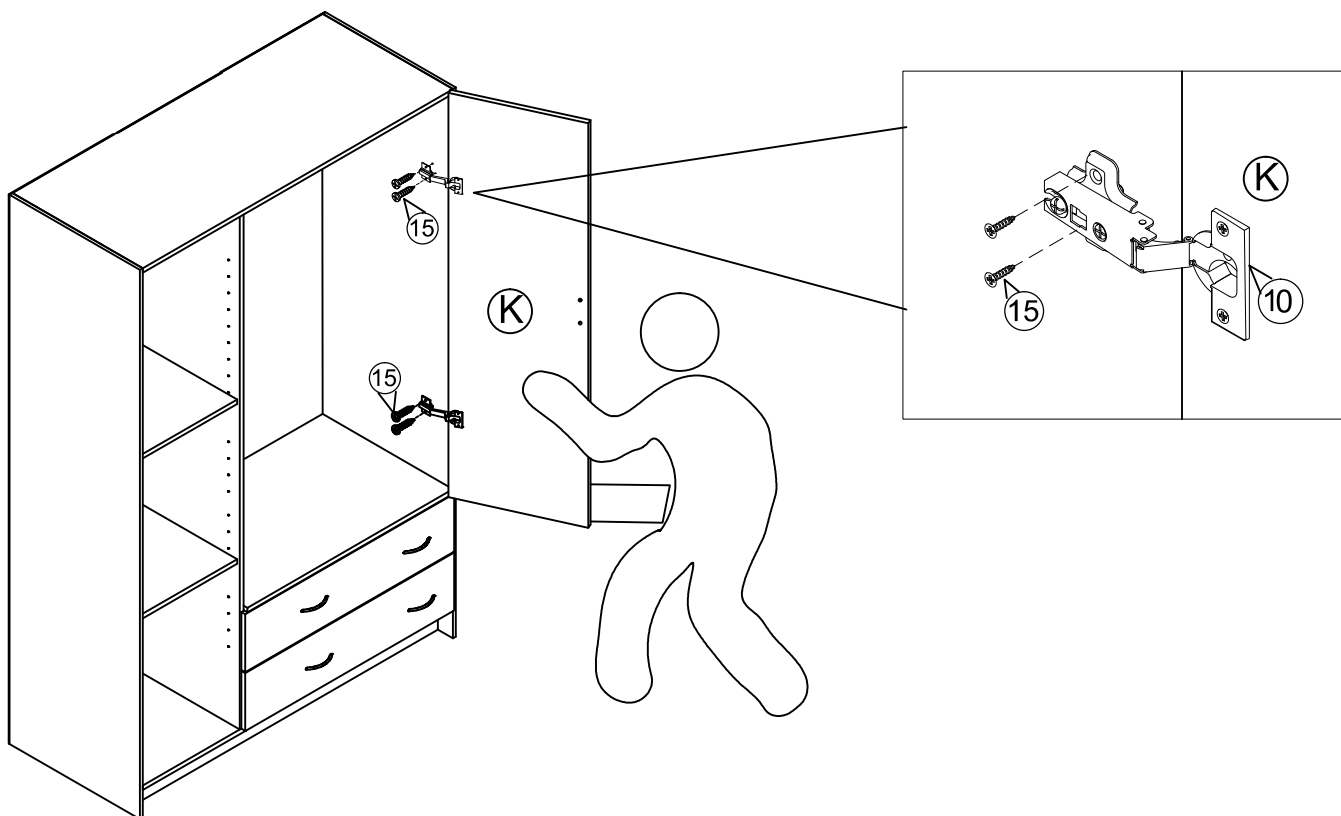

 
34

 15 x 4



35


15 x 6

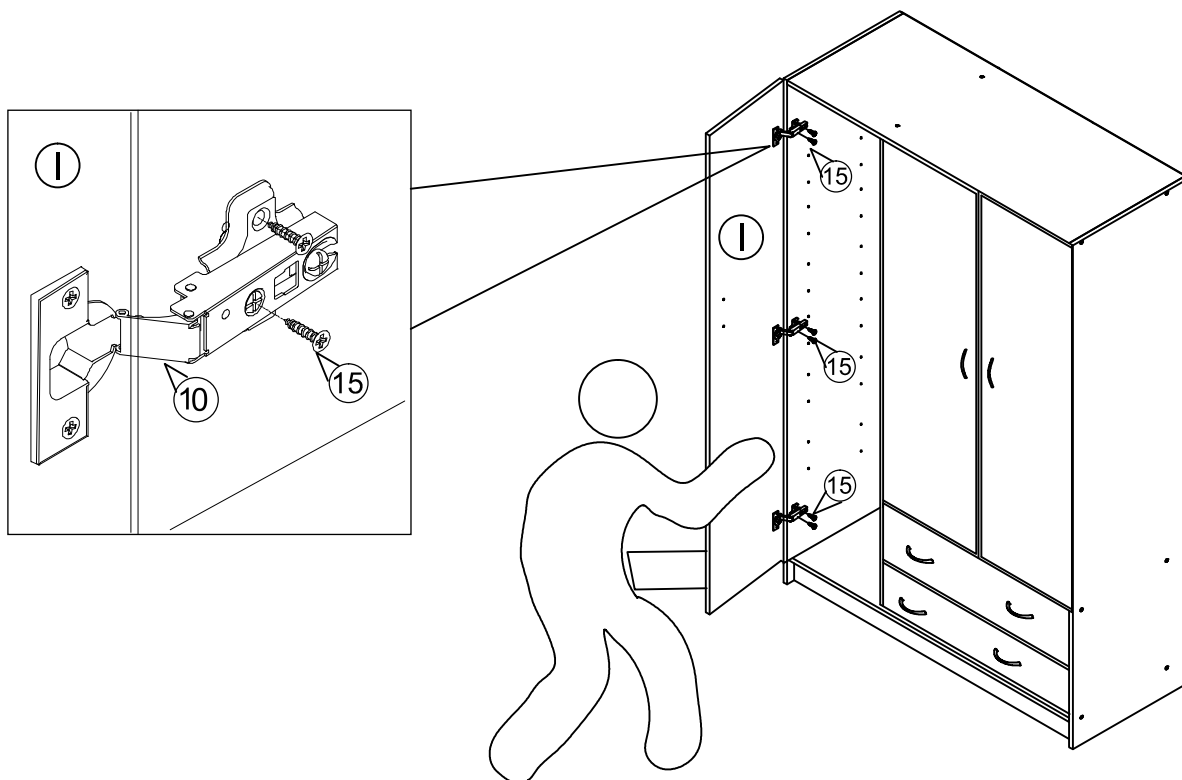


36



 
Adjusting possibilities

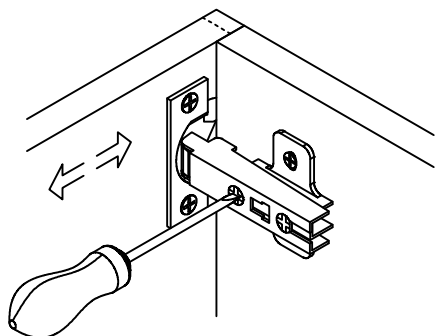

 - Lateral adjustment by screw adjustment

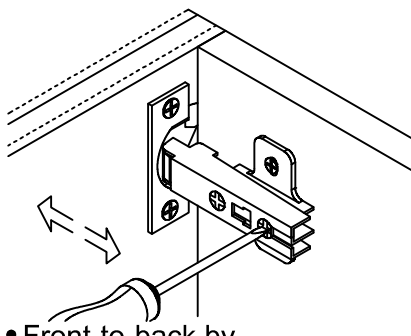

 - Front-to-back by slackening the hinge-arm mounting screw

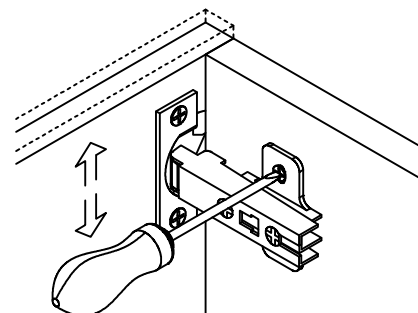

- Vertical adjustment via mounting plate (via slots or, if in two pieces, by screws)

SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short screws .
3. Move the furniter to its final position. Thread a Wall Strap through the both Mounting Plated and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plated are firmly attached to the wall and fumiture and that the Wall Strap is snug.


HARDWARE



 
2 PCS
20 x 40 x 1.2mm
Wall Bracket




2 PCS
Ø9 x Ø6 x 25mm
Plastic Screw

 



2 PCS
Ø9 x Ø4 x 15mm
Screw

 

2 PCS
Ø9 x Ø4 x 25mm
Screw

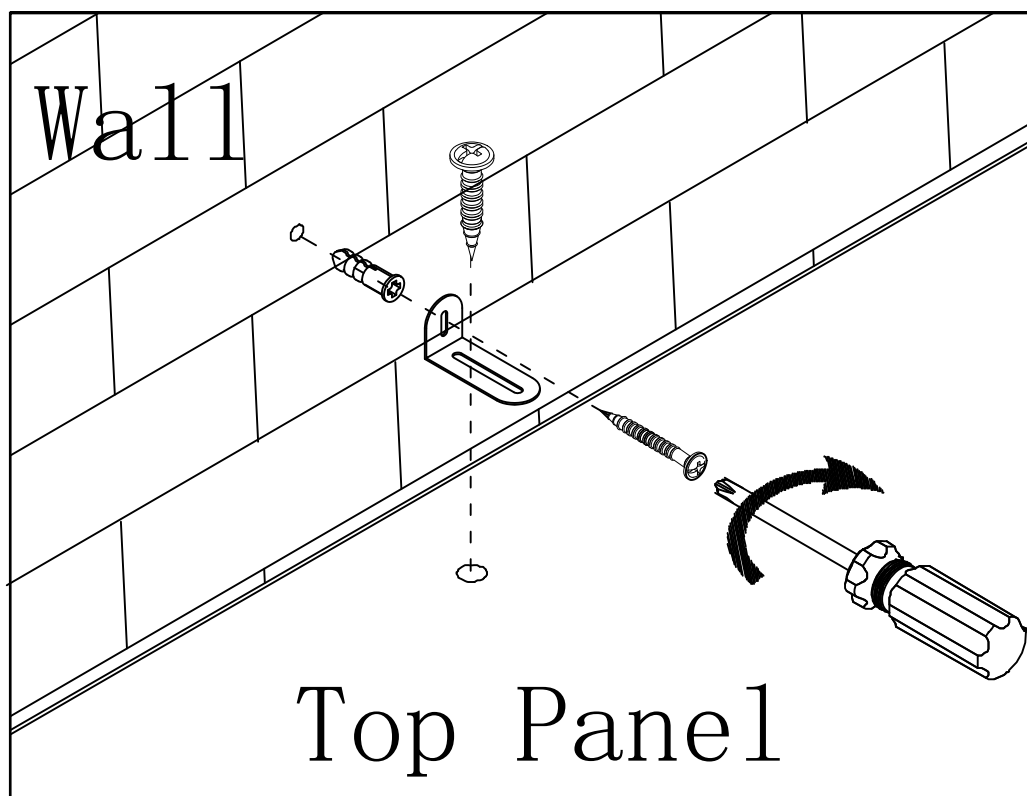 


37

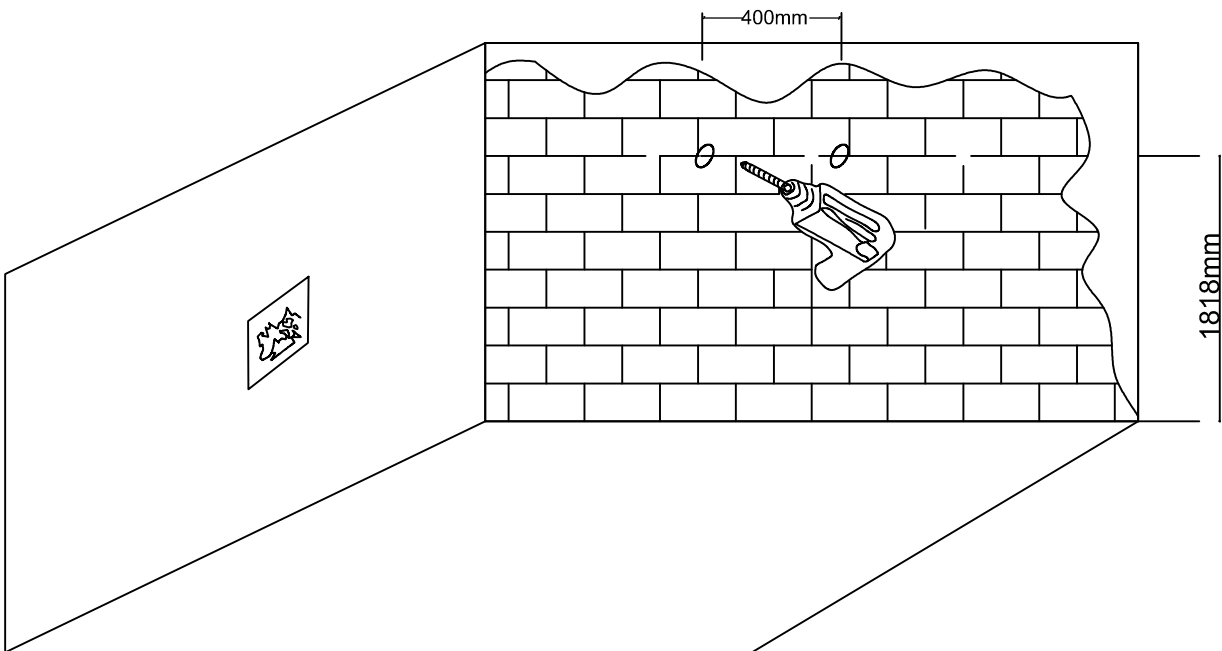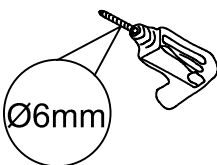  


38




 
21 x 2


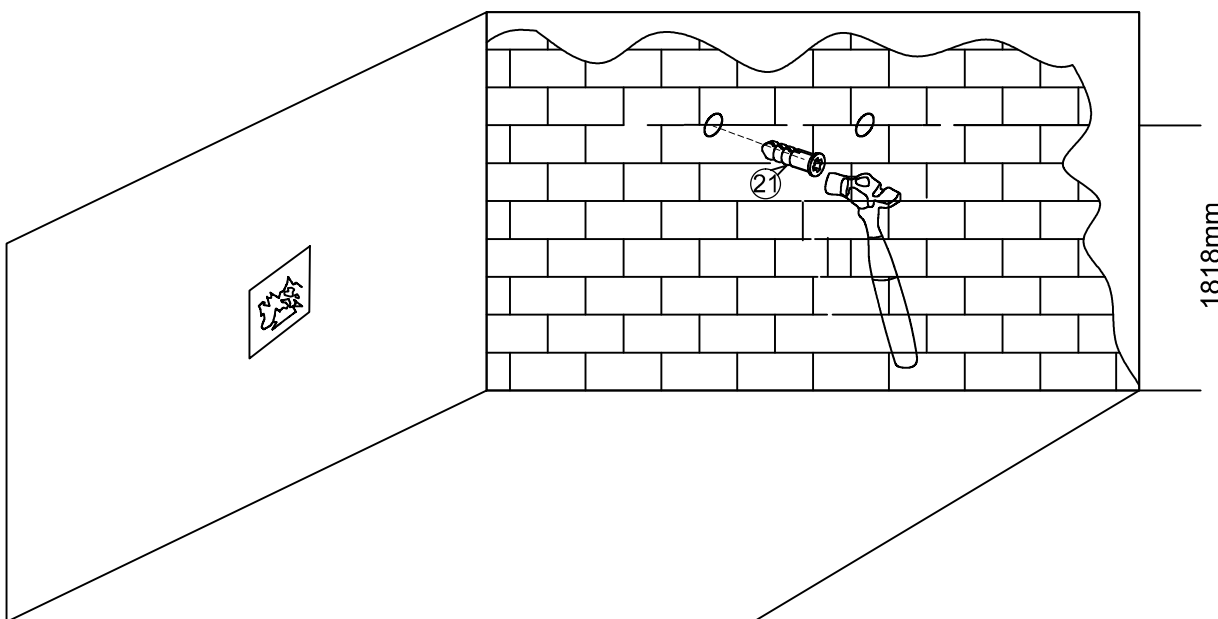


39

  

20 x 2



22 x 2

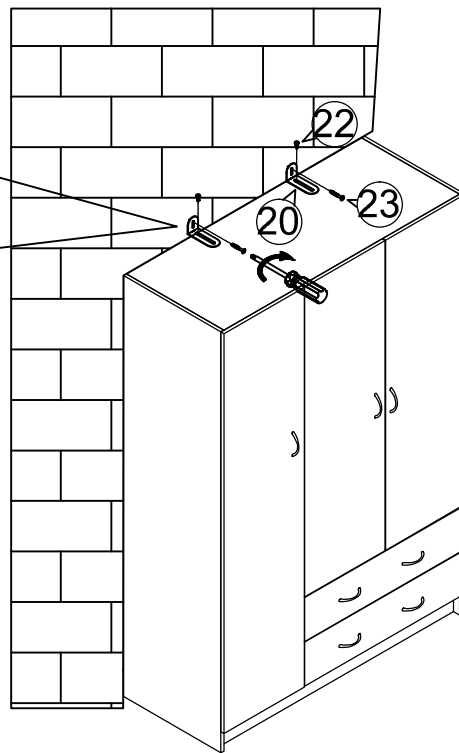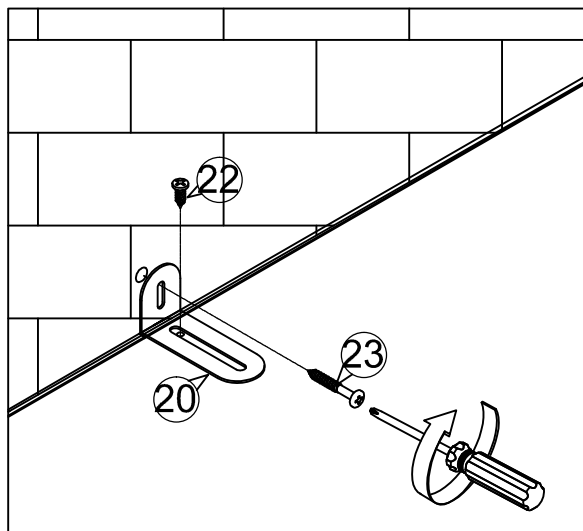  
23 x 2

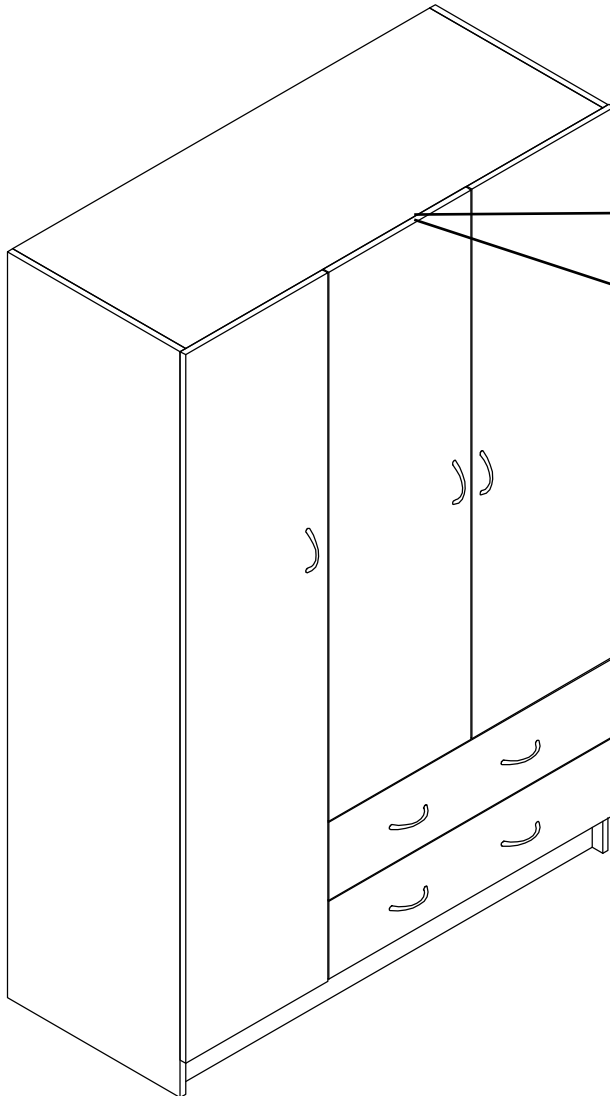 

ASSEMBLY IS COMPLETE



 on the back side of the top panel next to coo label

⚠ WARNING		
		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture </p> <p><small>This is a permanent label. Do not remove!</small></p>



Please note – Some floors could possibly not be level or flat so it is best to ensure the wardrobe carcass frame is square and level prior to fitting of doors. This might involve the use of packing material under the base.

Product Care



Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time

1