


#### ASSEMBLY INSTRUCTION

Spacesaver Module 4 Drawer Unit With 2 Shelves ITEM CODE 49157

Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 937 566

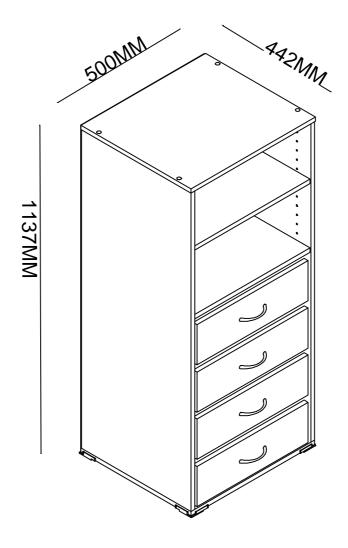


Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 937 566

#### PRE-ASSEMBLY PREPARATION


### Before you start:

- Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

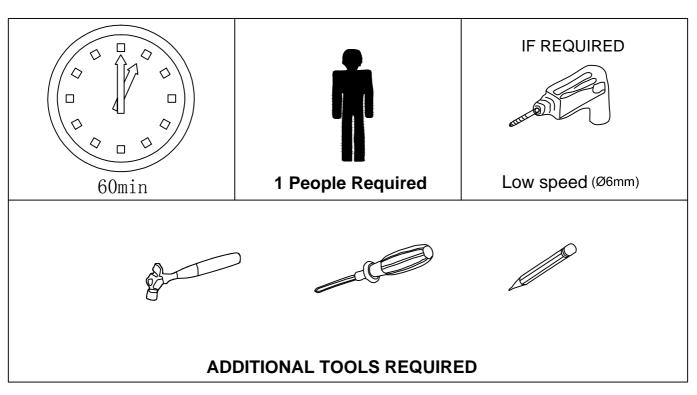




### TO USE CAM LOCK FASTENERS

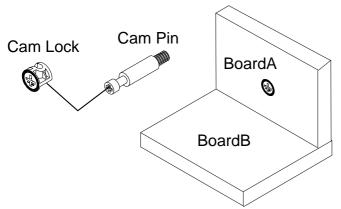

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

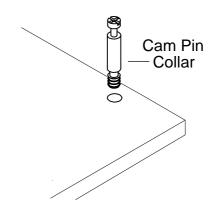


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle.

Cam pin is to be inserted up to collar

Too far and it wont catch the Cam Lock (Do Not Overtighten) Not enough and the resulting product will not be stable.

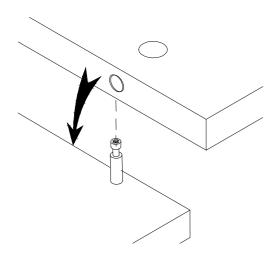

Now fit the hole in the edge of the joining board over the Cam Pin.

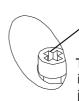


#### Head of the Cam Pin


The Head of the Cam Pin will be visible in the large hole on the side of the joining board.




Notice the Cam Lock has a "C" Shaped Back. An arrow or +/- signs on the front indicate the open open section on the back of the Cam Pin.

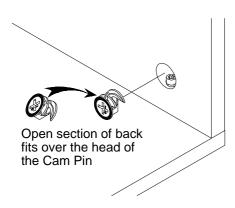

Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

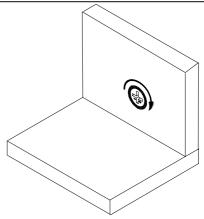

Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

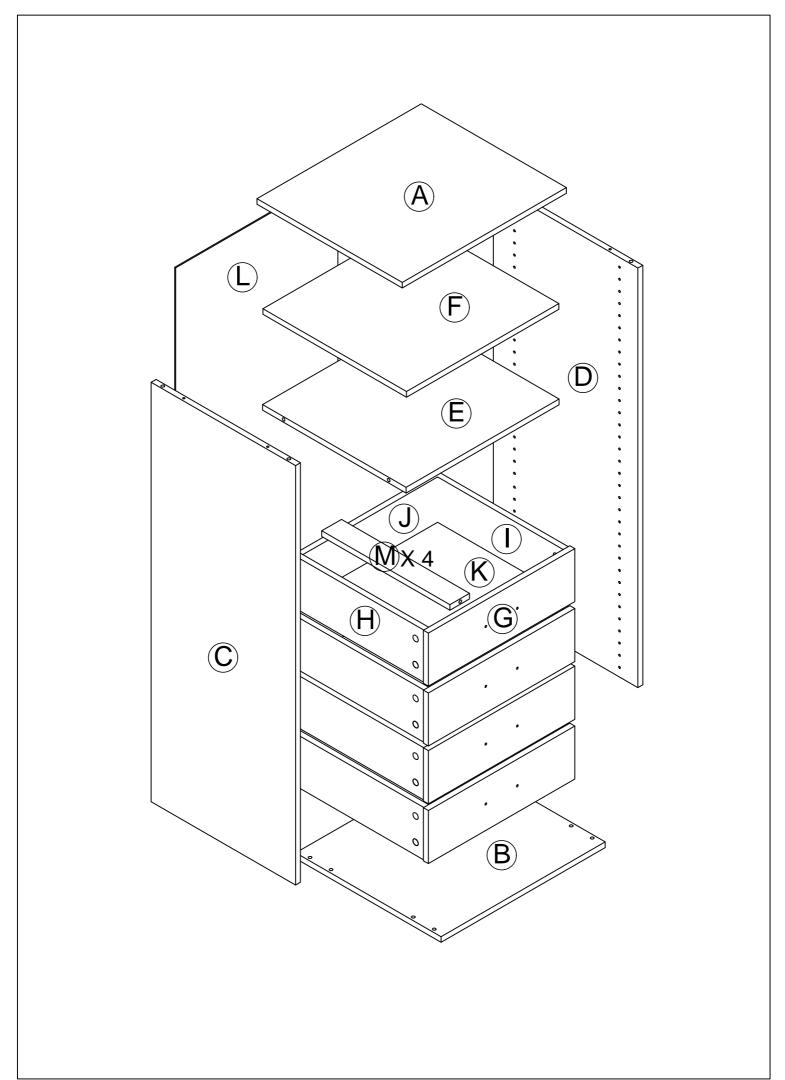


## Item Code- 49157

Panel(Mark)	Packing carton	Quantily	Picture	Dimension	
А	(Box 1)	1 PC	500x 442 x 15mm		
В	(Box 1)	1 PC	500x 442 x 15mm		
С	(Box 1)	1 PC		1107 x 440x 15 mm	
D	(Box 1)	1 PC		1107 x 440x 15 mm	
E	(Box 1)	1 PC	$\Diamond$	466 x 437 x 15mm	
F	(Box 1)	1 PC	$\Diamond$	464 x 437 x 15mm	
G	(Box 1)	4 PCS		446 x 140 x 15mm	
Н	(Box 1)	4 PCS		400 x 136x 15mm	
I	(Box 1)	4 PCS		400 x 136 x 15mm	
J	(Box 1)	4 PCS		410 x 136 x 15mm	
K	(Box 1)	4 PCS	419 x 394 x 3mm		
L	(Box 1)	1 PC		1133 x 492 x 3mm	
М	(Box 1)	4 PCS		384 x 60 x 15mm	

#### Please note - All Hardwares in box 1.


24 PCS	24 PCS	3 8 PCS	4 8 PCS	4 PCS	6 44 PCS	7 4 PCS
	<b>€</b>		<b>EXERCISE</b>	<b>o</b>	0	
Ø15 x 12 mm	Ø6 x 34 mm	Ø8 x 30 mm	Ø10 x Ø7 x 50 mm	Ø15 x Ø3 x 7 mm	Ø4 x Ø2 x15 mm	65 x 65 x 13 mm
8 16 PCS	9 4 Sets	32 PCS	24 PCS	4 PCS	8 PCS	4 PCS
992)	99 99	<b>S</b>	Minin			
Ø6 x 10 mm	16"	Ø3.5 x 14 mm	Ø8 x Ø4 x 33 mm	115 x 10 x30 mm	Ø8 x M4 x 19 mm	Ø5 x 22 x 9 x 17mm
16 PCS	1 PC	1 PC	1 PC	1 PC		
•		<b>(((()</b>	( <del>mm</del> >	( <del>  111111&gt;</del>		
Ø17.5 x 4 mm	20 x 40 x 1.2mm	Ø9 x Ø6 x 25mm	Ø9 x Ø4 x 15mm	Ø9 x Ø4 x25mm		

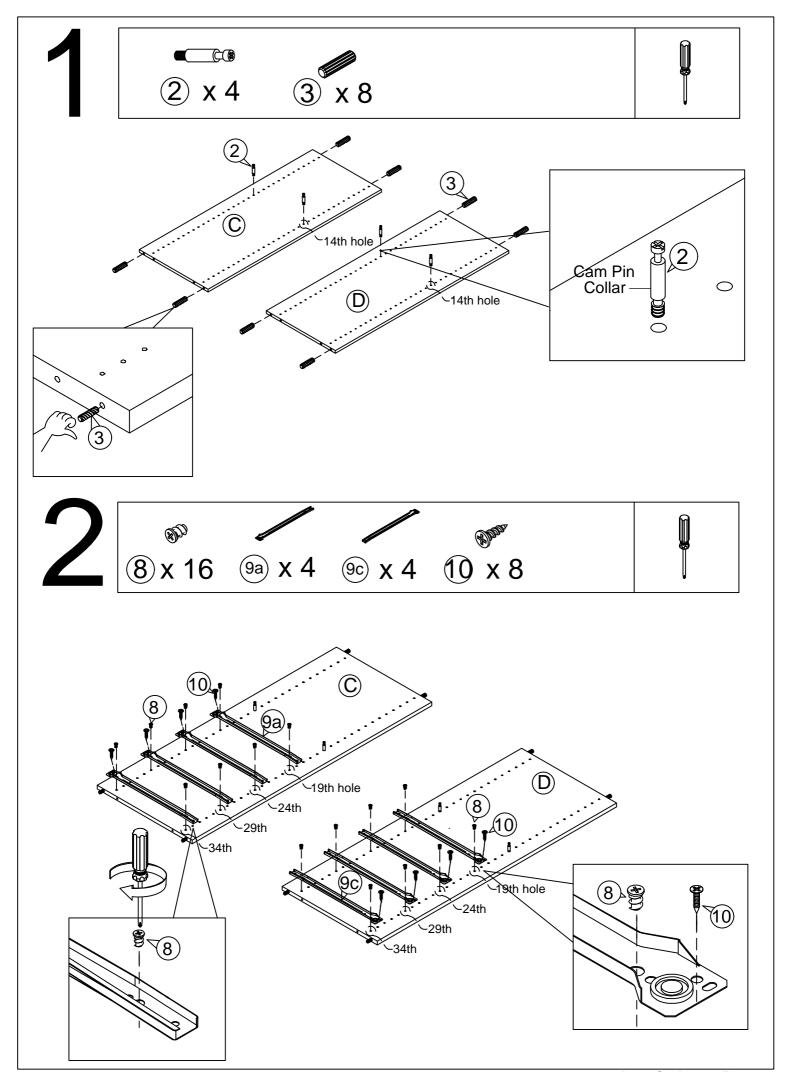








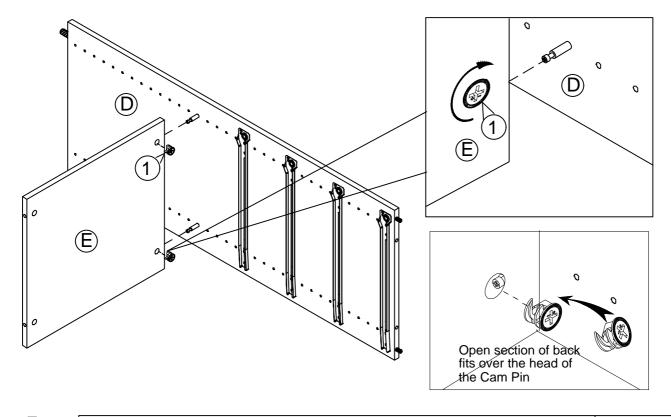




① x 2



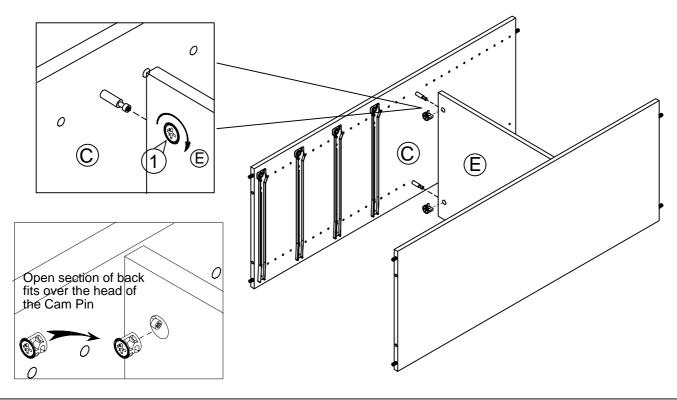







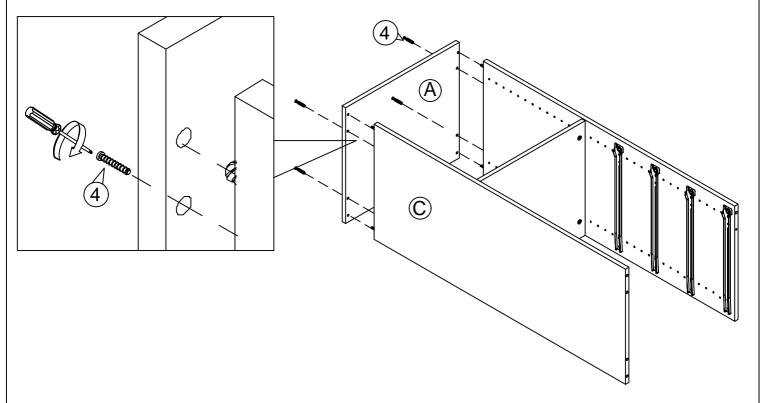







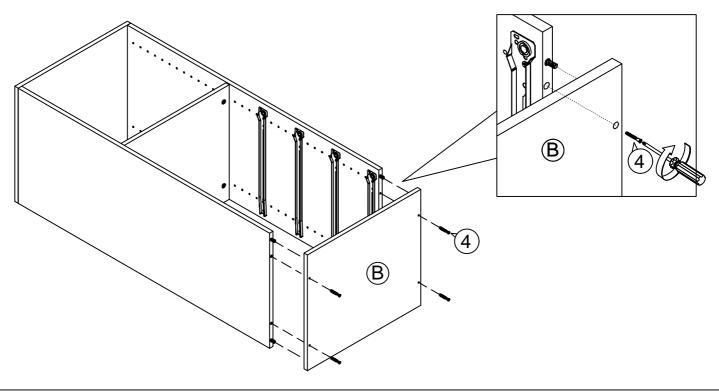

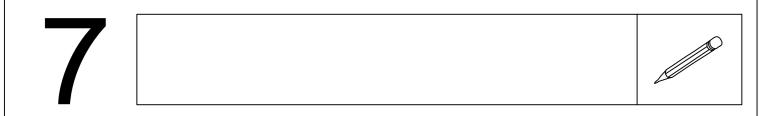


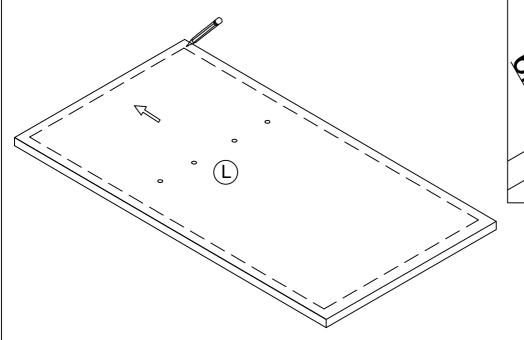

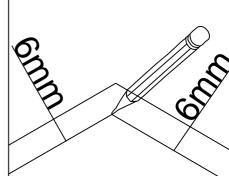






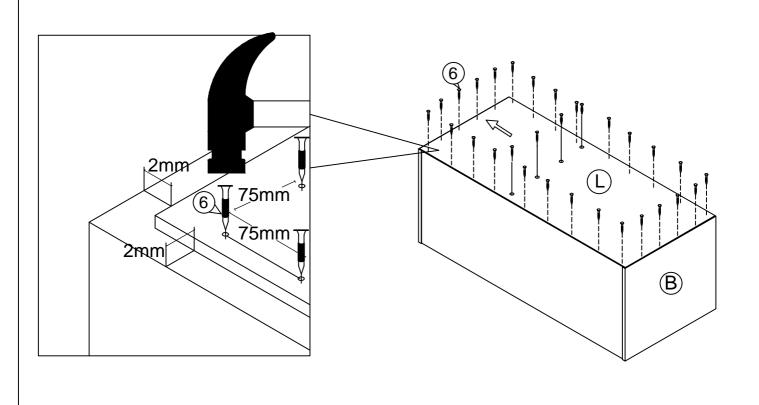










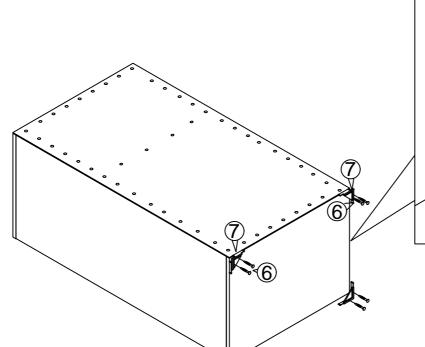

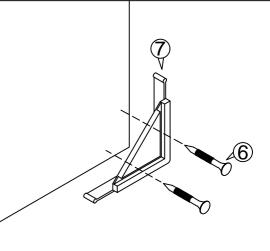



14 x 4

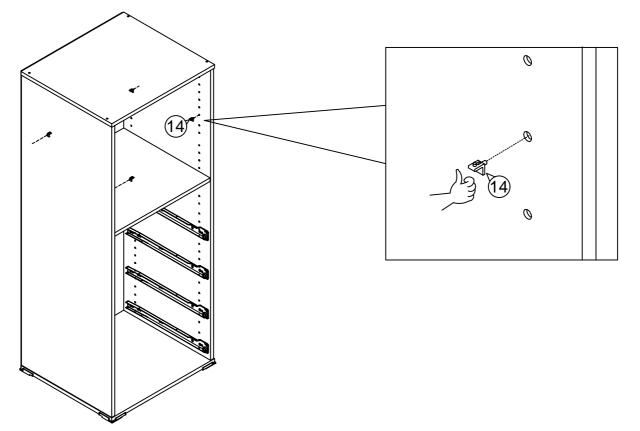


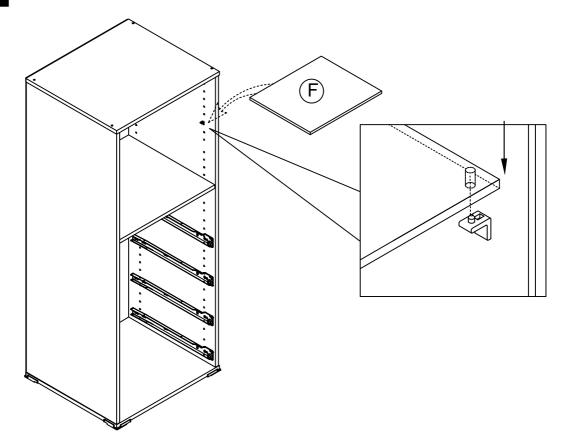


2 x 5

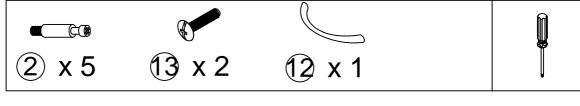

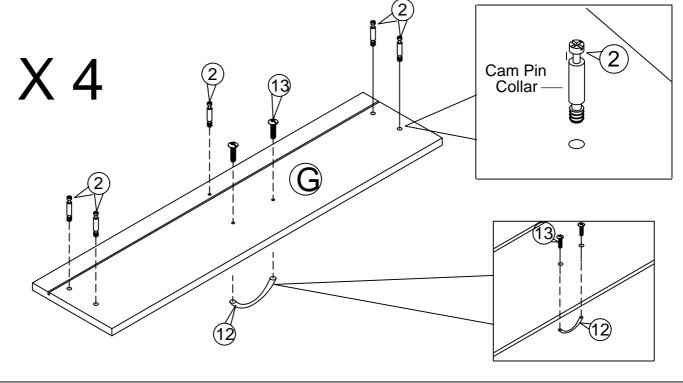

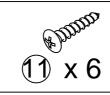




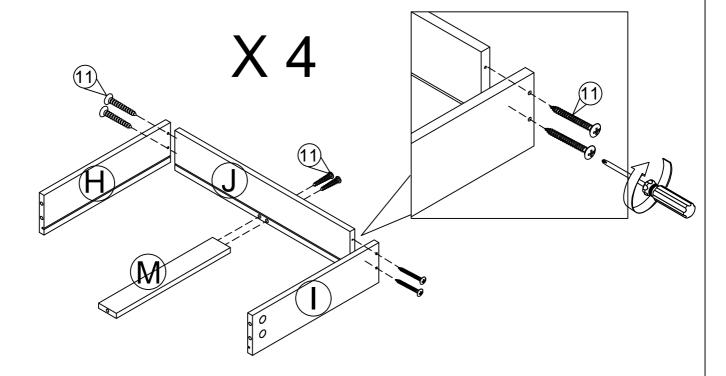


14

X 4

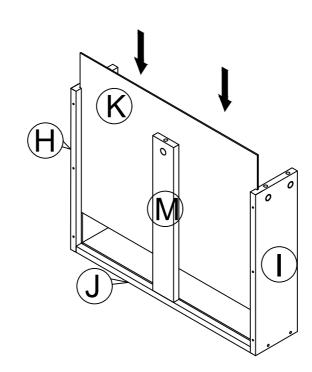





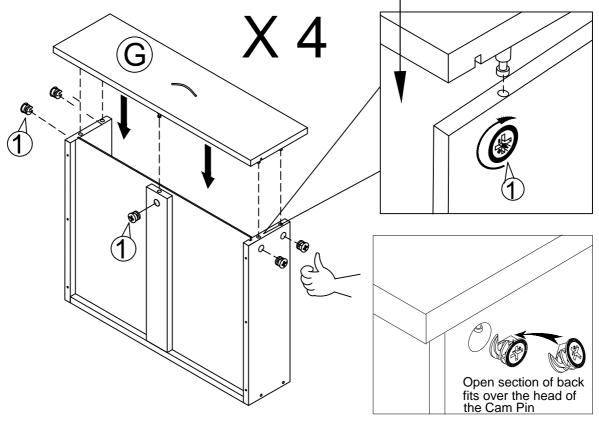


6 10 x 6










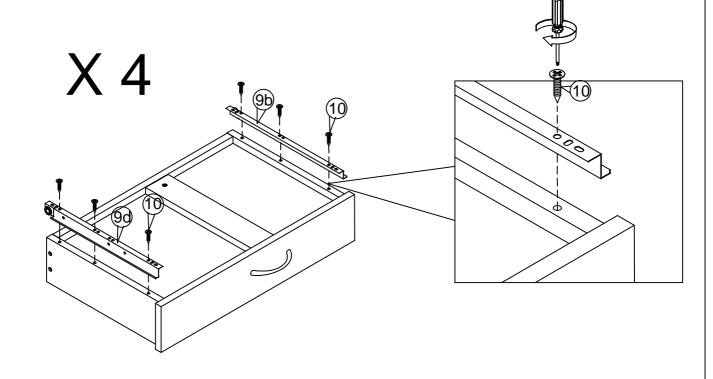


## SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.


- 1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short screws.
- 3. Move the furniter to its final position. Thread a Wall Strap through the both Mounting Plated and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plated are firmly attached to the wall and fumiture and that the Wall Strap is snug.

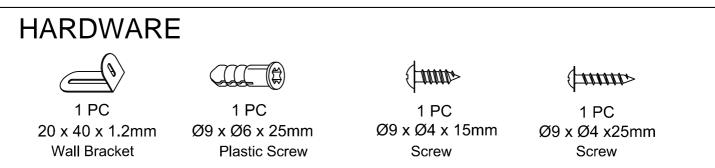


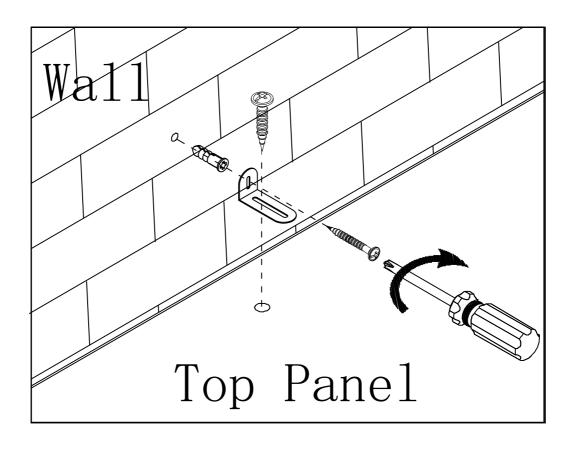

5 x 4 15 x 16

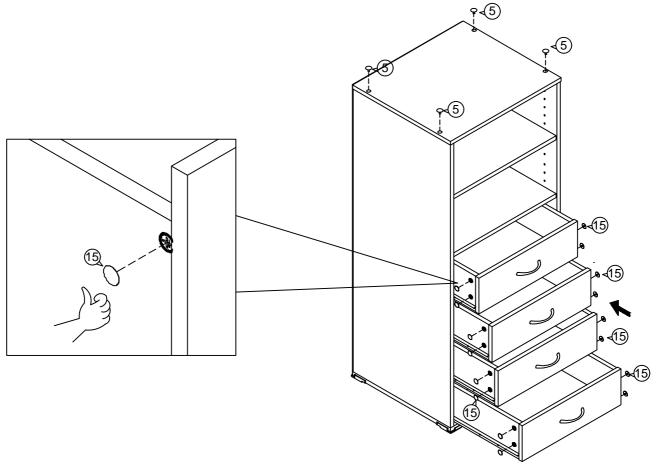


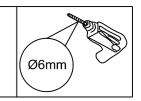


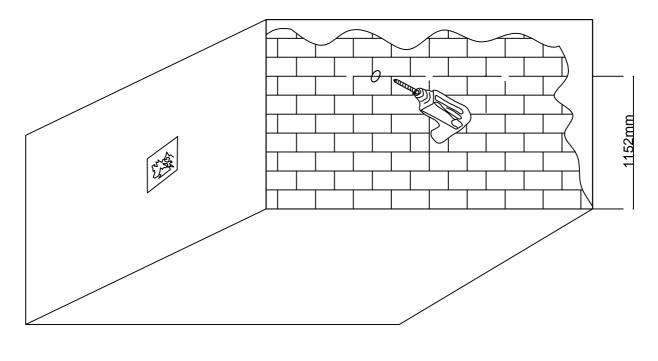






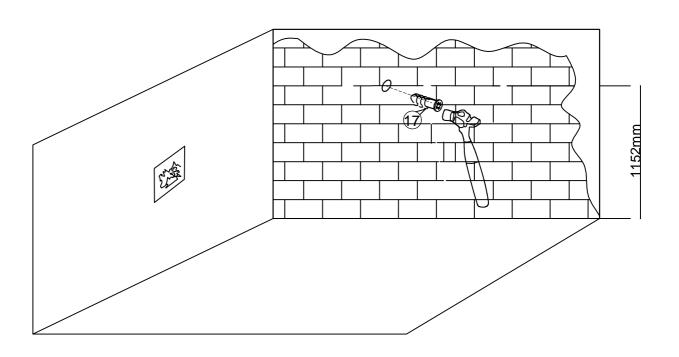


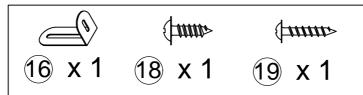



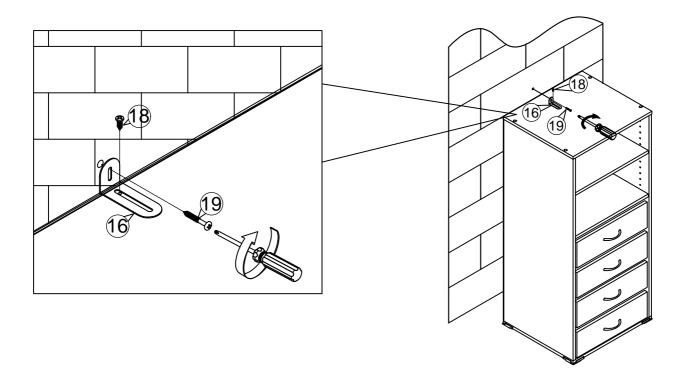

## **ASSEMBLY IS COMPLETE**

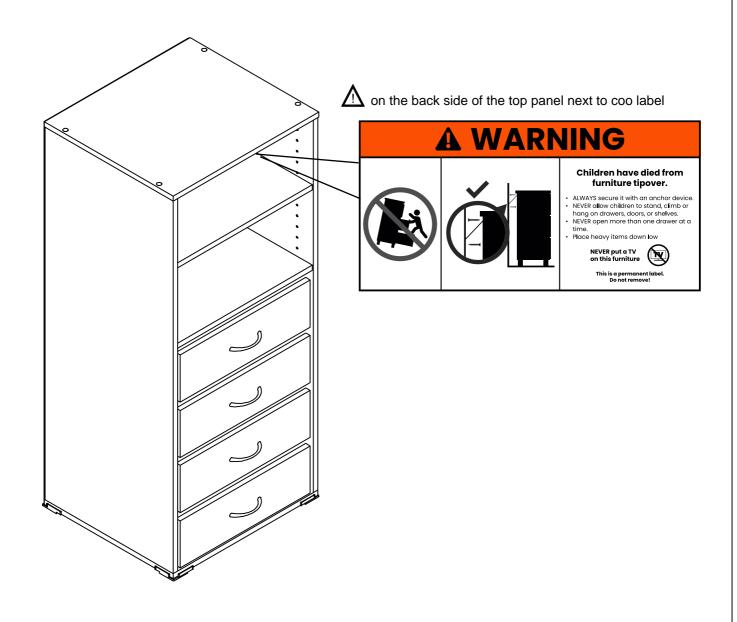

# **Product Care**



Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time