

 


ASSEMBLY INSTRUCTION

MARSEILLE TV UNIT

ITEM CODE 67375

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please
phone Amart Furniture , Customer Service Free call 1800 351
084

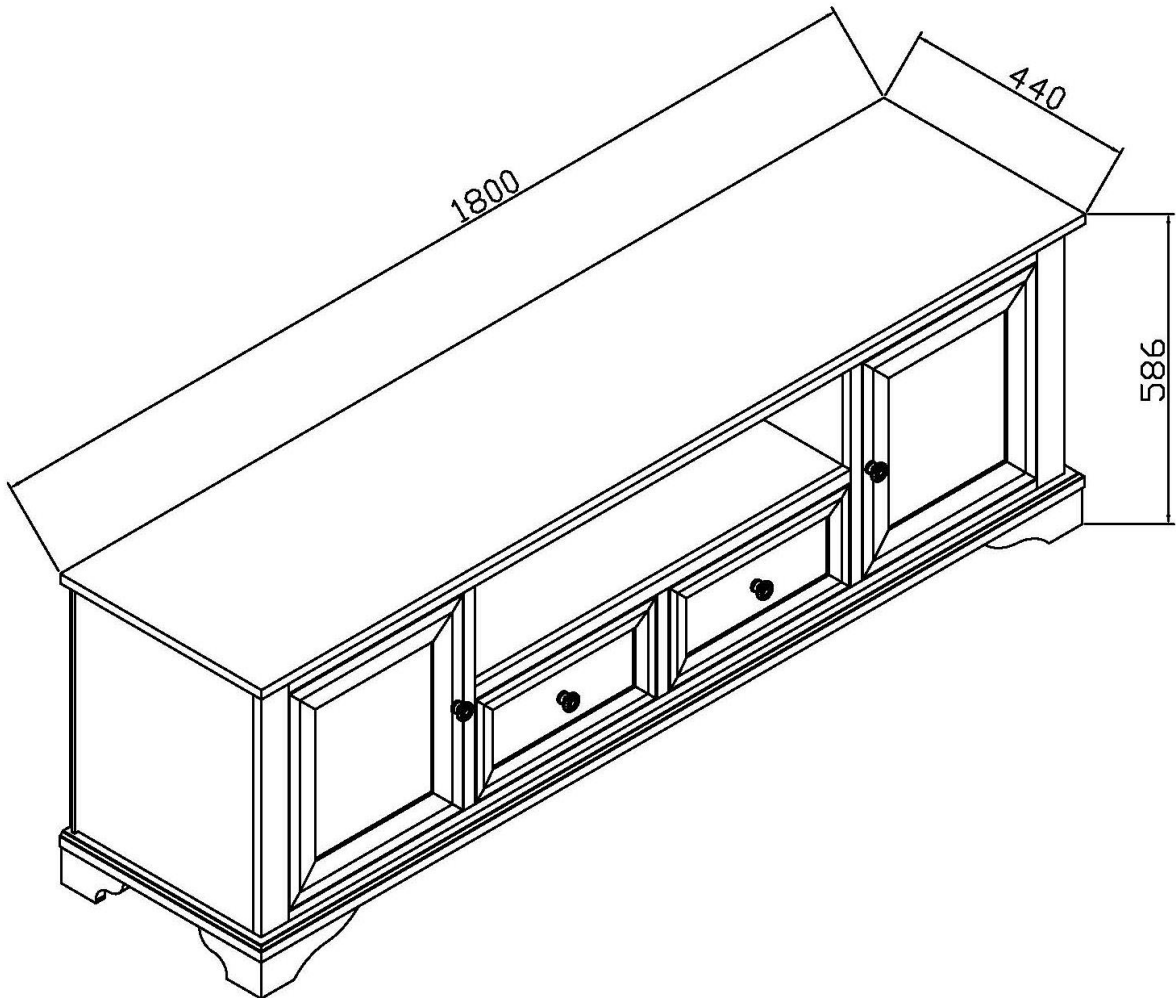




Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION

Before you start:

 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

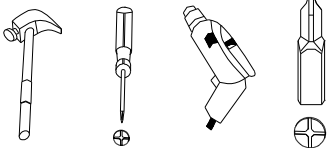	
ALLOW 20 MINUTES	2 PEOPLE REQUIRED
	
TOOLS REQUIRED	

 WARNING

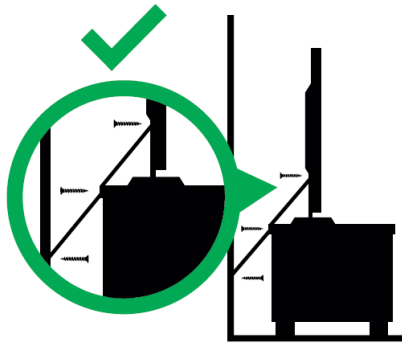


 Children have died from furniture tipover.

 

 



- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

**This is a permanent label.
Do not remove!**

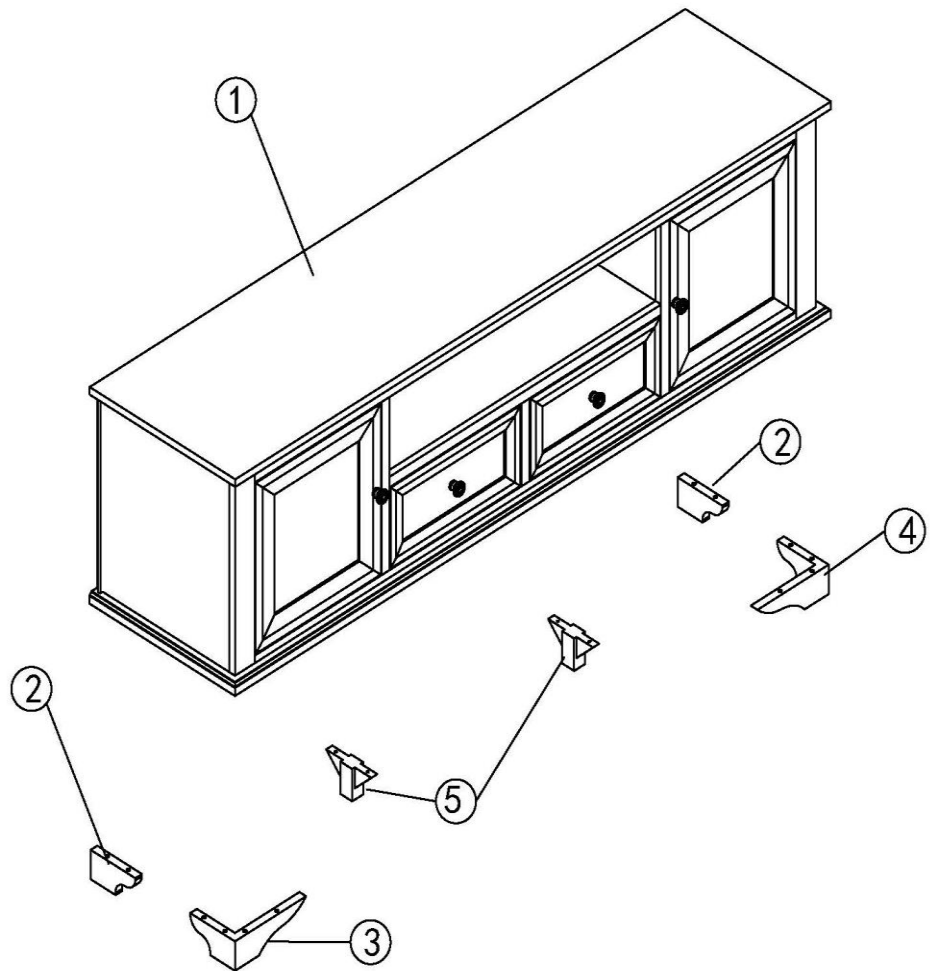PARTS LIST



1	TV UNIT BODY
2	REAR FEET
3	RIGHT FRONT FOOT
4	LEFT FRONT FOOT
5	CENTRE SUPPORT
 
<p>A. BOLT M6X45MM</p>  <p>AX12</p>	<p>B. SCREW M4X35MM</p>  <p>BX4</p>	<p>C. ALLEN KEY</p>  <p>CX1</p>
<p>D. WALL FIXING</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>M4X30mm</p> </div> <div style="text-align: center;">  <p>M3.5X14mm</p> </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right;">DX1</p>		

ITEMS REQUIRED

1

 
B. SCREW M4X35MM



4PCS




- Attach centre support(5)to TV UNIT body (1) using screw(B)
- Tighten with screwdriver

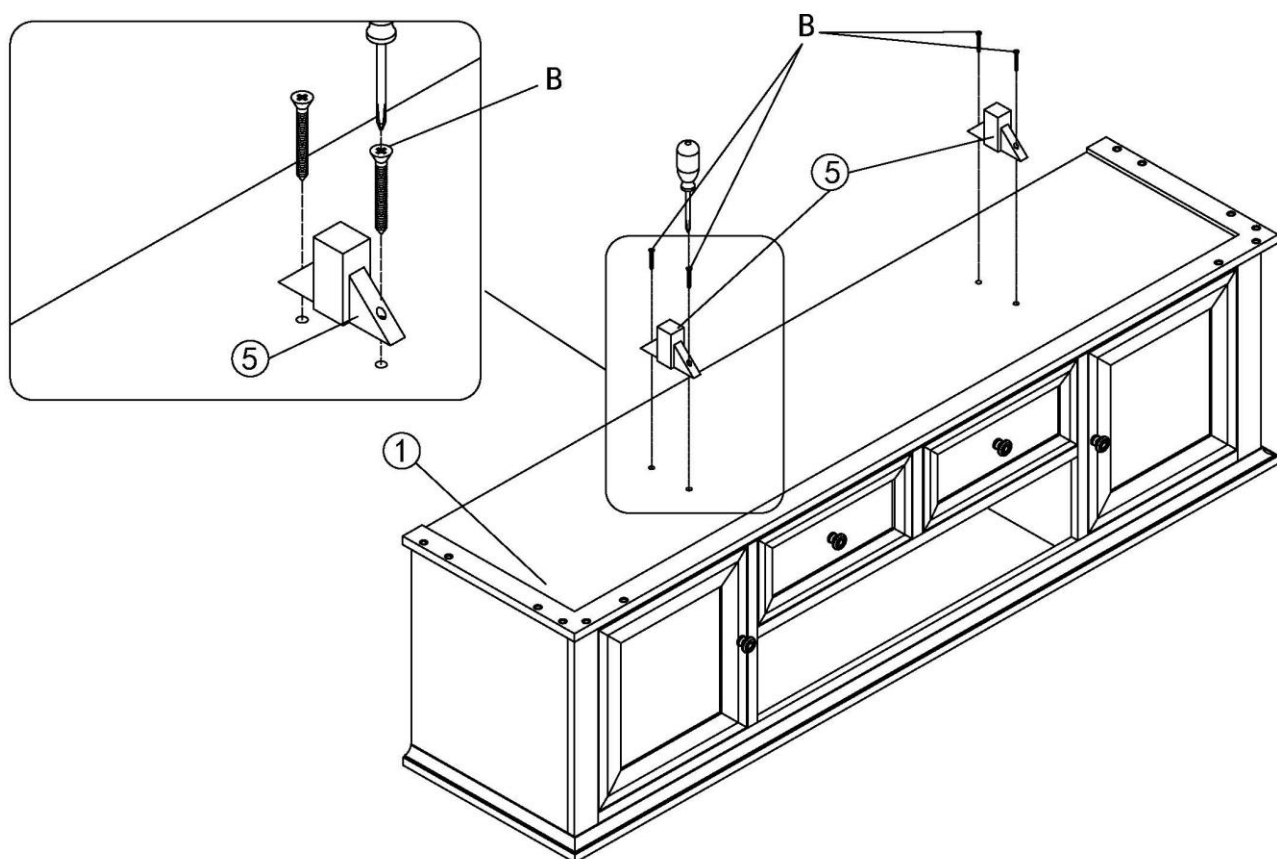

ITEMS REQUIRED


2

 C. ALLEN KEY




1PCS

 A. BOLT M6X45MM

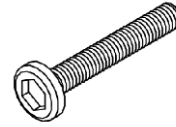


12PCS

 - Attach foot (2)(3)(4) to TV UNIT body (1) using bolt(A)
- Tighten with Allen Key (c).

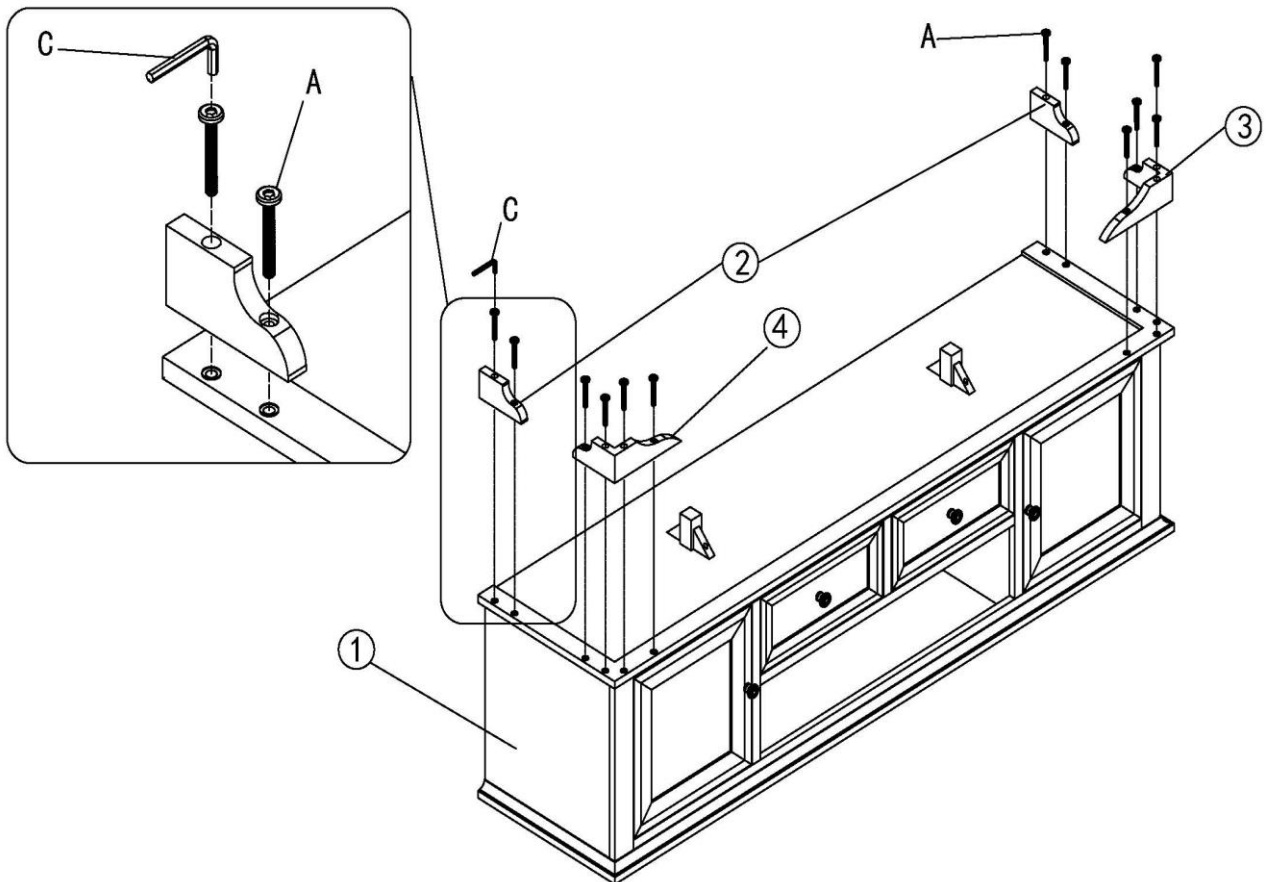

ASSEMBLY IS COMPLETE

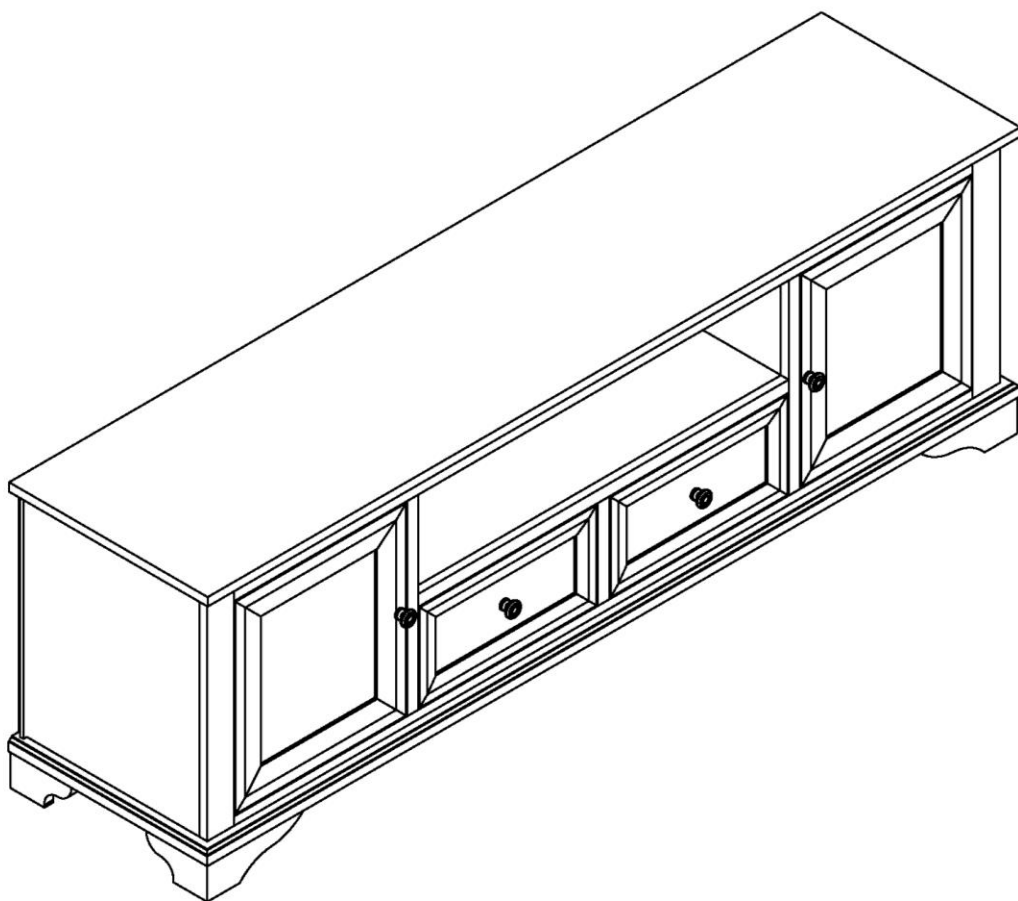 

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2



 
Wall Strap x 1



Large Screw x2



Small Screw x2

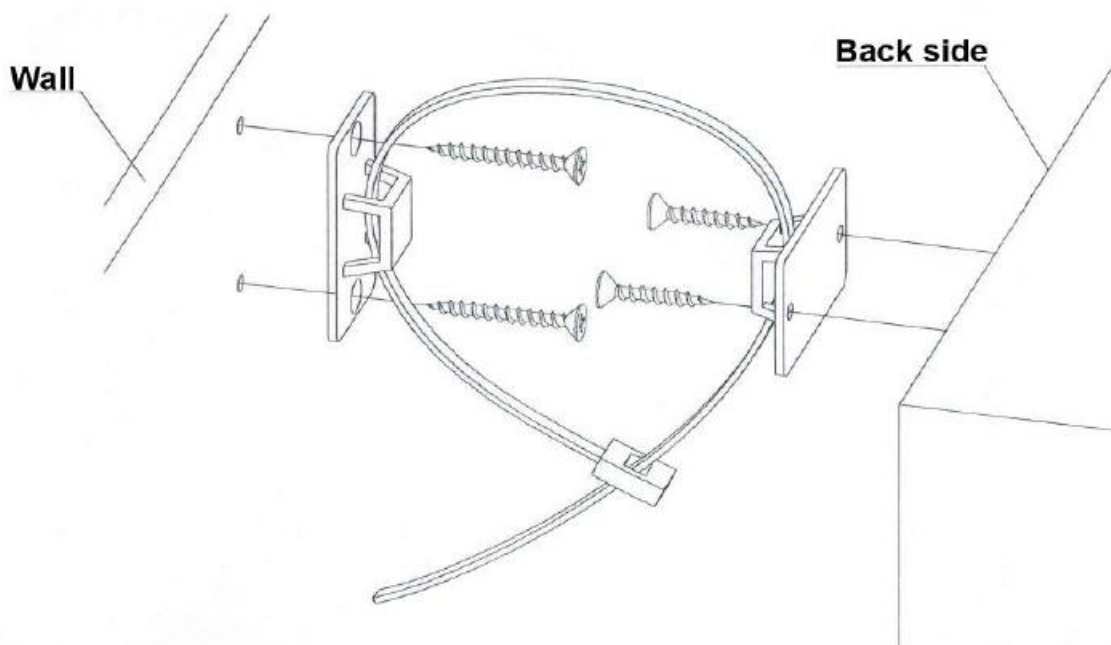

CARE AND MAINTENANCE

- A multi-step finish is applied to all our furniture, but all wood comes from nature. Because of this, there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique.
- Our furniture is built to last. Following these steps for basic care should protect your investment for years to come.
- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting.
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.