 


# Assembly Instruction



Item Code : 49356

 
## MAJESTY 2 DOOR ENTERTAINMENT UNIT

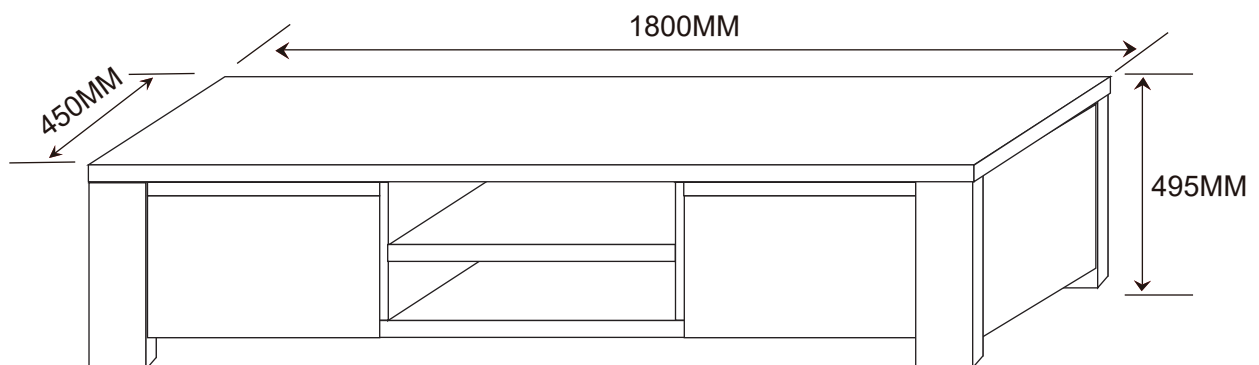


**Please read the assembly instruction carefully before assembling.**

**IMPORTED BY AMART FURNITURE PTY LTD, BRISBANE,  
QLD, AUSTRALIA  
CUSTOMER SERVICE FREECALL 1800 351 084**







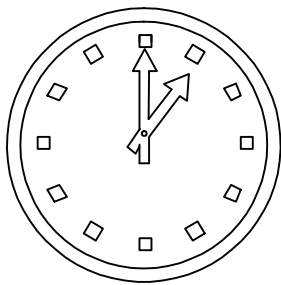


Allow 60 min

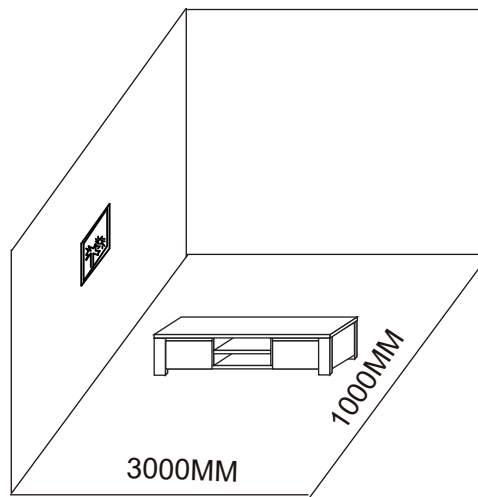 

2 PEOPLE REQUIRED

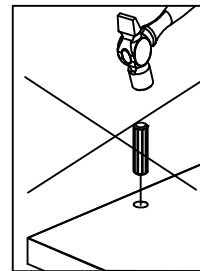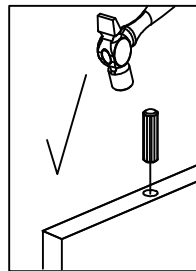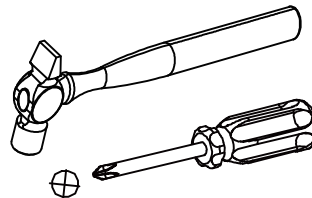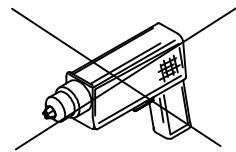    

## WARNING

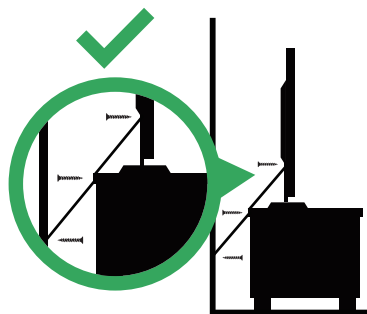 

**Children have died from furniture tipover.**

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

**This is a permanent label.  
Do not remove!**

 
Assembly is to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

Please keep these instructions for future reference.

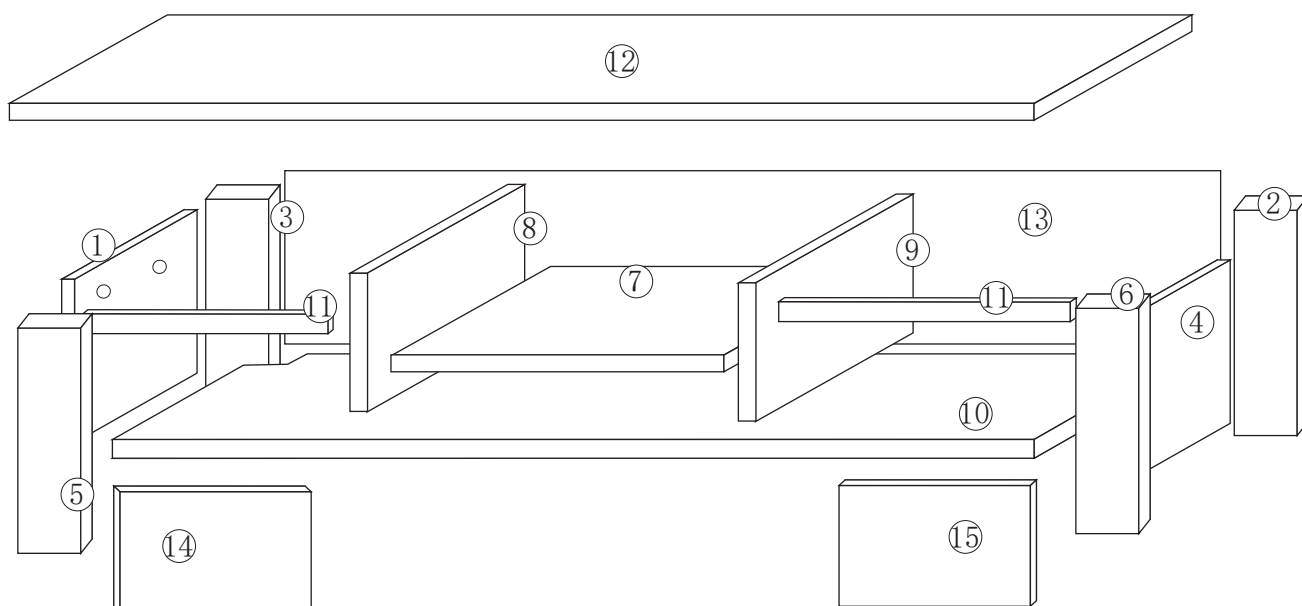

 

 


 



 

 
 



# EXPLODED EXAMPLE

 


# CHECKLIST


Before you start.....

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all times.
5. Do not over tighten the bolts as this may damage the thread.





<input checked="" type="checkbox"/>	<b>A</b> <input type="checkbox"/> countersunk head screw  M3.5x14mm 24xA	<b>B</b> <input type="checkbox"/> dowel  M8x50mm 12xB	<b>C</b> <input type="checkbox"/> cam pin  M7x53mm 16xC	<b>D</b> <input type="checkbox"/> mushroom head screw  M4x12mm 8xD
	<b>E</b> <input type="checkbox"/> cam pin  M7x39mm 4xE	<b>F</b> <input type="checkbox"/> adjustable leg  2xF	<b>G</b> <input type="checkbox"/> white foot nail  4xG	<b>H</b> <input type="checkbox"/> 180° hinge  4xH
	<b>I</b> <input type="checkbox"/> round hand screw  M3x16mm 16xI	<b>J</b> <input type="checkbox"/> dowel  M8x30mm 20xJ	<b>K</b> <input type="checkbox"/> cam lock  20xK	<b>L</b> <input type="checkbox"/> screw  M5x40mm 10xL
	<b>M</b> <input type="checkbox"/> black conner connection  2xM	<b>N</b> <input type="checkbox"/> foam sticker  2xN	<b>O</b> <input type="checkbox"/> Anticollision particles  4xO	<b>P</b> <input type="checkbox"/> wall fixing    M4x30mm M3.5x14mm 1xP

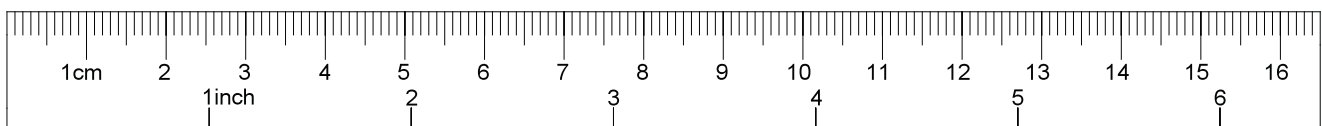




PART NUMBER	QTY	DIMENSIONS (MM)
1	1	348x405x15
2	1	150x443x50
3	1	150x443x50
4	1	348x405x15
5	1	150x443x50
6	1	150x443x50
7	1	395x705x30
8	1	396x374x15
9	1	396x374x15
10	1	397x1680x30
11	2	60x472.5x15
12	1	450x1800x40
13	1	410x1530x2.7
14	1	394x379x15
15	1	394x379x15

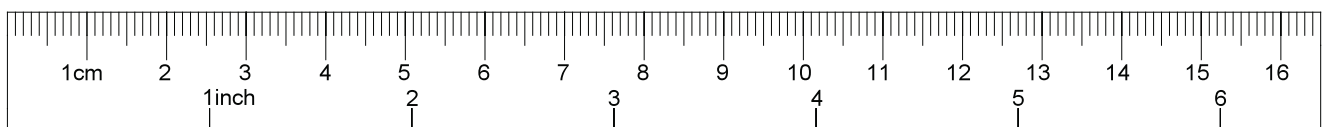 

# 1

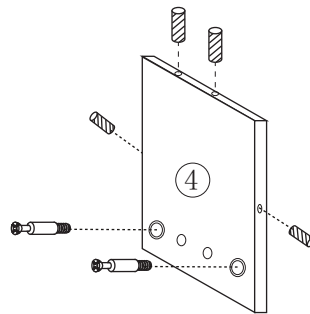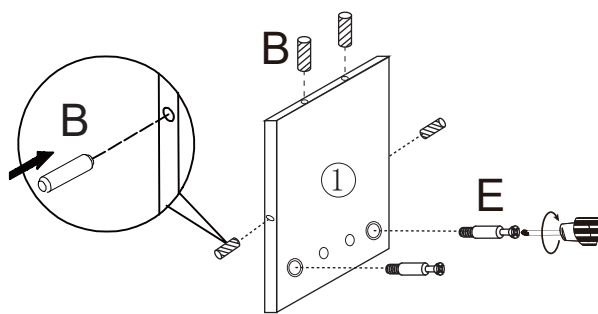  
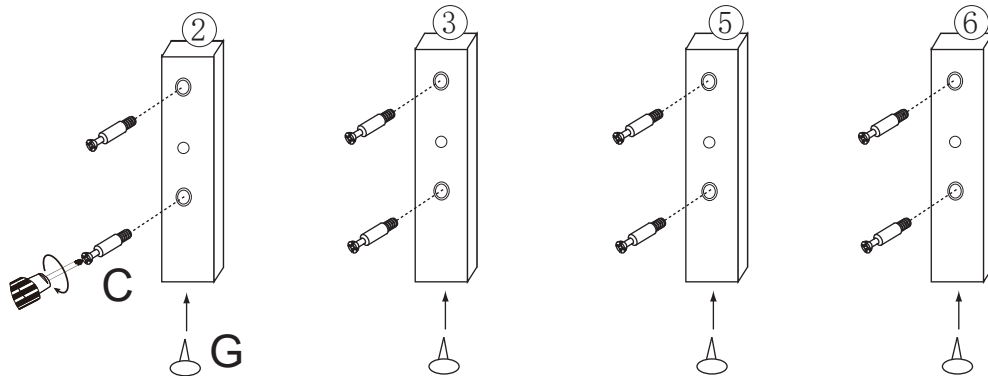 
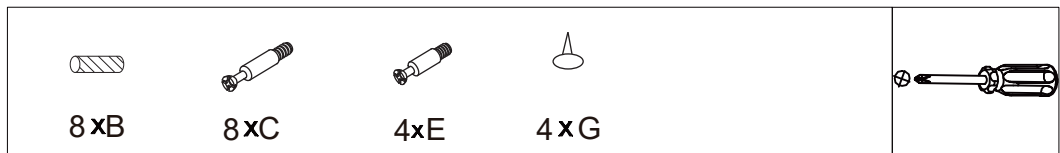 


# 2

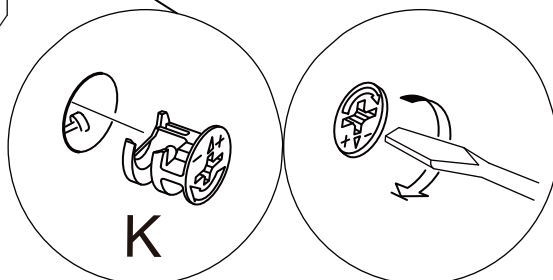 
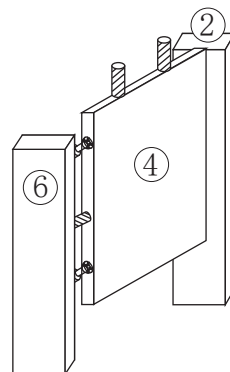 
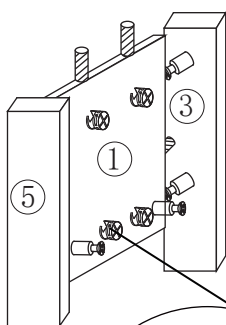 


**Amart**  
Furniture


# 3

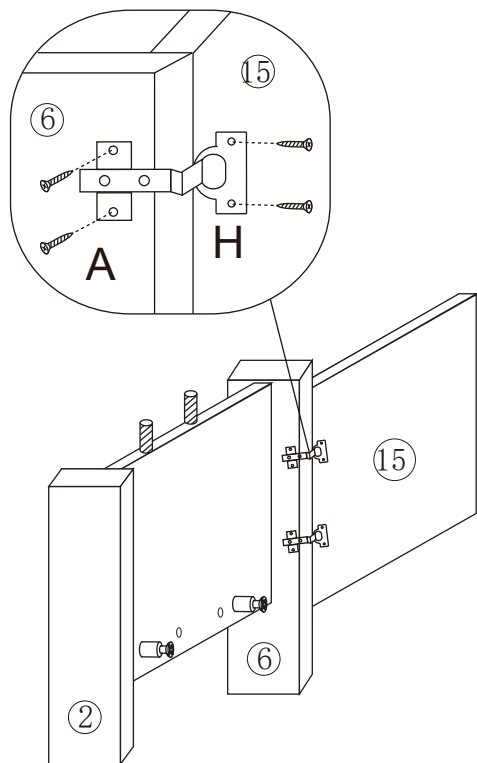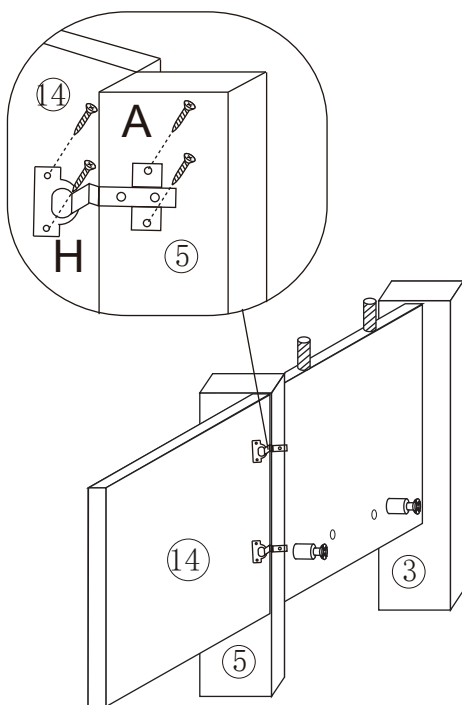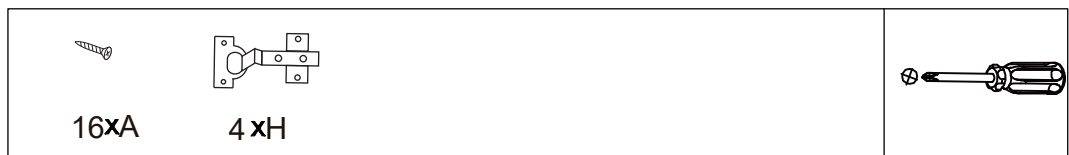   

# 4

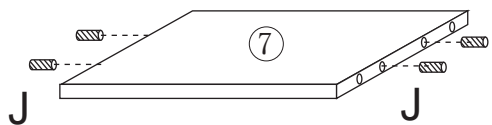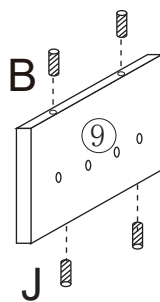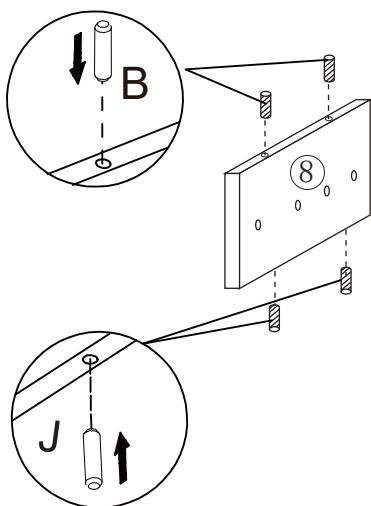   


# 5

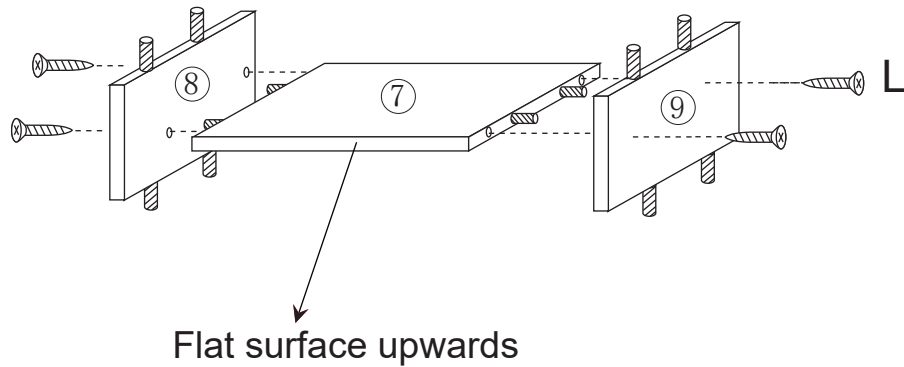 

# 6






 
According to the floor condition, adjust leg's height to make item balanced .  
And if top panel is bowed, please also adjust leg accordingly till top panel reaches level.

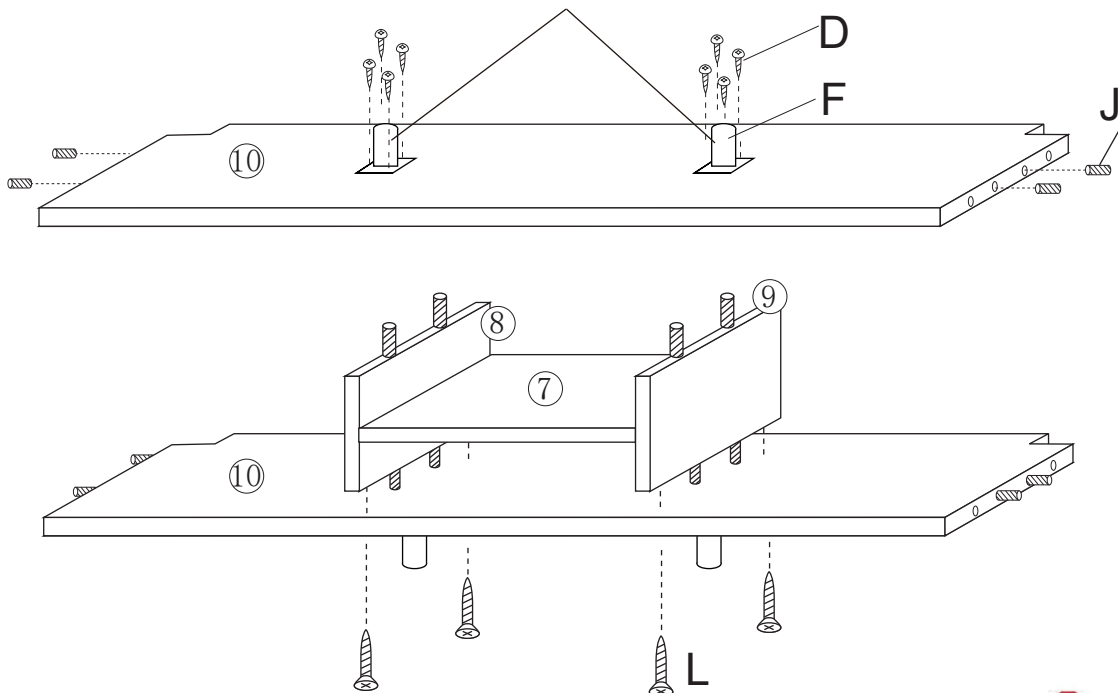


**Amart**  
Furniture



# 7


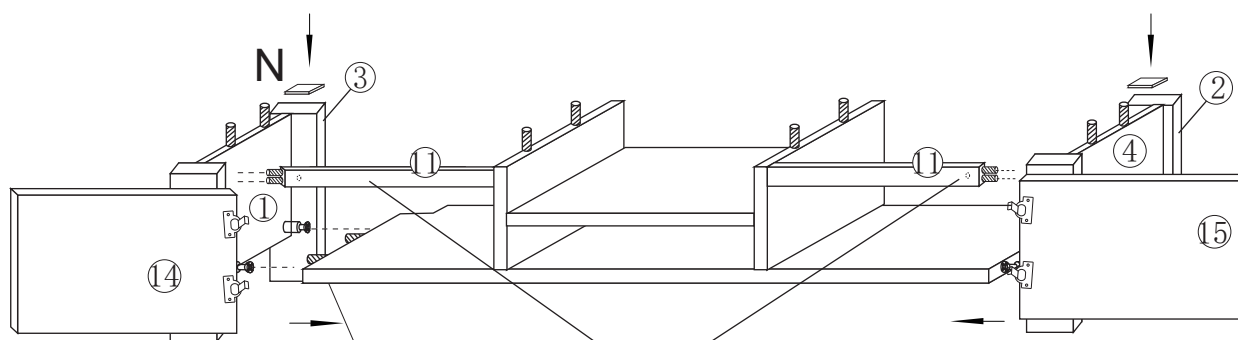 
 
 
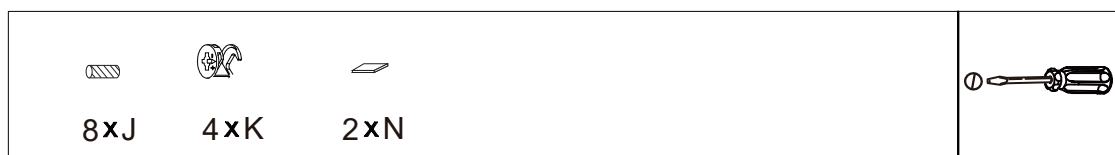 


finished edge downwards

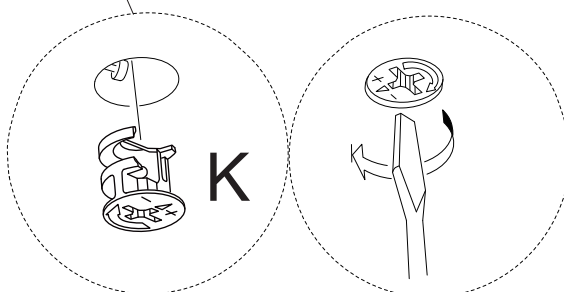 

**Amart**  
Furniture

# 8

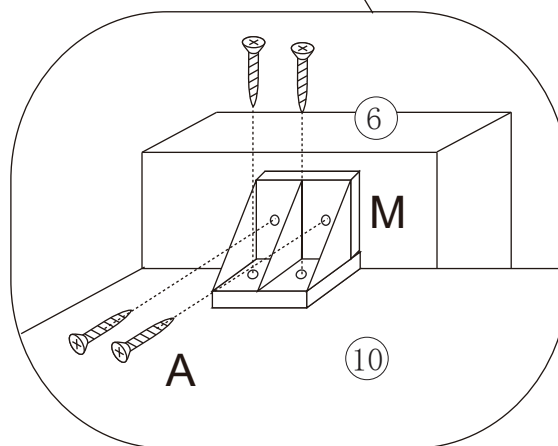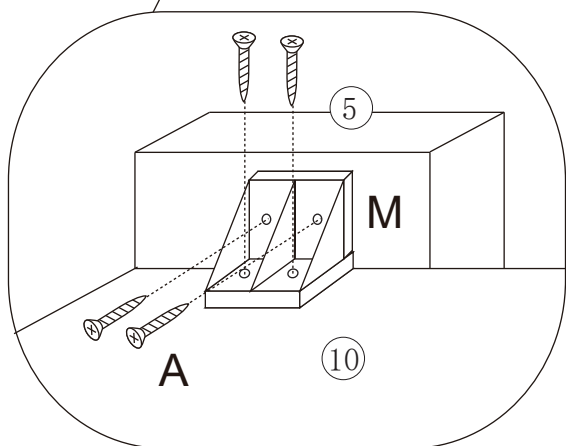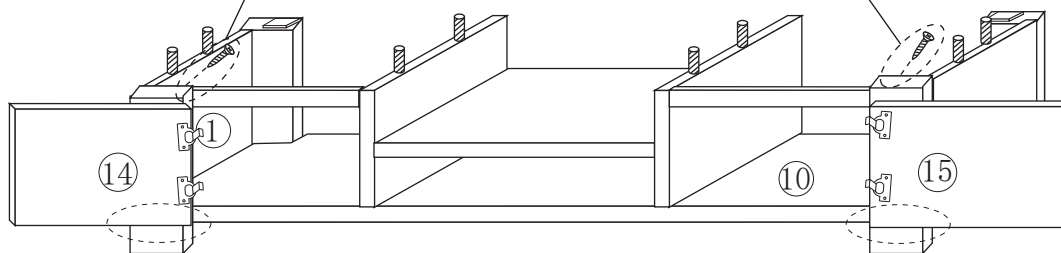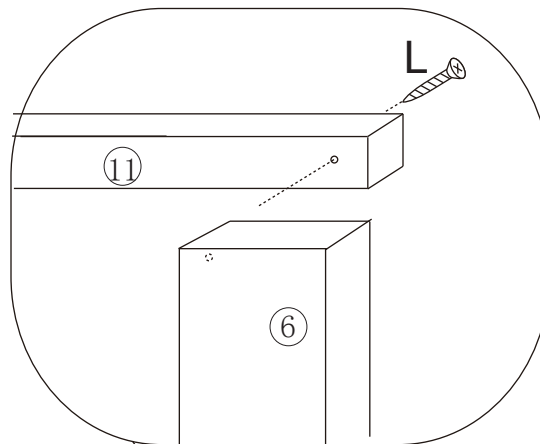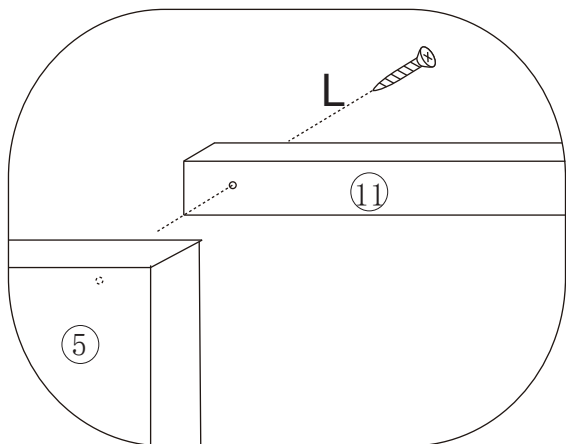     

**Amart**  
Furniture



# 9



  
8xC



8xK


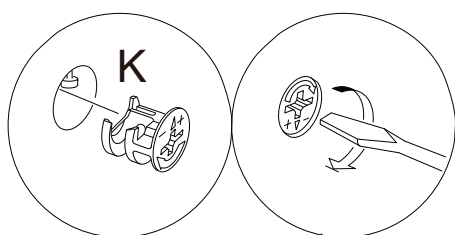
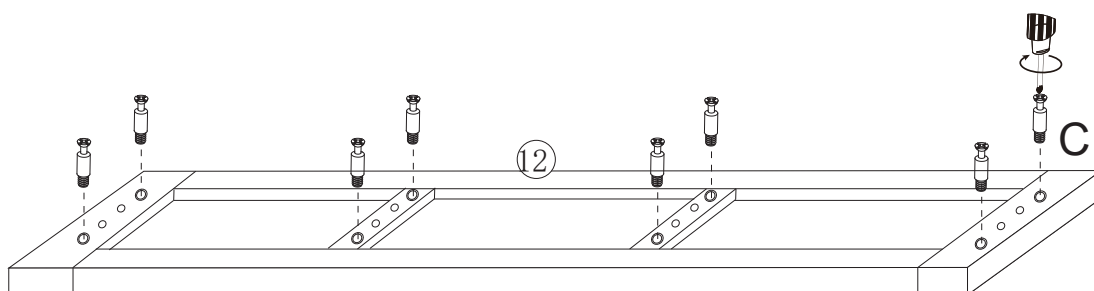


 For panel ⑫,  
please assemble as directed.  
The wider heavy edge is front side.

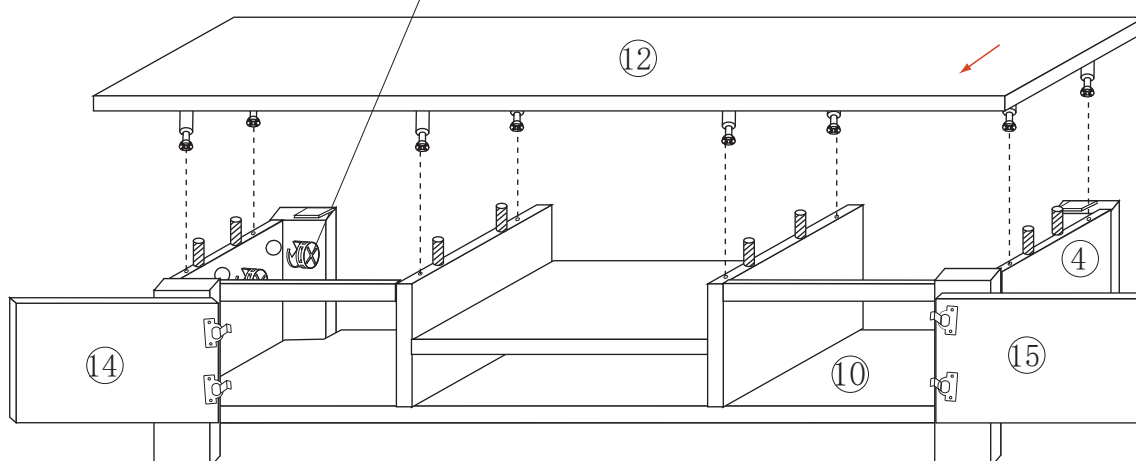

**Amart**  
Furniture


# 10

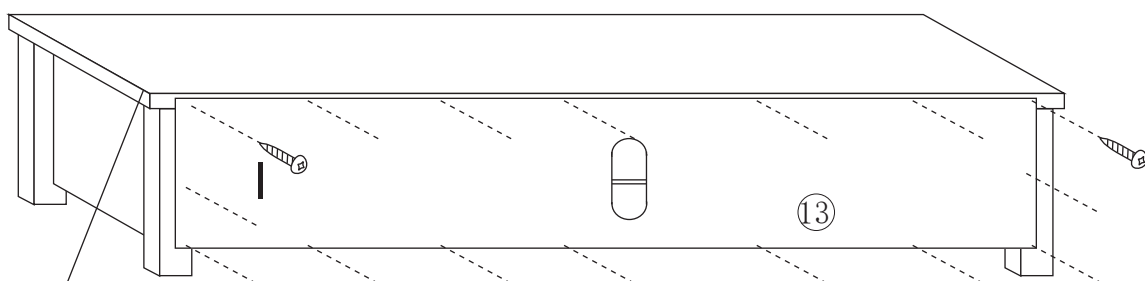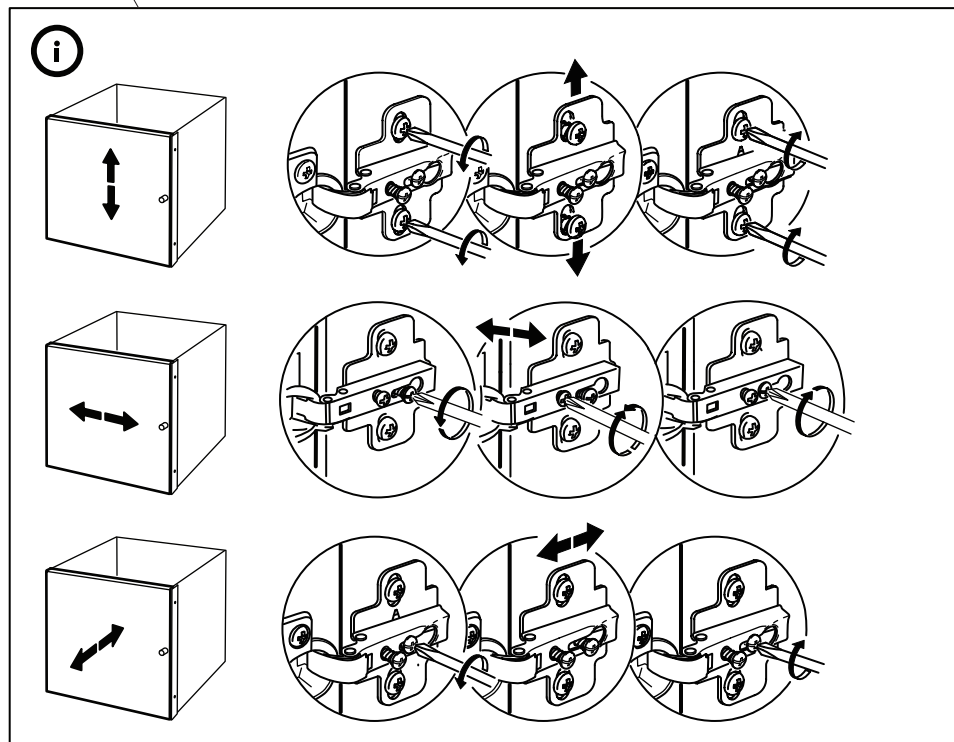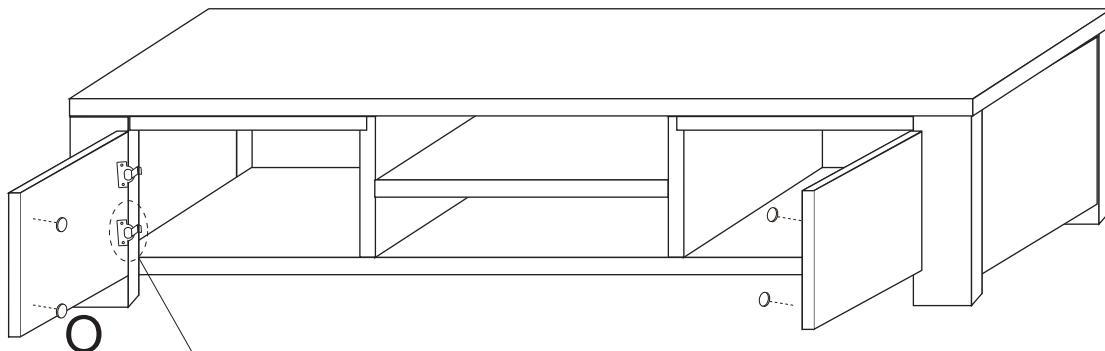   

**Assemble back panel below  
1/2 of the top panel**

**Amart**  
Furniture

# 11

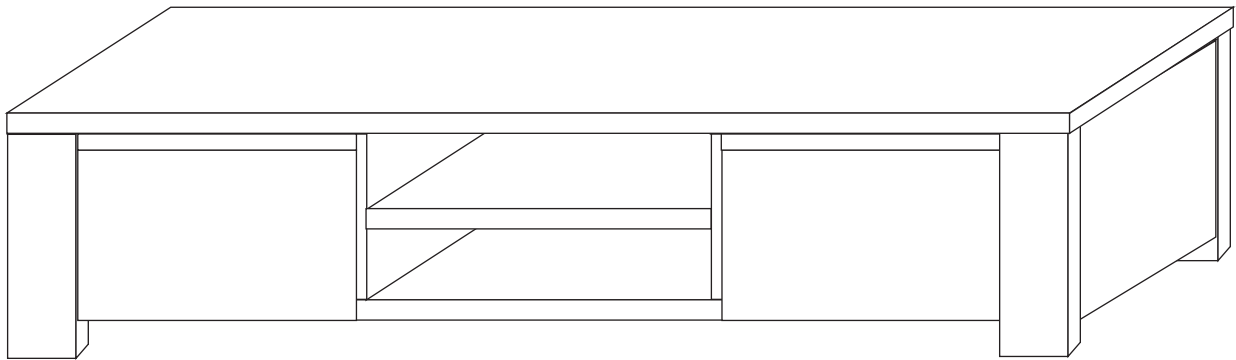 

⚠ CAUTION: This Entertainment unit has a 45kg recommended weight limit. Before placing your TV on the unit, please ensure the centrally located support legs are correctly adjusted to sit firmly on the floor in order to take the weight of your TV. Once this is done, your TV can be carefully placed on the unit.

## The job is now complete!

 
 
 
**In the interest of our environment  
please dispose of all packaging thoughtfully.**

 
**Amart**  
Furniture







**STEP 1: Fix bracket to back panel using screws M3.5\*14MM .  
Put plastic string into bracket.**

**NOTE** - This product must be fixed to a wall. Please ensure the correct wall fixings are used. Failure to do so may result in personal injury or cause property damage if the product topples over. Please note that the screws are only suitable for plasterboard wall materials, please contact local hardware store for corresponding screws for other wall materials.

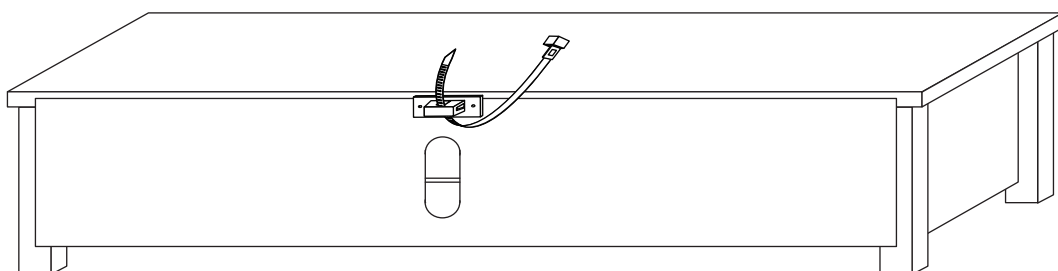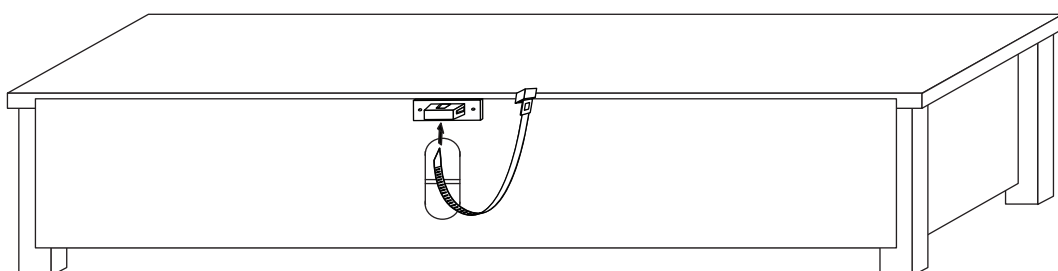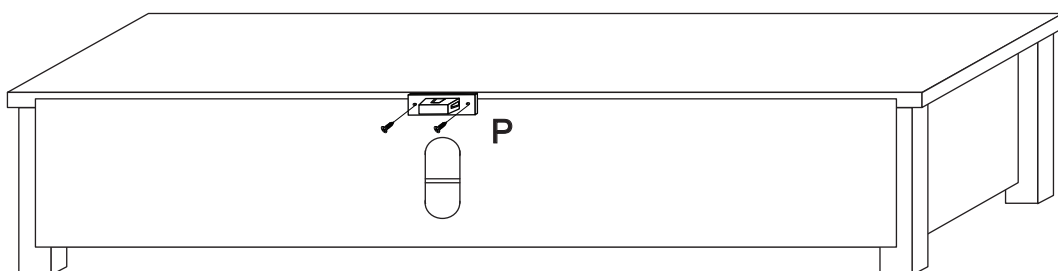

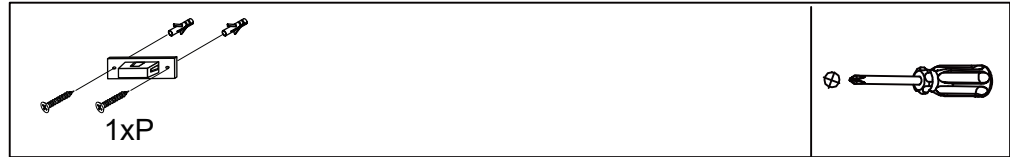

    
STEP 2: Fix bracket onto the wall using screws M4\*30MM.  
Join wallboard and the furniture with plastic sting.

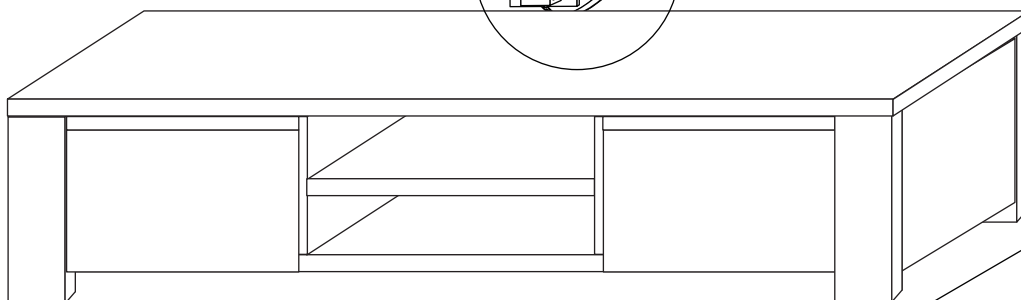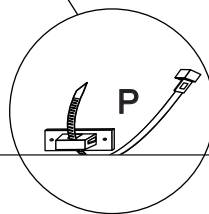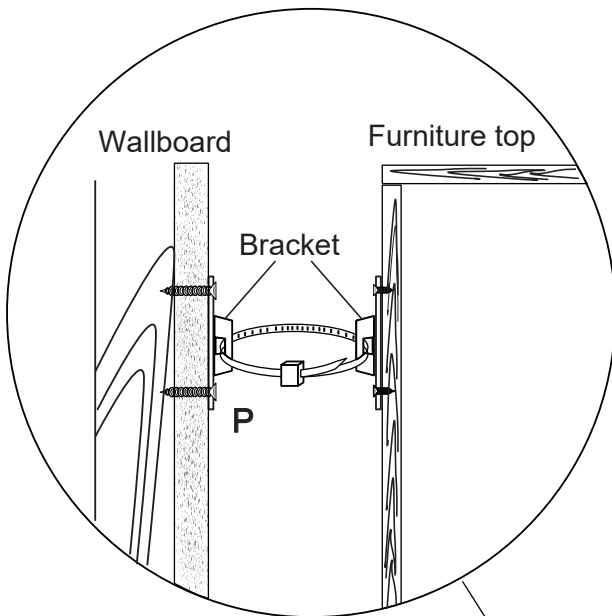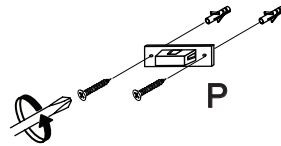



## **SAFETY BRACKETS INSTRUCTIONS**

 1. Attach a bracket to the wallboard with the long screws provided.
2. Attach a bracket to the furniture frame under the top with the short screws provided.
3. Move the furniture into its final position. Thread a strap through the bracket as shown in the illustration, tighten strap until snug. Do not over tighten.
4. Make sure the bracket is firmly attached to the wallboard and furniture, and the strap is snug.

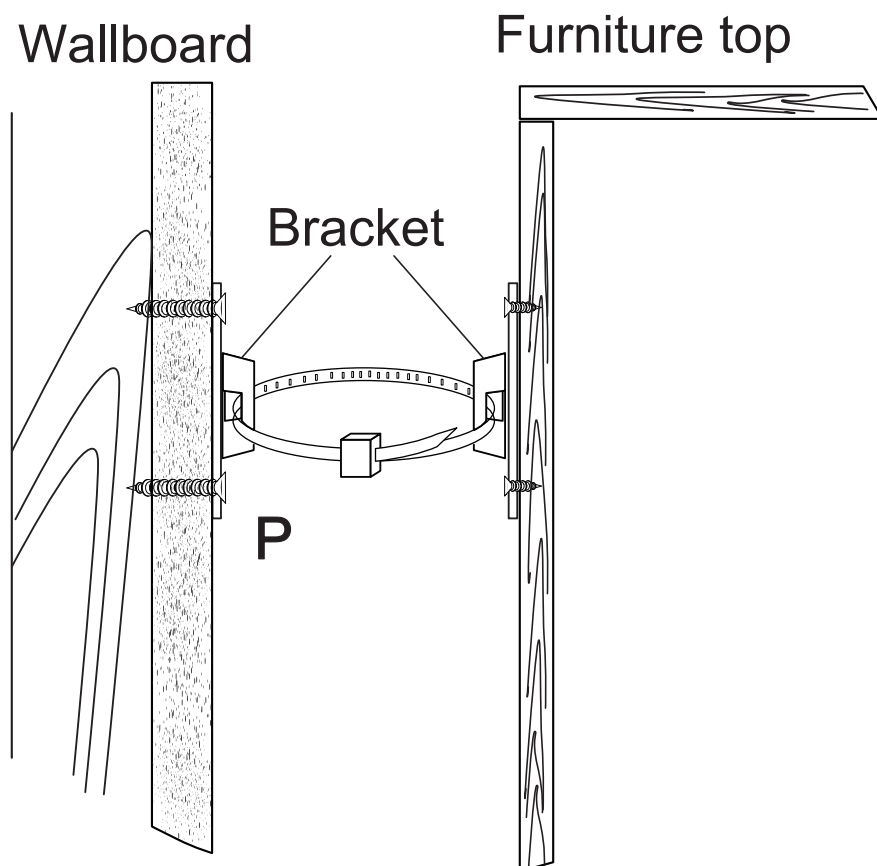



## PRODUCT CARE:

To protect your furniture, we suggest the following:

- \*Avoid placing your furniture in direct sunlight.

- \*Do not place furniture directly under windows.

- \*Do not place sharp materials (knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

- \*Protective padding is strongly recommended when using your furniture .

- \*Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

- \*Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.