




ASSEMBLY INSTRUCTION COPELAND KING SINGLE BED ITEM CODE 75425

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

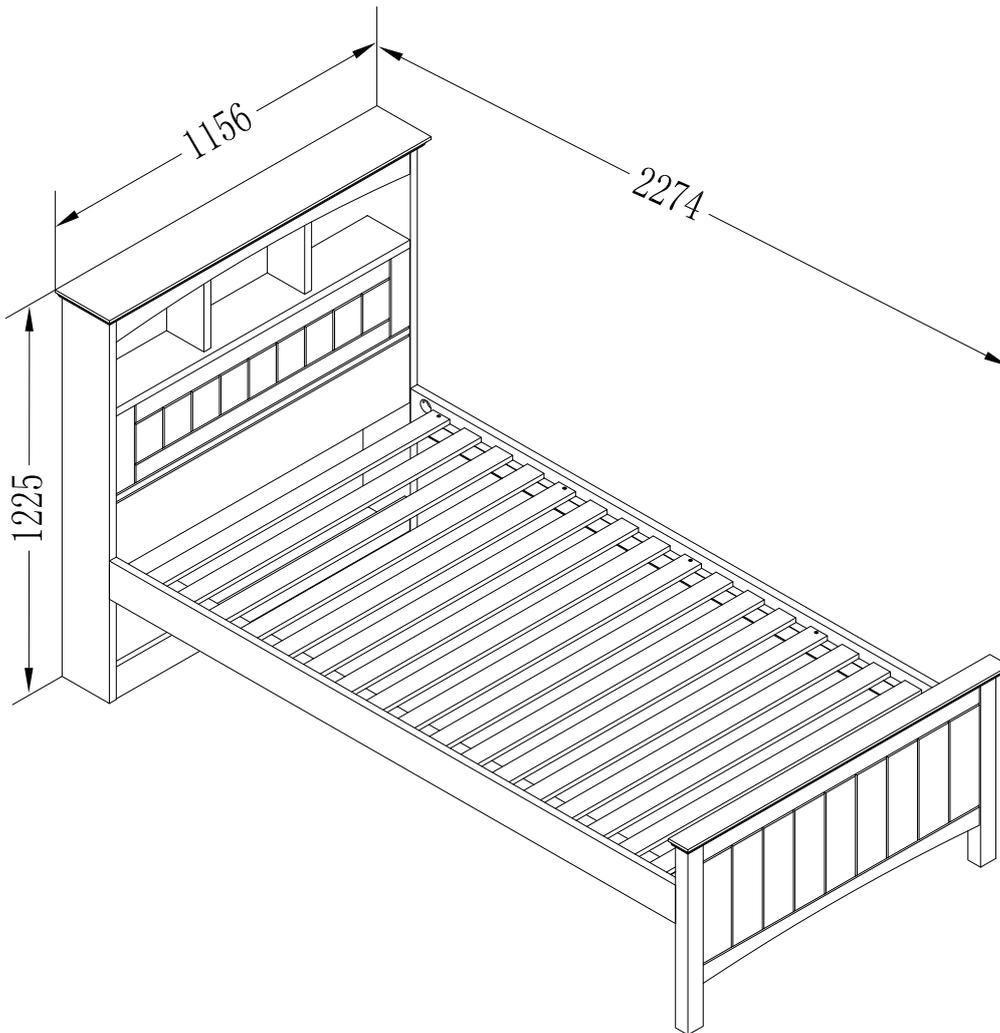



Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

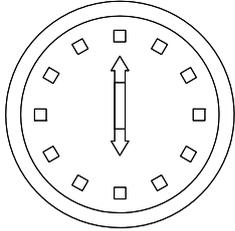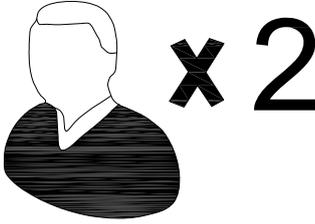	
ALLOW 30 MINUTES	2 PEOPLE REQUIRED
	
ADDITIONAL TOOLS REQUIRED	



CAM Lock and Pins

step 1

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

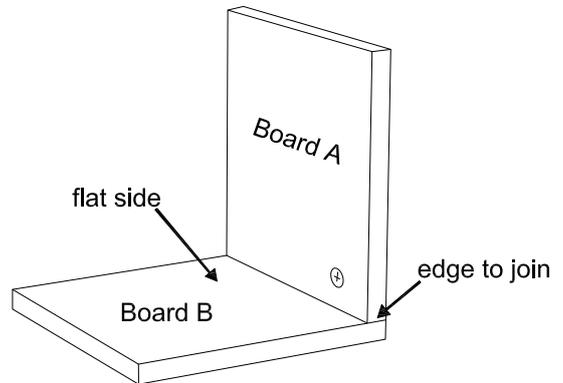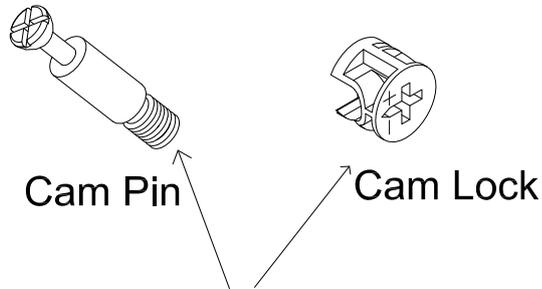


Ensure that you use the correct images that are representative of the hardware used in the product

step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

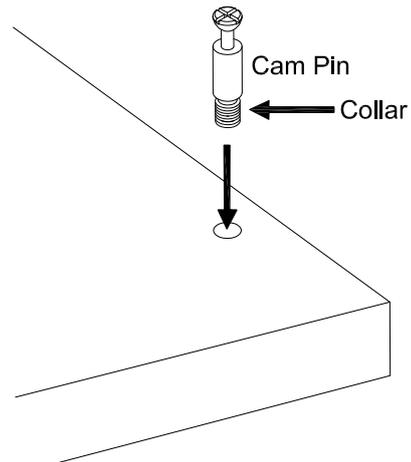

step 3

To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

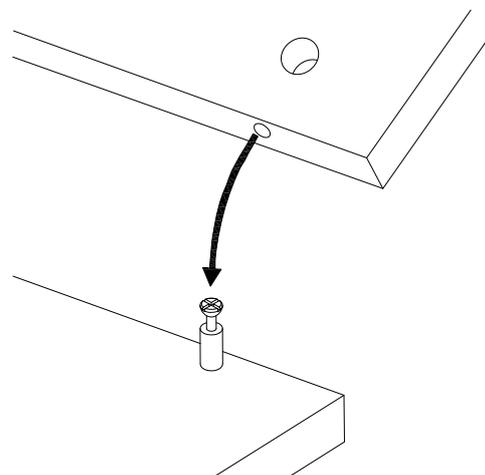


step 4

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

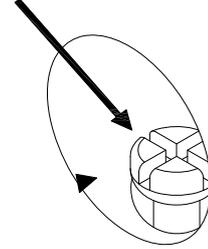

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

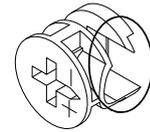

Cam Lock

step 5


To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

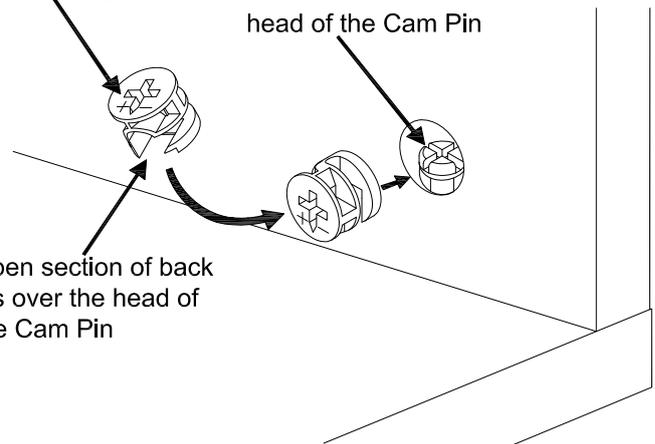


step 6

To use Cam Lock Fasteners



Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

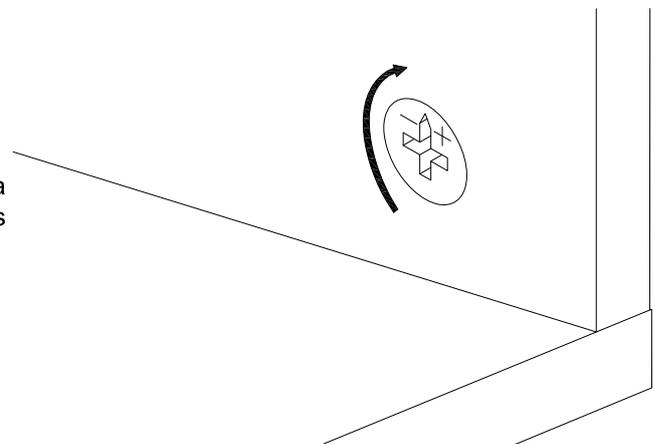


PARTS LIST

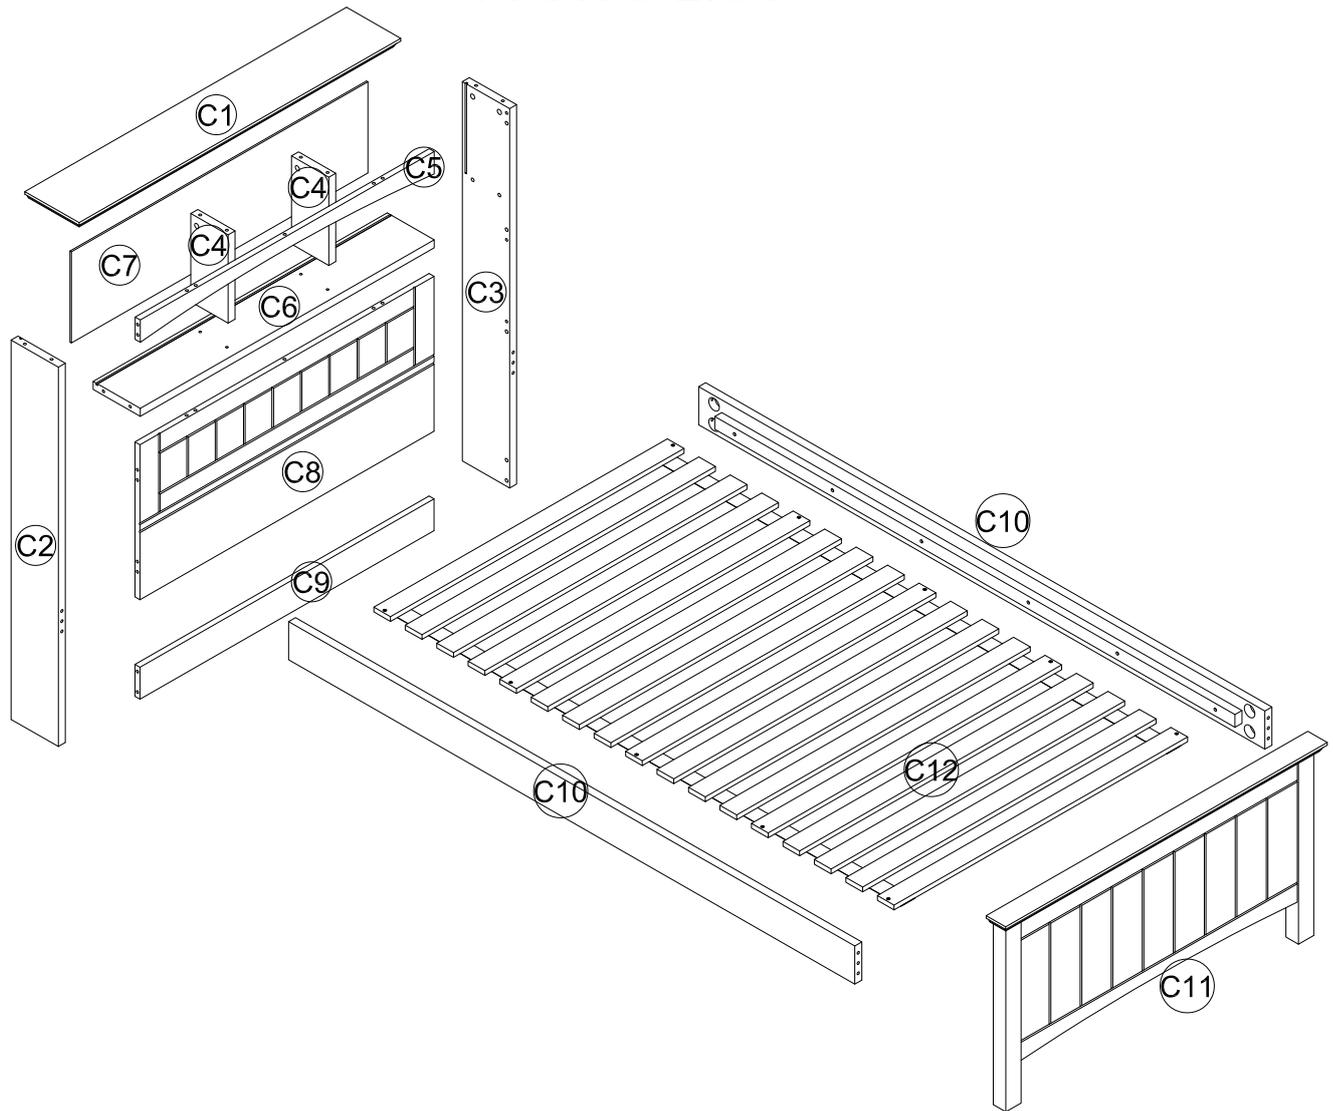


C1	Top panel	C7	Back Panel
C2	Left side Panel	C8	Back Panel
C3	Right side Panel	C9	Bottom Support Pane
C4	Support Panel	C10	Side Rail
C5	Front Support Panel	C11	Footboard
C6	Support Panel	C12	Slats
  
<input type="checkbox"/> A.Cam lock and Cam pin Ø15X35  26PCS	<input type="checkbox"/> B.Dowel Ø8X30  16PCS	<input type="checkbox"/> C.Dolt Ø7X50  4PCS	<input type="checkbox"/> D.Bolt M8x85  8PCS	<input type="checkbox"/> E.Screw M4X25  10PCS	<input type="checkbox"/> F.Cover Ø38  8PCS	<input type="checkbox"/> G.Floor Protector 20x15x5mm  10PCS
<input type="checkbox"/> H.Hex key M4  1PCE	<input type="checkbox"/> I:Wrench M14  1PCE	<input type="checkbox"/> J.Glue  1PCE				


Step 1: Insert the Dowel(B) to the Support Panel(C6) and Top panel(C1)and Left side Panel(C2) and Right side Panel(C3).Use a Phillips Head Screwdriver to insert the Cam Pin(A) to Top panel(C1)and Left side Panel(C2)and Right side Panel(C3) and Support Panel(C6).

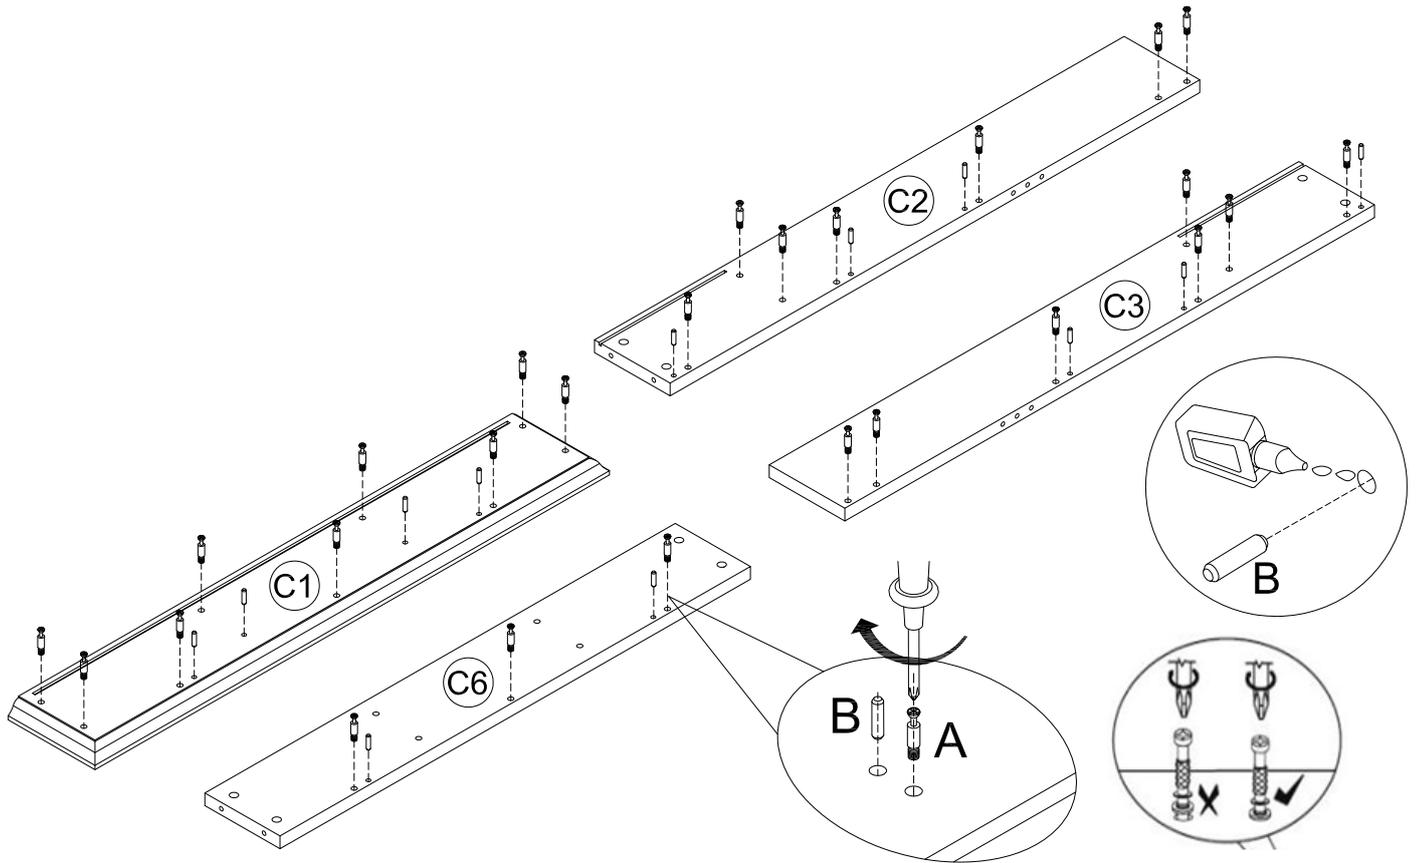


Step 2: Attach the Back Panel(C8) to the Support Panel(C6).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin(A).

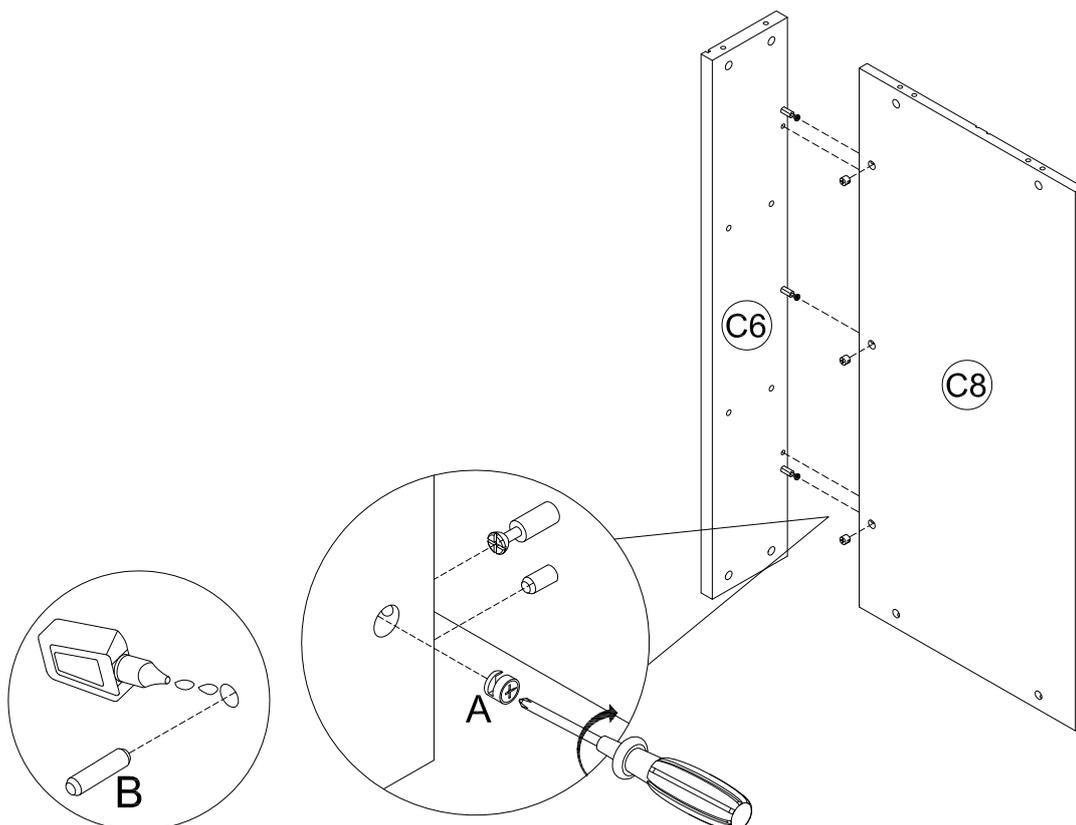


Step 3: Attach the Front Support Panel(C5) and Support Panel(C6) and Back Pane(C8) and Bottom Support Pane(C9) to the Right side Panel(C3).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin(A).

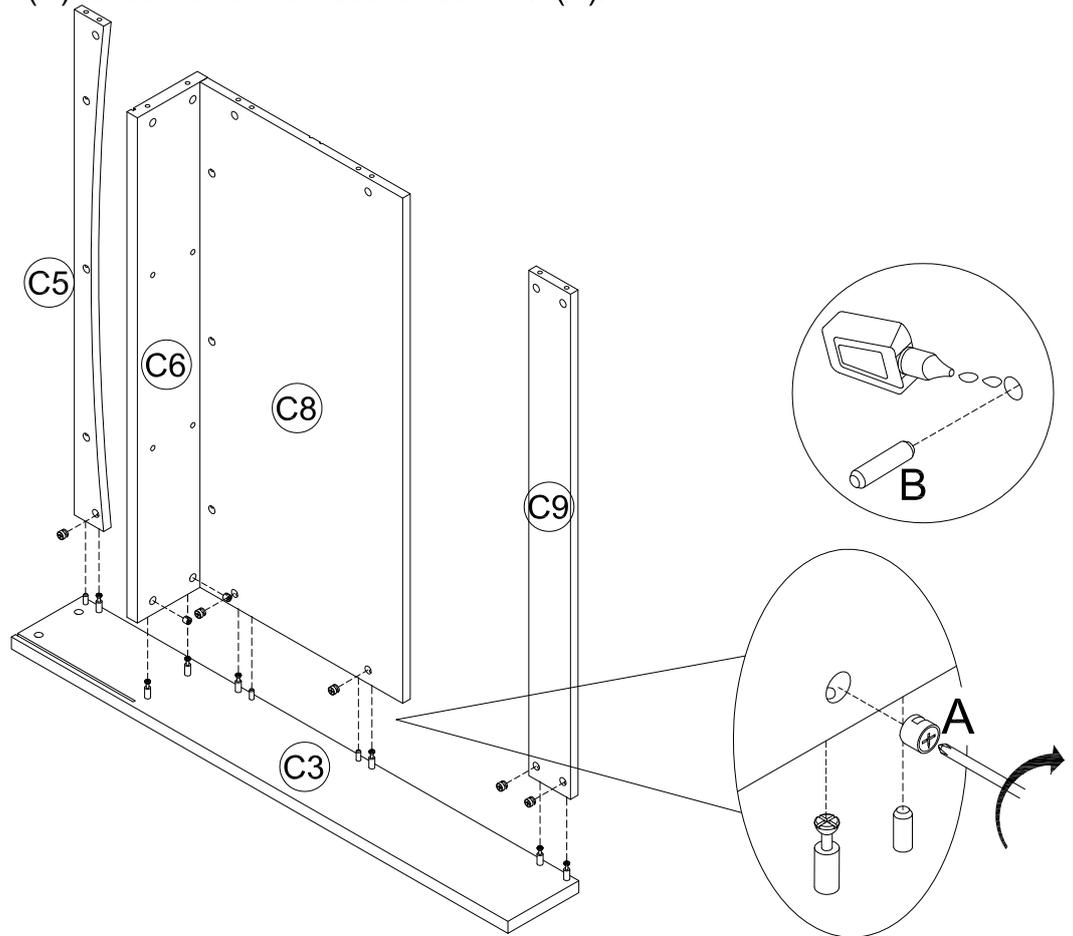


Step 4: Attach the Left side Panel(C2).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin(A).

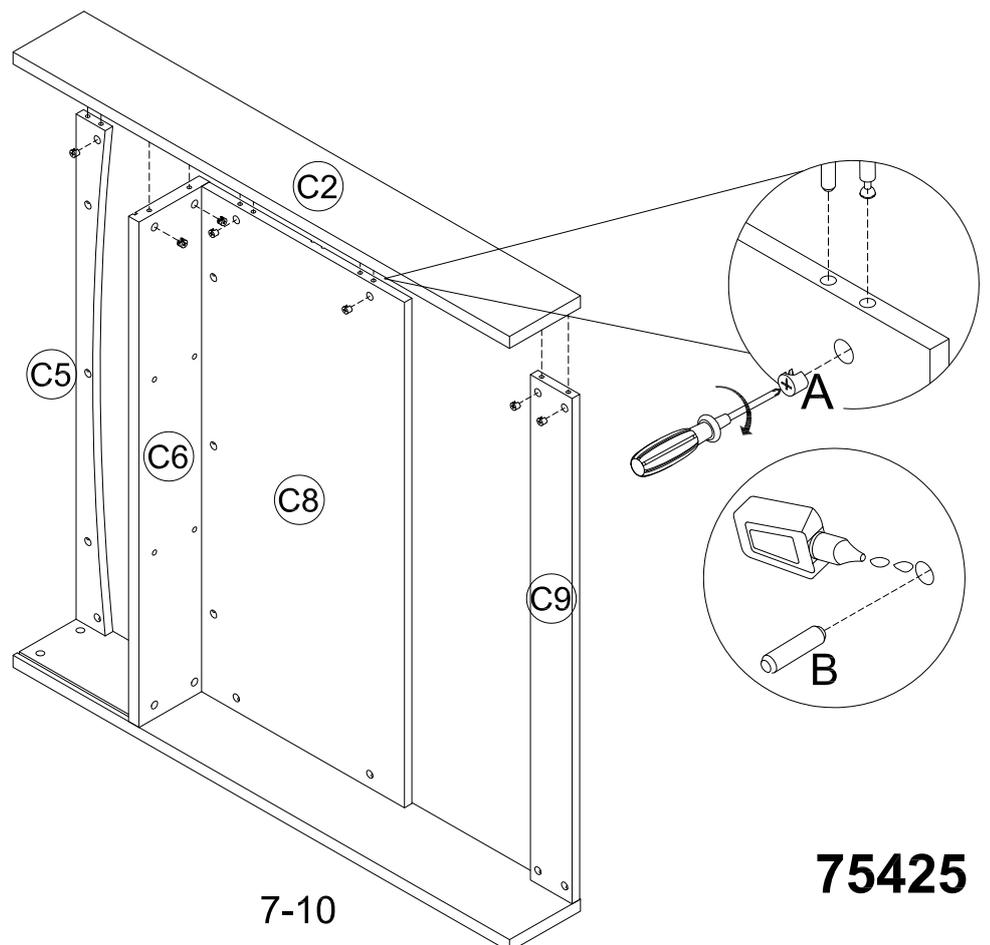


Step 5: Use a Wrench(I) to tighten the Support Panel(C4) to the Support Panel(C6) with Bolt(C).

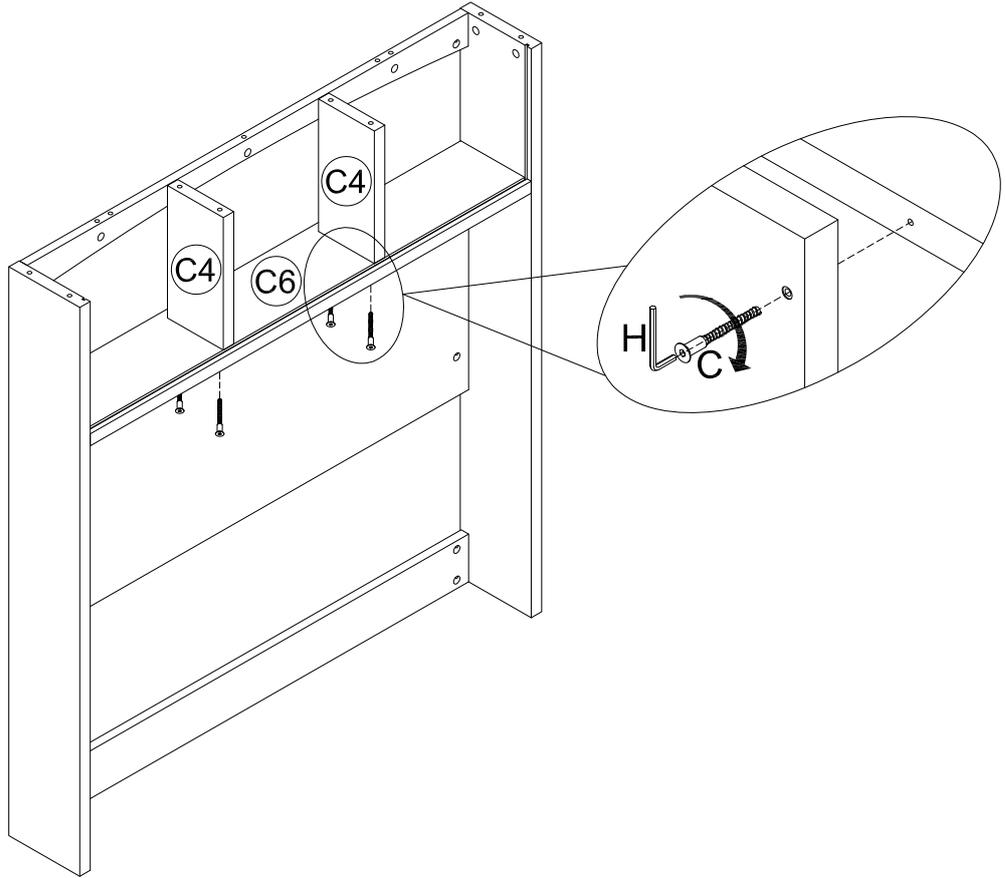


Step 6: Insert the Back Panel(C7) to the groove.

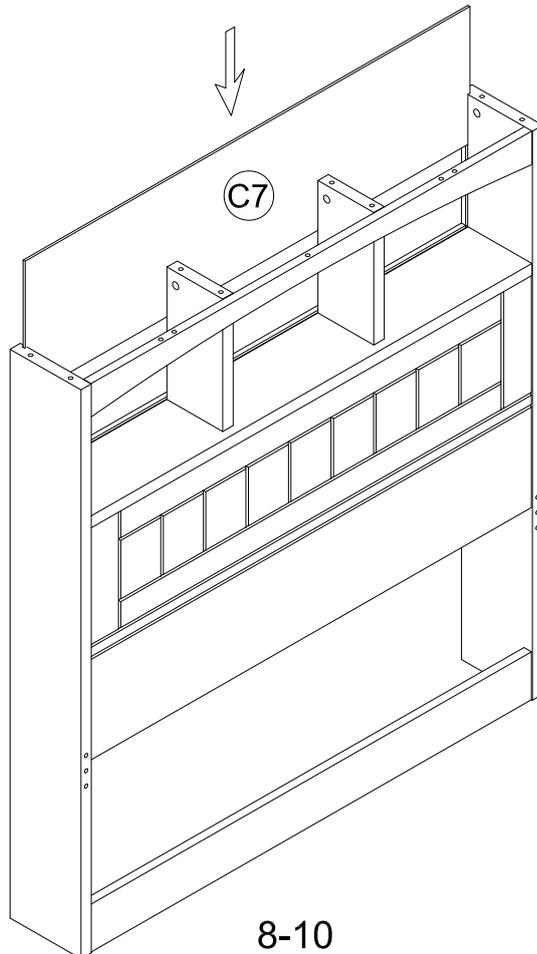


Step 7: Attach the Top panel(C1).Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin(A).

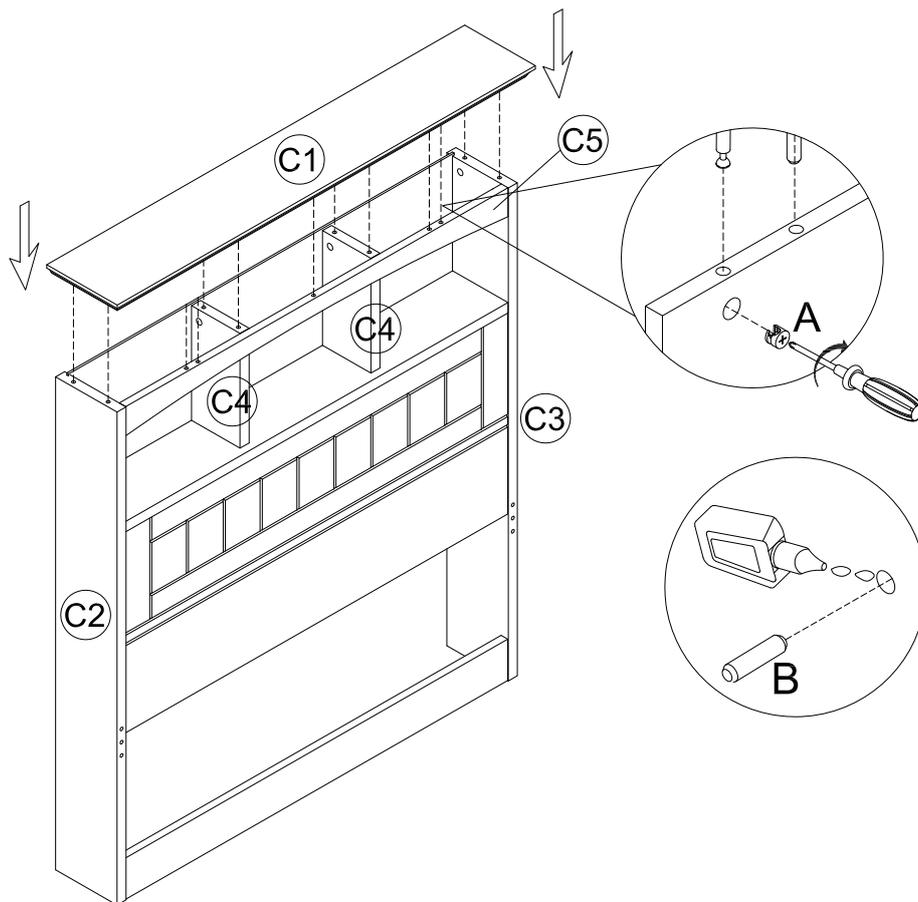


Step 8: Insert the Dowel(B)and Bolt(D)to the Left side Panel(C2)and Right side Panel(C3) and Footboard(C11) .Place the Floor Protector(G) to the Left side Panel(C2) and Right side Panel(C3) and Footboard(C11).

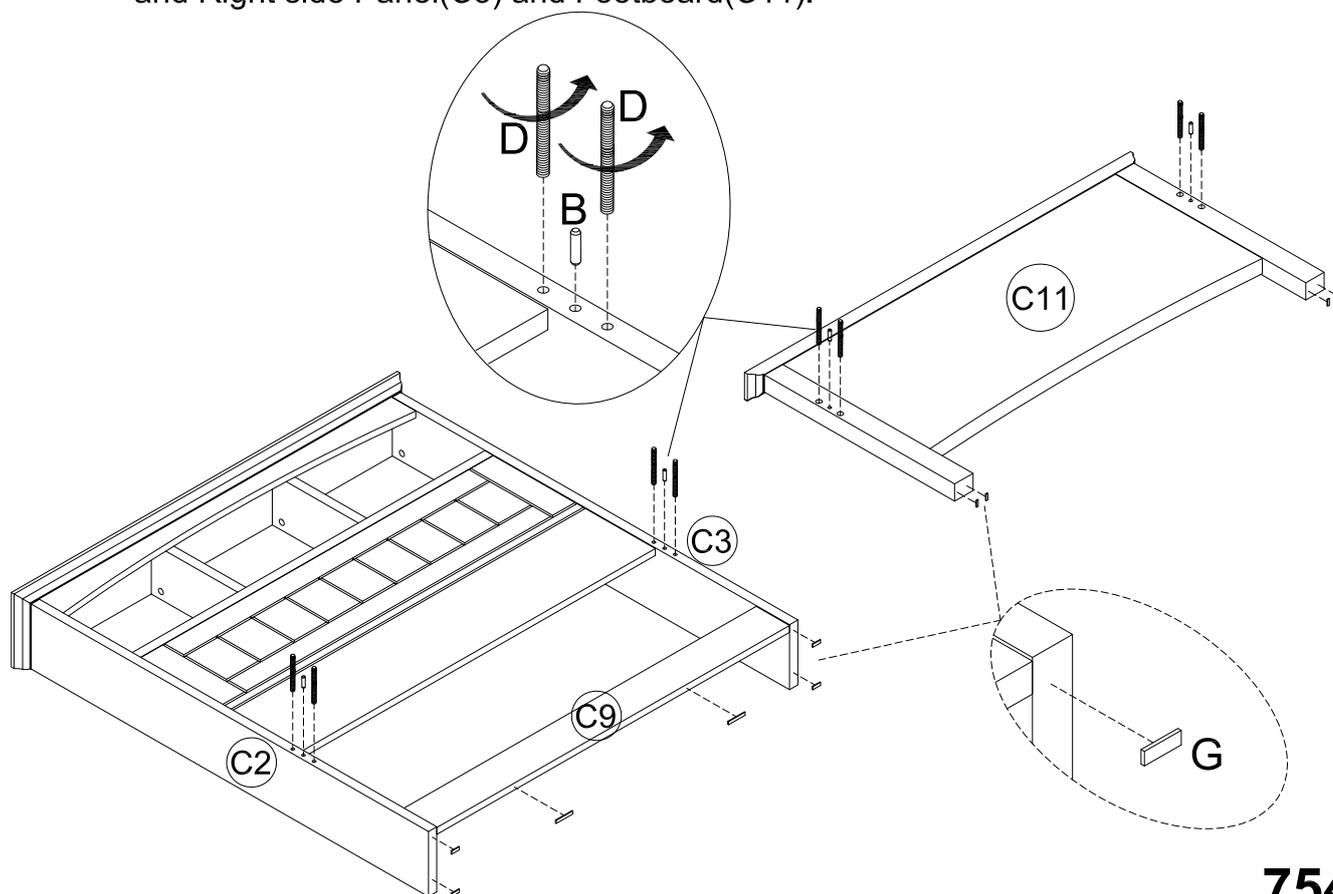

Step 9: Use a Wrench(I) to tighten the Side Rails(C10) to the Left side Panel(C2) and Right side Panel(C3) and Footboard(C11) with Bolt(D) and Cover(F).

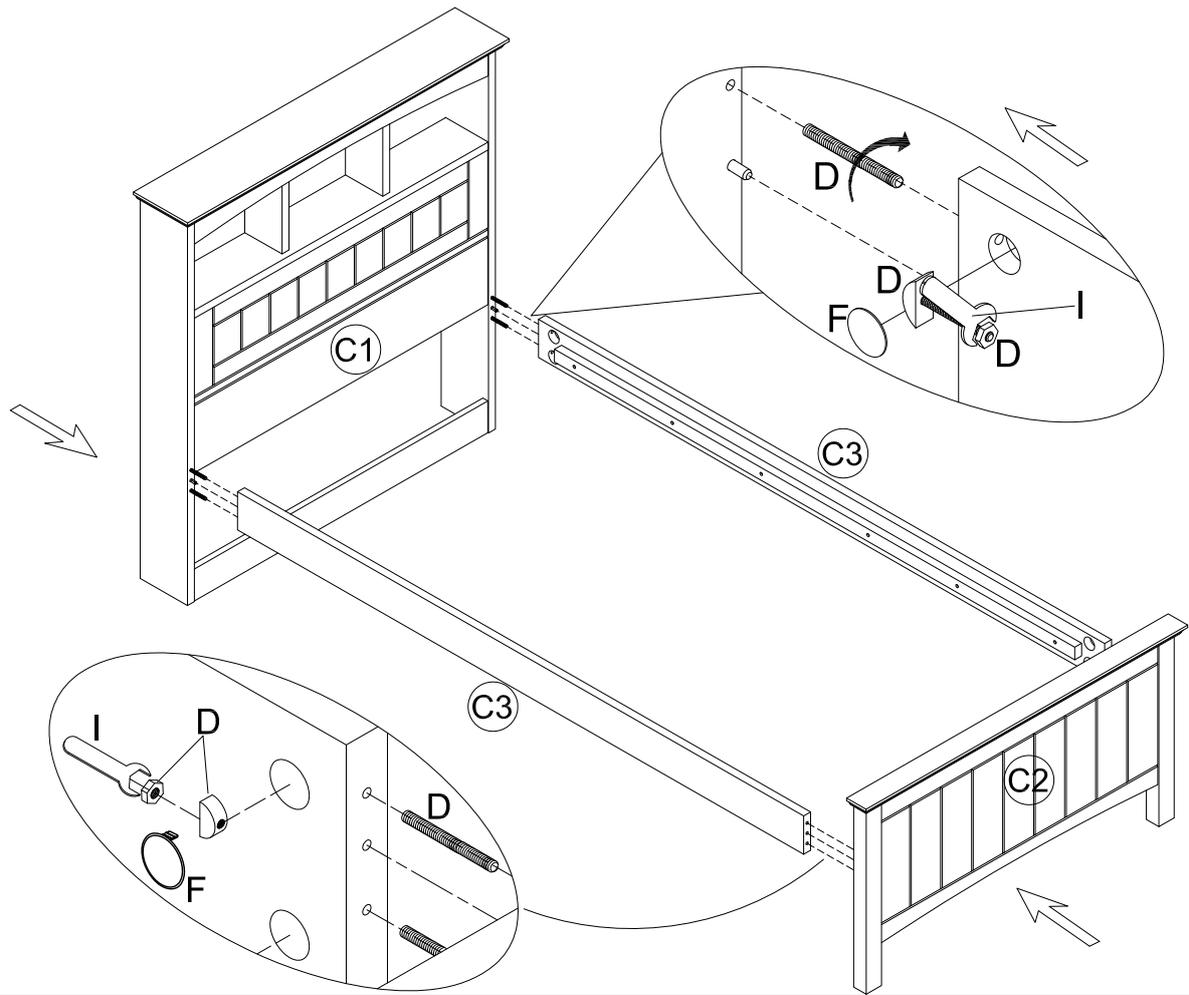

Step 10: Use a Phillips Head Screwdriver to tighten the Slats(C12) to the Side Rails(C10) with Screw(E).

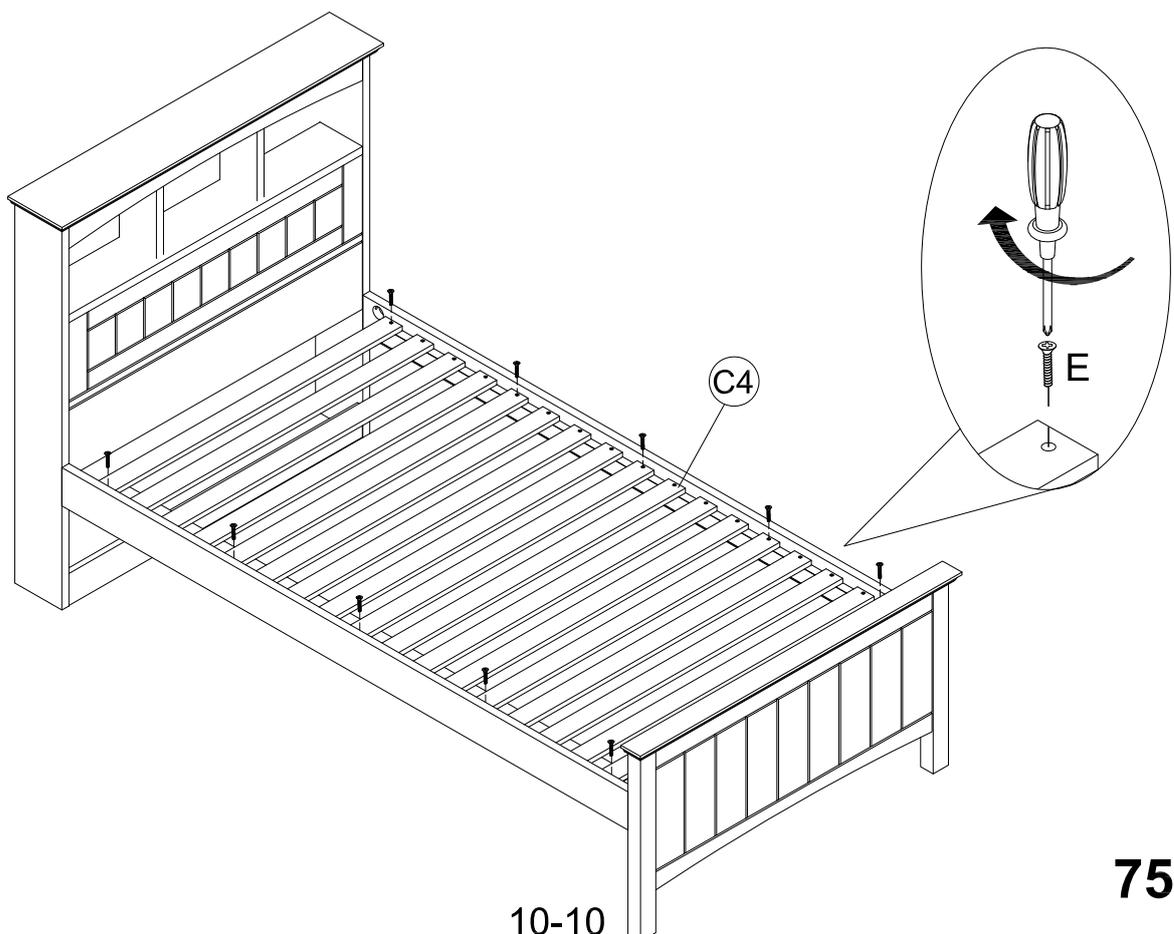

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void