




ASSEMBLY INSTRUCTION
ARABELLA ENTERTAINMENT UNIT
ITEM CODE 75781

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

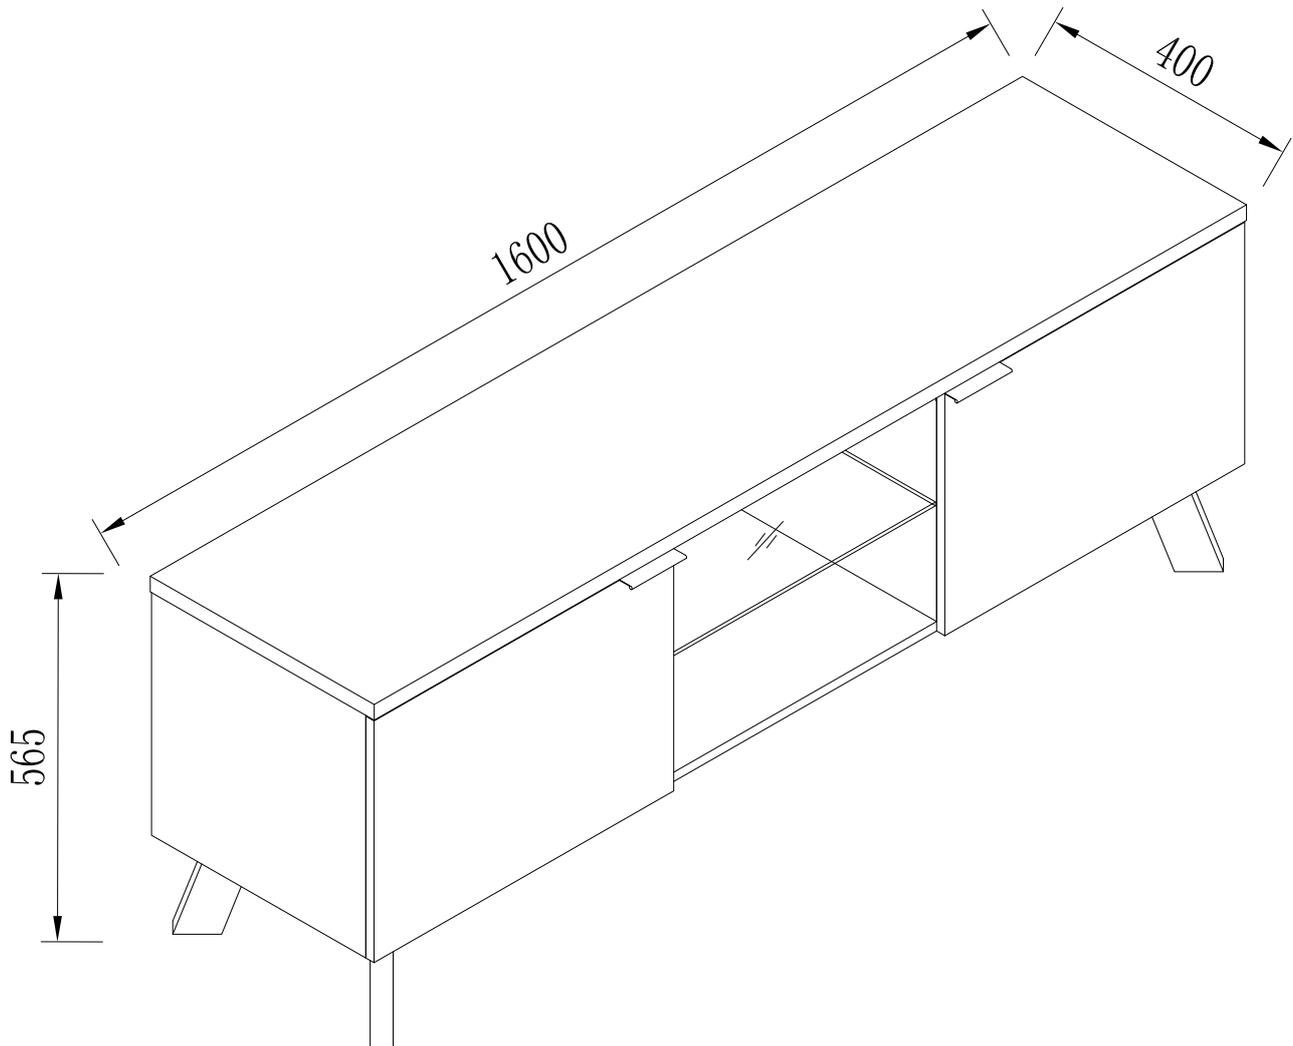



Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
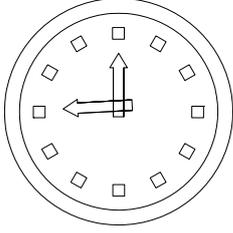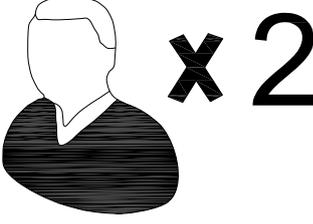
| | |
|----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  <p>ALLOW 45 MINUTES</p> |  <p>2 PEOPLE REQUIRED</p> |
|  <p>ADDITIONAL TOOLS REQUIRED</p> | |

| | |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ! TIPPING WARNING ! | |
|  | <p>Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:</p> <ul style="list-style-type: none">• Install the provided "Tipping Kit" as per the instructions• Never allow children to climb on or hang off of any part of this product• Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product <p>If this product has drawers:</p> <ul style="list-style-type: none">• Place the heaviest items in lowest drawers• Do not open more than 1 drawer at a time as this may cause the product to become unbalanced• Do not tamper with or remove any drawer interlocking/running system <p>Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.</p> <p><i>This is a permanent label. Do not attempt to remove!</i></p> |



CAM Lock and Pins

step 1

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

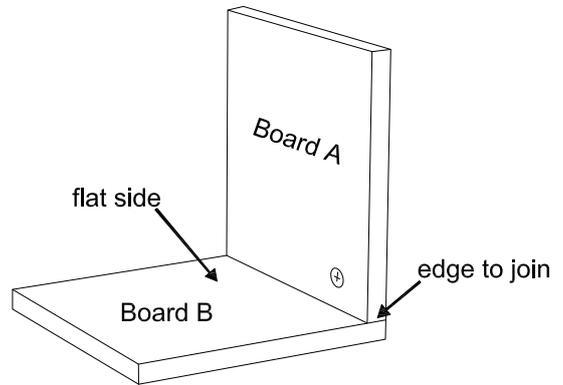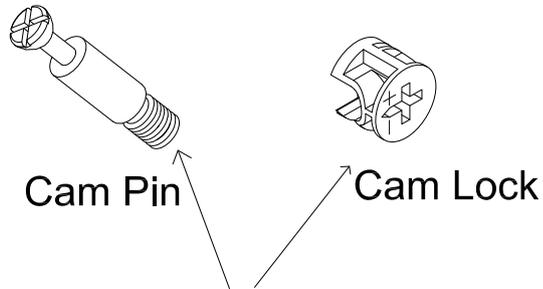


Ensure that you use the correct images that are representative of the hardware used in the product

step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

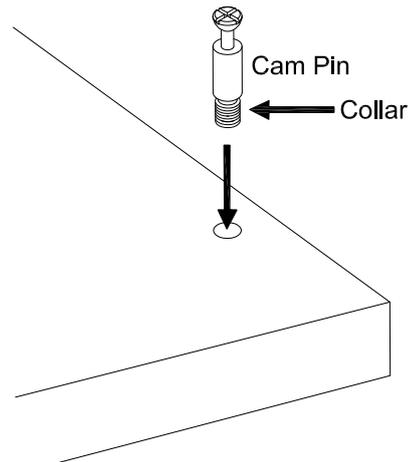

step 3

To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

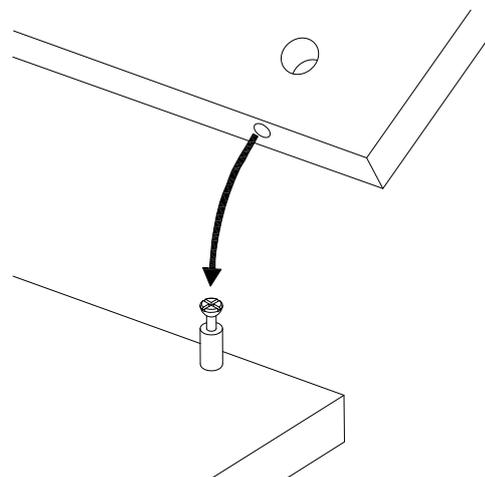


step 4

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

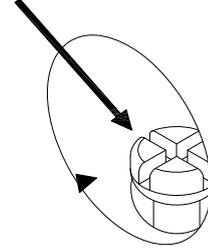

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

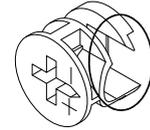

Cam Lock

step 5


To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

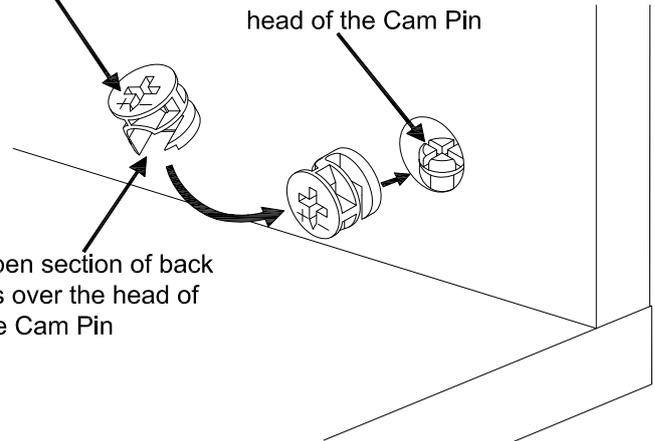


step 6

To use Cam Lock Fasteners




Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

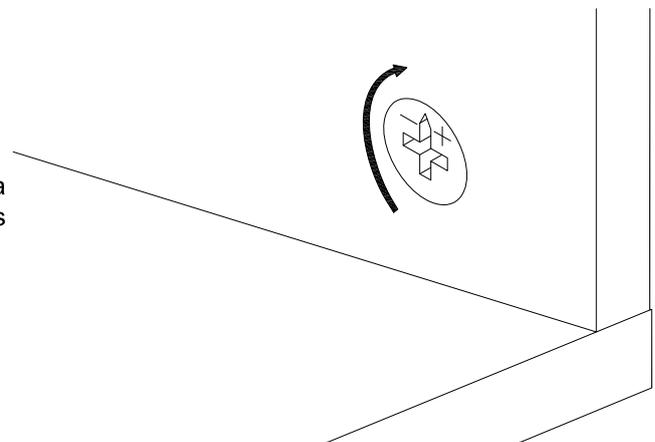

PARTS LIST

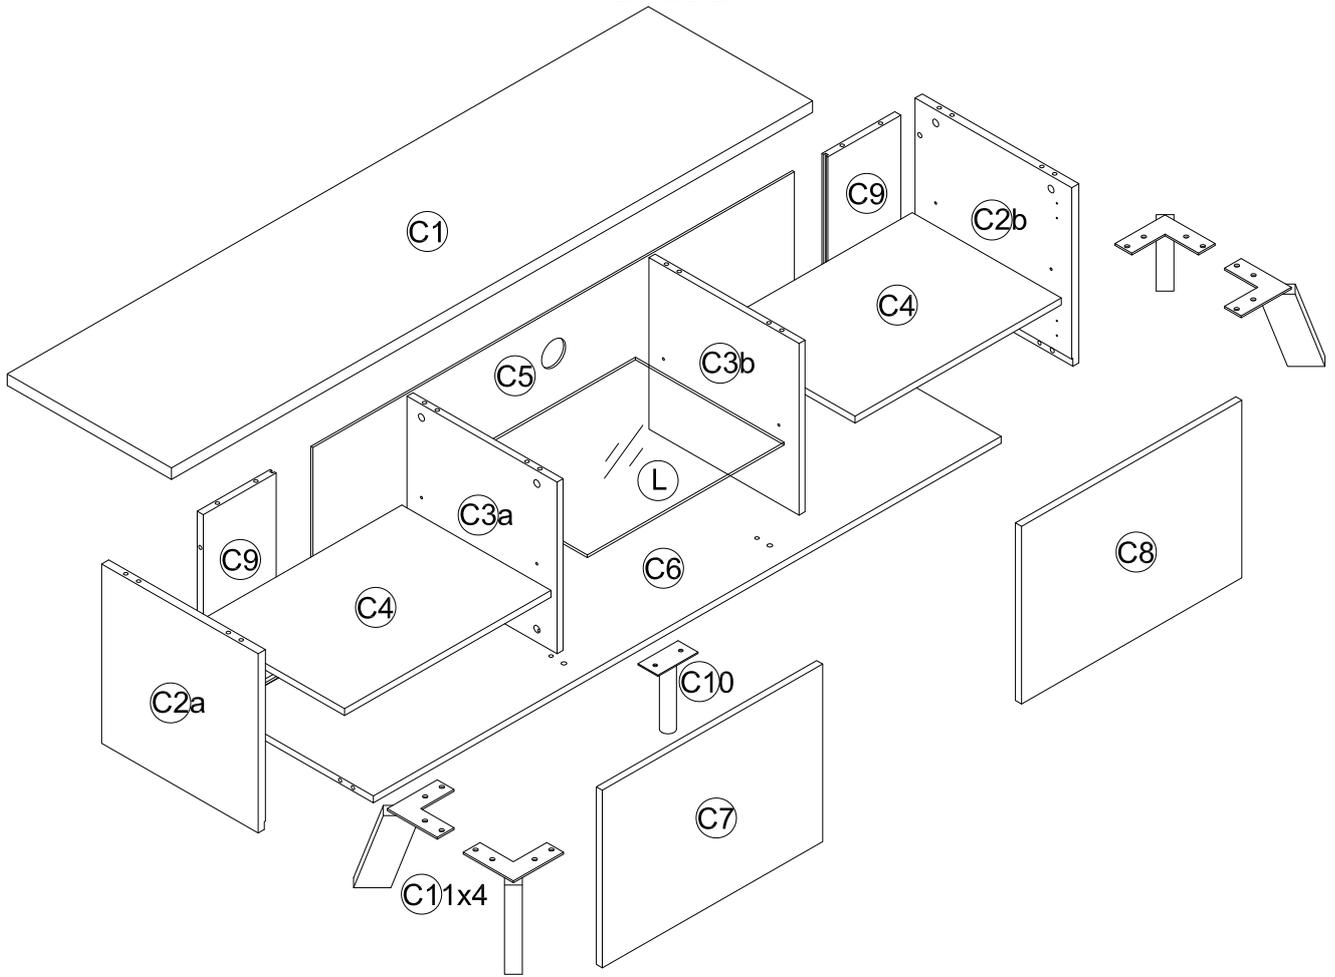


| | | | |
|-----|------------------|-----|--------------------|
| C1 | Top Panel | C6 | Bottom Panel |
| C2a | Left Side Panel | C7 | Door Panel |
| C2b | Right Side Panel | C8 | Door Panel |
| C3a | Support Panel | C9 | Back Rail |
| C3b | Support Panel | C10 | Bottom Support Leg |
| C4 | Shelf Panel | C11 | Leg |
| C5 | Back Panel | L | Glass Shelf Panel |

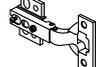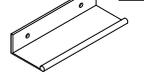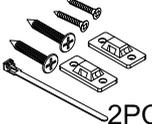
| | | | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> A. Cam lock and Cam pin <small>Ø15x35</small>  24PCS | <input type="checkbox"/> B. Dowel Ø8x30  20PCS | <input type="checkbox"/> C. Screw Ø3.5x12  4PCS | <input type="checkbox"/> D. Screw Ø3x18  6PCS | <input type="checkbox"/> E. Connector  6PCS | <input type="checkbox"/> F. Bolt M6x15  18PCS | <input type="checkbox"/> G. Washer Ø6  18PCS |
| <input type="checkbox"/> H. Screw Ø4x14  24PCS | <input type="checkbox"/> I. Glass Clamp  4PCS | <input type="checkbox"/> J. Shelf Support Fitting  8PCS | <input type="checkbox"/> K. Glue  1PCE | <input type="checkbox"/> L. Hex key M4  1PCE | <input type="checkbox"/> M. Hinge  4PCS | <input type="checkbox"/> N. Handle  2PCS |
| <input type="checkbox"/> O. Belt  2PCS | | | | | | |

75781


STEP 1: Place a small amount of glue on each Dowel(B) and insert into the Side Panel(C2a,C2b) and Bottom Panel(C6).Use a Phillips Head Screwdriver to insert the Cam Pin(A) to the Side Panel(C2a,C2b) and Bottom Panel(C6) and Top Panel(C1).

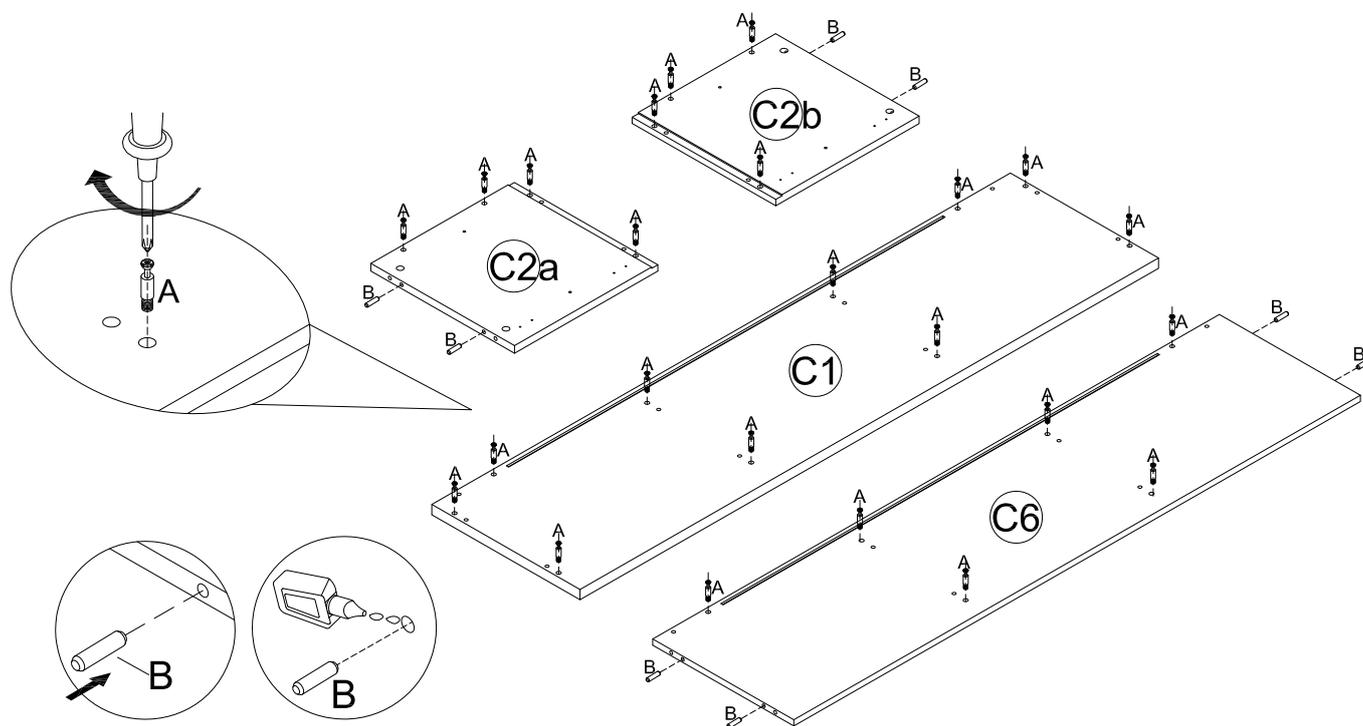


STEP 2: Tighten the Hinge(M) to the Door Panel (C7,C8)with Bolt(H).Tighten the Handle(N) to the Door Panel (C7,C8)with Bolt(C).

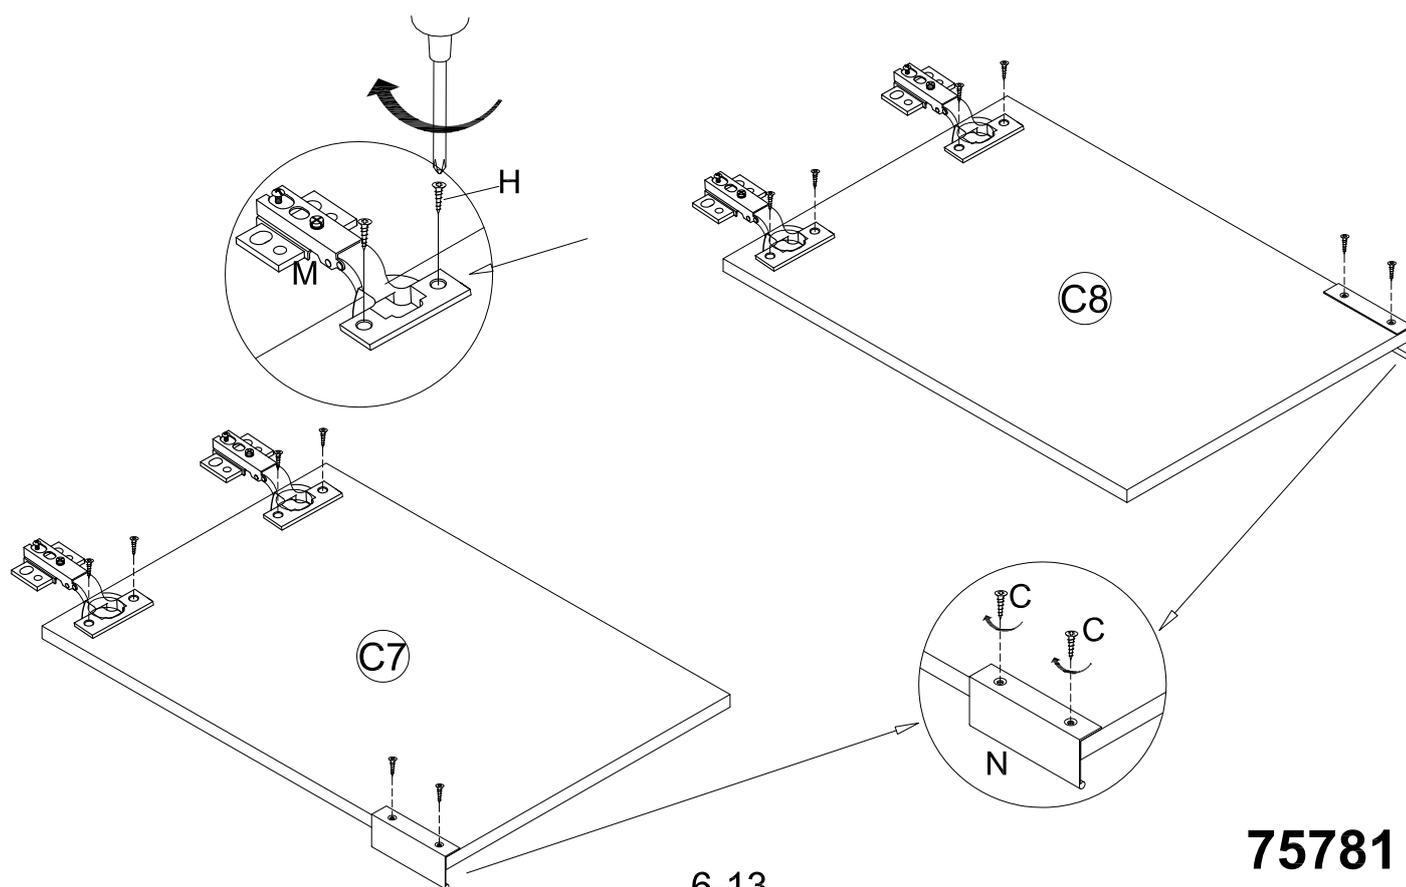


STEP 3: Insert the Dowel(B)to the Support Panel(C3a,C3b)and Back Rail(C9).Assemble the Support Panel(C3a,C3b) and Back Rail(C9) to the Bottom Panel(C6).Use a Phillips Head Screwdriver to turn the Cam Pin(A) to lock onto the head of Cam pin(A).

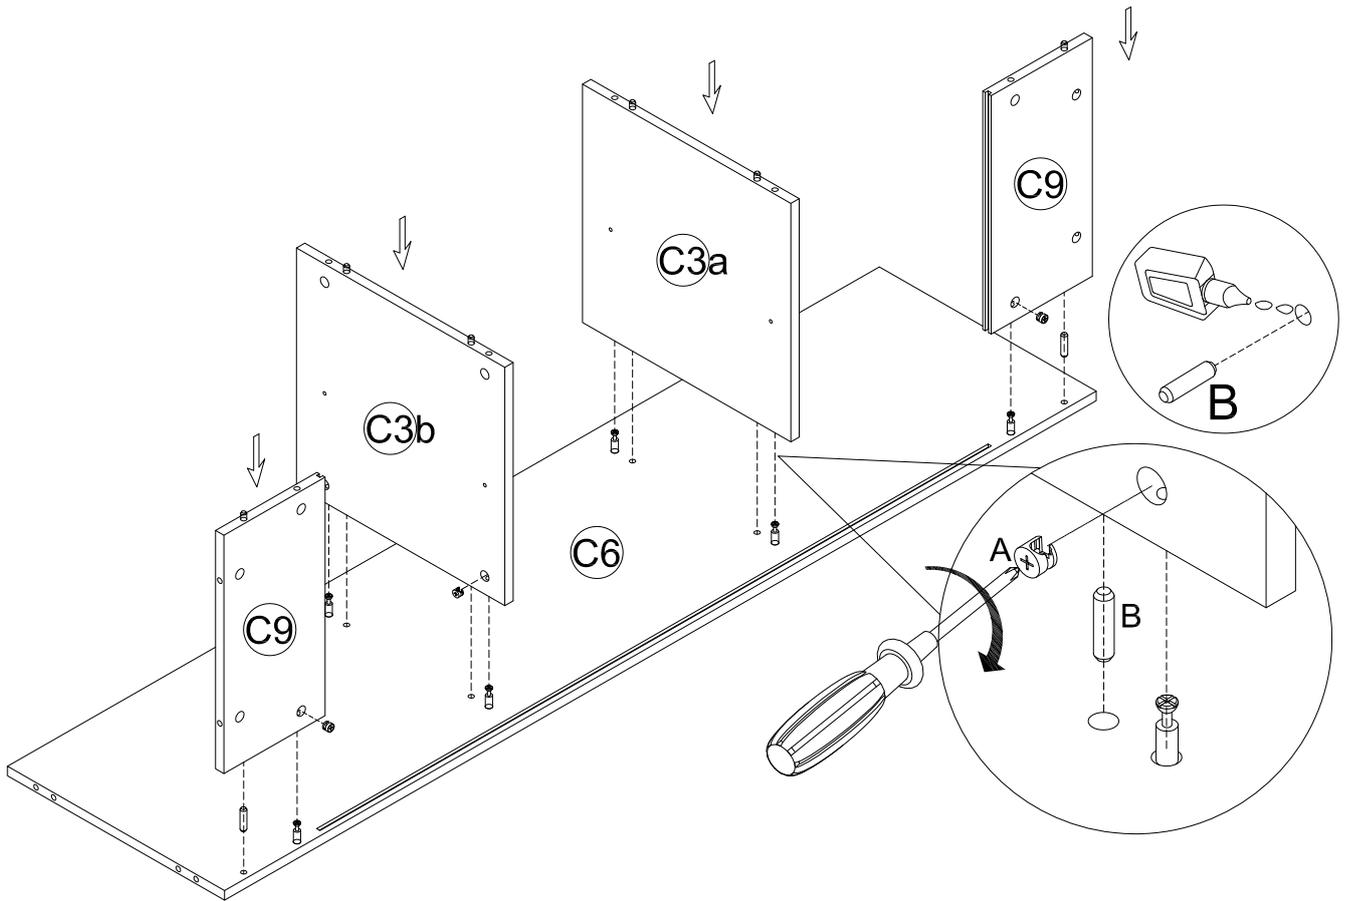


STEP 4: Assemble the Side Panel(C2a,C2b) to the Bottom Panel(C6) and Back Rail(C9). Use a Phillips Head Screwdriver to turn the Cam Pin(A) to lock onto the head of Cam pin(A).

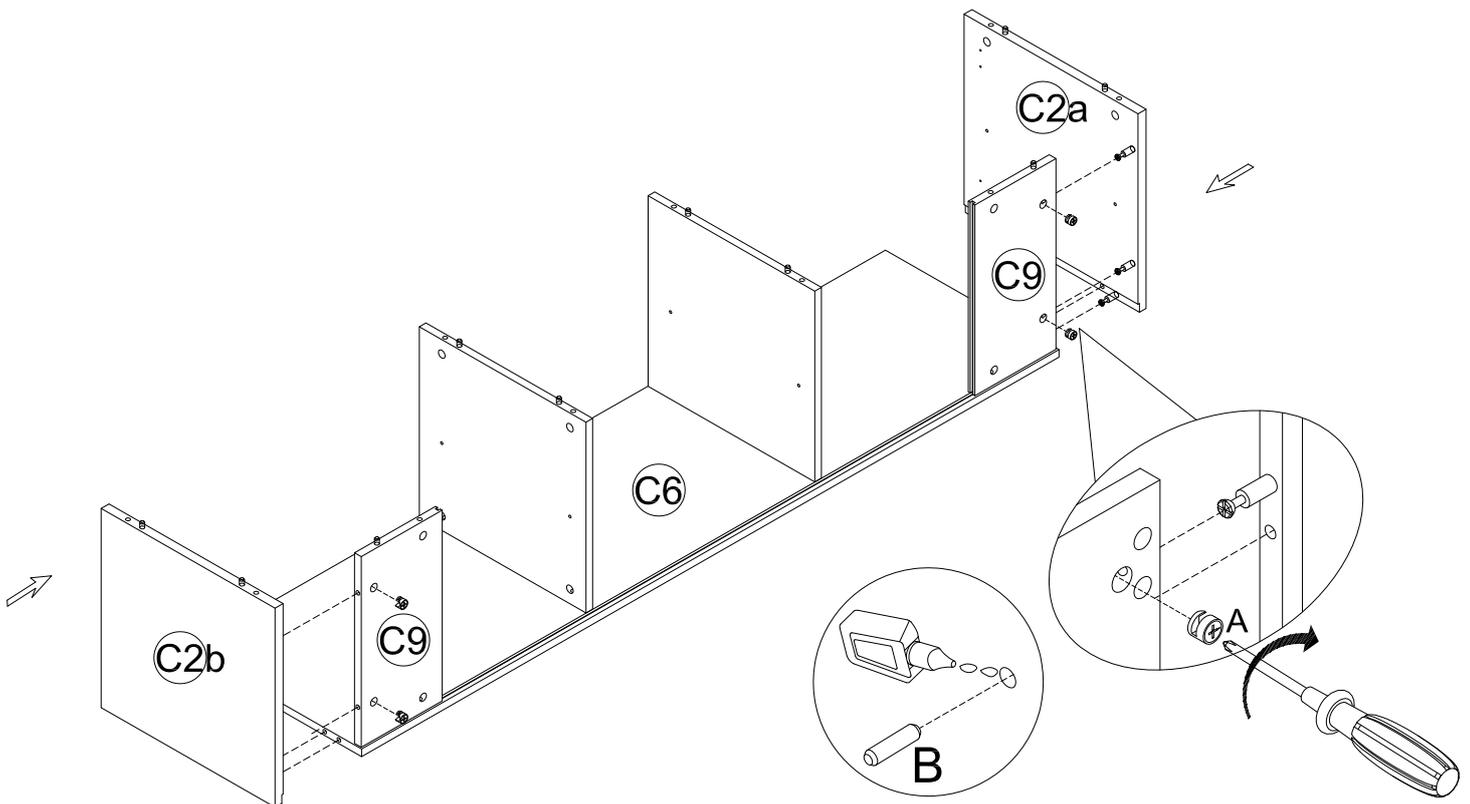

STEP 5: Insert the Back Panel (C5) to the groove. Assemble the Top Panel(C1) to the Side Panel(C2a,C2b) and Back Rail(C9) and Support Panel(C3a,C3b).Use a Phillips Head Screwdriver to turn the Cam Pin(A) to lock onto the head of Cam pin(A).

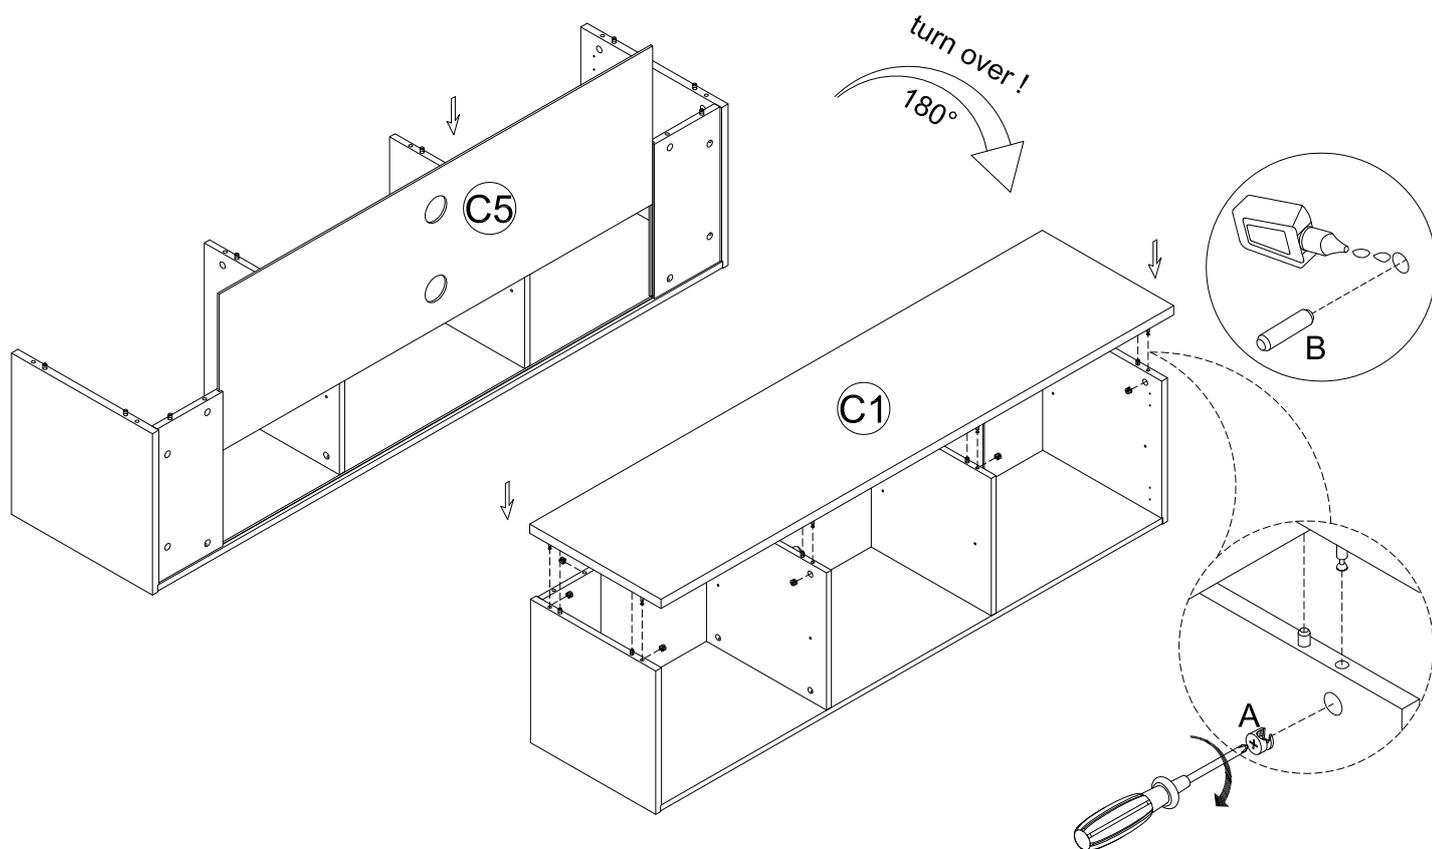


STEP 6: Use the Hex Key (L) to tighten the Bottom Support Leg(C10) and Leg(C11) to the Bottom Panel(C6) with Bolt(F)and Washer(G).

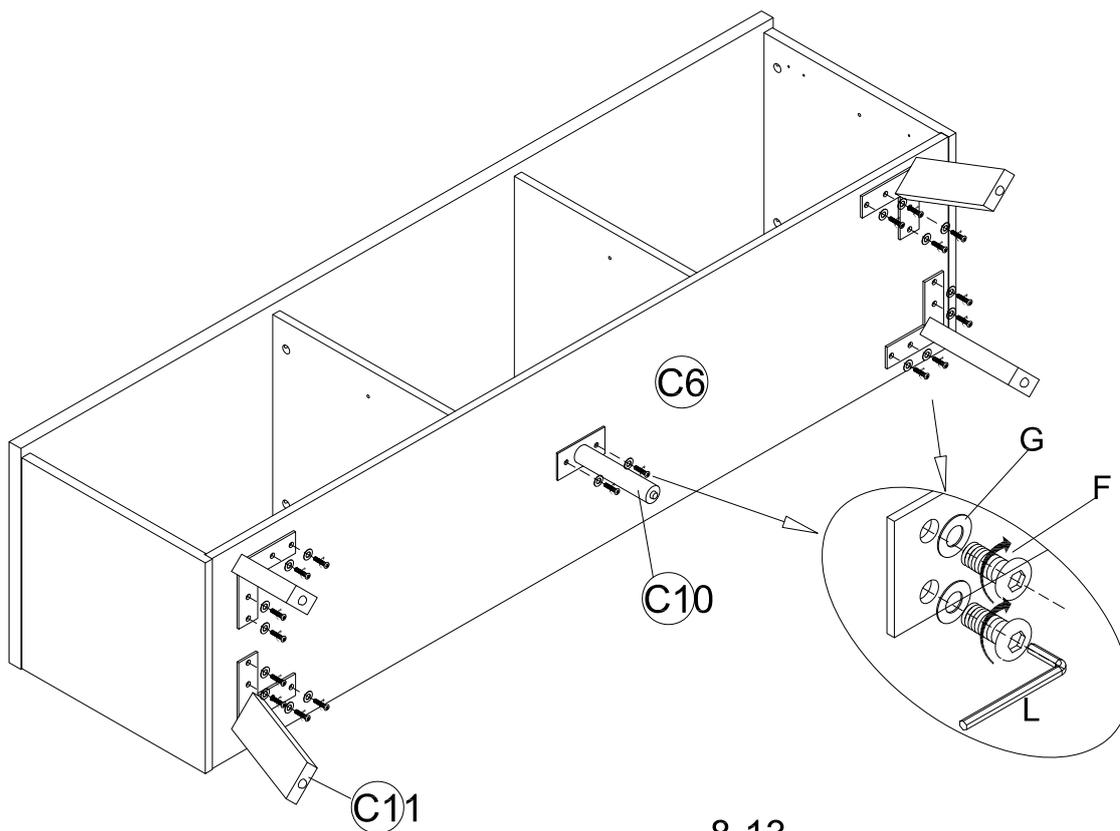


75781


STEP 7: Tighten the Shelf Support Fitting(J) to the Side Panel(C2a,C2b) and Support Panel(C3a,C3b) with Bolt(J), then place the the Shelf Panel(C4) on it.

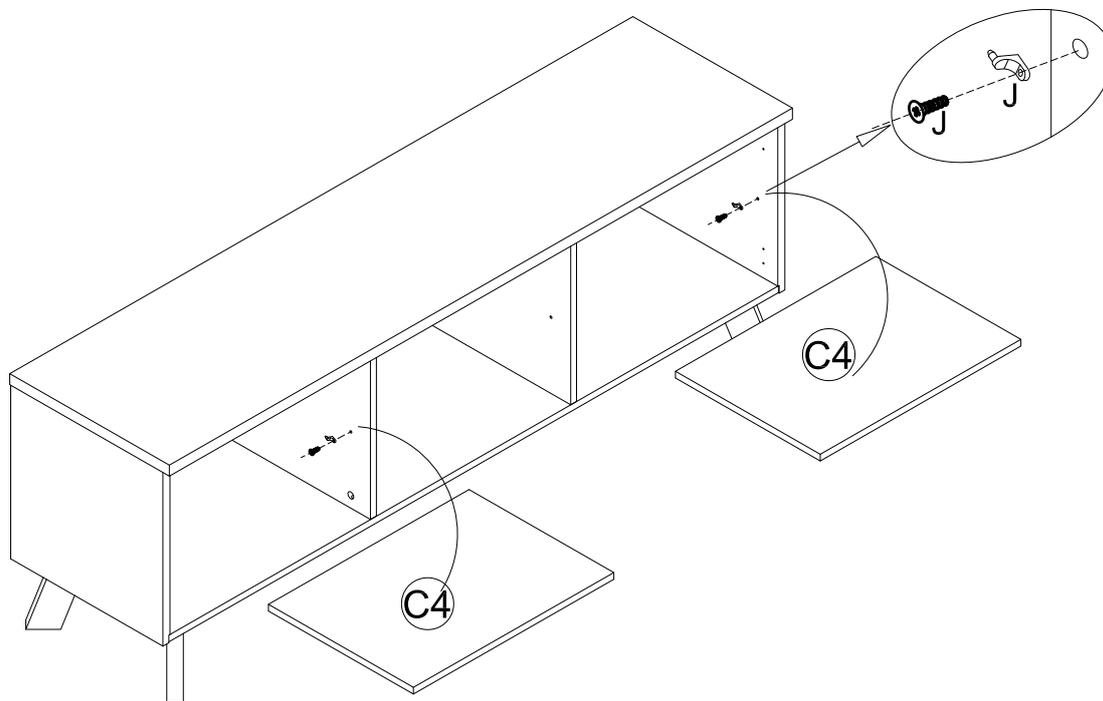


STEP 8: Fix Glass Clamp(I) to the Support Panel(C3a,C3b).Place the Glass Shelf Panel(L) in the middle of the clamp and secure the glass with screws on the bottom.


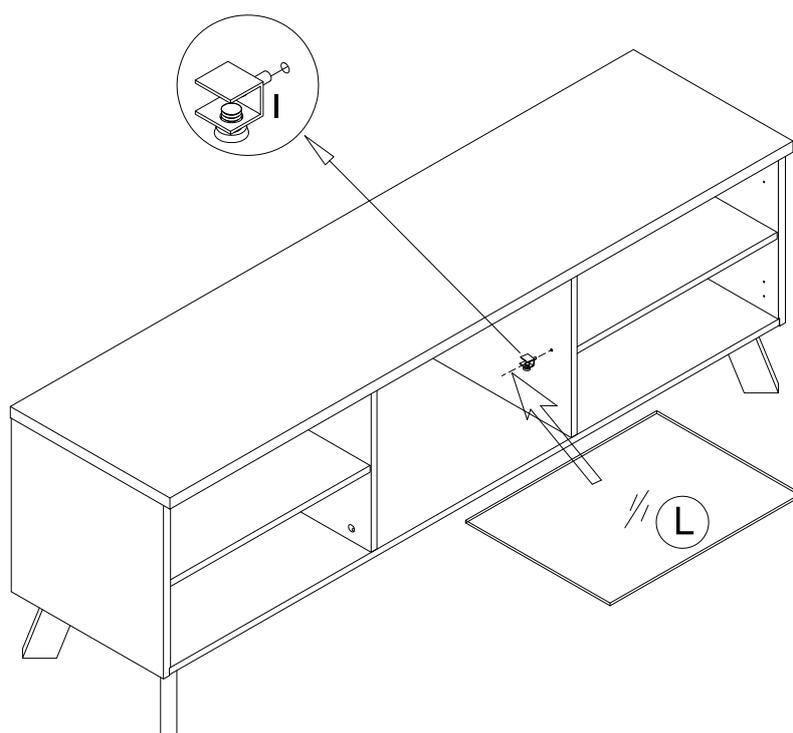


STEP 9: Tighten the Connector(E) to the back corner with Bolt(D).

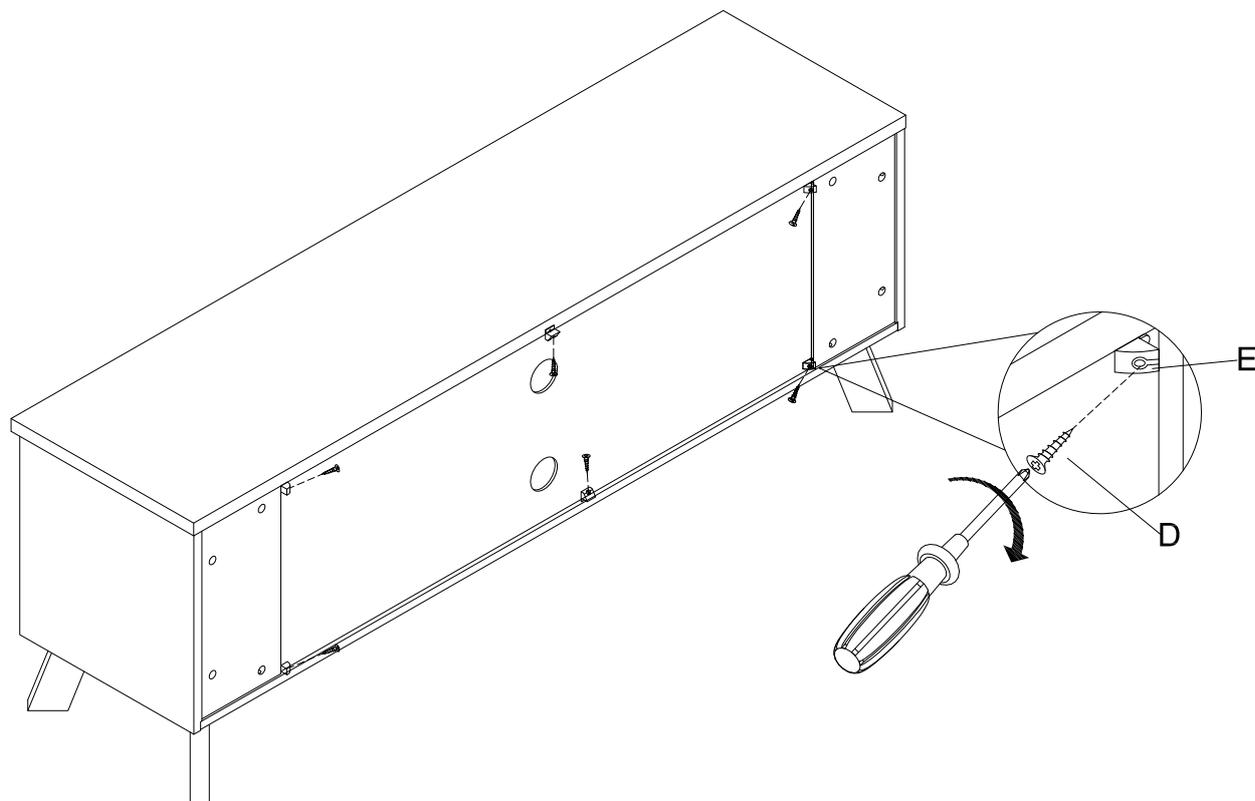


STEP 10: Use a Phillips Head Screwdriver to tighten the Hinge(M) to the Side Panel(C2a,C2b) with Bolt(H).

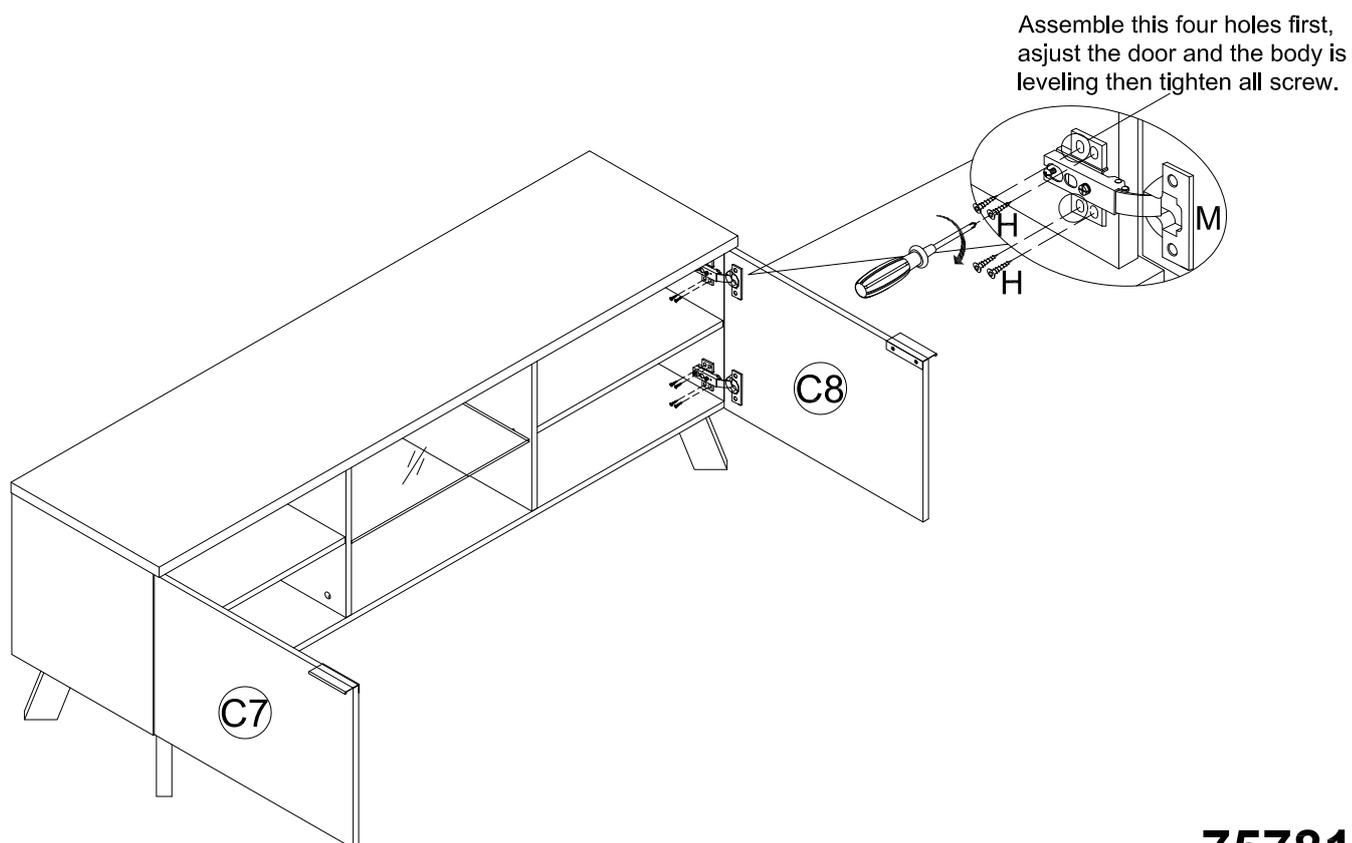

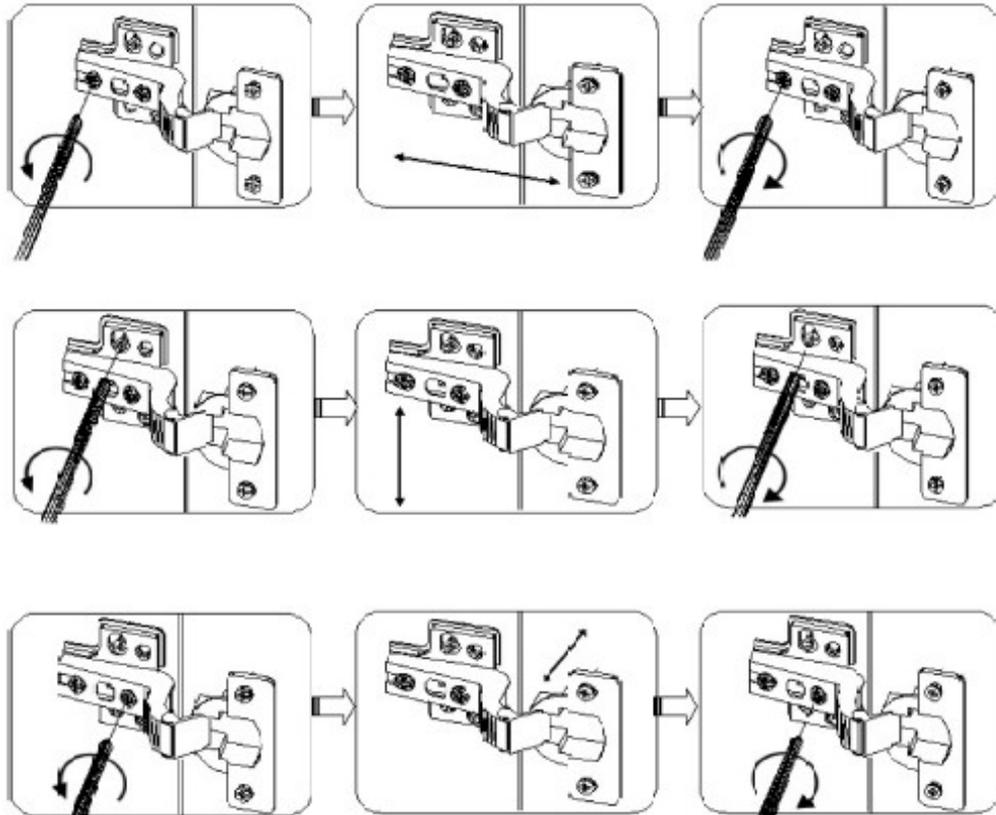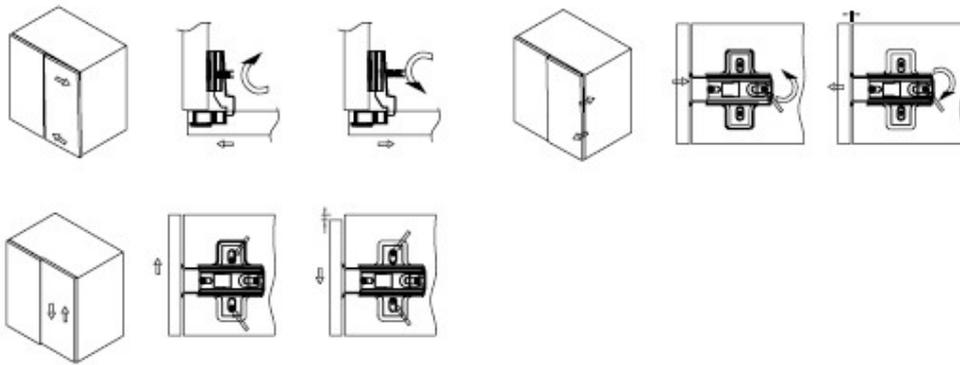


Assembly is complete

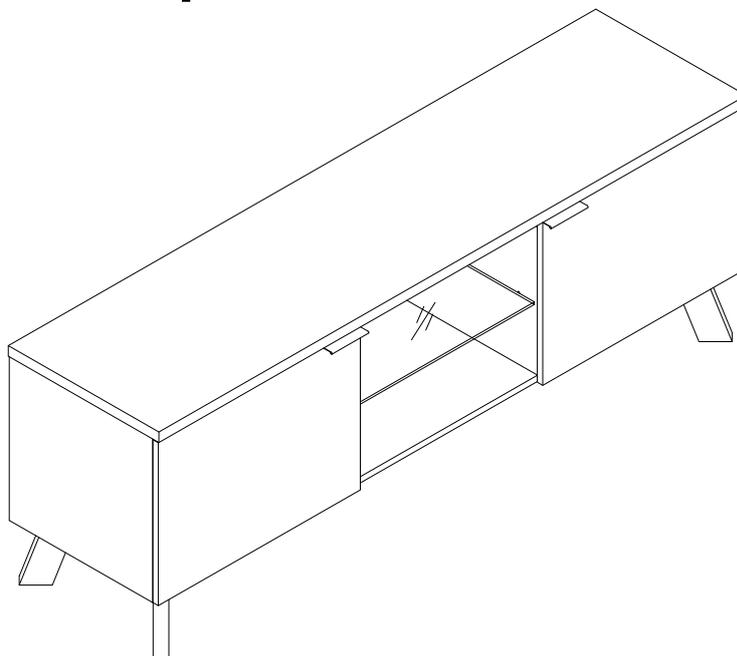

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

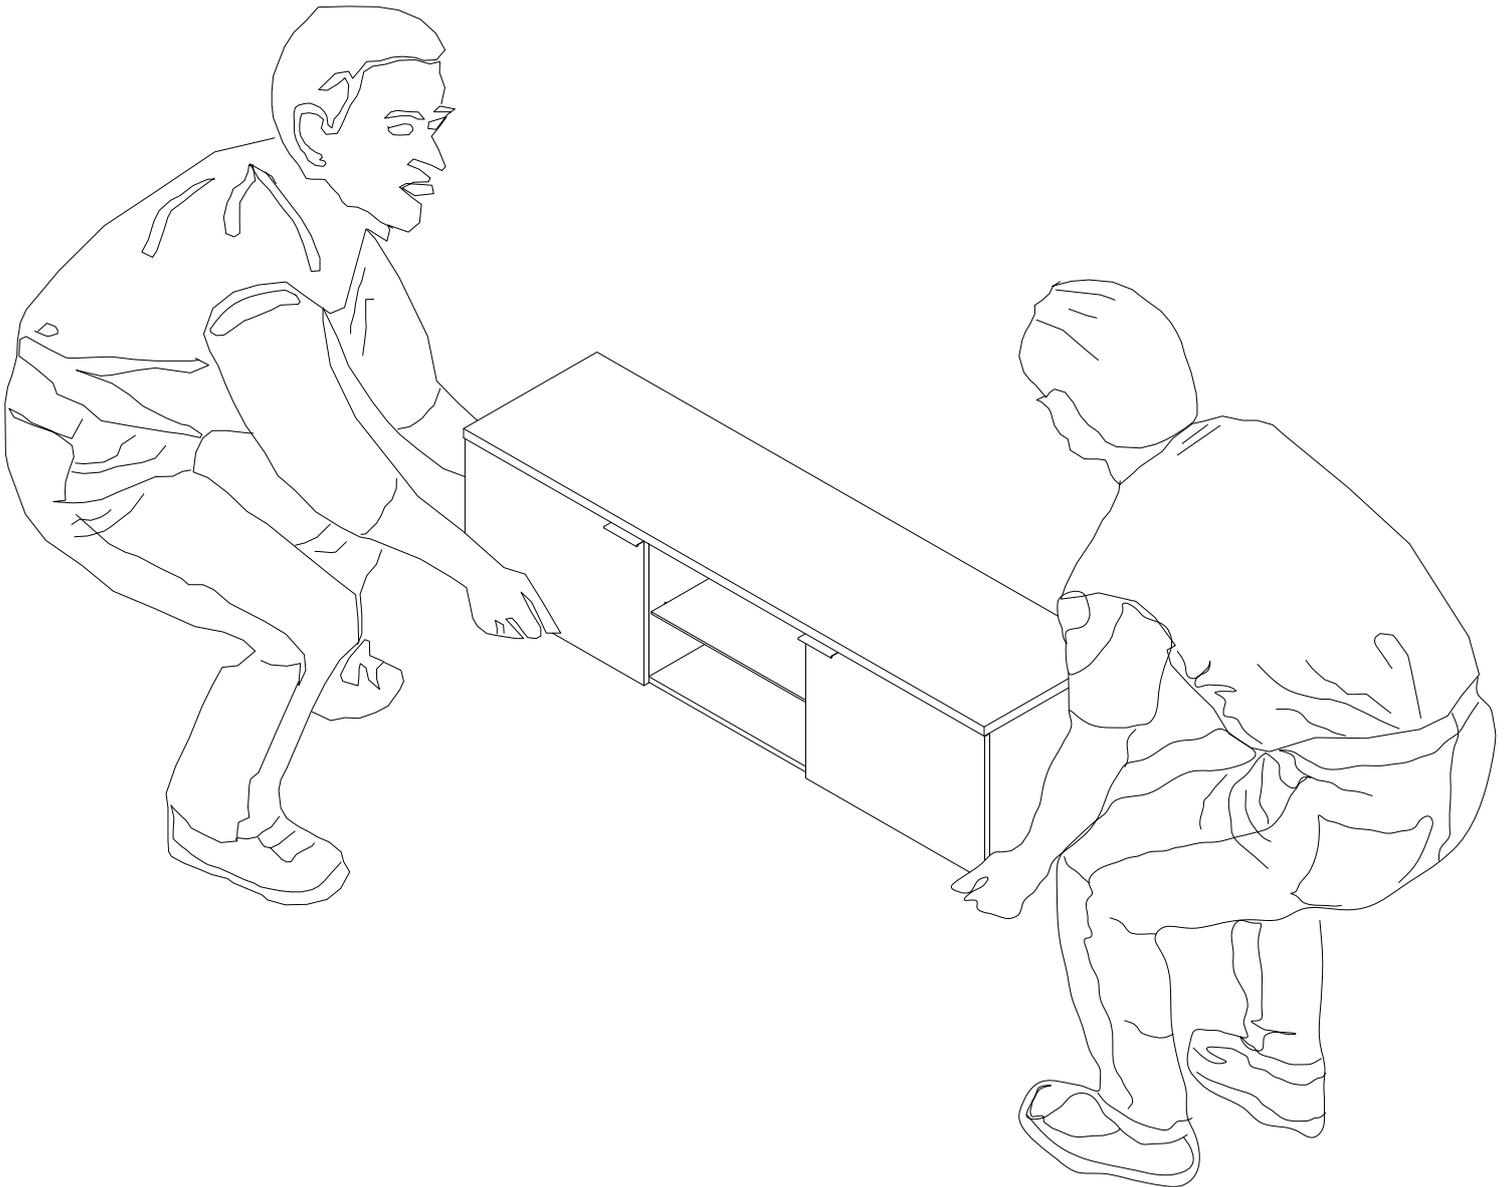

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

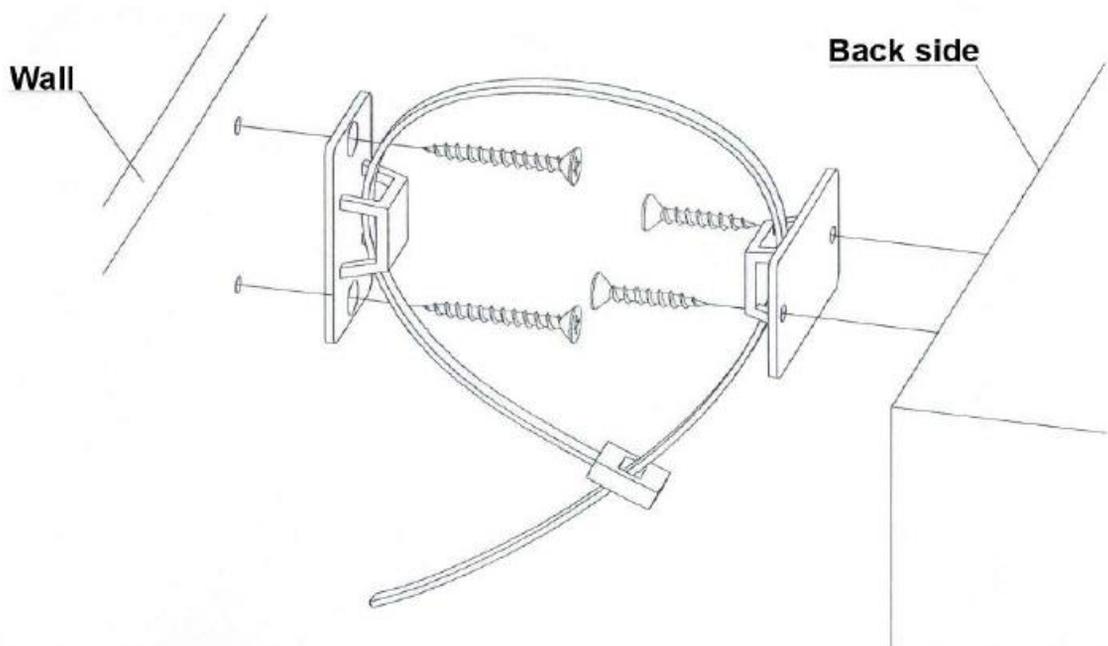

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void