

 


# ASSEMBLY INSTRUCTION STRATTEN MK2 SWIVEL DESK ITEM CODE 54549

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

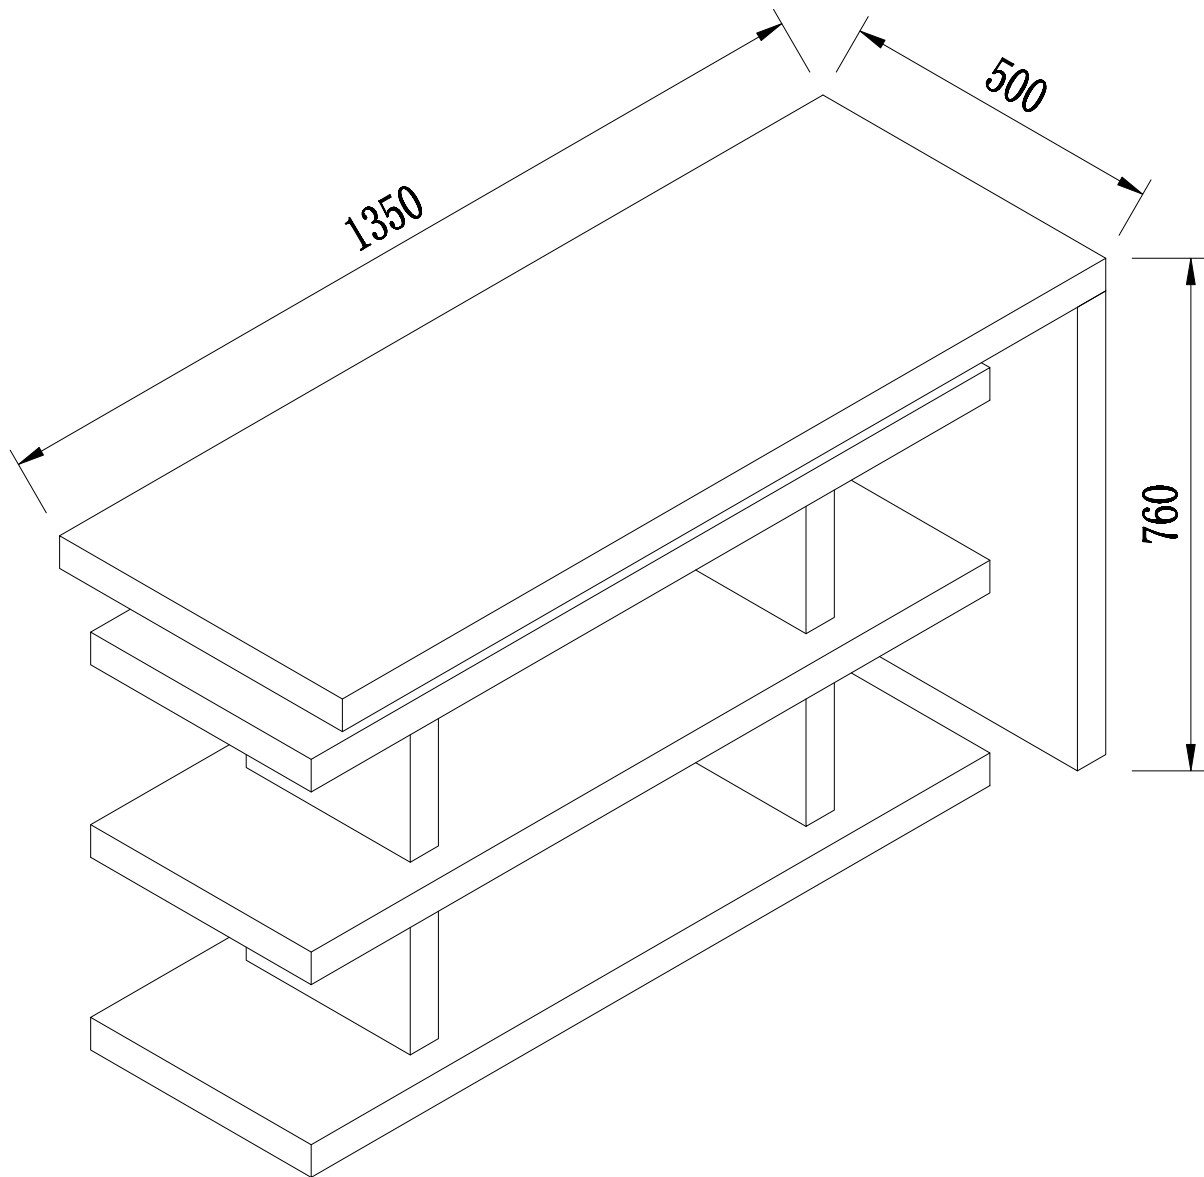


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture  
Ewing Road, Customer Service Free call 1800 351 084


# PRE-ASSEMBLY PREPARATION
 
## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

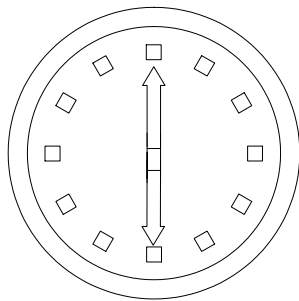

ALLOW 30 MINUTES

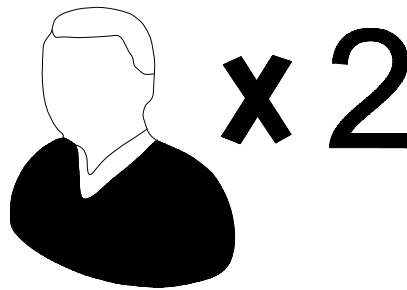 


2 PEOPLE REQUIRED



ADDITIONAL TOOLS REQUIRED

## ! WARNING

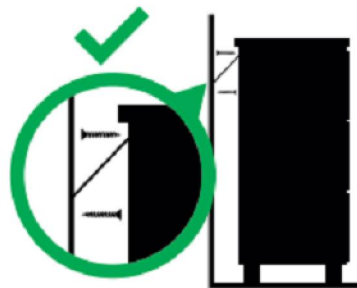 

### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

NEVER put a TV on this furniture



This is a permanent label.  
Do not remove!

 
 
# CAM Lock and Pins

## step 1

### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used.  
The below is information on how these work.

Cam Locks are fasteners used to join two boards together,  
usually the edge of one board(A) to the flat side of another board(B)

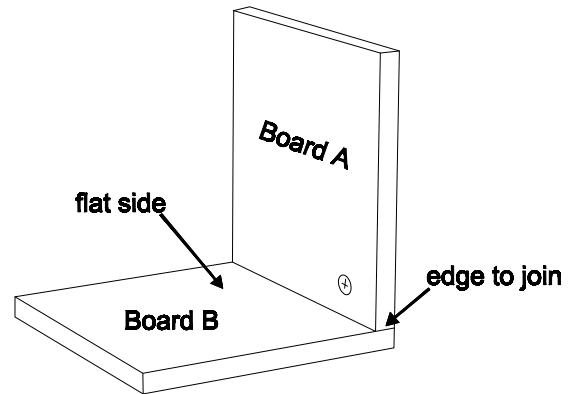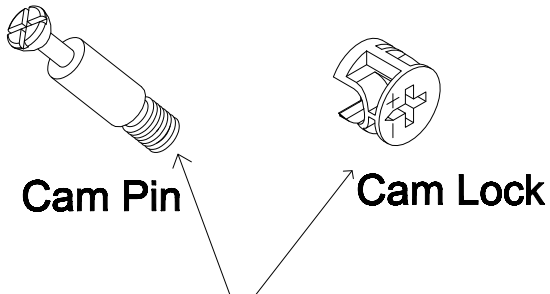


Ensure that you use the correct images that are representative  
of the hardware used in the product

## step 2
 
### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board,  
it is important that:


- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

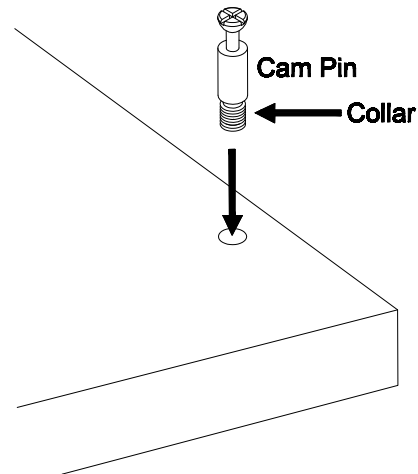

## step 3

### To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

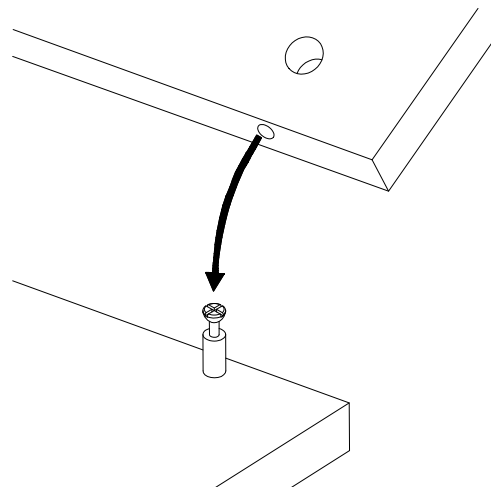


## step 4

### To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

 head of the Cam Pin

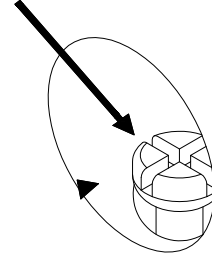

## To use Cam Lock Fasteners

 Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

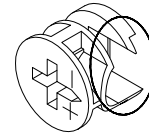

Cam Lock

## step 5

 
### To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

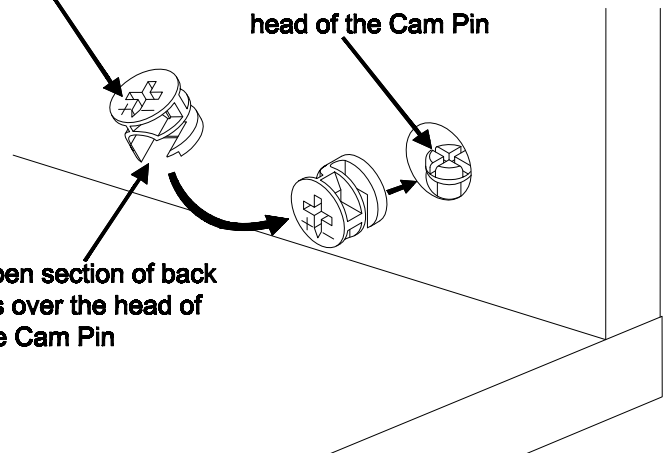


## step 6

### To use Cam Lock Fasteners

 Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

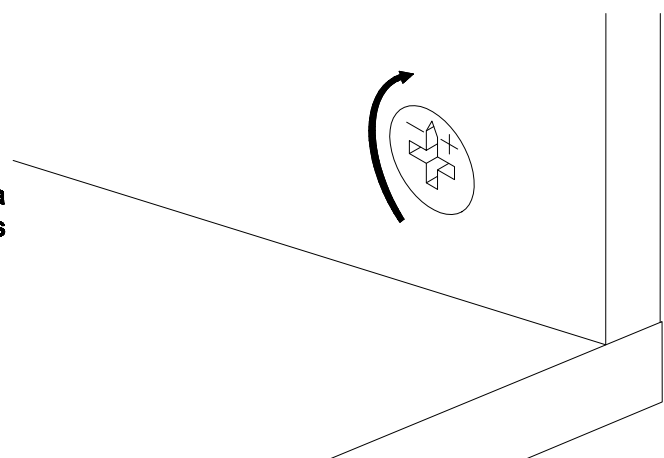


# PARTS LIST

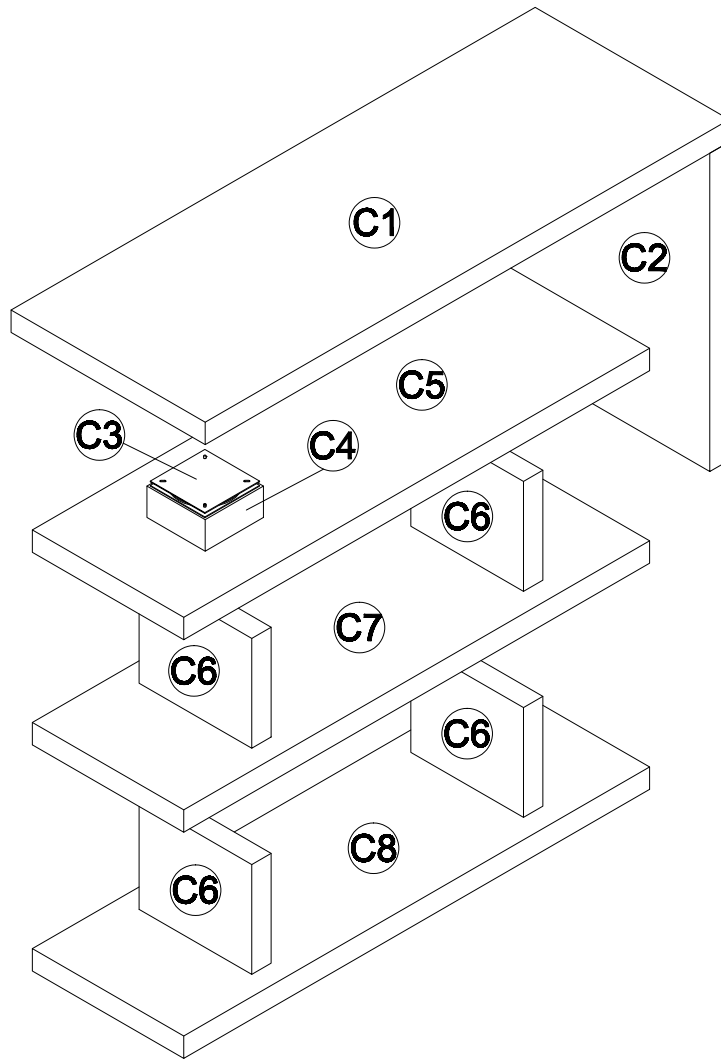 


C1	Top Panel	C5	Shelf Panel
C2	Side Panel	C6	Connect Panel
C3	Rotating Platform	C7	Shelf Panel
C4	Connect Panel	C8	Bottom Panel

<b>A.Cam pin and Cam lock 9/16x3/8</b>  <b>8PCS</b>	<b>B.Dowel Ø8X30</b>  <b>18PCS</b>	<b>C.Bolt Ø6X20</b>  <b>8PCS</b>	<b>D.washer</b>  <b>12PCS</b>	<b>E.Bolt M6X50</b>  <b>12PCS</b>	<b>F.Bolt and Nut M8X30</b>  <b>2PCS</b>	<b>G.Cover Ø38</b>  <b>2PCS</b>
<b>H.Hex Key M4</b>  <b>1PCE</b>	<b>I.wrench M14</b>  <b>1PCE</b>	<b>J.Cover Ø20</b>  <b>8PCS</b>	<b>K.Protect foam Ø35</b>  <b>6PCS</b>	<b>M.Belt</b>  <b>1PCE</b>		

 
**STEP 1:** Use Hex key(H)to tighten the Rotating Platform(C3)to Connect panel(C4)with Bolt (C)and washer(C) .open the Rotating Platform (C3) to 45 angle.Use Hex key(H)to tighten the Rotating Platform (C3)to Shelf panel(C1)with Bolt (C) and washer (C)

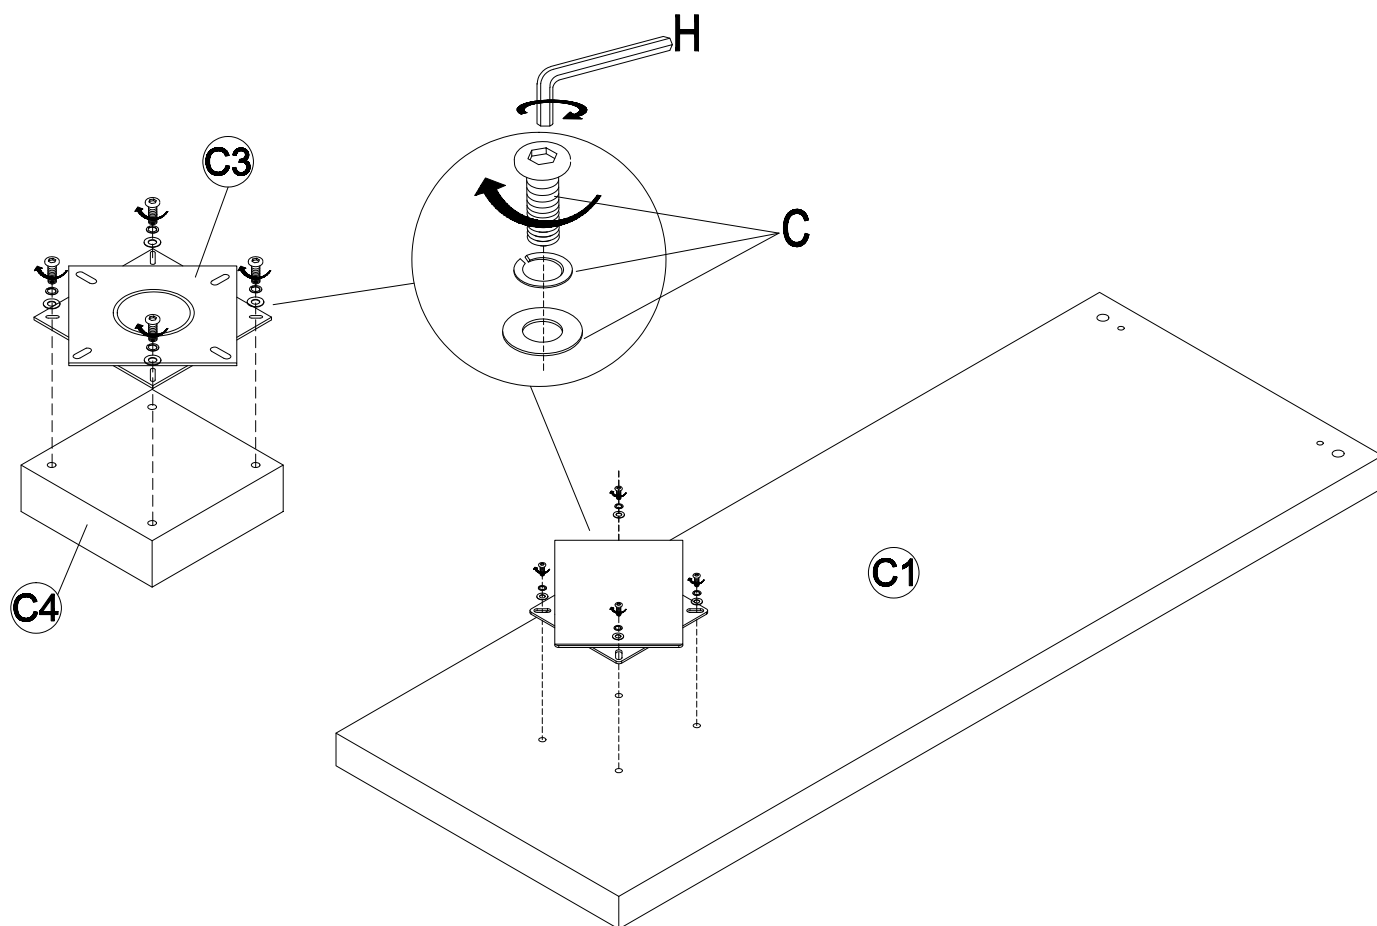

 
**STEP 2:** Put the Dowels(B)on the Shelf panel(C5),tighten Cam pin(A) on the Shelf panel(C5).Insert the Cam lock(A)in to the Connect panel (C6)large hole use a flat screwdriver to turn the Cam lock to locks onto the head of Cam pin.then put the Cover(J) on the Cam lock holes.

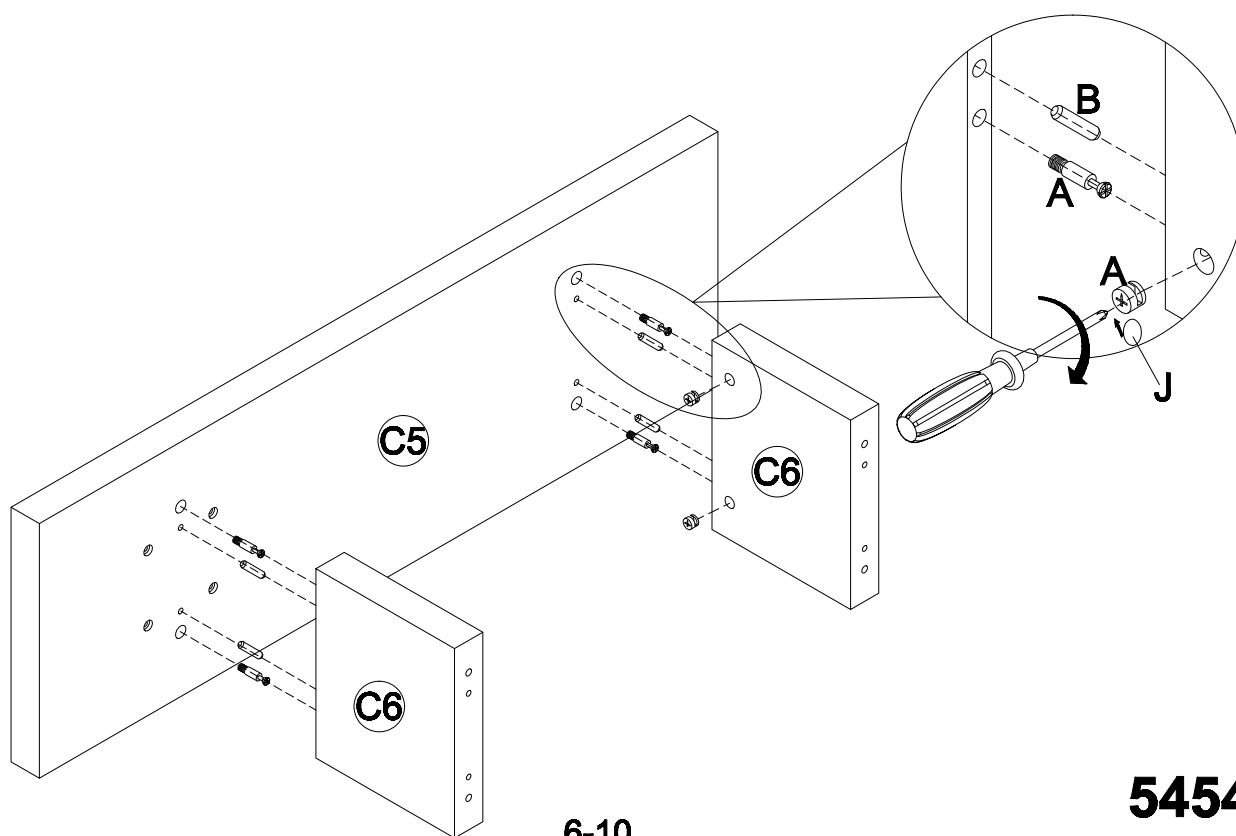

 
**STEP 3:** Put the Dowels(B)on the Connect panel(C6),use Hex Key(H)to tighten Shelf panel(C7) to Connect panel(C6)with bolts (E) and Washer(D)

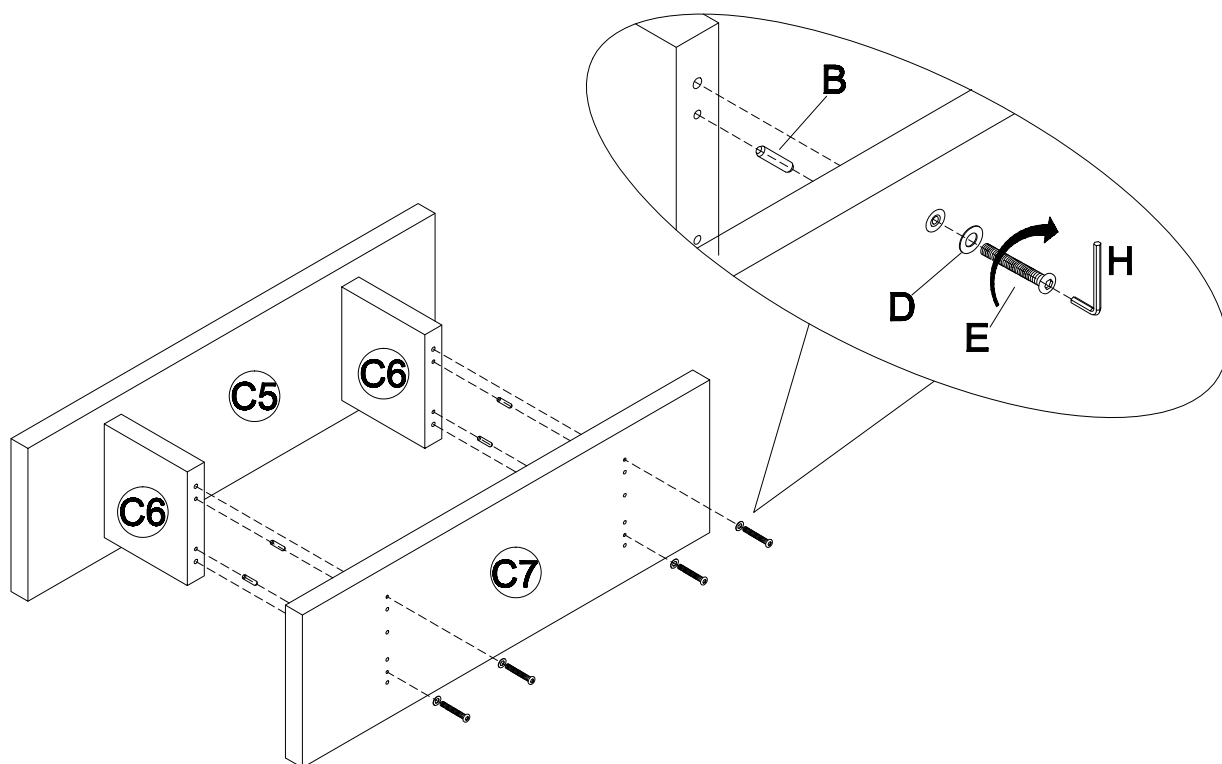


**STEP 4:** Put the Dowels(B)on the shelf panel(C7),tighten Cam pin(A) on the Shelf panel(C7).Insert the Cam lock(A)in to the Connect panel (C6)large hole use a flat screwdriver to turn the Cam lock to locks onto the head of Cam pin.then put the Cover(J) on the Cam lock.Put the Dowels(B)on the Connect panel(C6),use Hex Key(H)to tighten Shelf panel(C8) to Connect panel(C6)with Bolts (E) and Washer(D)

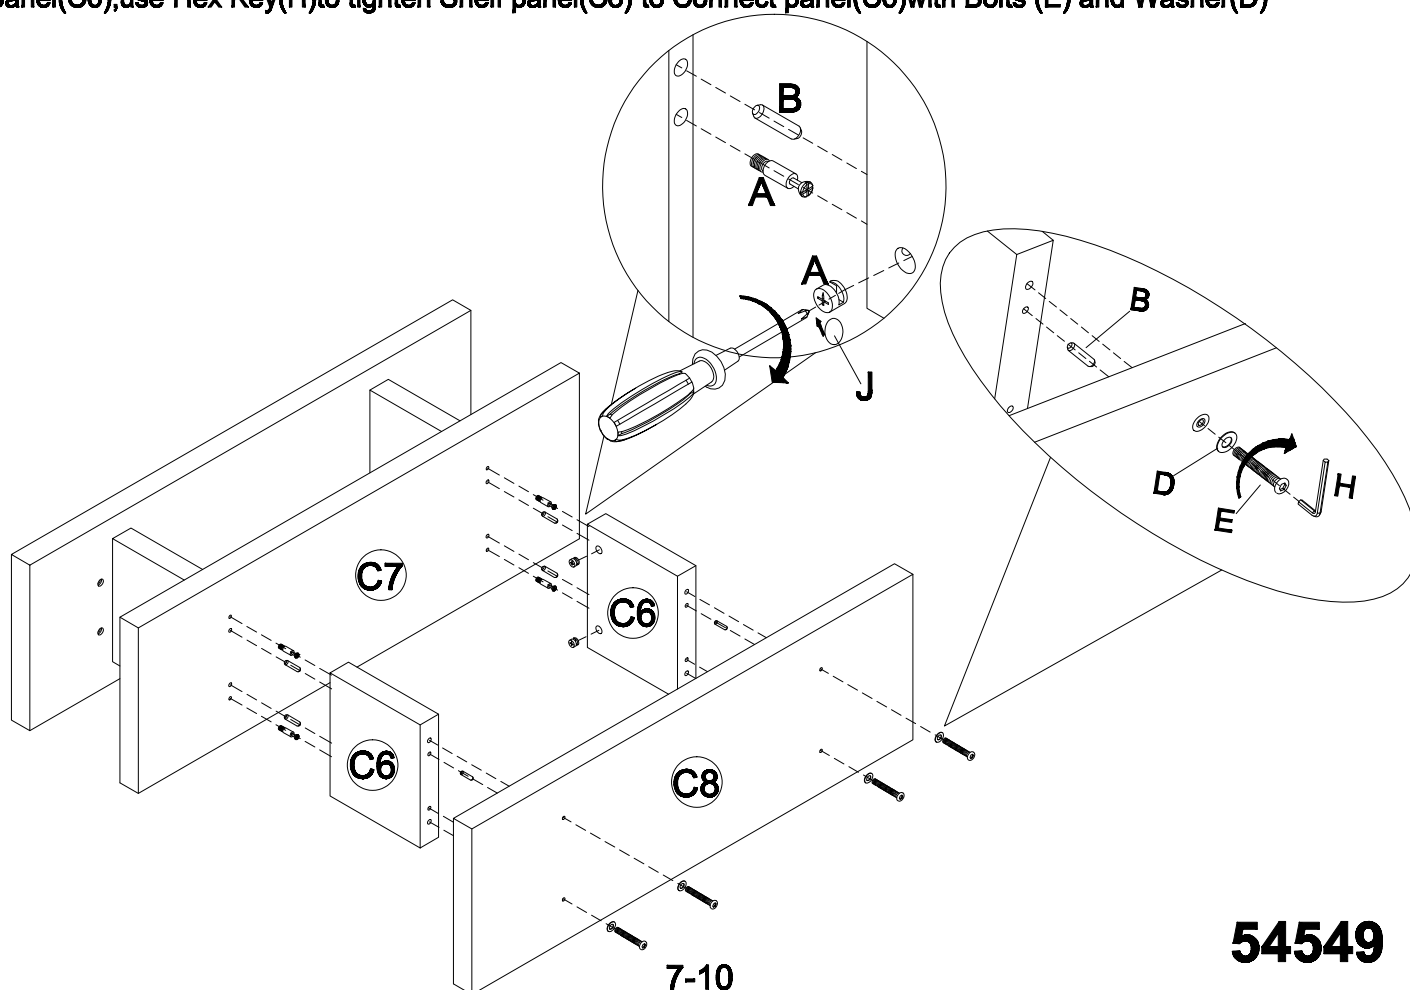 

 **STEP 5:** Put the Dowels(B)on the Top panel(C1),Insert the Bolt(F) on the Top panel Wrench(C1).use (I)to tighten Side panel(C2)to Top panel(C1) with Nut(F).then put the Cover(G) on the large hole.

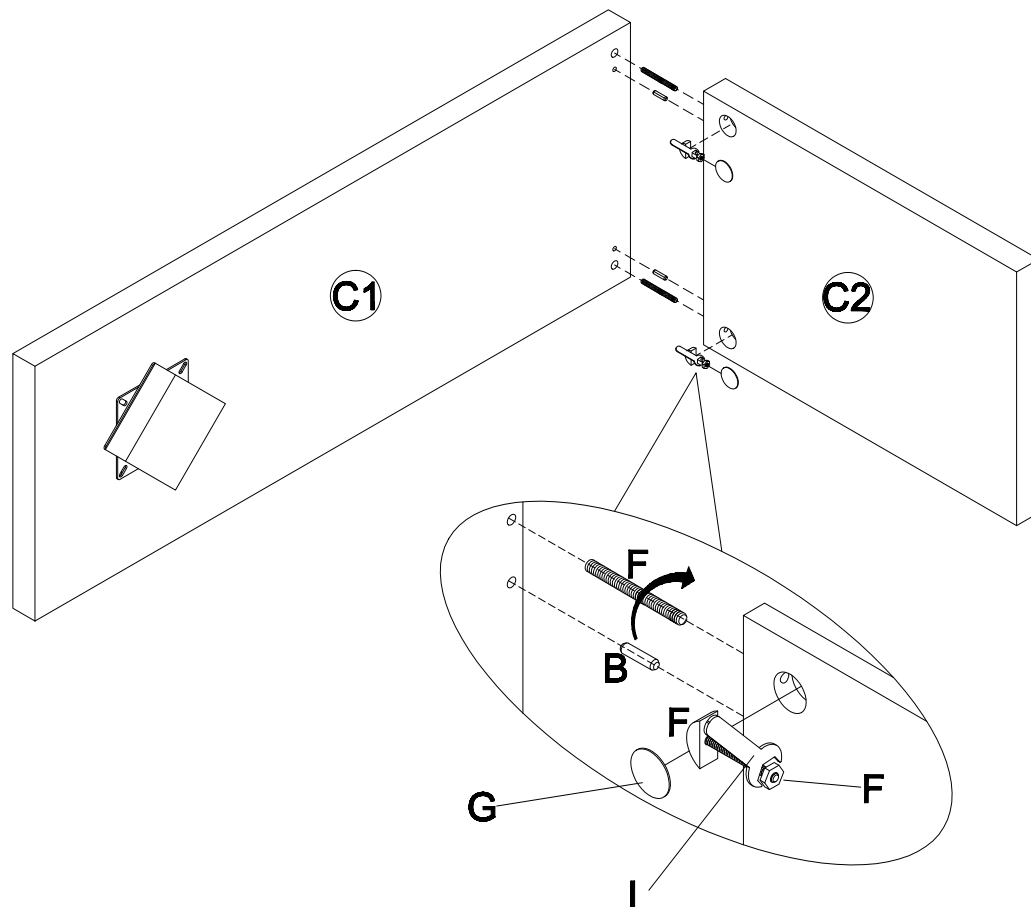


 **STEP 6:** Use Hex key (H)to tighten Shelf panel(C5)to Connect panel(C4) with Bolt(E) and washer(D)

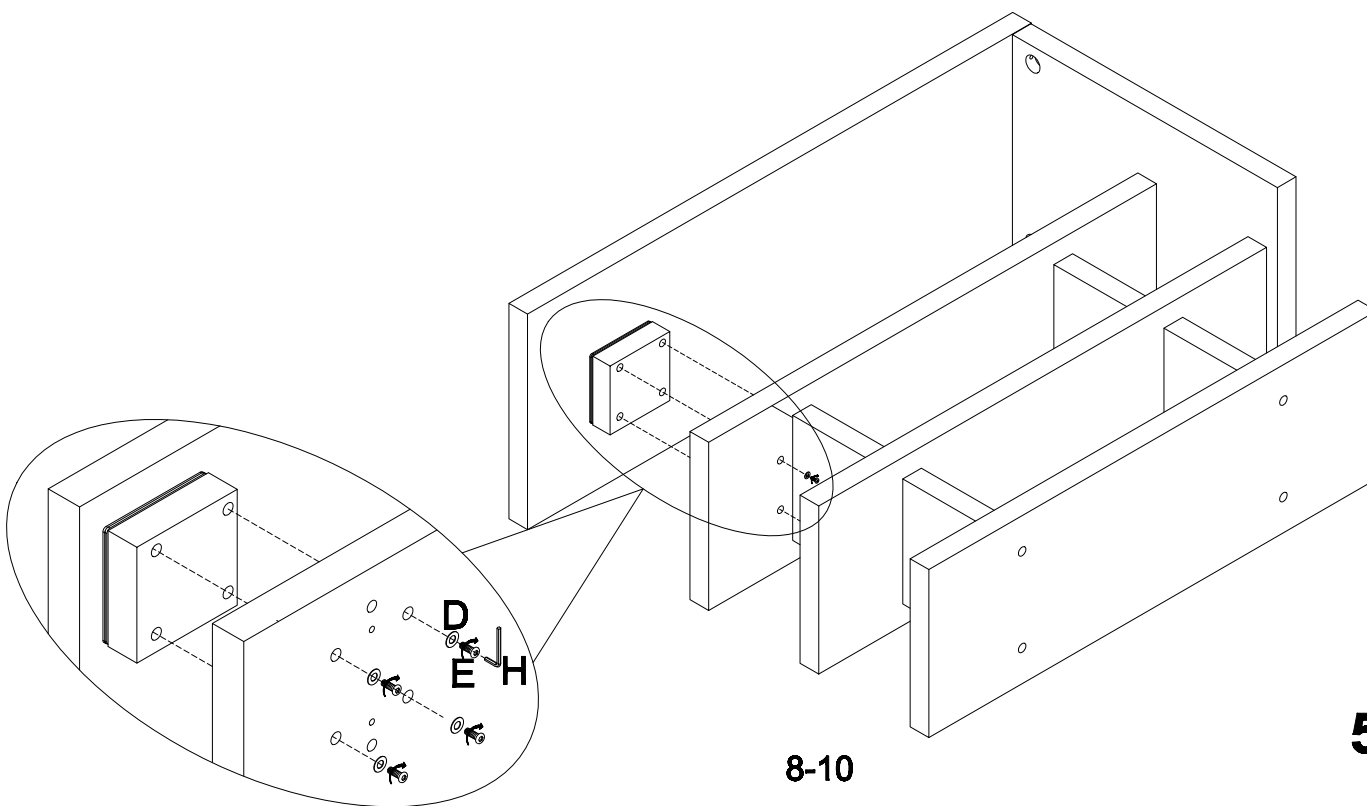




 **STEP 7:** Stick the Protect foam(K)on the bottom of Bottom Panel(C8)and Side panel(C2).With two people carefully turn over.

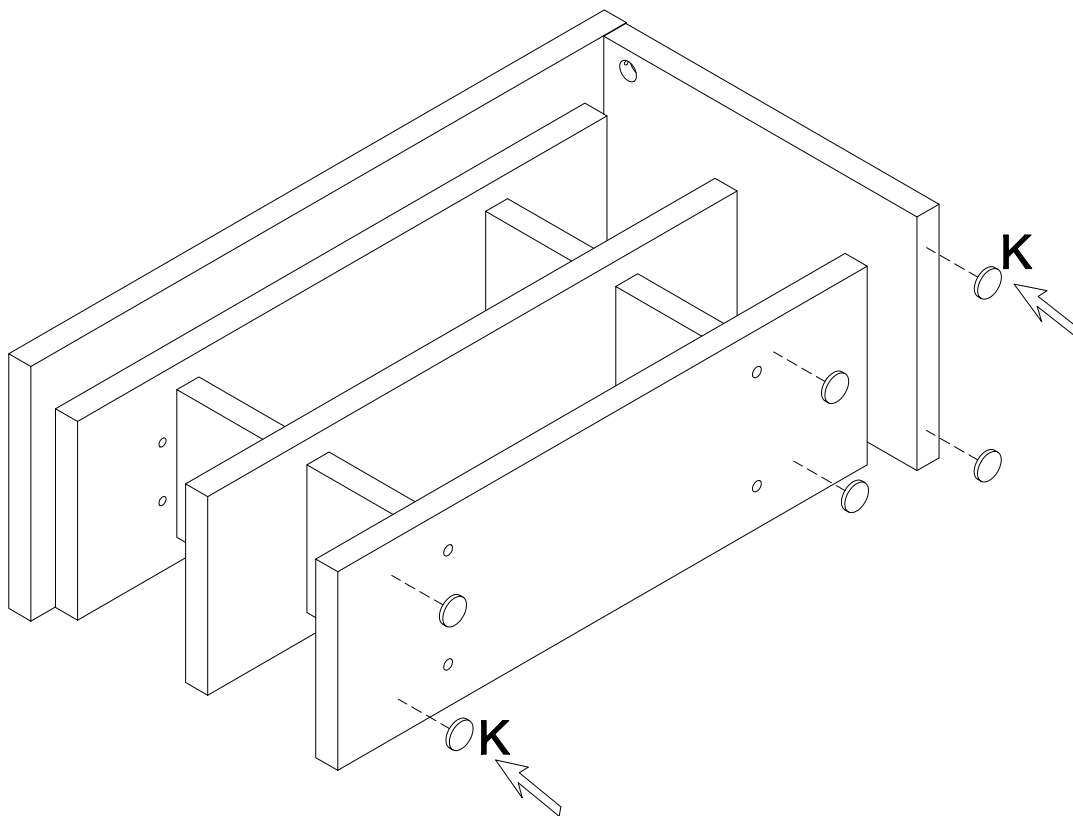


**Assembly is complete.**

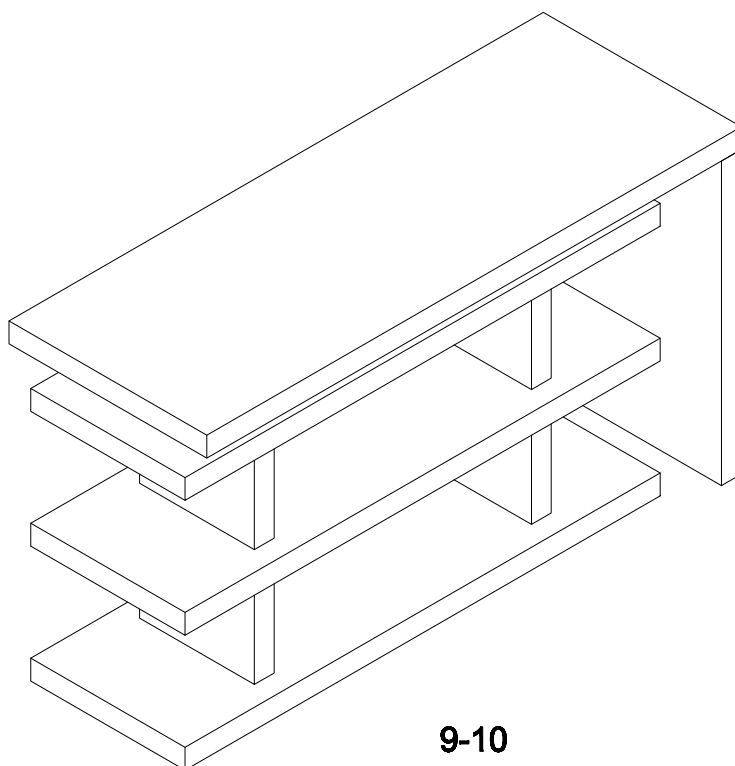 

**Note -**

 **Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.**

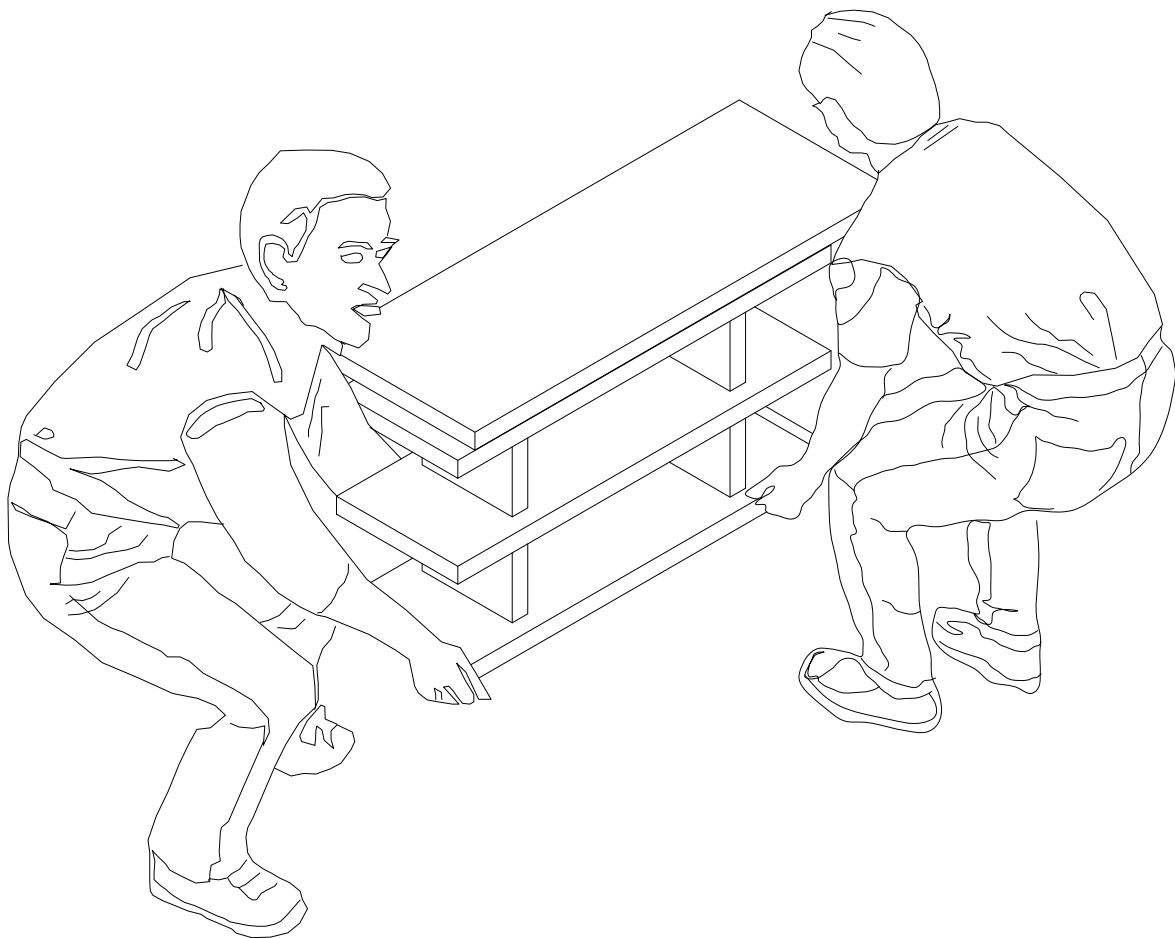

## SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

### HARDWARE



Mounting Plate x 2



 
Wall Strap x 1



Large Screw x2



Small Screw x2

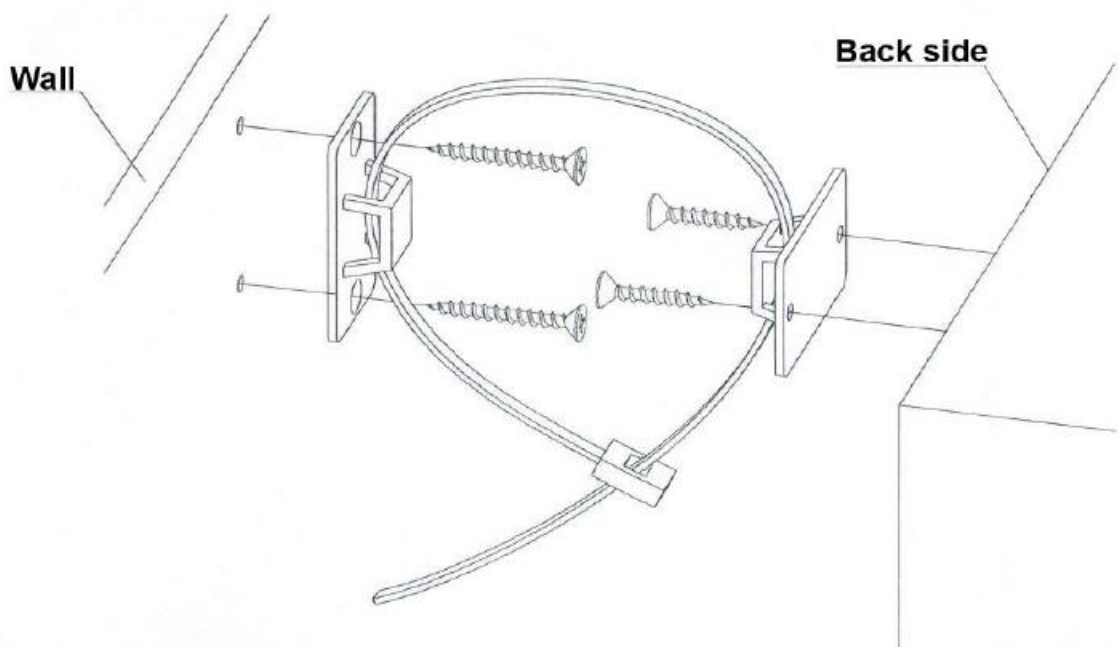

## **IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE**

*Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...*

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.