


# ASSEMBLY INSTRUCTION

HERMAN

Tripod Fire Pit

ITEM CODE:70783

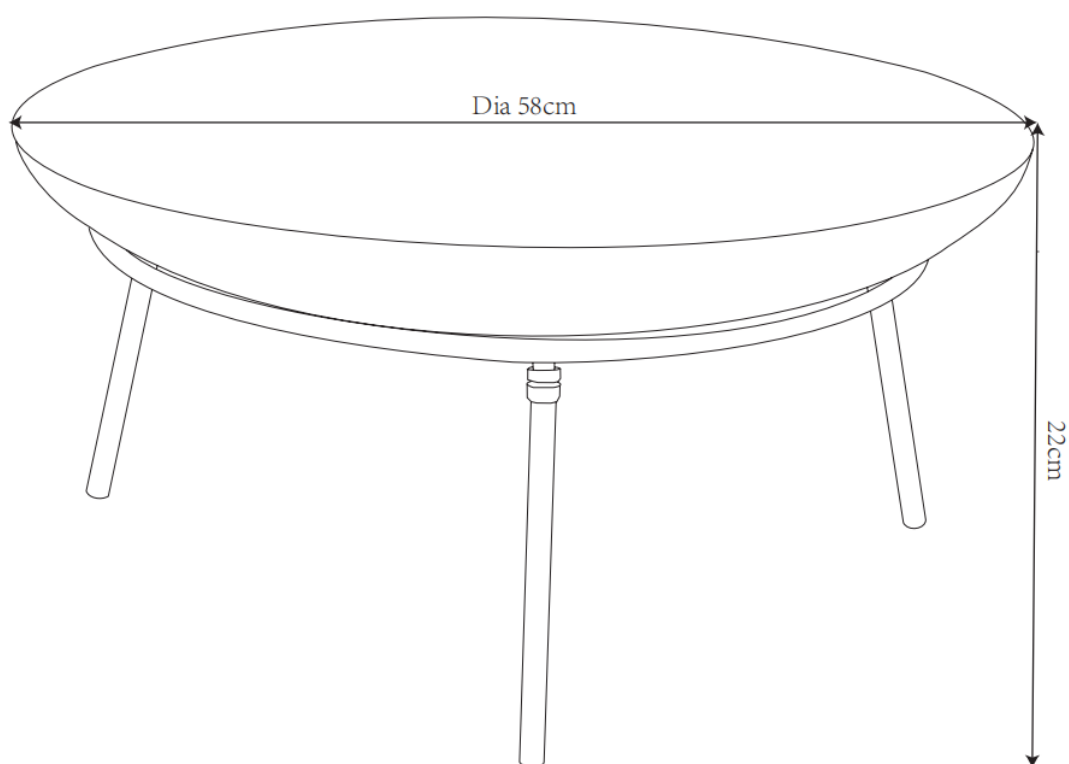




Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt


# PRE-ASSEMBLY PREPARATION

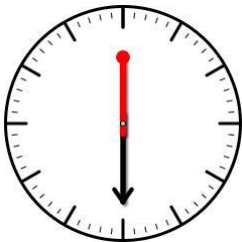


## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

		
Allow 30 min	For 1 persons	Additional tools


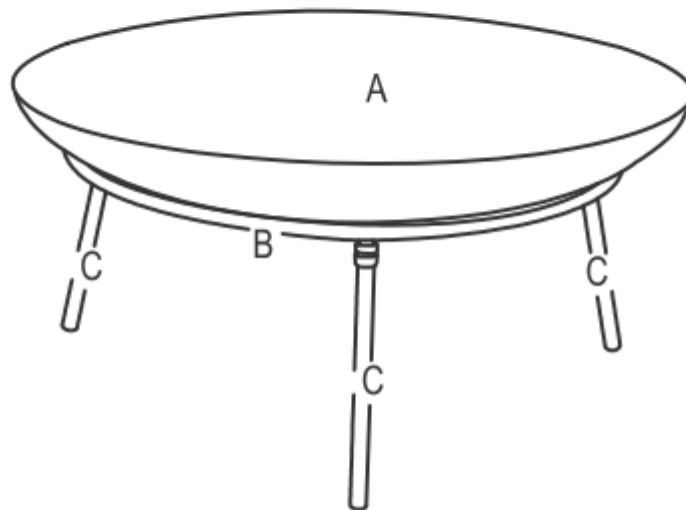
## PARTS LIST



<p>A. Iron Pot 1PC</p> 	<p>B. Fixed Link 1PC</p> 
<p>C. Legs 3PCS</p> 	



## Step 1

You will need

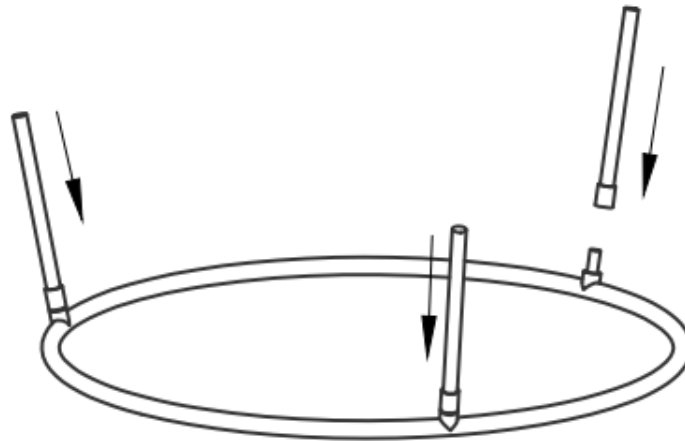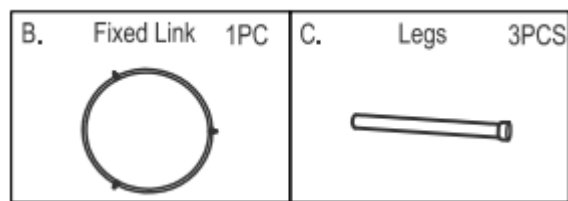


## Step 2

You will need

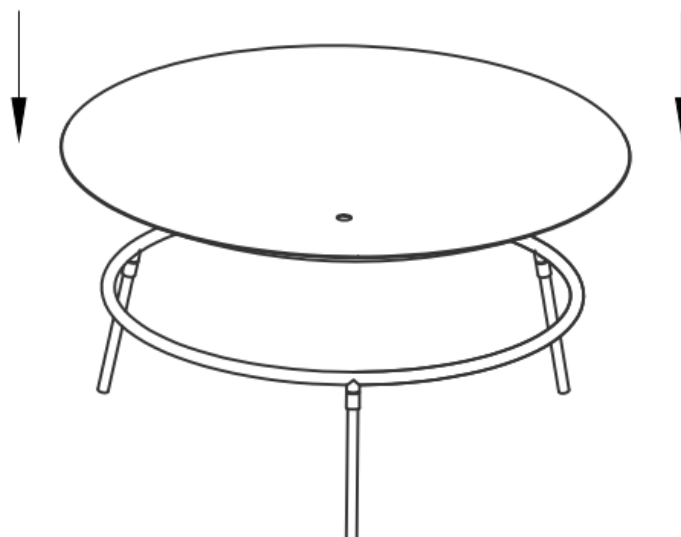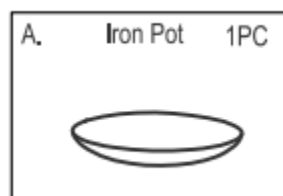

Assembly Complete

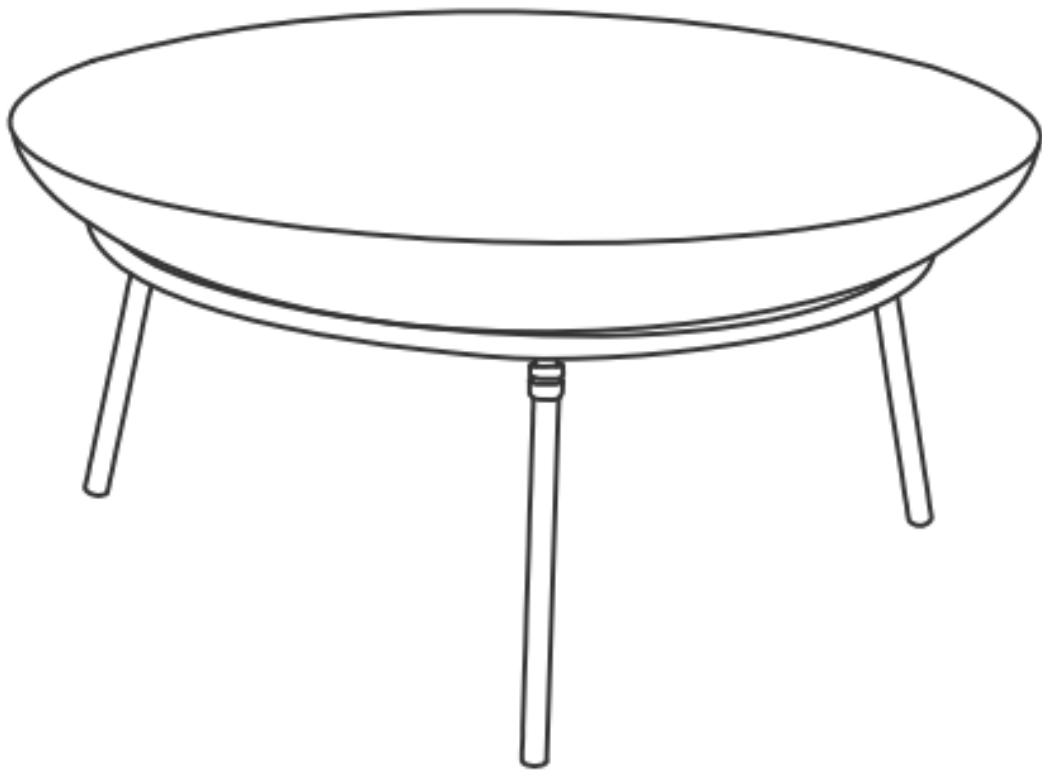

# PRODUCT CARE:

## Metal

- Item is designed for use outdoors. However we do not recommend leaving this product outside when not in use. To preserve the life of this item, avoid prolonged exposure to the elements & store inside/under cover or use an outdoor cover.
- DO NOT allow the furniture to be left in the rain or left wet for extended periods of time.
- Wipe furniture Dry immediately after it becoming wet.
- DO NOT clean your furniture down with any harsh solvents, abrasives or chemicals.
- To remove dirt and grime, simply rinse with fresh water or periodically clean using a sponge and mild detergent solution as required

## WARNING

- FOR OUTSIDE USE ONLY
- NEVER LEAVE AN OPEN FIRE UNATTENDED

