




SIGNATURE

— COLLECTION —

ASSEMBLY INSTRUCTION NERO ENTERTAINMENT UNIT ITEM CODE 63718,82892

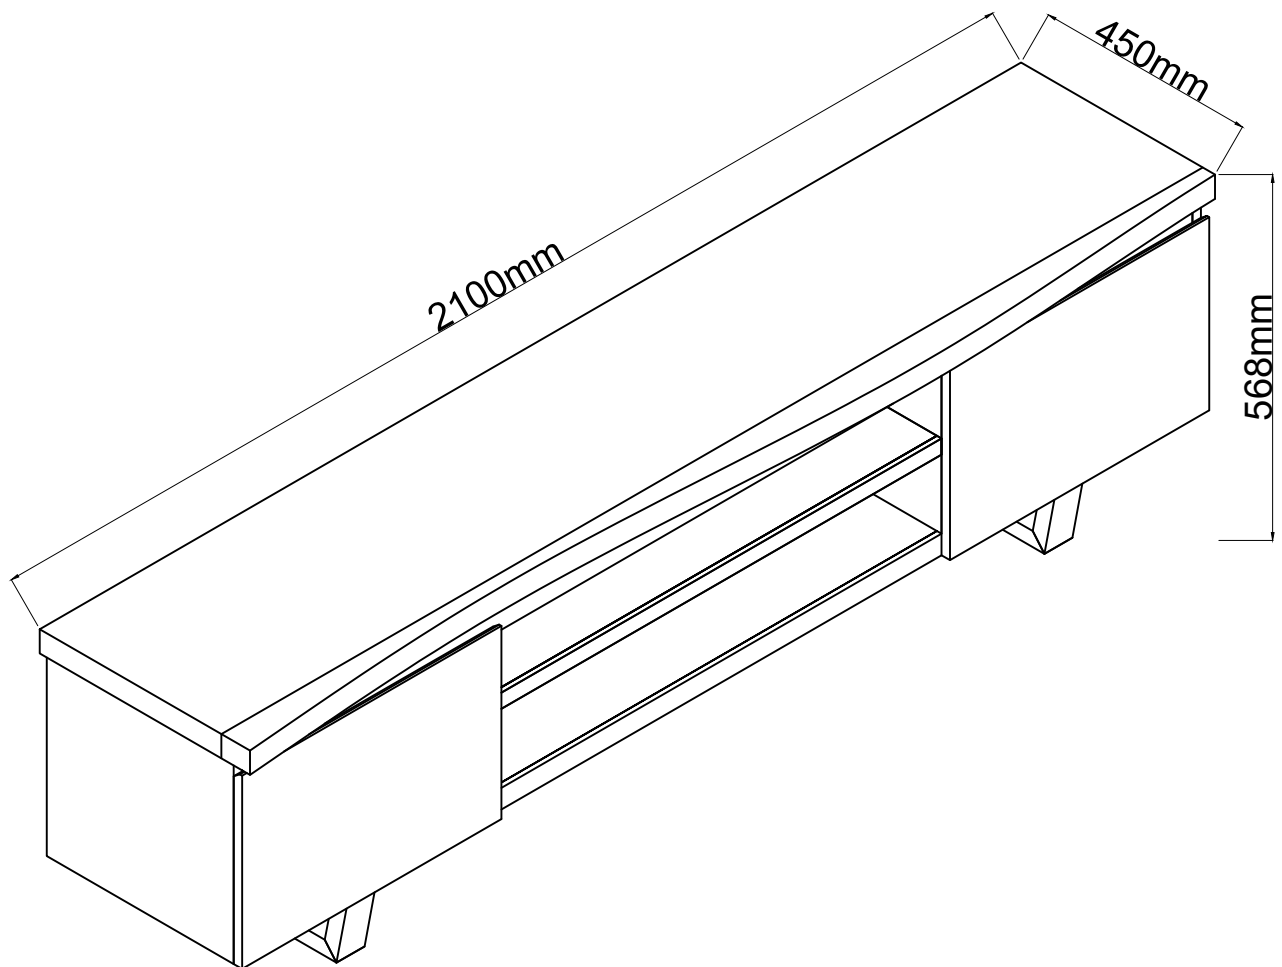

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

IMPORTANT: CARE GUIDE FOR YOUR TIMBER FURNITURE

Congratulations! You have just purchased a quality product from Amart furniture.

Please read on for important information regarding your purchase...

A multi-step finish is applied to all our furniture, but all wood comes from nature. Because of this, there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish.

These differences in character are not defects, but distinctions that make each piece of furniture unique.

Our furniture is built to last. Following these steps, basic care should protect your investment for years to come.




- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Do not place hot objects on any Furniture surface. Always use a suitable placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight, heat, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, and sudden extreme temperature and humidity changes can cause cracking or splitting.
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.




PRE-ASSEMBLY PREPARATION

Before you start:

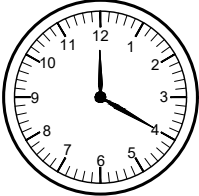1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

	 x2
ALLOW 20 MINUTES	2 PEOPLE REQUIRED
	
ADDITIONAL TOOL REQUIRED (not include)	

WARNING

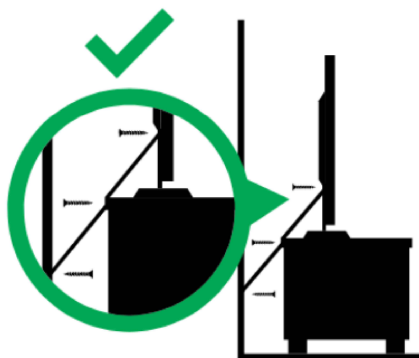


Children have died from furniture tipover.








- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

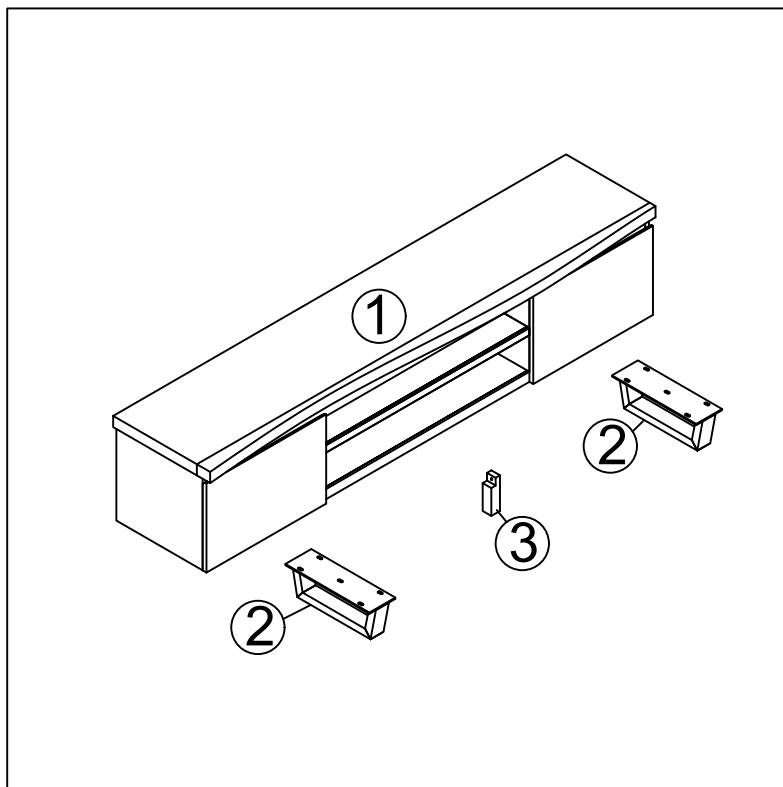**This is a permanent label.
Do not remove!**

 
PARTS LIST



NO	PART LIST	QT'Y
1	Base	1 PC
2	Legs	2 PCS
3	Support leg	1 PC

 A Bolt  M8 x 20mm 10xA	B Spring washer  M8 x Ø13 x 1,5mm 10xB	C Flat washer  M8 x Ø19 x 1mm 10xC
D Allen key  4mm 1xD	E Adhesive felt pad  Ø20 x 5mm 8xE	F Bolt  M6 x 30mm 1xF
G Flat washer  M6 x Ø19 x 1mm 1xG		


With two people carefully lay the Entertainment Unit on to a sheet or piece of cardboard.
 Attach legs (2) onto base (1) using the bolts (A), spring washers (B) and flat washers (C).
 Attach support leg (3) onto base (1) using the bolt (F), flat washer (G).
 Tighten it up by using an allen key (D).
 Attach adhesive felt pad (E) onto the legs (2).
 With two people carefully stand the Entertainment Unit upright.

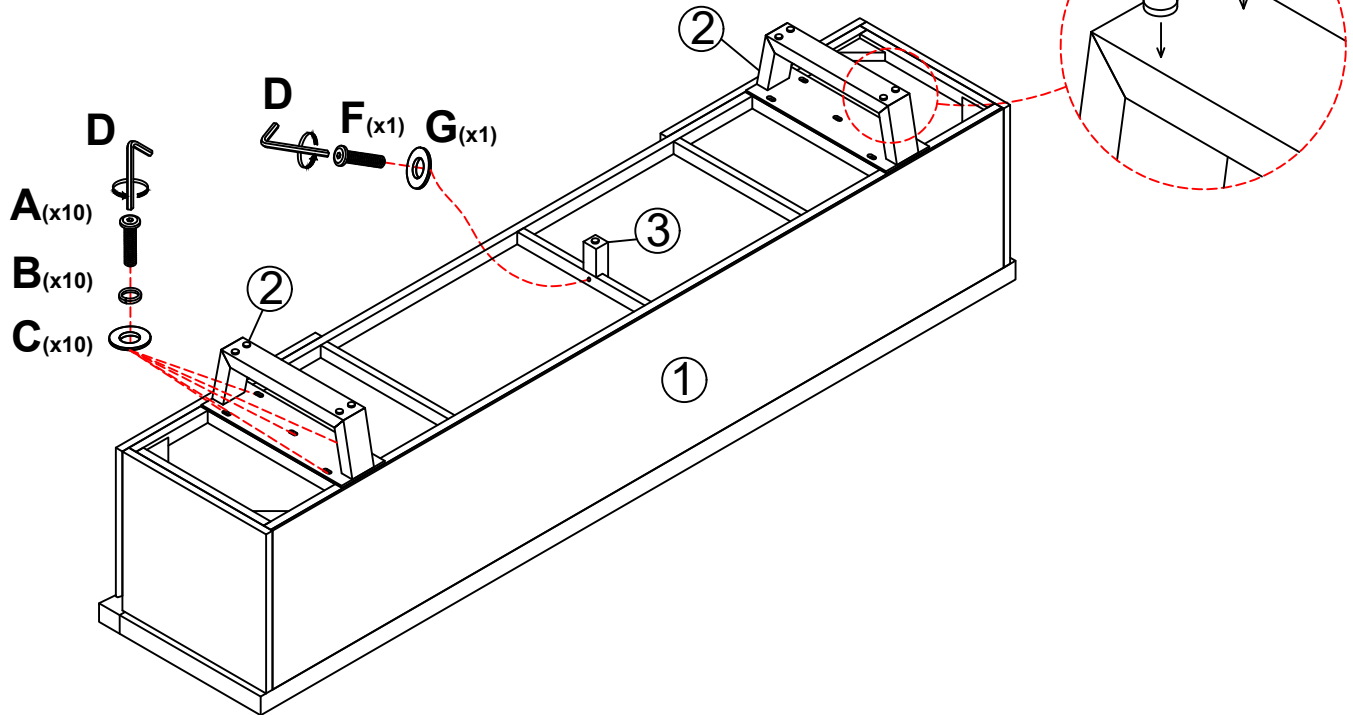


Fixing the strap to the wall

As the wall materials vary,
 screws for fixing to the wall
 are not included.

For advice on suitable screws
 systems, contact your local
 specialised dealer.

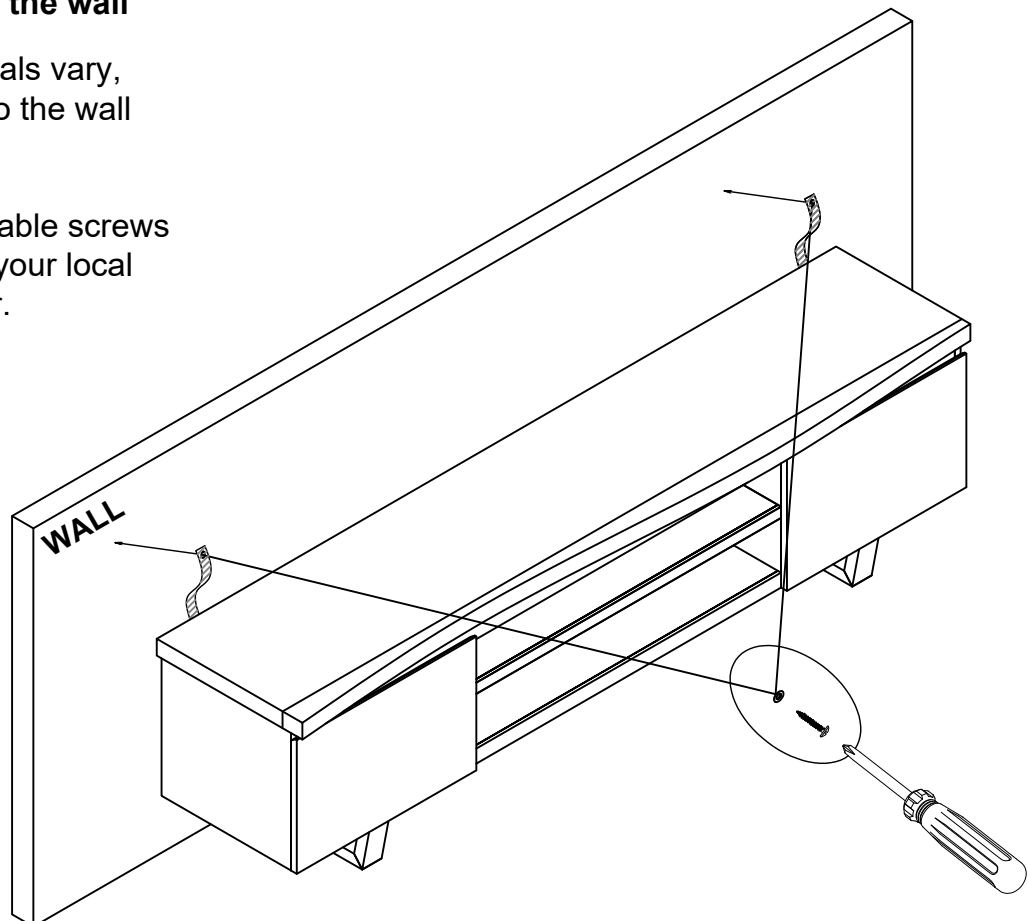

ASSEMBLY IS COMPLETE

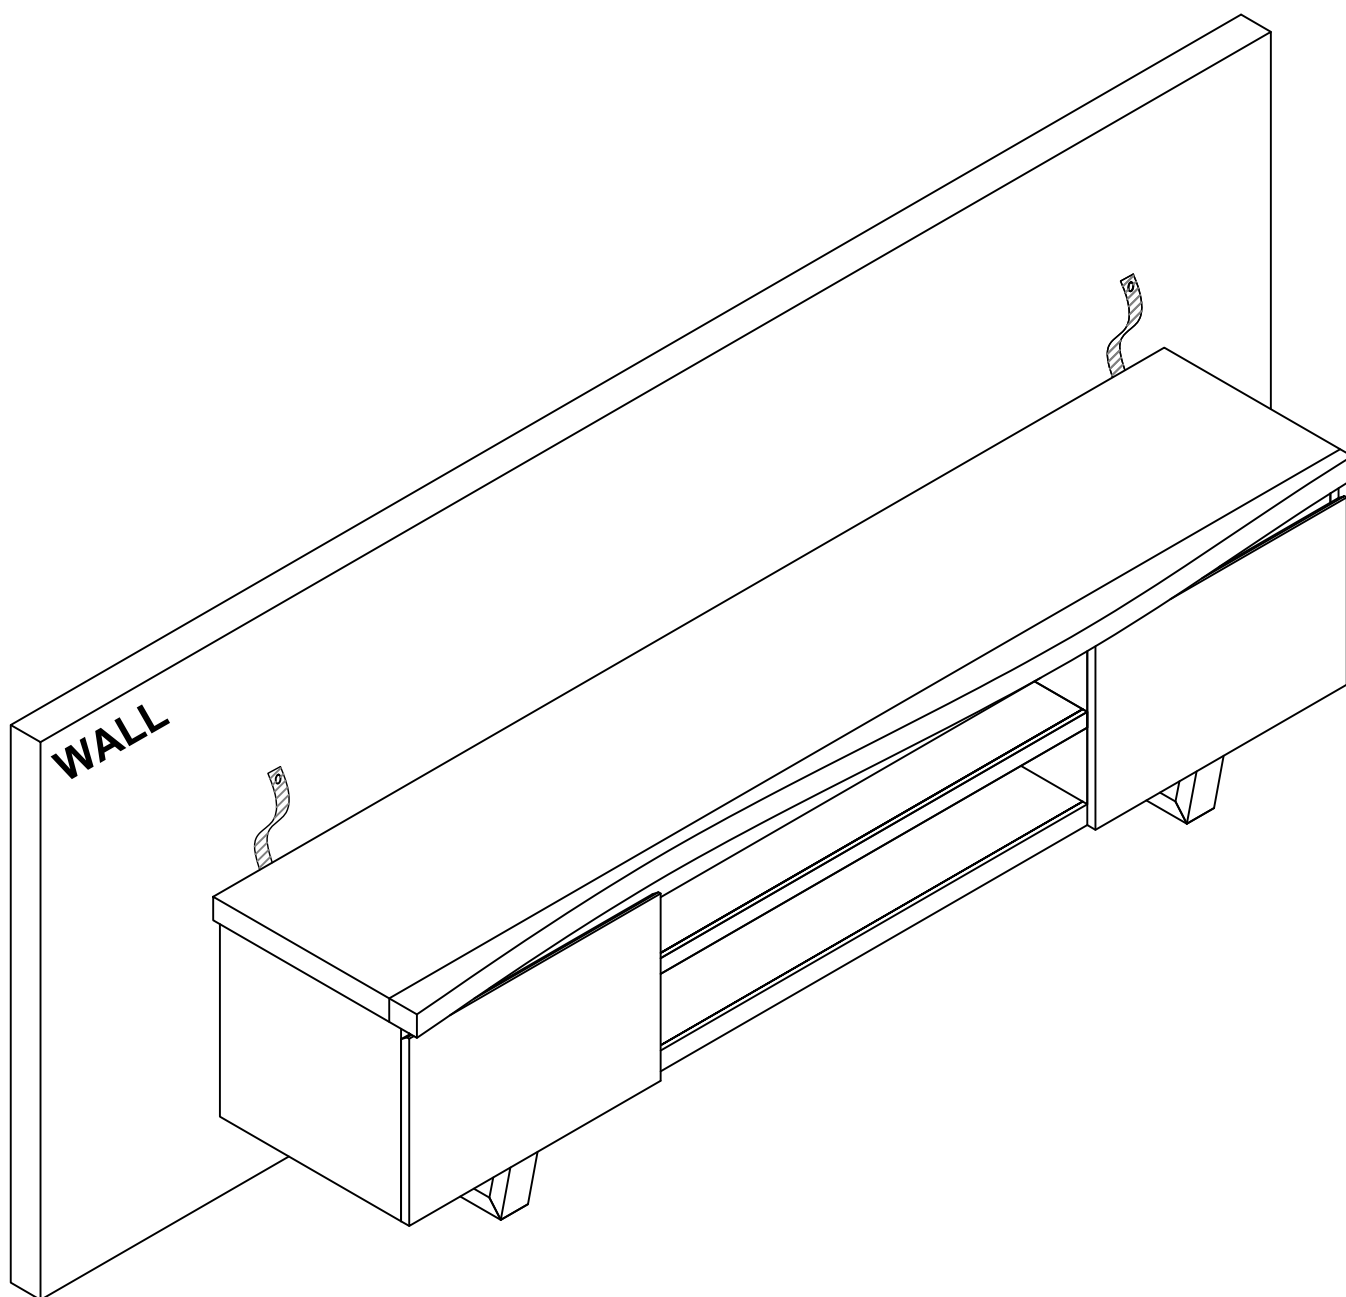

CAUTION:

ALWAYS LIFT YOUR PRODUCT WHEN MOVING/RELOCATING. DO NOT DRAG. DRAGGING CAN CAUSE DAMAGE TO THE LEGS.

IMPORTANT NOTE:

THE FELT PAD ON THE BOTTOM OF THE CHAIR LEG IS SUBJECT TO WEAR. AMART RECOMMENDS REGULAR-ROUTINE CHECKS AND REPLACEMENT WHERE NECESSARY.