 


ASSEMBLY INSTRUCTION

WESTCHESTER

4 DRAWER TALL CHEST

ITEM CODE: 85242

 
 
 
 
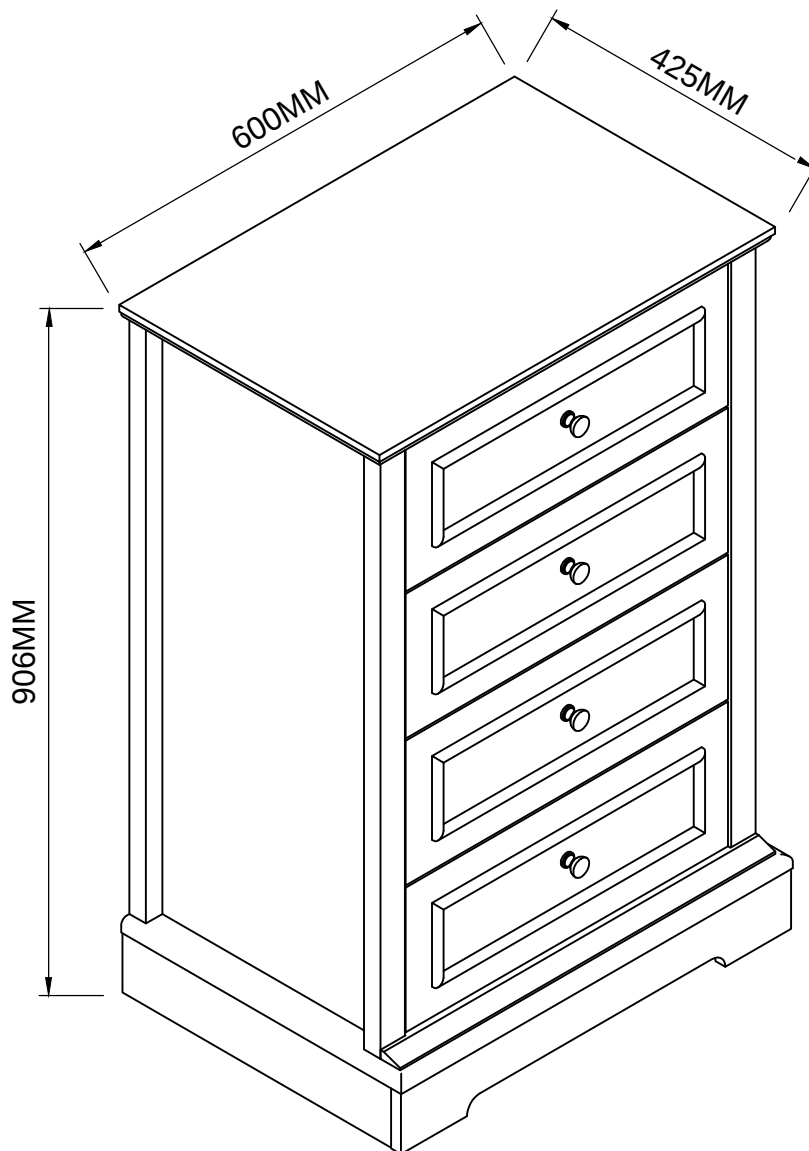 


Imported by JWA Furniture Pty Ltd, Brisbane, QLD, Australia
For any assistance with assembly or for missing parts, please refer to your receipt


PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

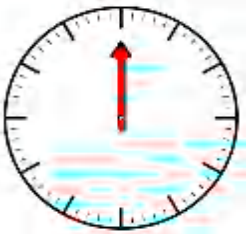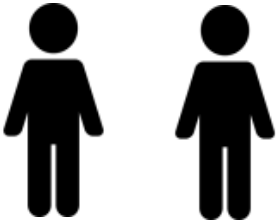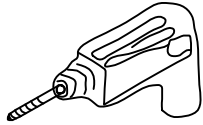		IF REQUIRED 
Allow 45 min	For 2 person	Low speed (Ø6mm)
  ADDITIONAL TOOLS REQUIRED		

 WARNING

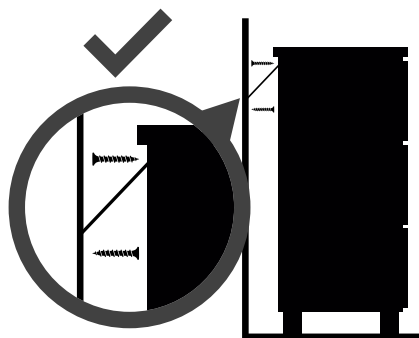

Children have died from furniture tipover.

 
- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

NEVER put a TV on this furniture




**This is a permanent label.
Do not remove!**

TO USE CAM LOCK FASTENERS

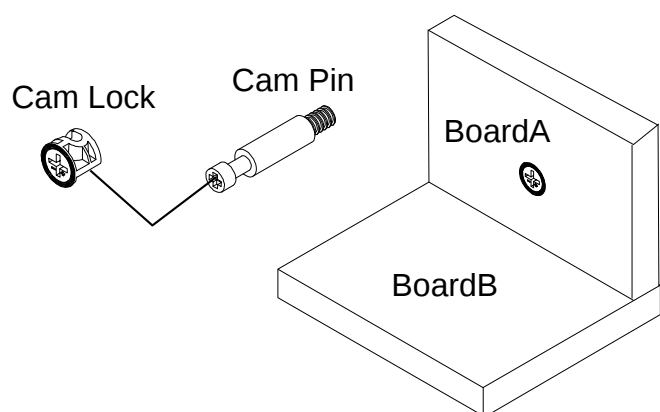

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

 Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

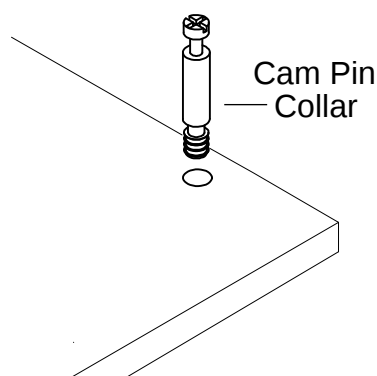


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle.

Cam pin is to be inserted up to collar


Too far and it won't catch the Cam Lock (Do Not Overtighten)

 Not enough and the resulting product will not be stable.

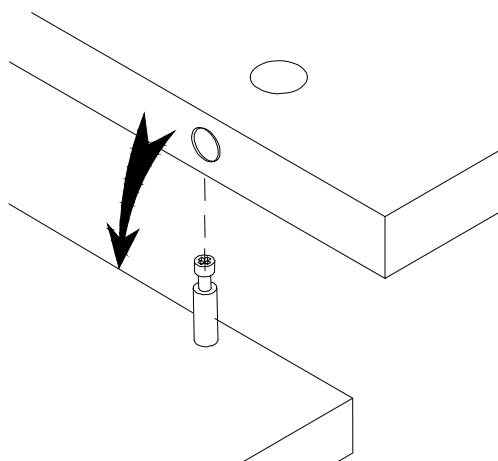


Now fit the hole in the edge of the joining board over the Cam Pin.

 
Head of the Cam Pin

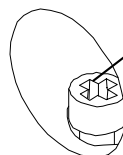

 
The Head of the Cam Pin will be visible in the large hole on the side of the joining board.

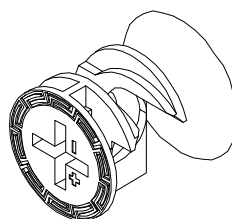

 Notice the Cam Lock has a "C" Shaped Back. An arrow or +/- signs on the front indicate the open section on the back of the Cam Pin.

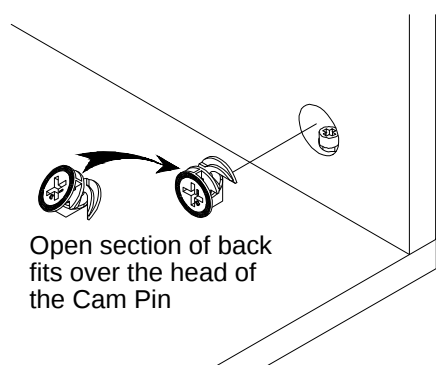

 Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

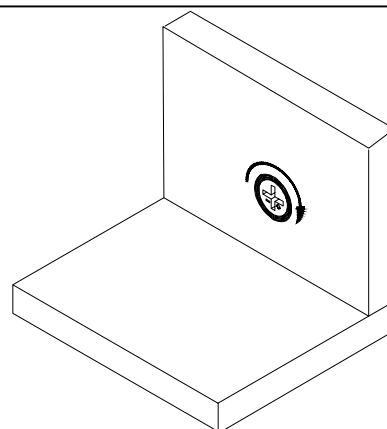


Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

BOX 1:













- ⑬ x 4
- ⑭ x 4
- ⑮ x 4
- ⑯ x 4
- ⑰ x 4
- ⑱ x 4

BOX 2:

 - ① x 1
- ② x 1
- ③ x 1
- ④ x 1
- ⑤ x 1
- ⑥ x 1
- ⑦ x 1
- ⑧ x 1
- ⑨ x 1
- ⑩ x 1
- ⑪ x 1
- ⑫ x 1

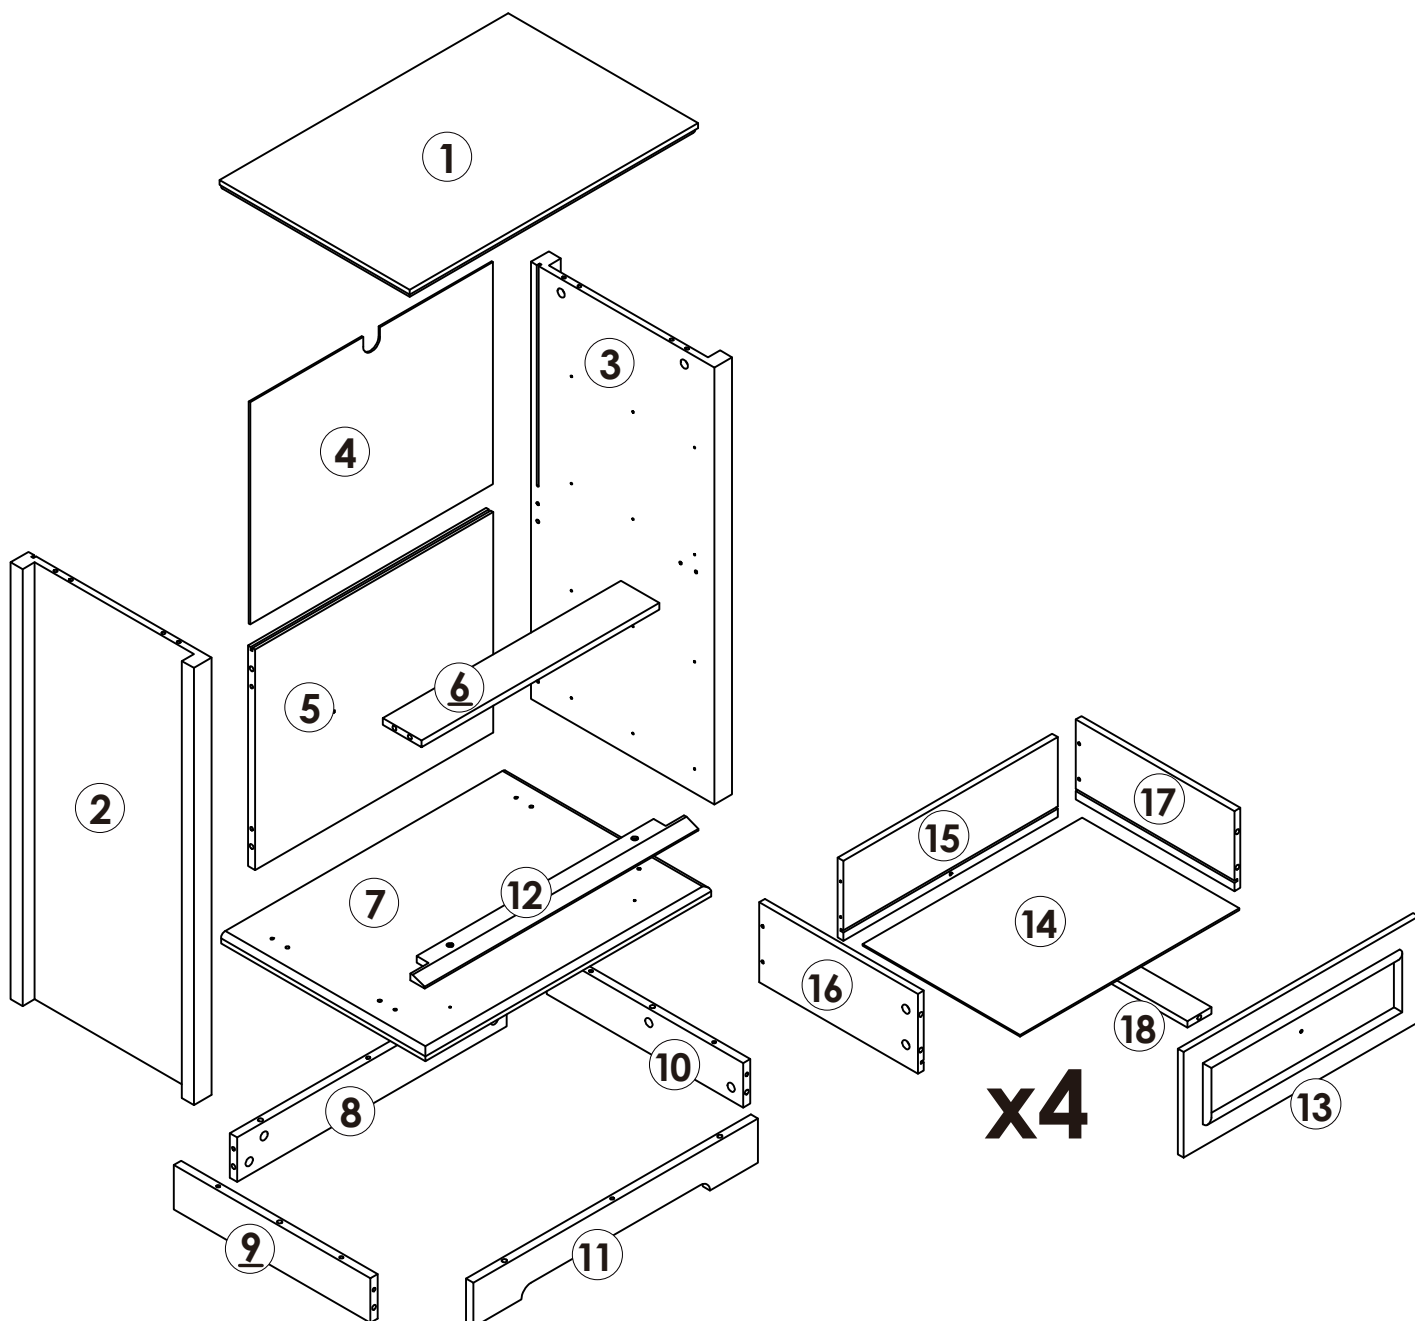


Please note - All Hardware in box 1.

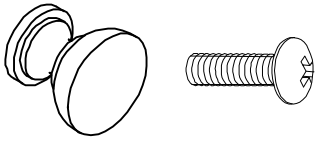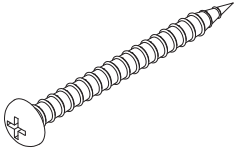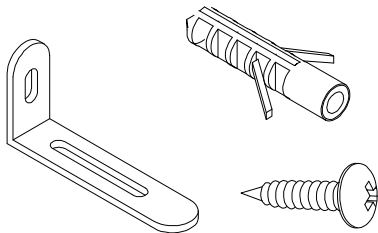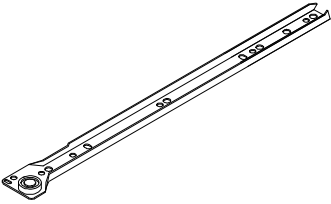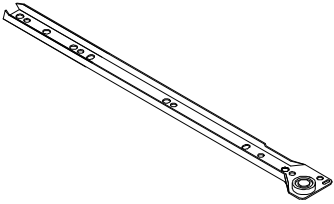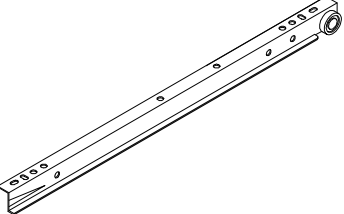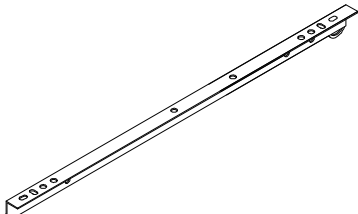            
A  M6x33mm 42PCS	B  M4x19mm 4SETS	C  M4x20mm 2PCS
D  4PCS	E  Ø15x9mm 42PCS	F  Ø6x30mm 22PCS
G  M4x33mm 25PCS	H  M3.5x12mm 52PCS	I  M4x14mm 1SET
CL  L300mm 4PCS	CR  L300mm 4PCS	
DL  L300mm 4PCS	DR  L300mm 4PCS	



 STEP 1

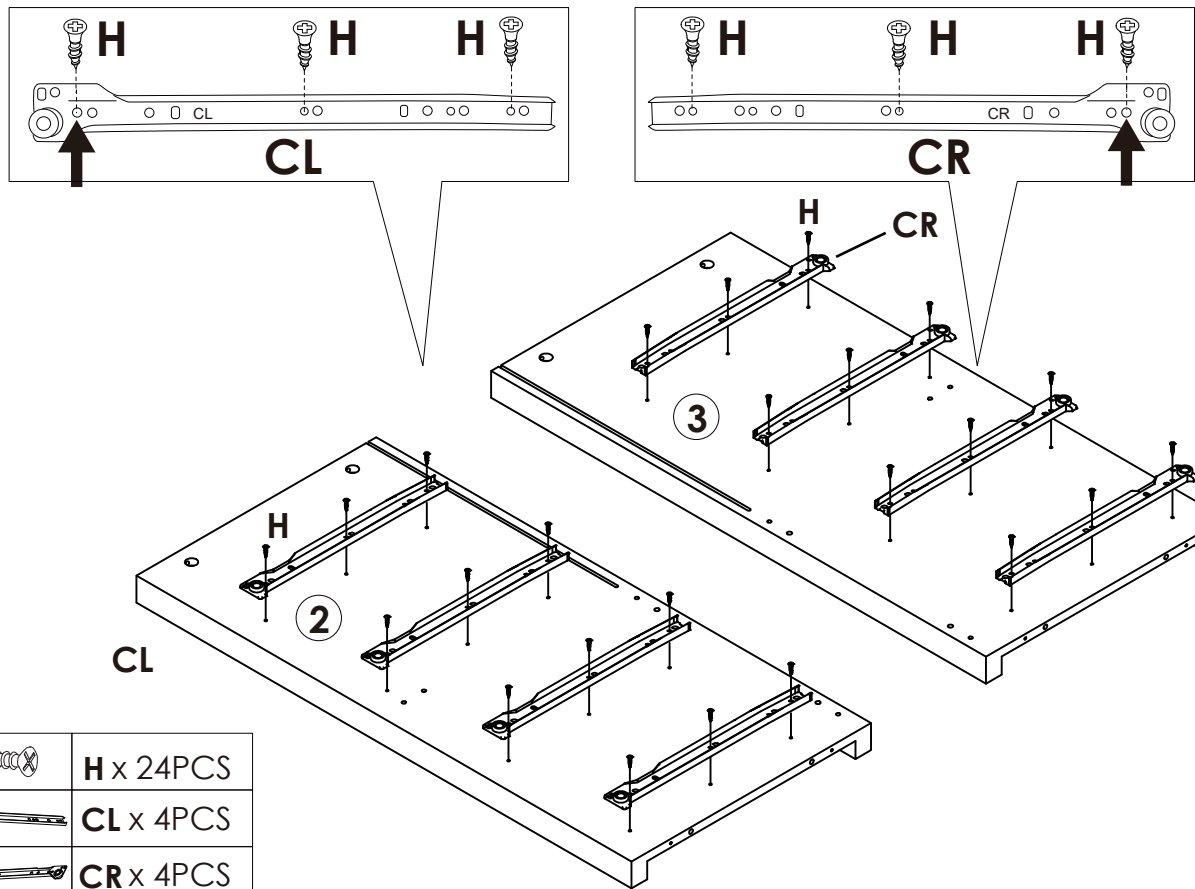


 STEP 2

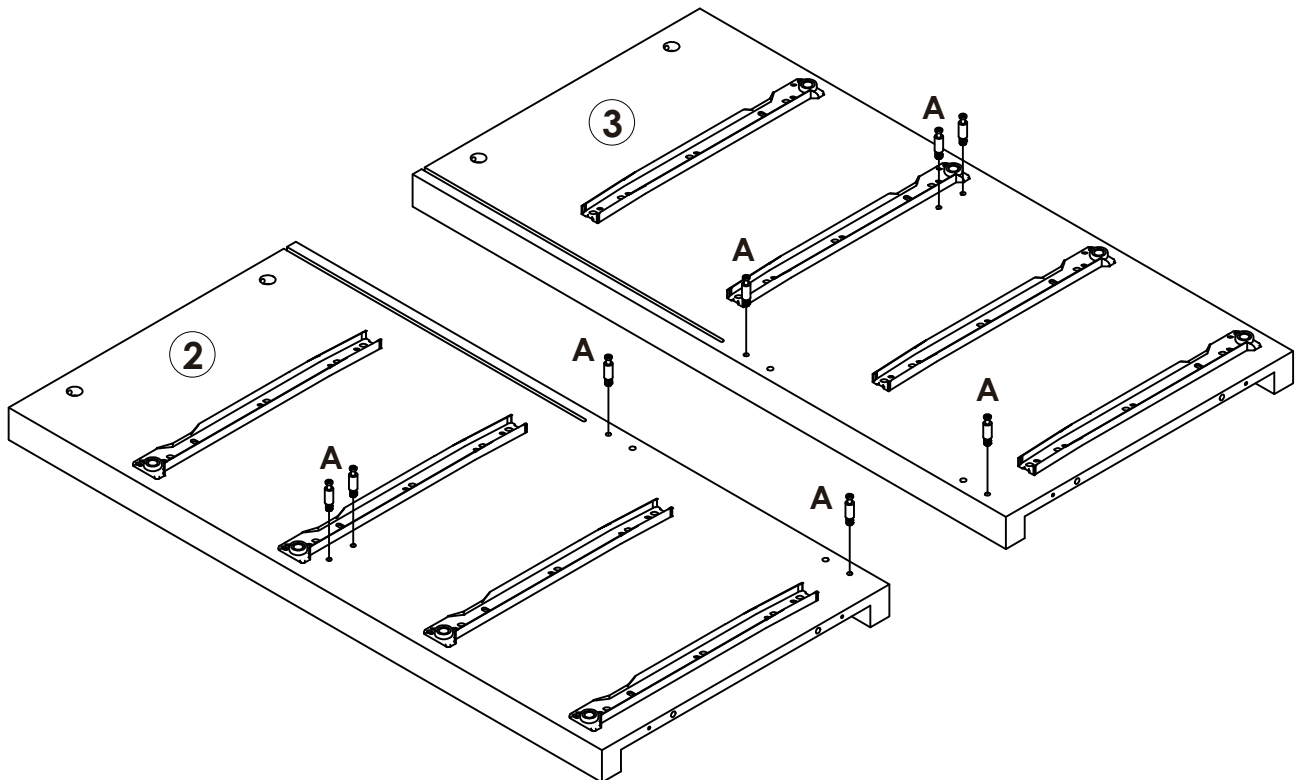


	A x 8PCS
---	----------

 
STEP 3

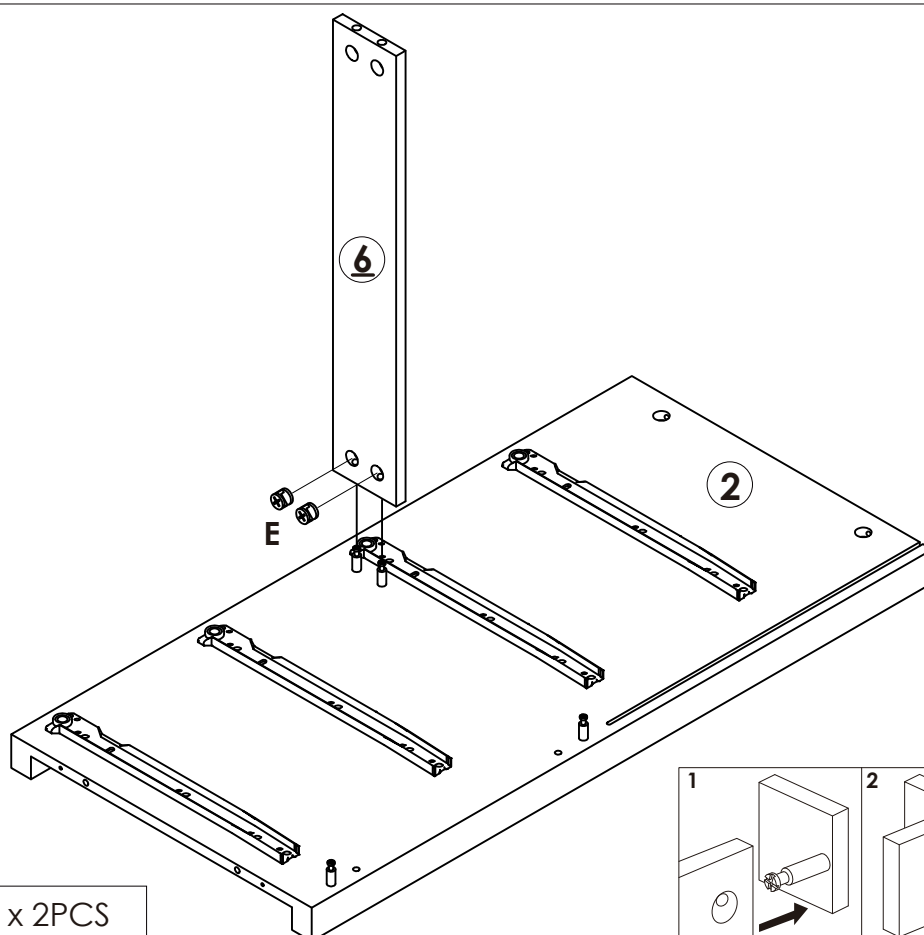

E x 2PCS

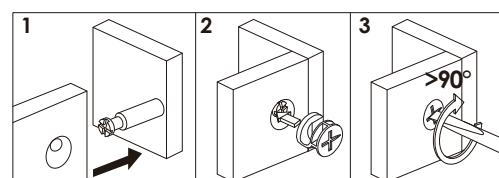 

 
STEP 4

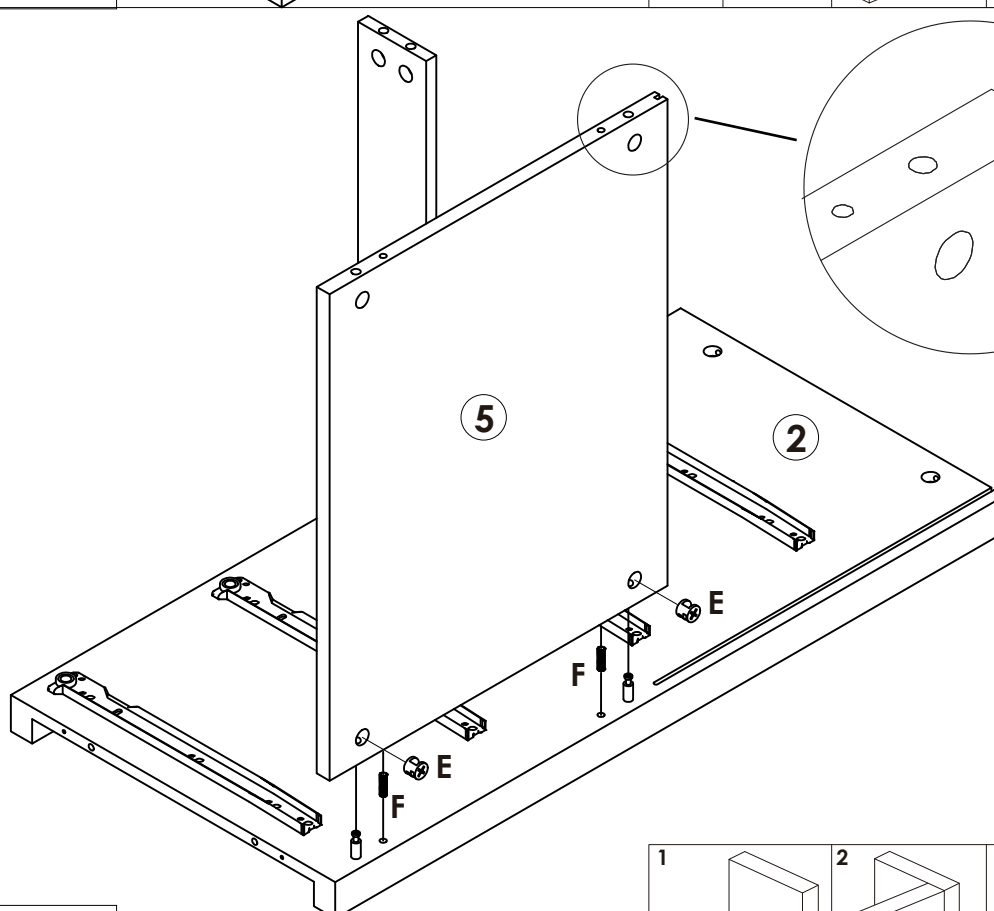



F x 2PCS



 E x 2PCS

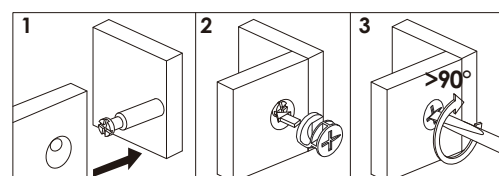


  STEP 5

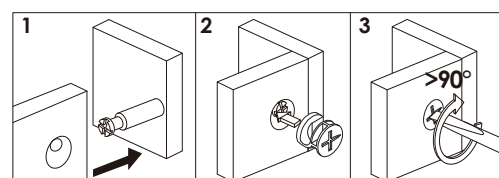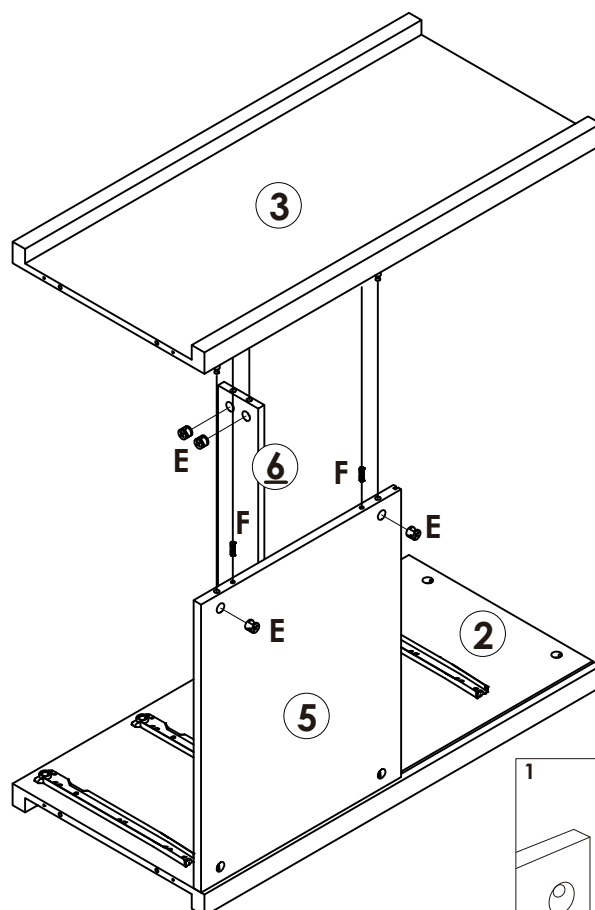


	F x 2PCS
	E x 4PCS

 STEP 6

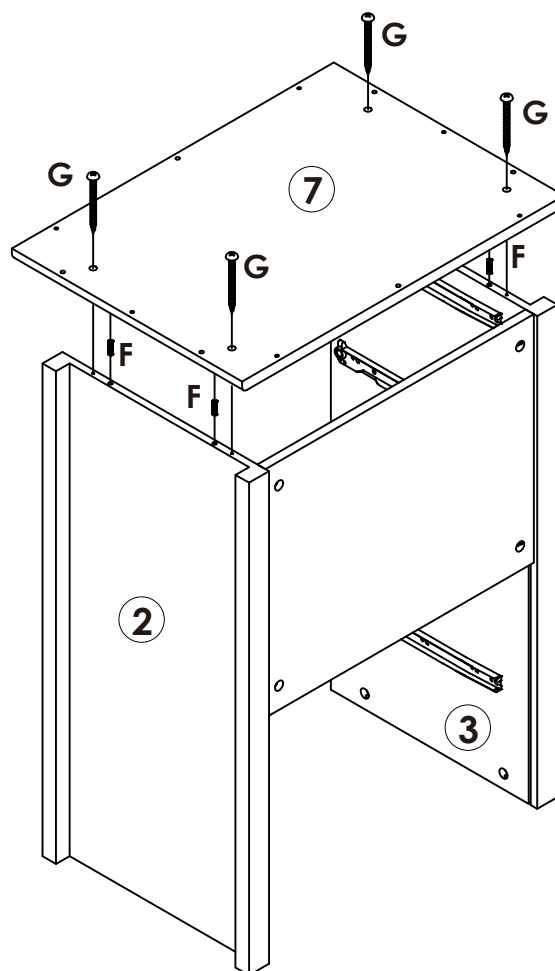


	G x 4PCS
	F x 4PCS

 STEP 7

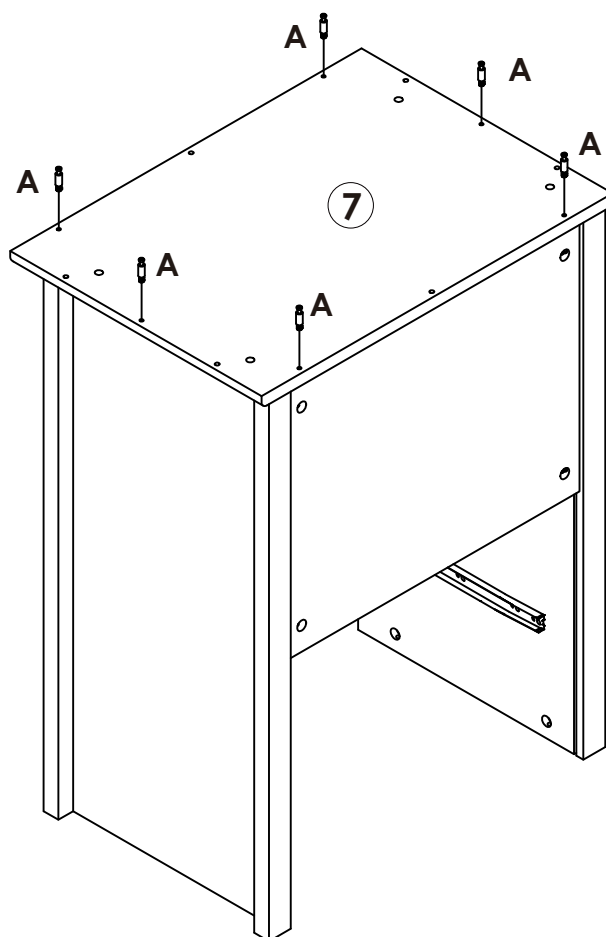



A x 6PCS

 STEP 8

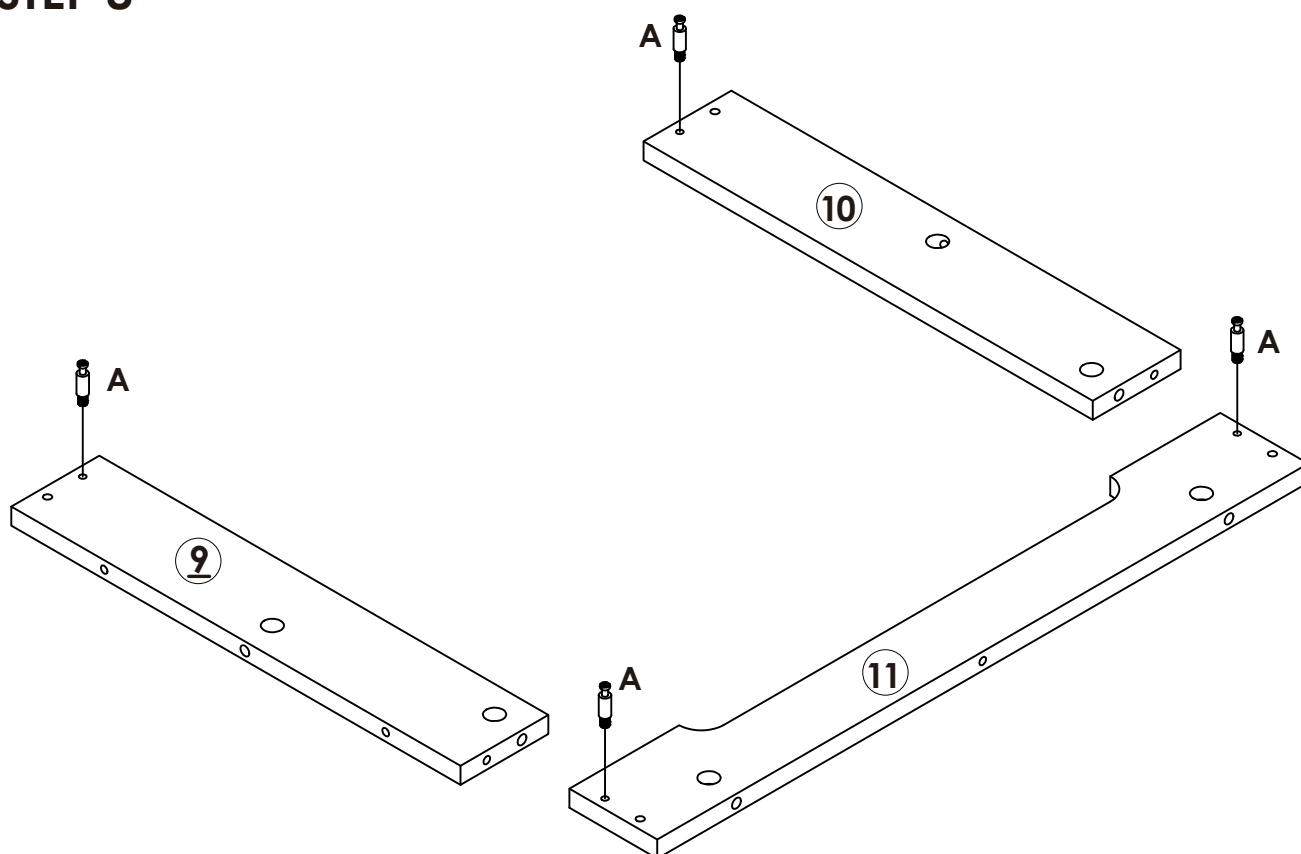



A x 4PCS

  STEP 9

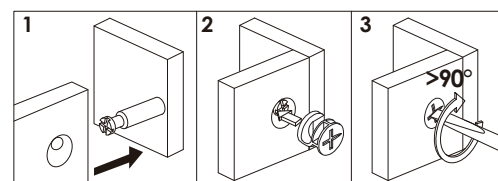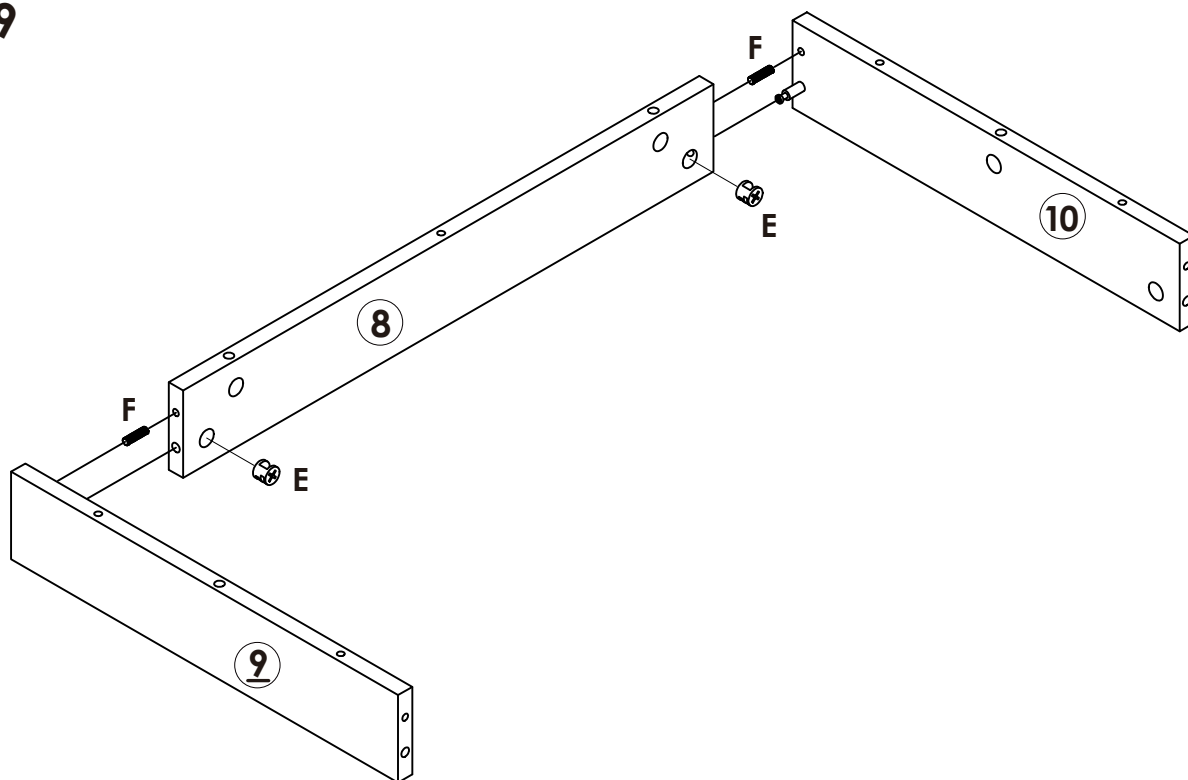



	E x 2PCS
	F x 2PCS

  STEP 10

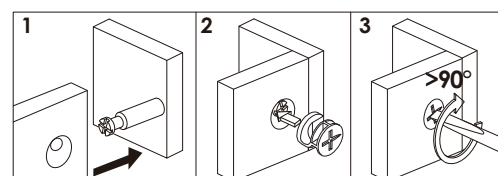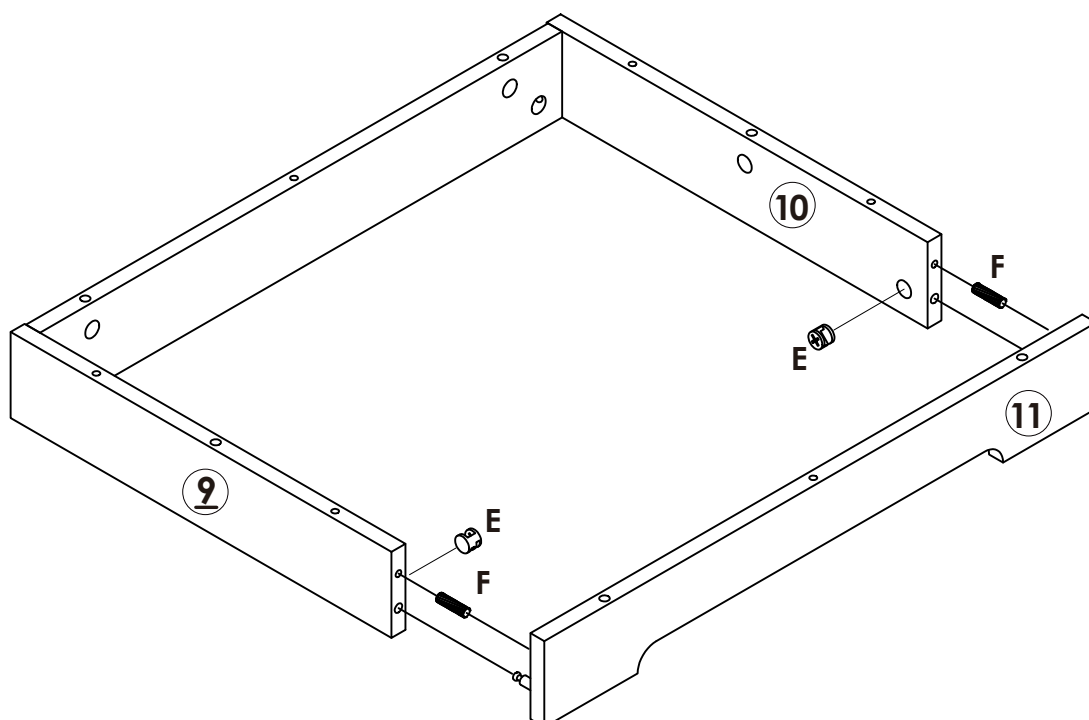


	E x 2PCS
	F x 2PCS

  STEP 11

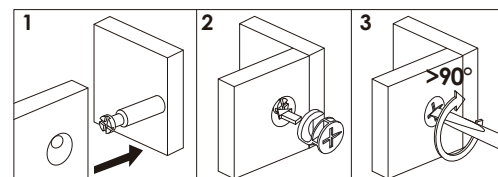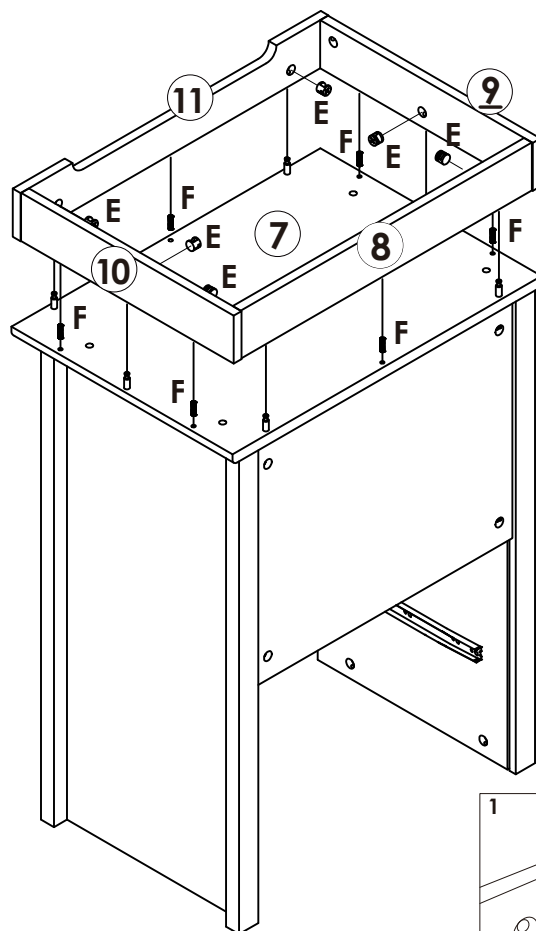



	E x 6PCS
	F x 6PCS

 STEP 12

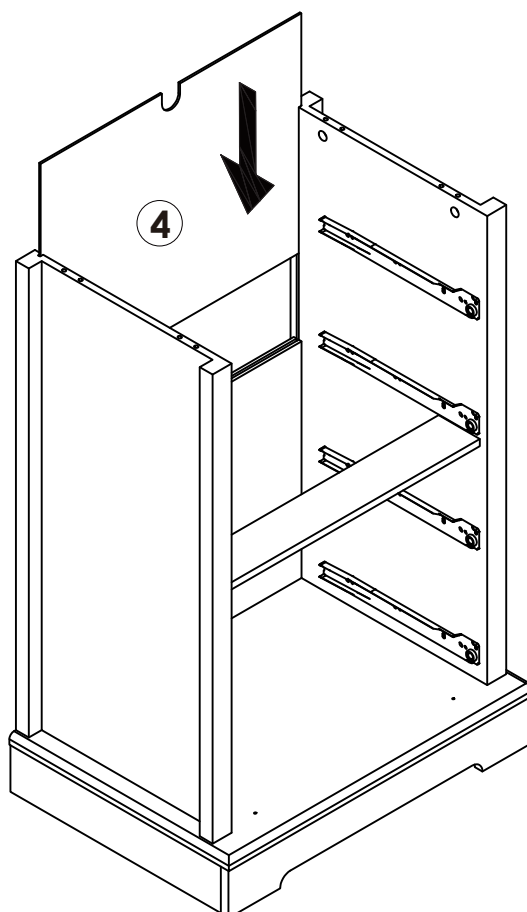


STEP 13

  Lock the long side of the "I" L-shaped metal plate to the ① board with the "I" short screw

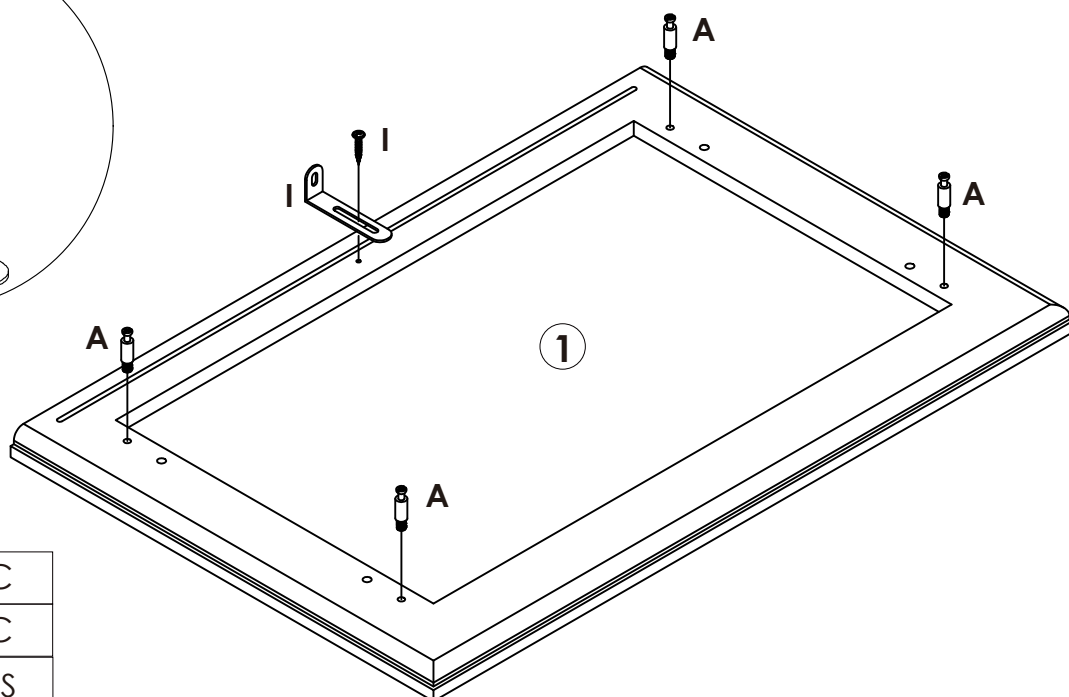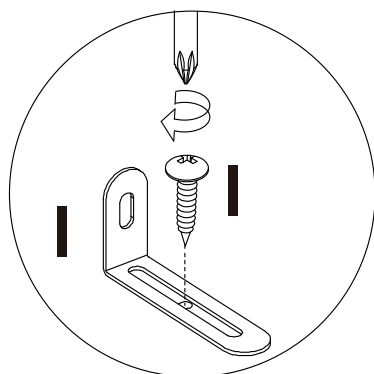


	I x 1PC
	I x 1PC
	A x 4PCS

 
STEP 14

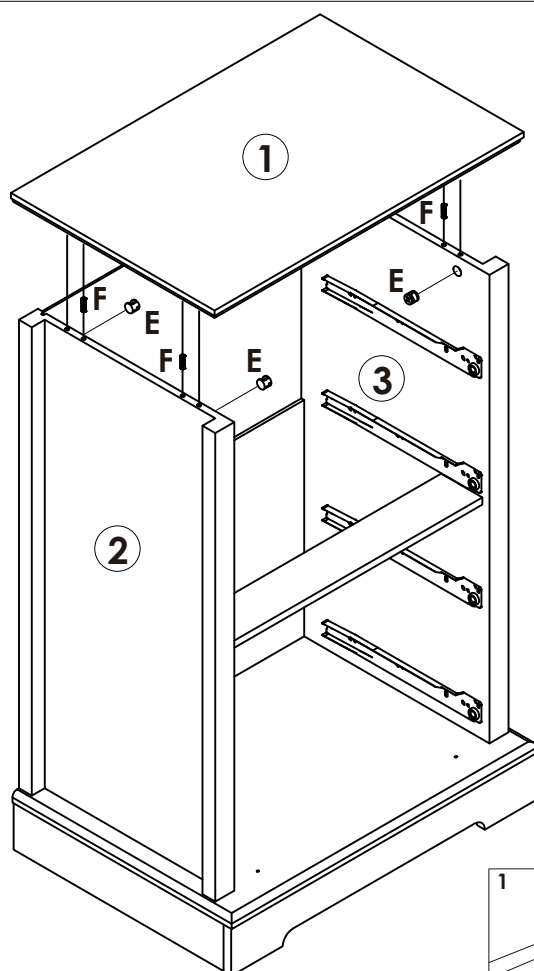

	E x 4PCS
	F x 4PCS


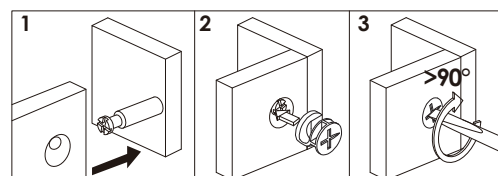 


 STEP 15

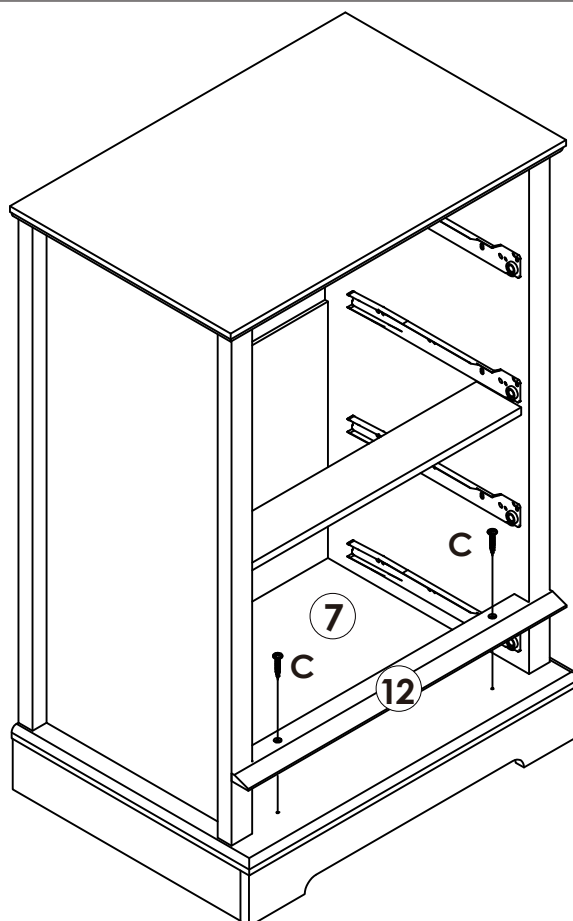

C x 2PCS

  STEP 16

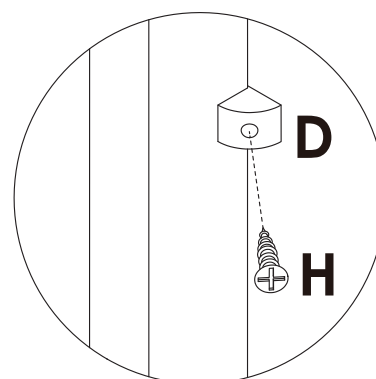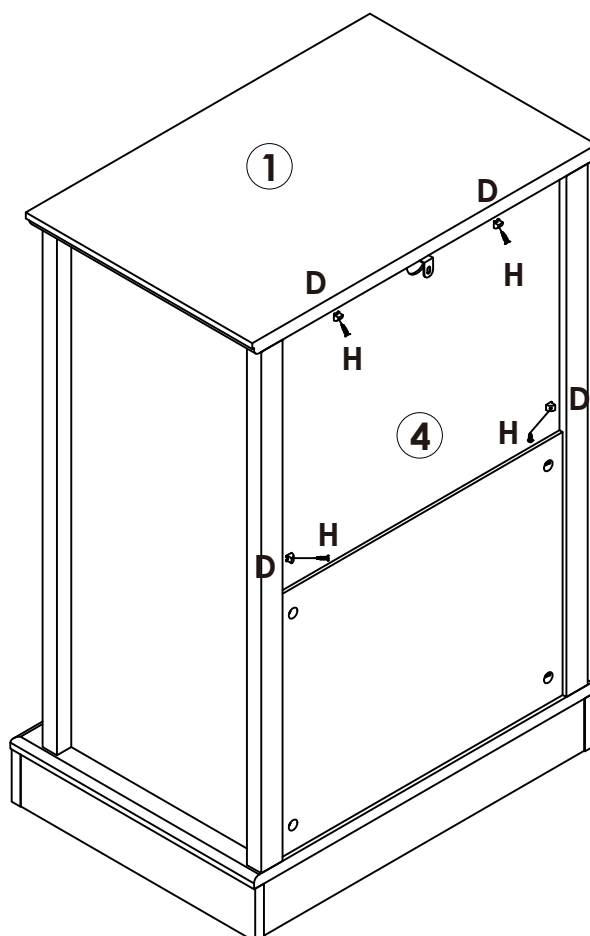


D x 4PCS



H x 4PCS

 STEP 17


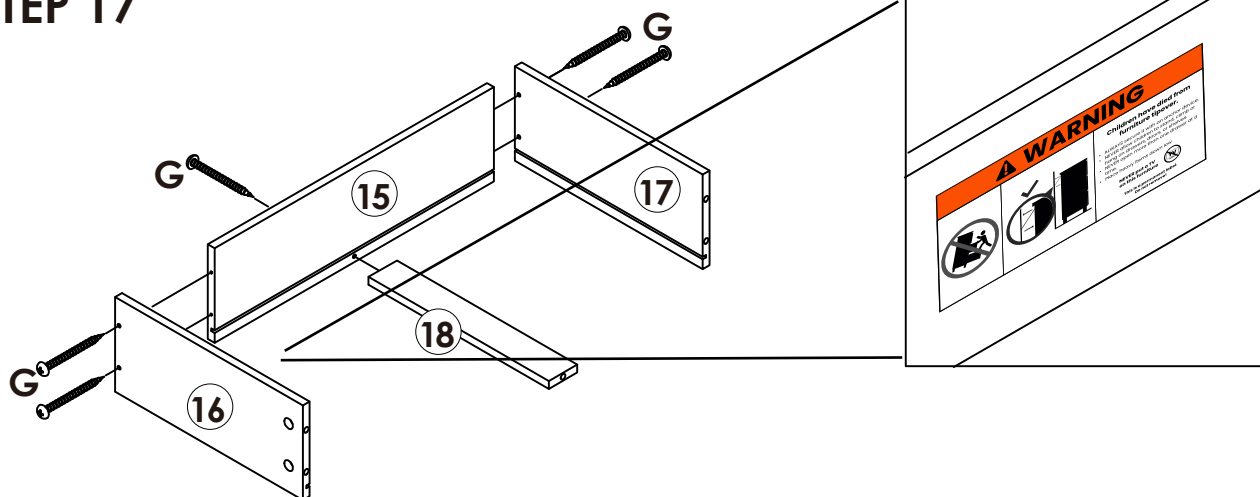


x4



G x 20PCS

  STEP 18

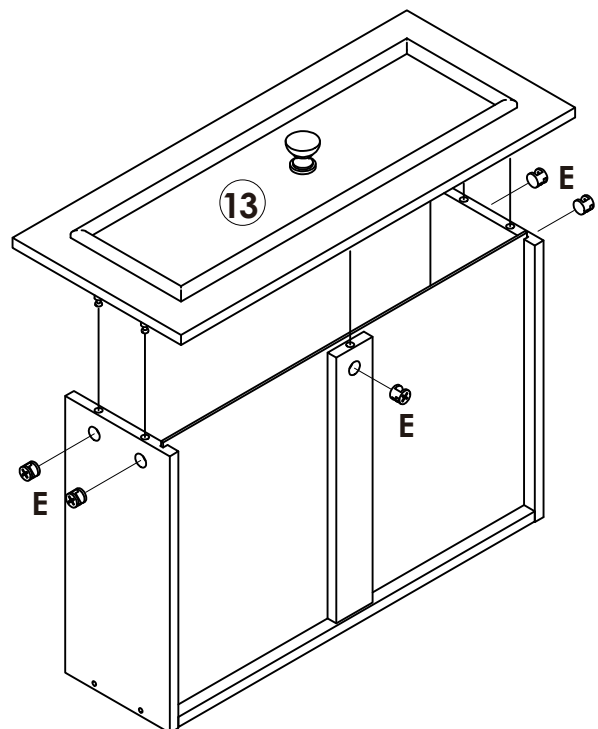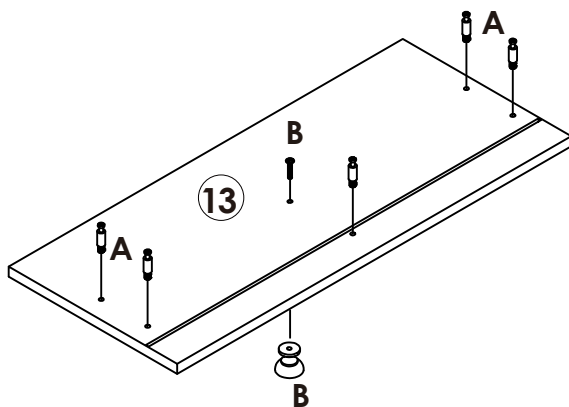

x4



 
A x 20PCS




E x 20PCS



B x 4SETS

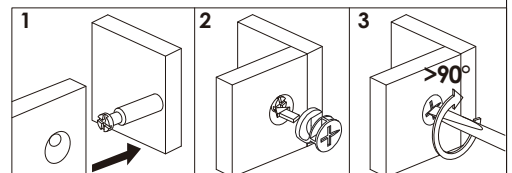


 STEP 19

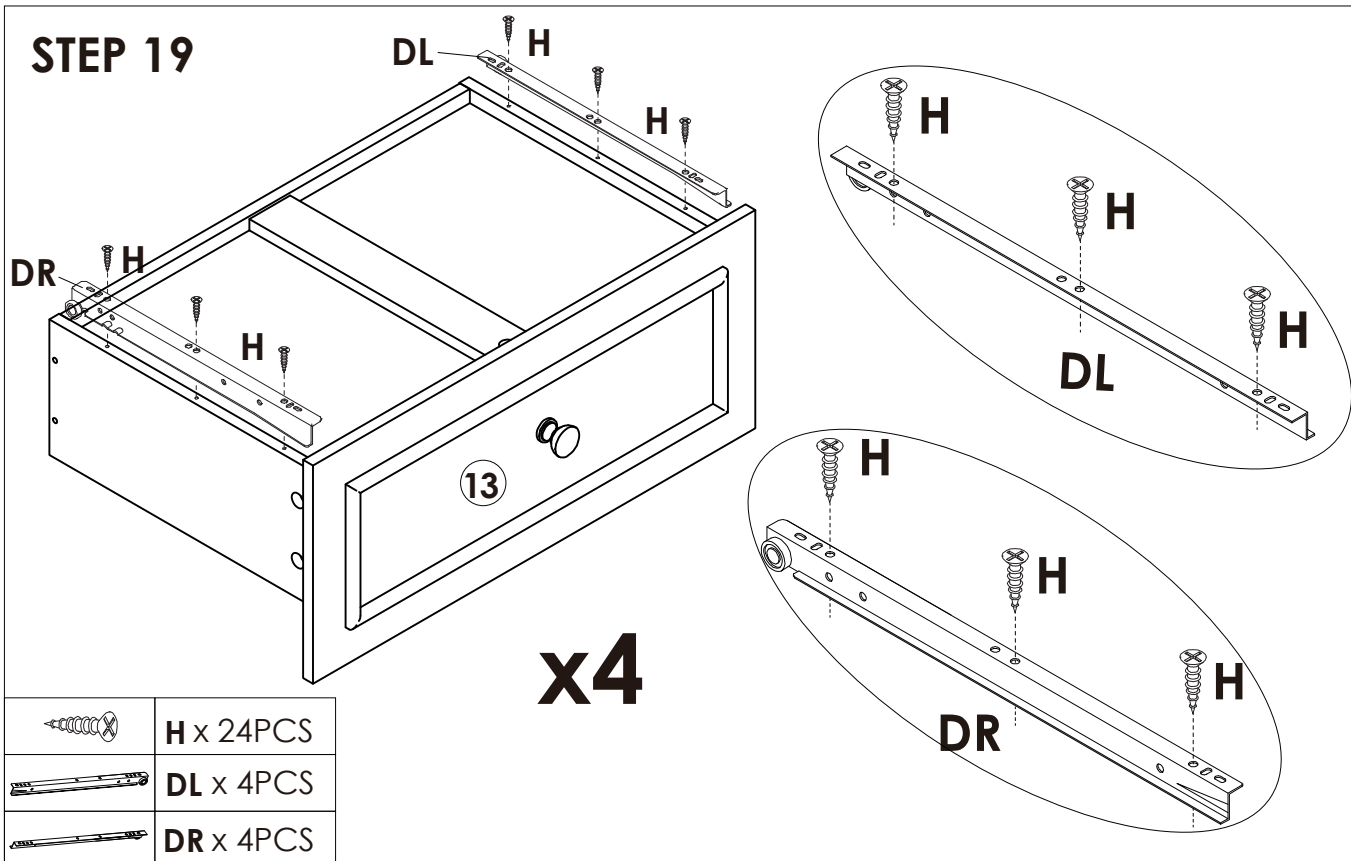


STEP 20

 Drill a hole on the wall at the required position for anti-falling device installation.

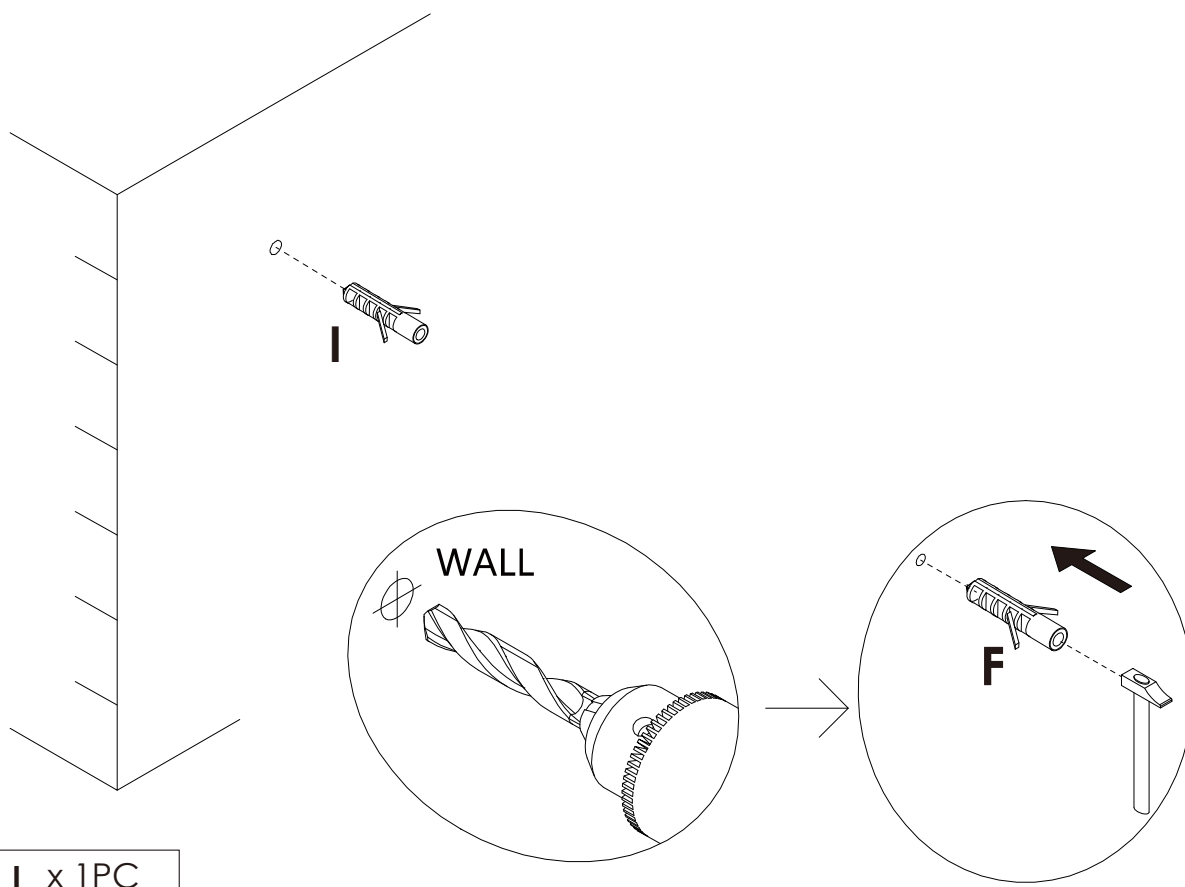



STEP 21

 Move the cabinet to the required position, use the "G" long screw to fix the cabinet to the wall.

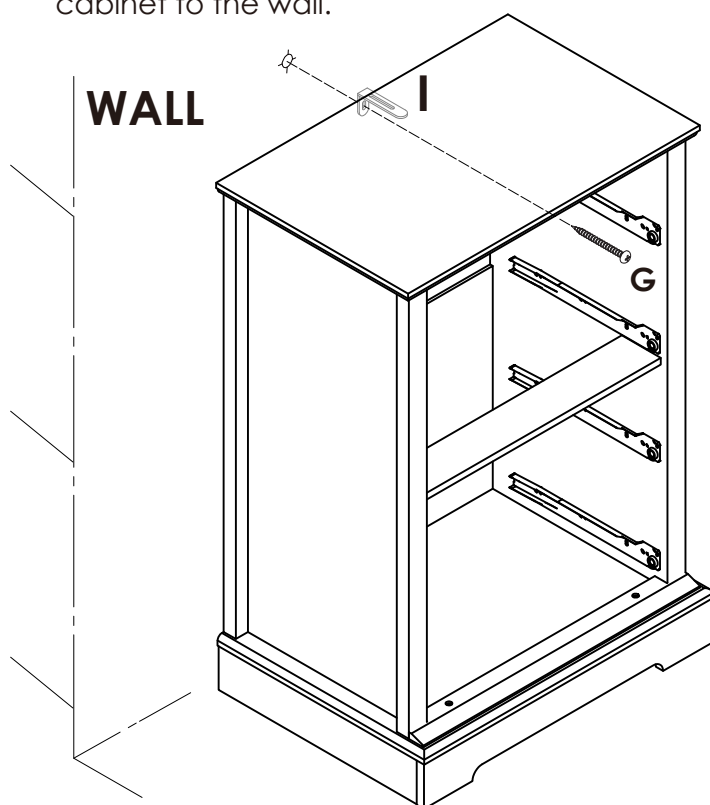

G x 1PC

  STEP 22

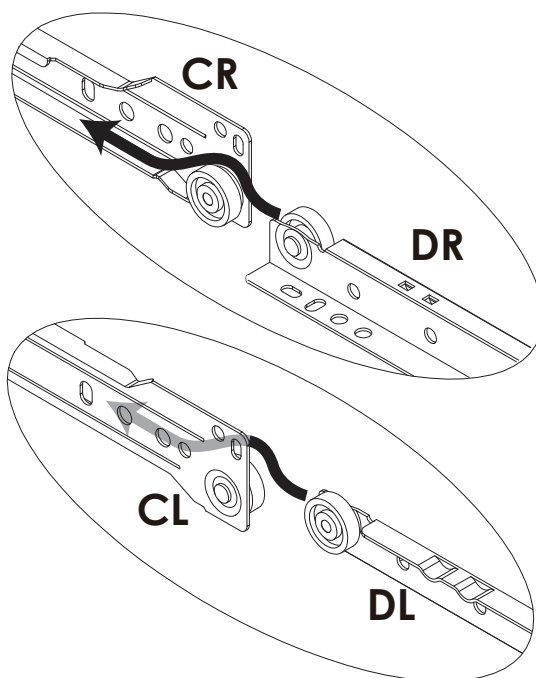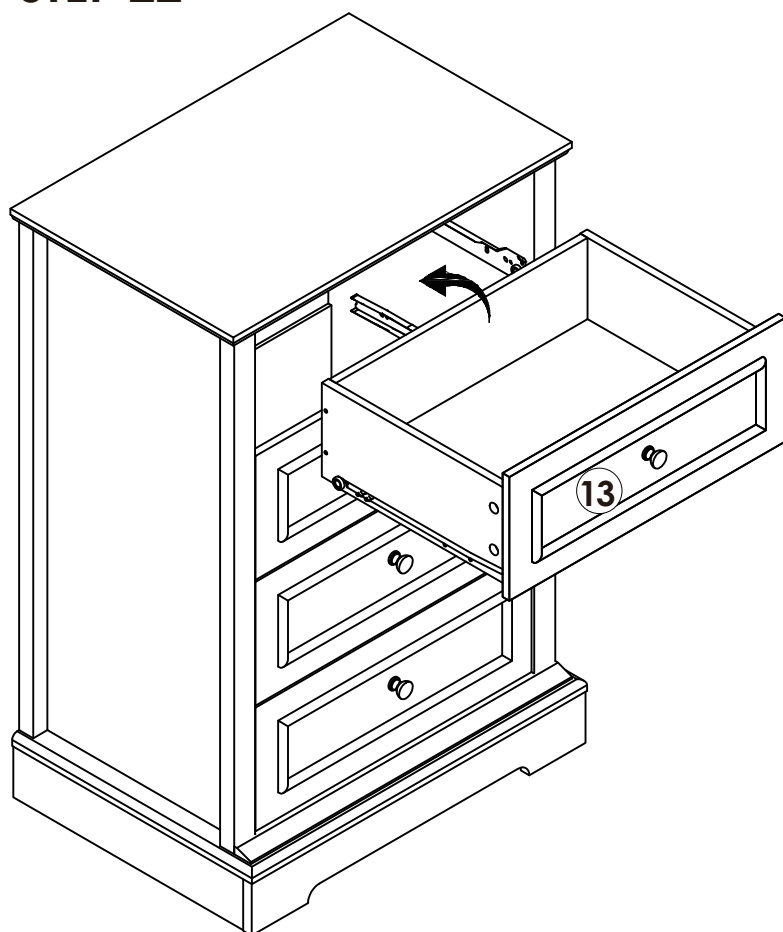

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface surface of furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void.