

 


ASSEMBLY INSTRUCTION

JEFFRIES CORNER

ITEM CODE 83071

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

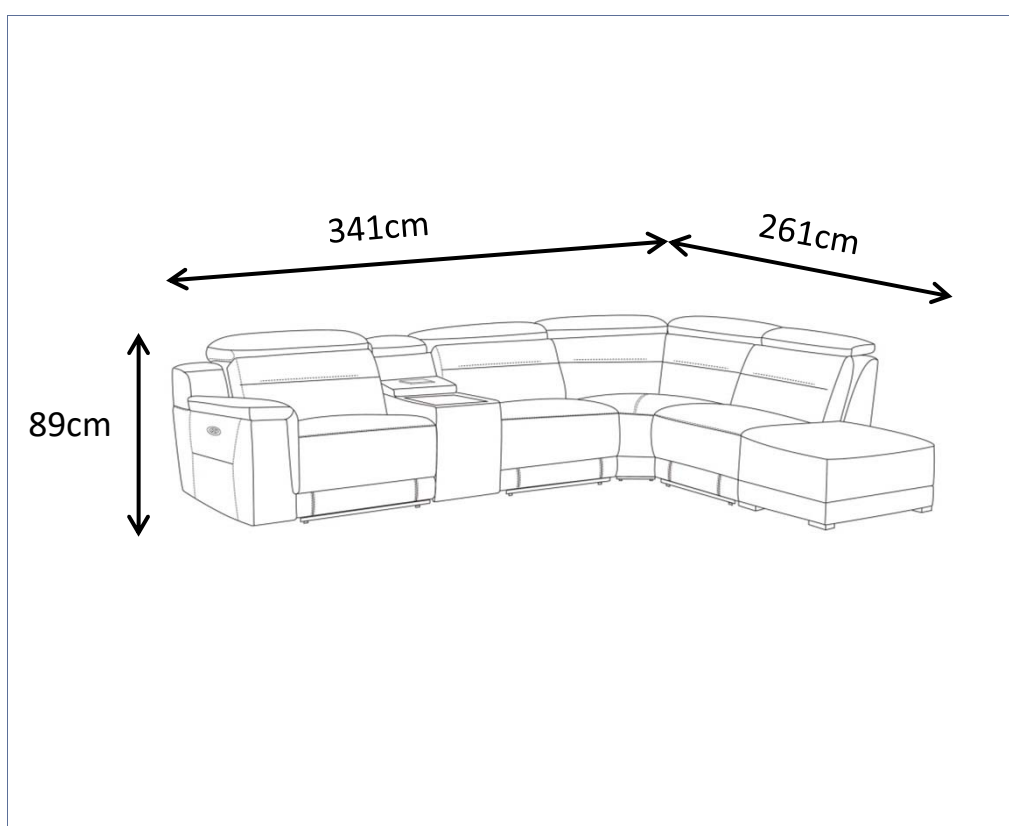


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

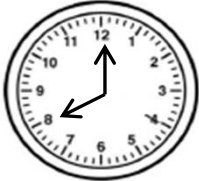	
ALLOW 40MINUTES	PEOPLE REQUIRED
ADDITIONAL TOOLS REQUIRED	


WARNING

- Do Not allow children to play on this mechanised furniture or operate the mechanism. Leg rest folds down on closing so that a child could possibly be injured. Always leave in an upright and closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it.

Step1: Locate and remove the recliner power cord (fixed to the mechanism) from underneath the left hand facing recliner seat. Keep the power cord to the side.



With 2 people,
carefully turn
lounge onto
back of a piece of
cardboard or carpet
to protect covering

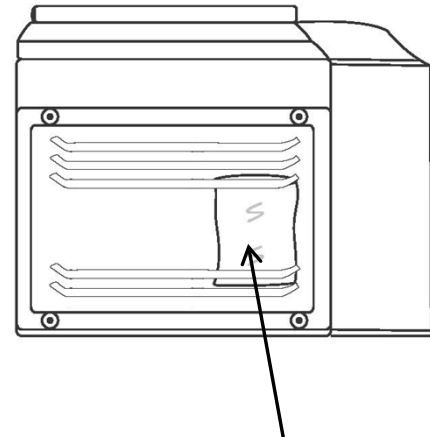


Recliner power cord pack

Recliner Power Cord




1pcs

Step2: Remove the box tied to the mechanism post at the rear of the left hand facing recliner. This contains the wing and fittings.

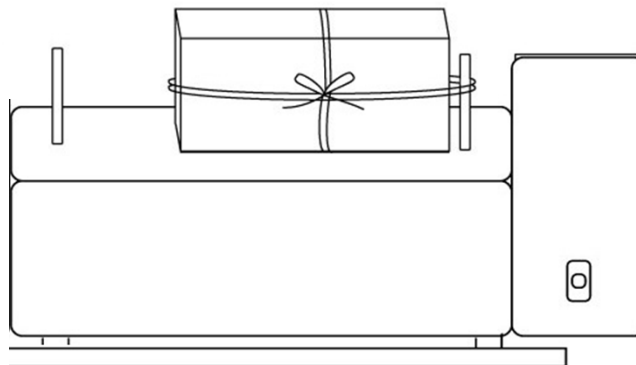


Left wing

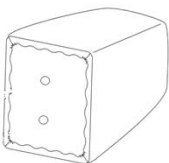

1pcs

 Bolt




2pcs

Nut




2pcs


Step3: Turn the wing on its side and screw the short end of the bolts into the base of the wing.

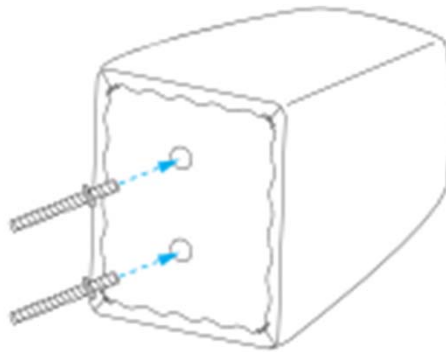

Step4: Carefully tilt the left hand facing recliner forward and lay flat so that you have access to the underside of the chair. Connect the wing to the Left hand facing recliner base by placing the wing with bolts into the pre-drilled holes at the rear of the left hand facing recliner arm. Open the zipper pocket at the bottom of the recliner and secure the wing piece to the recliner arm by tightening nuts onto the bolts. Zip up pocket.

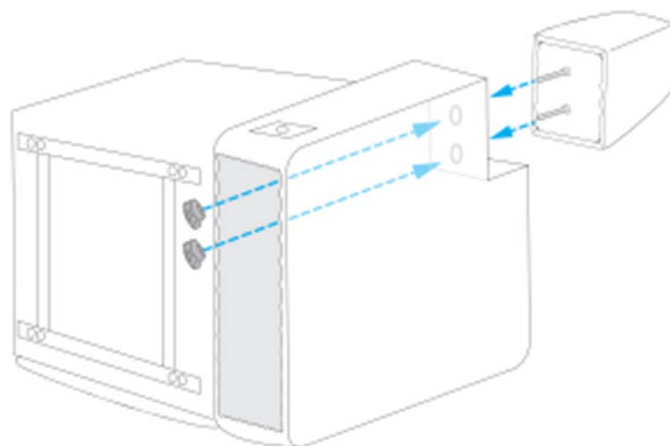


Step5: Connect the left hand facing recliner backrest to the seat by sliding the backrest receivers into the steel mechanism posts at the rear of the seat. Press firmly and evenly down on both sides of the backrest to ensure this is fully locked into place.

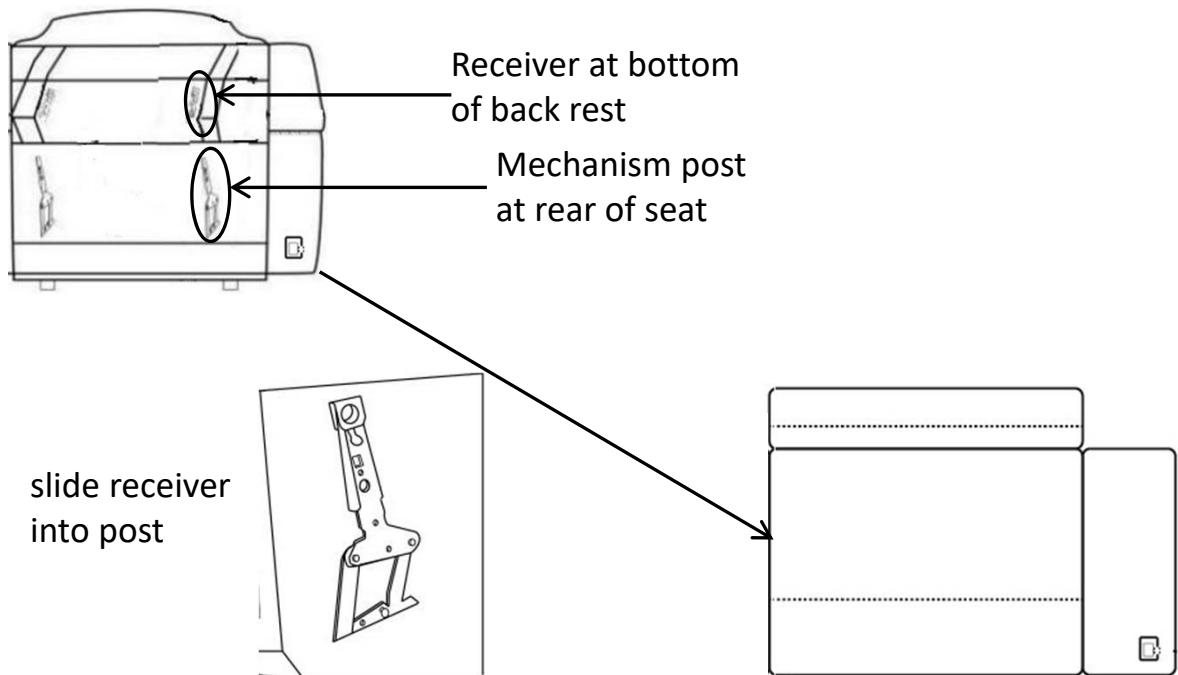


Step6: Carefully locate and remove the Console Sofa Feet and the Console Power Cord from the zipper underneath the Console piece. Keep the Console Power Cord to the side, keeping note this is for the console.




With 2 people,
carefully turn
lounge onto
back of a piece of
cardboard or carpet
to protect covering

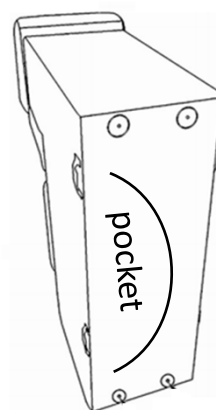

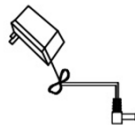Plastic foot	Console Power Cord
	
4pcs	1pcs

Step7: Screw the 4 x Console Feet into the pre-drilled holes in the bottom of the console by turning them in a clockwise direction to tighten.

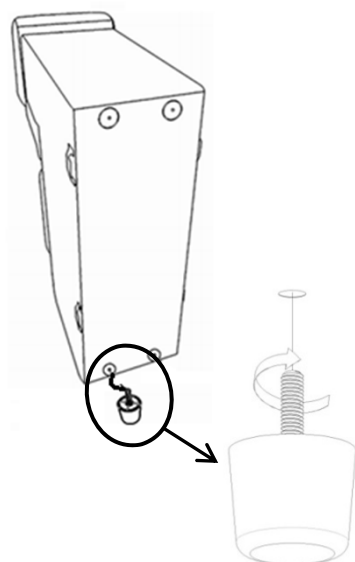




Turn the plastic round feet clockwise to tighten

Step8: Carefully locate and remove the Armless Chair Sofa Feet from the small zipper underneath the Armless Chair seat. Carefully locate and remove the Armless Chair headrest from the large zipper underneath the Armless Chair seat.




With 2 people, carefully turn lounge onto back of a piece of cardboard or carpet to protect covering

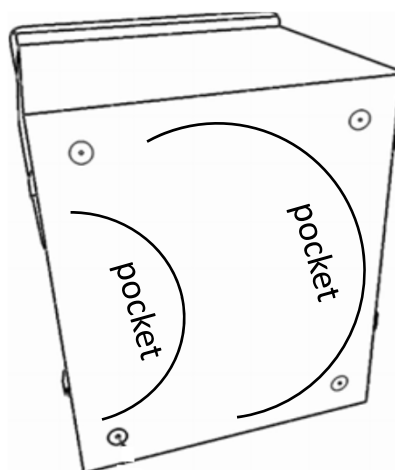


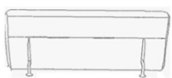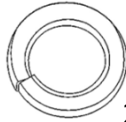Headrest  1pcs	Arched washer (35*10*5MM)  2pcs	Flat washer (32*10*2MM)  2pcs	Spring washer (16*10*2MM)  2pcs	Hexagon nut (M10)  2pcs	Plastic foot  4pcs
---	--	--	--	--	---


Step9: Secure the 4 x plastic feet provided onto each corner of the Armless Chair Seat by placing the feet in the pre-drilled holes and turning the feet in a clockwise direction to tighten.

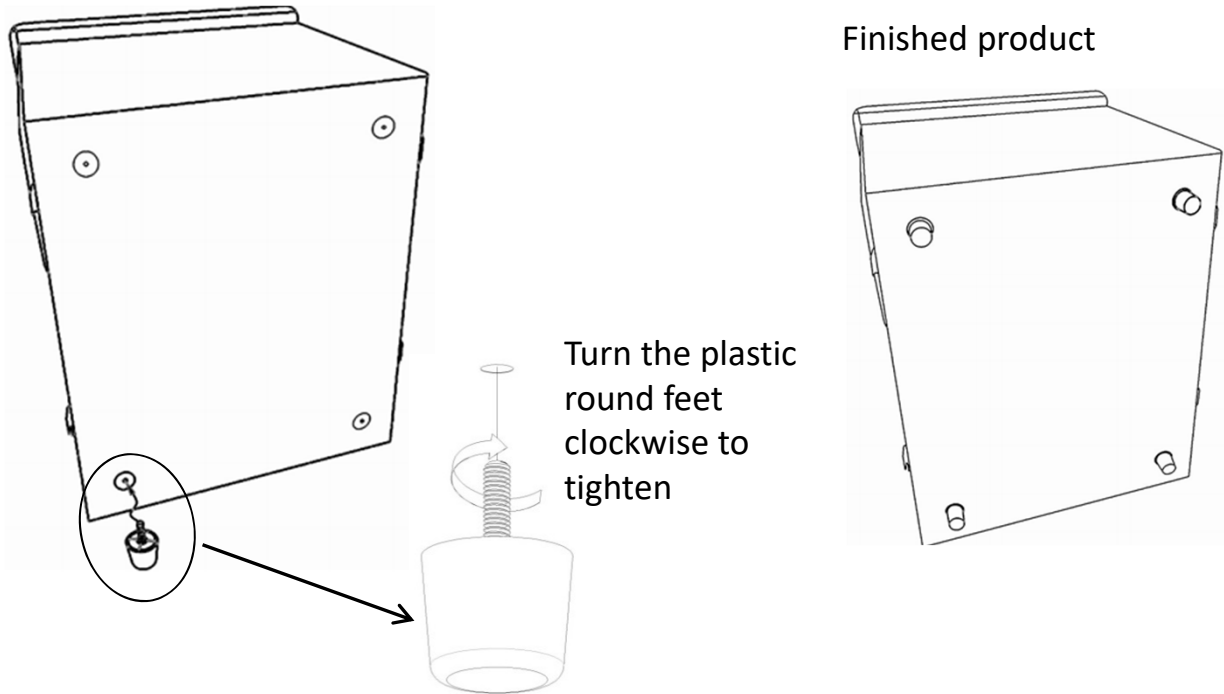



Step10: Remove protective packaging from the headrest. Then remove the hexagon nut, spring washer and the flat washer from the headrest bracket. Leave the arched washers attached to the brackets of the headrest. Then insert the headrest bracket into holes of backrest frame of the armless chair.

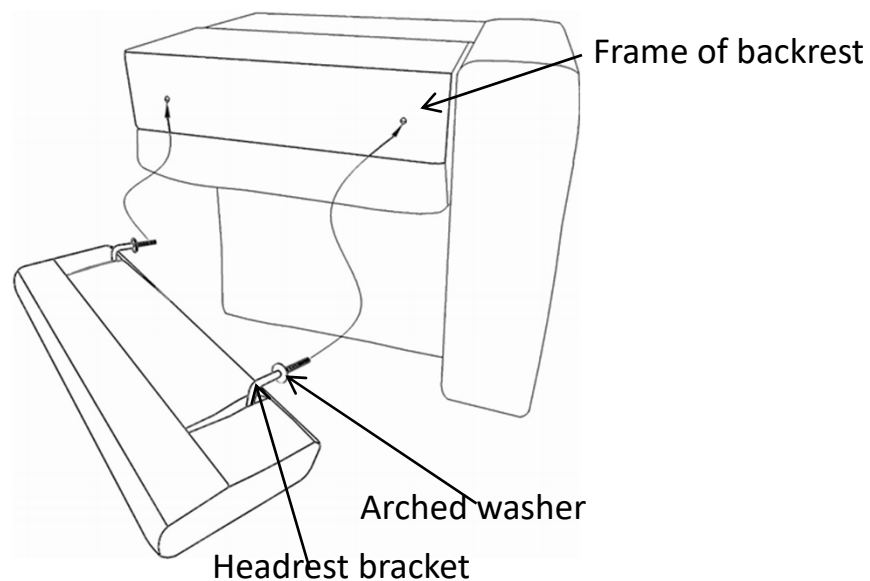

 
Step11: Carefully tilt the armless chair forward and lay flat. Hold this in position and support headrest so that you have access to the underside of the chair and unzip the base. Attach the flat washer, then spring washer, and finally fix with hexagon nut to the headrest bracket. Then use hexagon wrench to tighten the headrest brackets into the backrest frame. Close the zipper on the base and return chair into upright position.

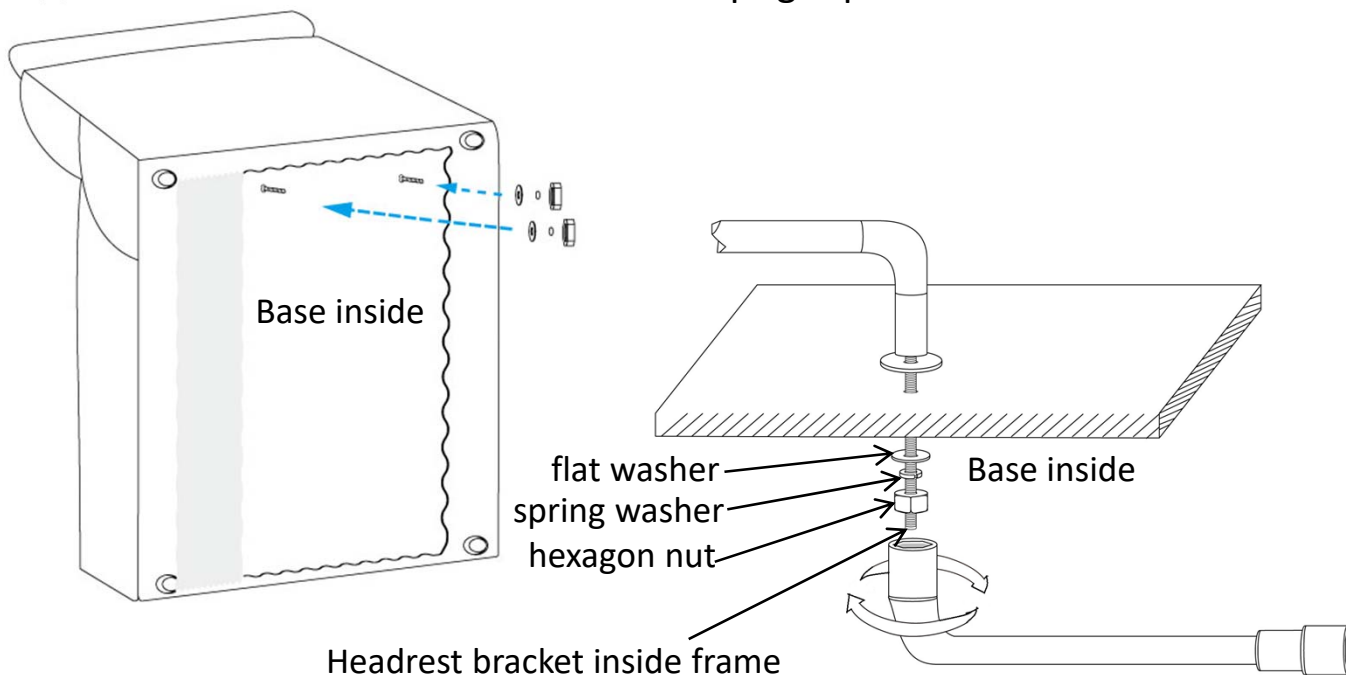

Step12: Carefully locate and remove the Wedge Sofa Feet from the zipper underneath the Wedge piece.

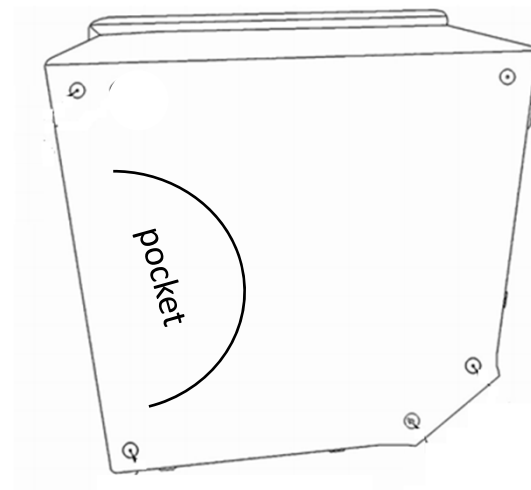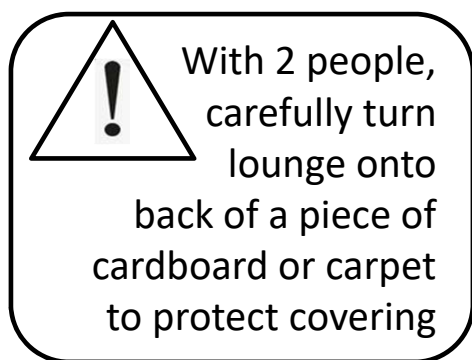


Plastic foot

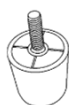


5pcs

Step13: Secure the 5 x plastic feet provided to the bottom of the corner piece, turning in clockwise direction to tighten.


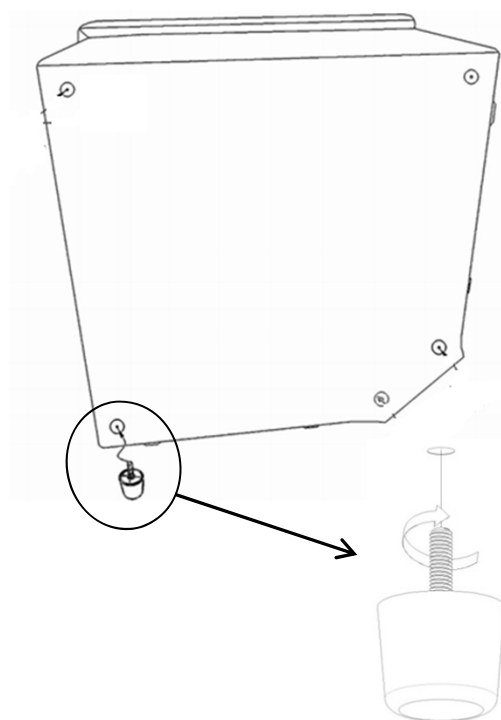



Turn the plastic round feet clockwise to tighten

Finished product

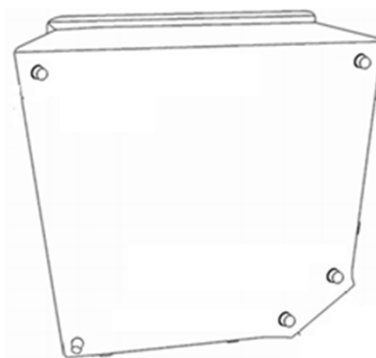


Step14: Remove protective packaging from the Wedge headrests packaged individually. Then remove the hexagon nut, spring washer and the flat washer from the headrest bracket. Leave the arched washers attached to the brackets of the headrest. Then insert the headrest bracket into holes of backrest frame of the Wedge seat.

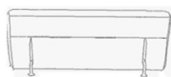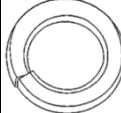Headrest  1pair	Arched washer (35*10*5MM)  4pcs	Flat washer (32*10*2MM)  4pcs
Spring washer (16*10*2MM)  4pcs	Hexagon nut (M10)  4pcs	

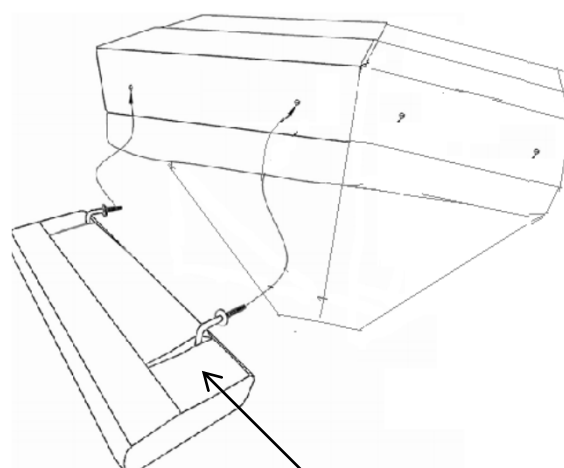

The side with wider space from the bracket need be forward to the middle of corner piece.


Step15: Carefully tilt the wedge seat forward and lay flat. Hold this in position and support headrest so that you have access to the underside of the chair and unzip the base. Attach the flat washer, then spring washer, and finally fix with hexagon nut to the headrest bracket. Then use hexagon wrench to tighten the headrest brackets into the backrest frame. Close the zipper on the base and return wedge seat into upright position.

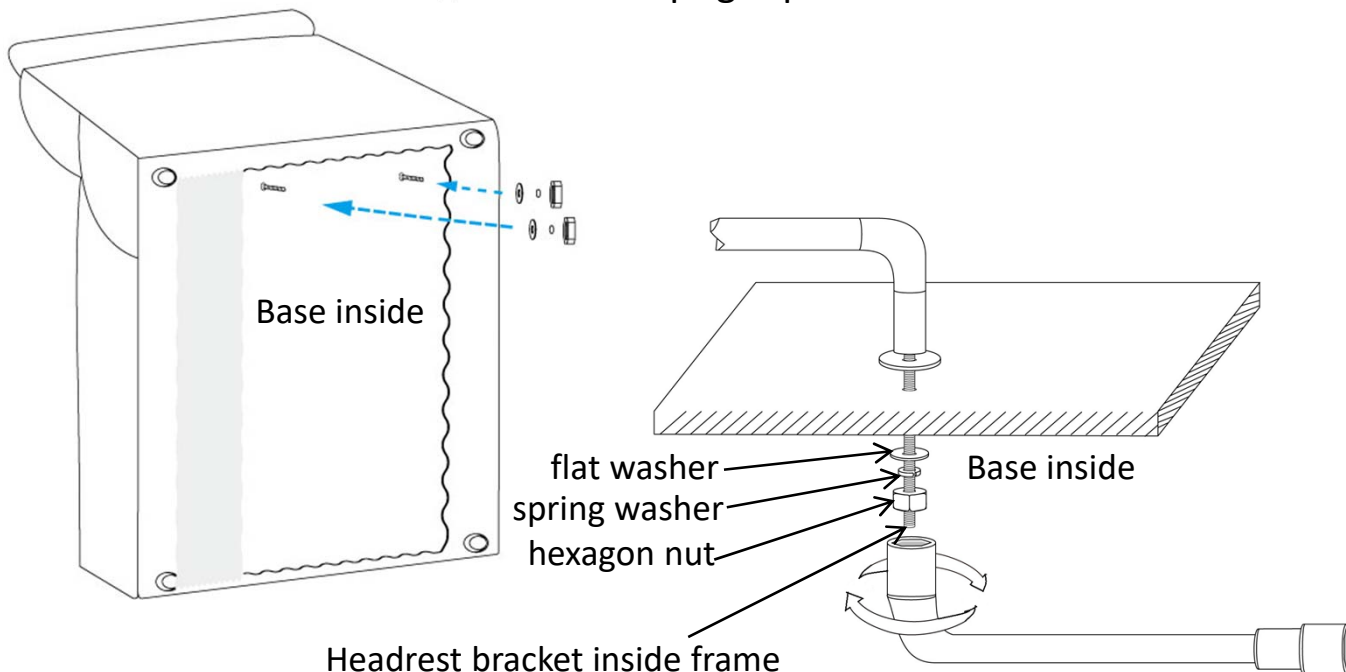

Step16: Carefully locate and remove the Terminal Piece Sofa Feet from the zipper underneath the Terminal Piece.



With 2 people,
carefully turn
lounge onto back of a
piece of cardboard
or carpet to protect
covering

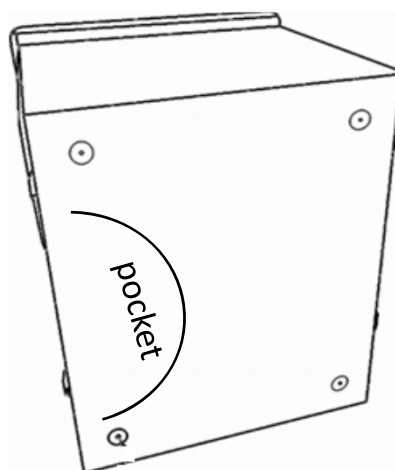


Plastic foot




4pcs

Step17: Secure the 4 x plastic feet provided onto each corner of the Terminal Piece by placing the feet in the pre-drilled holes and turning the feet in a clockwise direction to tighten.

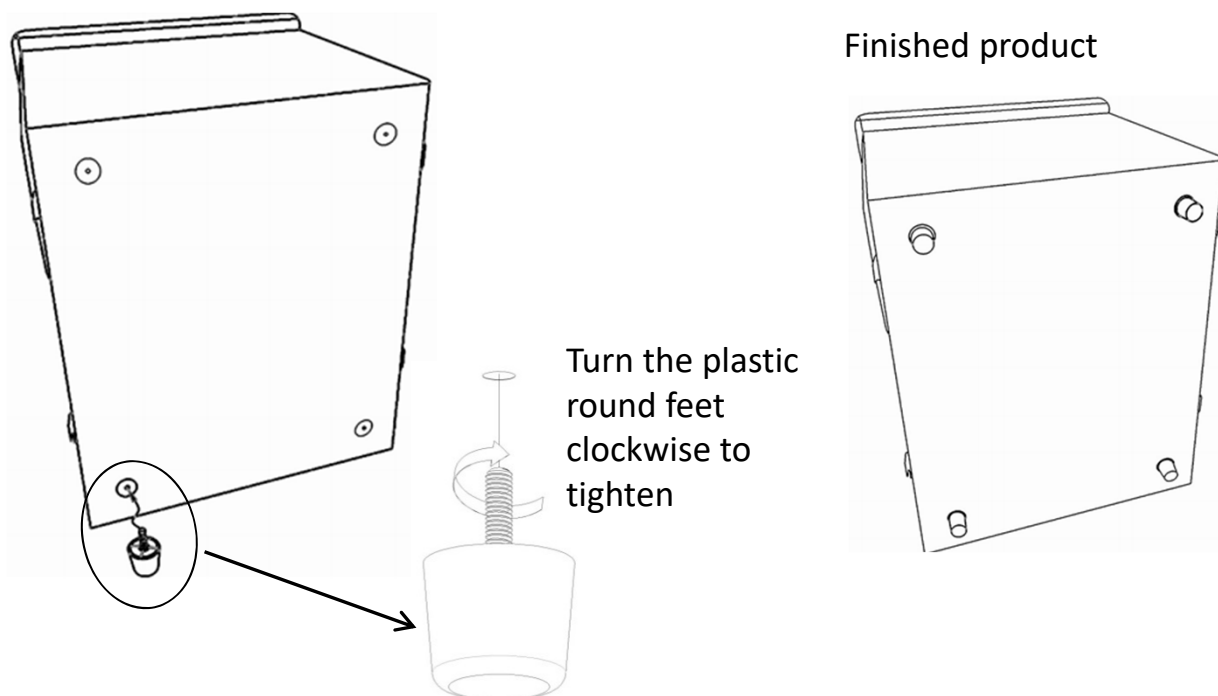


Step18: Remove protective packaging from the Terminal Piece backrest with fittings packaged individually. Then tighten the backrest to the seat with bolts and washers by Allen key.

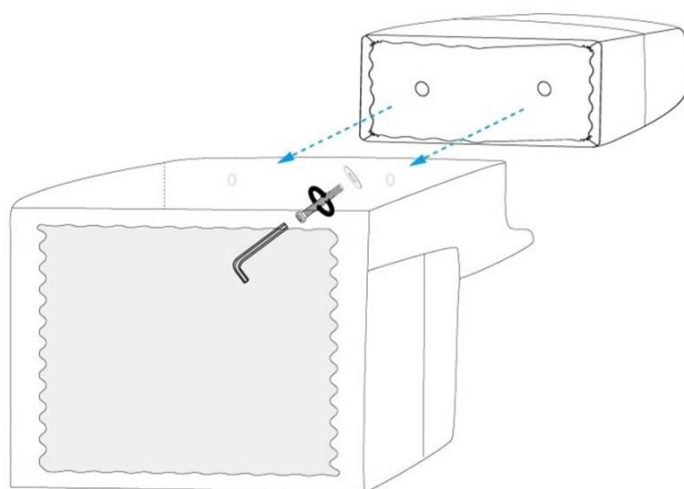


Bolt M8X60	Washer 25*8.5*2mm	Allen key
		
2pcs	2pcs	1pcs

Step19: Connect 5 pieces from right to left. Begin with the right hand facing terminal piece, then wedge, then armless chair, then console, then left hand facing recliner. Slide the base clips together then press the front and rear sides to ensure the clips are connected all the way to the bottom.

Note: the armless chair and console can be swapped around.

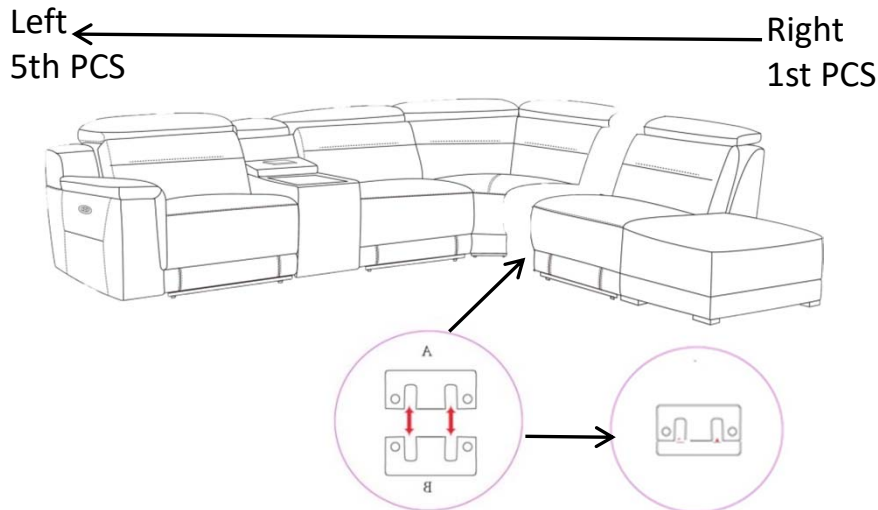


STEP20: Plug the left hand facing recliner power cord into the back socket of the left hand facing recliner.

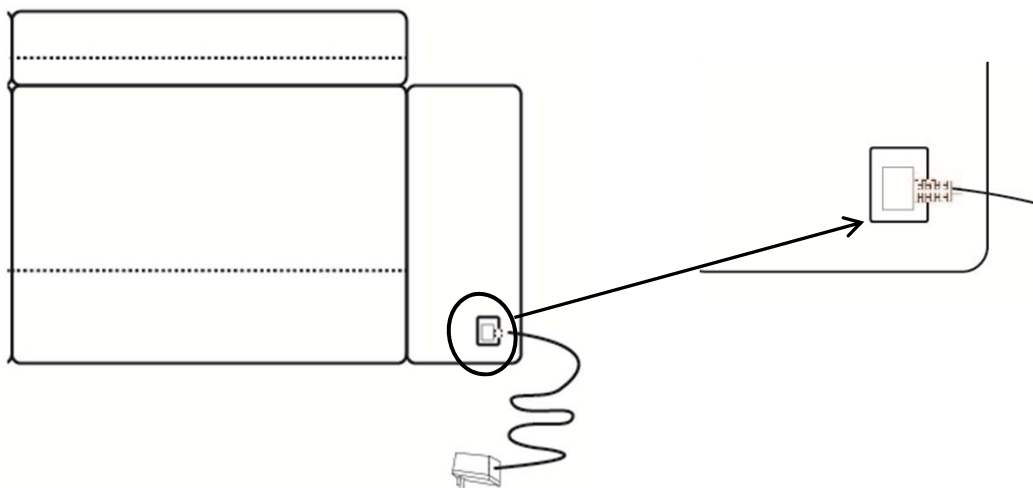

SAFETY NOTE:

PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

Step21: Plug console power cord into the socket at the back panel of console.

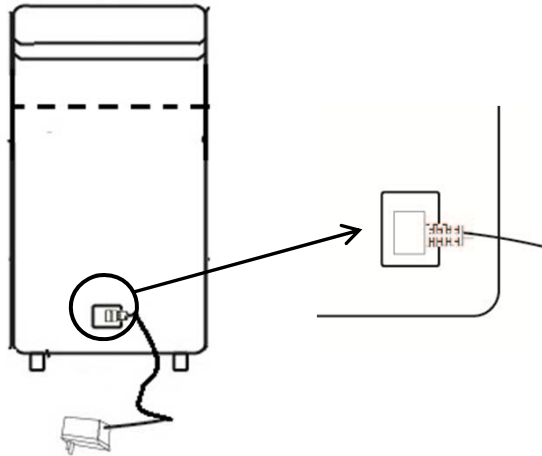

SAFETY NOTE:
PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. A FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE:

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:


Always unplug from electric outlet before cleaning.

WARNING: RISK OF INJURY

Keep children away from extended footrest and any moving parts.

CAUTION:

- Do not allow children to play on this electric recliner or operate the powered mechanism. The leg rest folds when closing and could possibly cause injury to a child. Always leave the recliner in an upright and closed position when not in use. Keep hands and feet clear of mechanism. Only the occupant should operate it.
- Do ensure fully enter the normal sitting position before using of the recliner. Improper sitting, such as sitting in the front of recliner may result in damage to both mechanism and motor drive bar.

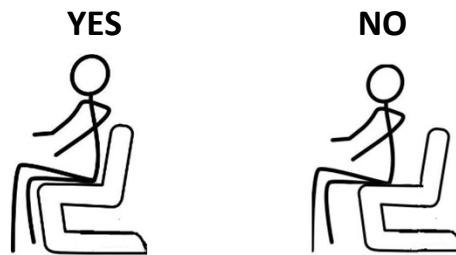

POWER CORD SAFETY

WARNING: Unplug and remove power cord from wall when not in use and store out of reach of children.

Take care when moving recliner that wall and transformer cords are not under the base or they may get damaged.

- NEVER OPERATE ELECTRIC RECLINER IF IT HAS A DAMAGED CORD OR PLUG.

WARNING: TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY TO PERSONS:

- Use only for its intended purpose
- Never press or activate control switch if you are not seated in recliner
- Only the occupant should activate the control switch
- Never operate with more than one person occupying seat
- Never sit or stand on the footrest

CARE AND MAINTENANCE

FABRIC CARE

REGULAR CARE: PROTECT FROM DIRECT SUNLIGHT.
VACUUM REGULARLY USING LOW SUCTION.
ROTATE REVERSIBLE CUSHIONS REGULARLY.

CLEANING:

DO NOT REMOVE CUSHION COVERS FOR SEPARATE
CLEANING EVEN THOUGH THEY HAVE ZIPPERS.
DO NOT WASH
DO NOT DRY CLEAN
DO NOT SHAMPOO CLEAN
CLEAN WITH HOT-WATER EXTRACTION MACHINE.
(HOT) PROFESSIONAL CLEANING RECOMMENDED.
DO NOT USE DISHWASHING OR LAUNDRY DETERGENTS.
USE ONLY UPHOLSTERY DETERGENTS
DO NOT WET FILLING
DRY IN SHADE AWAY FROM DIRECT HEAT AND SUNLIGHT
ALLOW TO DRY THOROUGHLY BEFORE RE-USE

SPOT CLEANING:

DO NOT RUB
DO NOT SPOT CLEAN WITH ANY SOLVENT.
TREAT SPILLS AND STAINS AS SOON AS POSSIBLE.
GENTLY SCRAPE ANY SOIL OR MOP ANY LIQUID FROM THE SURFACE OF THE
FABRIC.
APPLY PROPRIETARY CLEANING AGENTS STRICTLY
ACCORDING TO INSTRUCTIONS TO REMOVE THE
RESIDUE OF THE SPILL.
DO NOT SATURATE THE FABRIC OR INTERIOR WITH
WATER OR OTHER CLEANING LIQUIDS.

WARNING: APPLY ONLY WATER-BASED SOIL RESIST
(FABRIC PROTECTION) TREATMENTS. DO NOT USE
AEROSOL PRODUCTS.