


# **ASSEMBLY INSTRUCTION ISMENE TALL CHEST**

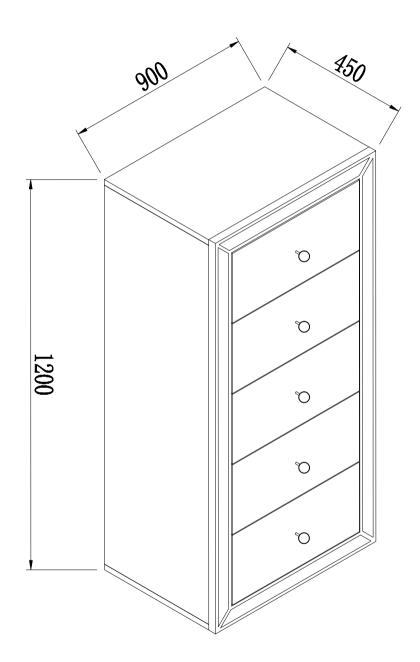

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Customer Service Free call 1800 351 084


#### PRE-ASSEMBLY PREPARATION

#### Before you start:


- Choose a clean, level. spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads




### **PARTS LIST**

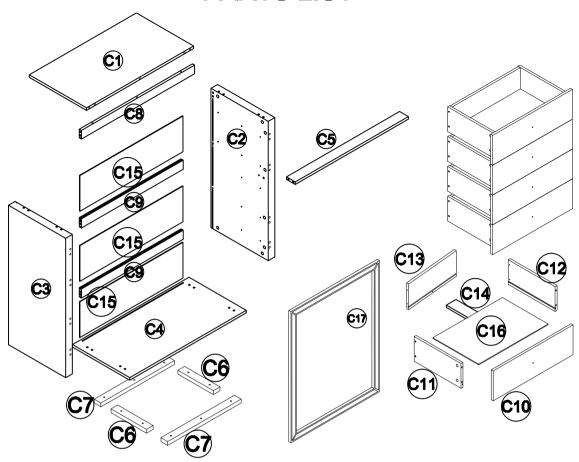


| C1         | Top Panel        | C10 | Drawer Front Panel     |
|------------|------------------|-----|------------------------|
| C2         | Right Side Panel | C11 | Drawer Left Side Panel |
| СЗ         | Left Side Panel  | C12 | Drawer Right Side Pane |
| C4         | Bottom Panel     | C13 | Drawer Back Panel      |
| <b>C</b> 5 | Support Panel    | C14 | Support Panel          |
| C6         | Leg              | C15 | Back Panel             |
| <b>C7</b>  | Leg              | C16 | Drawer Bottom Panel    |
| C8         | Back Rail        | C17 | Front Rail             |
| C9         | Back Rail        |     |                        |

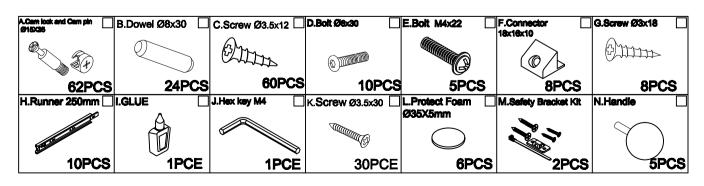


STEP 1:
Runner slide separately (H=H1+H2)
Carefully pull out the runner slide (H2) and press plastic clip to fully separate runner slide as diagram shown

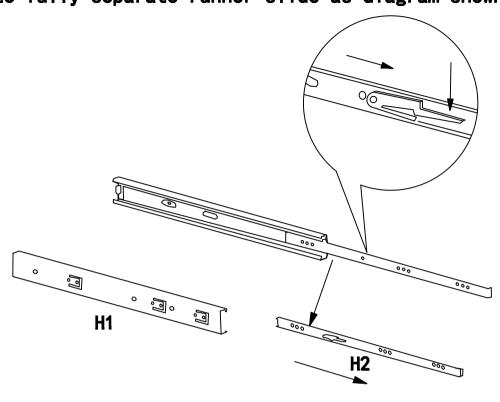


STEP 2: Attach Cam Pin(A) and Dowel(B) to Panel(C1&C4&C17).

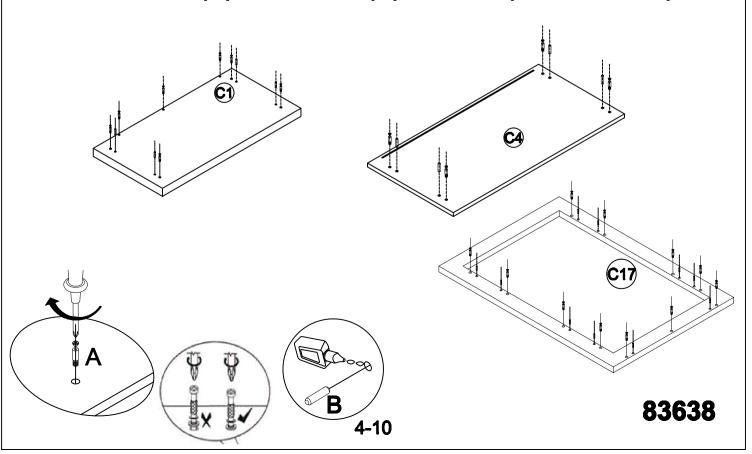

STEP 3: Attach Cam Pin(A) and Dowel(B) to Panel(C2&C3). Attach Runner(H1) to Panel(C2&C3) with Screw(C).

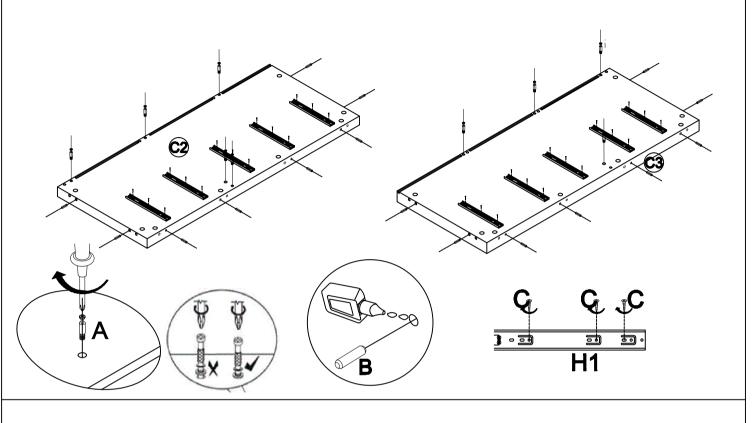


STEP 4: Attach Panel(C5&C8&C9) to Panel(C2).Insert Panel(C15) to groove. Attach Panel(C4) to Panel(C2). And turn Cam lock(A) to lock into the head of Cam Pin(A).

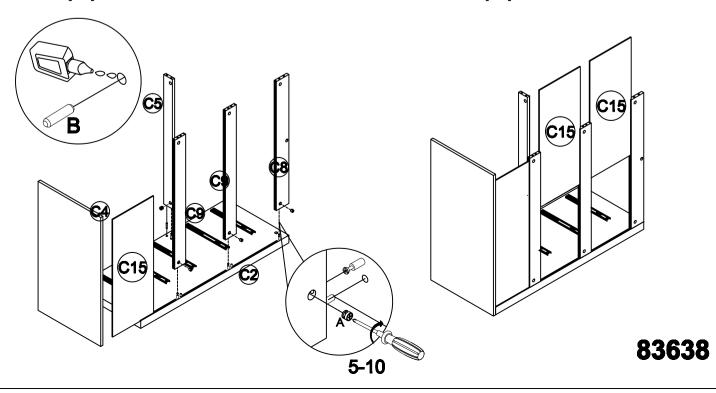


#### STEP 5:


Attach Panel(C4) to Panel(C1&C8&C9). And turn Cam lock(A) to lock into the head of Cam Pin(A). Use Hex Key(J) to attach Leg(C6&C7) to Panel(C4) with Bolt(D). Attach Protect

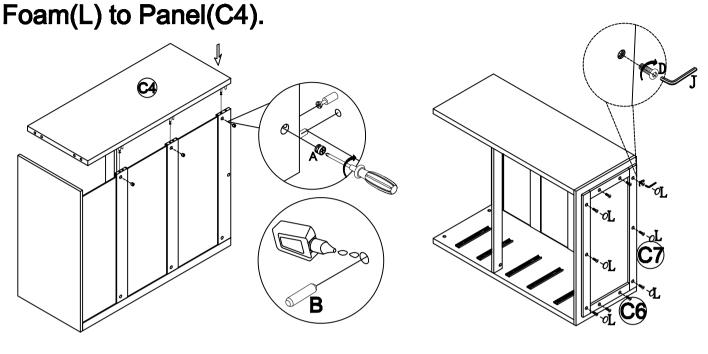


# STEP 6: Attach Panel(C1) to Panel(C2&C3). And turn Cam lock(A) to lock into the head of Cam Pin(A).

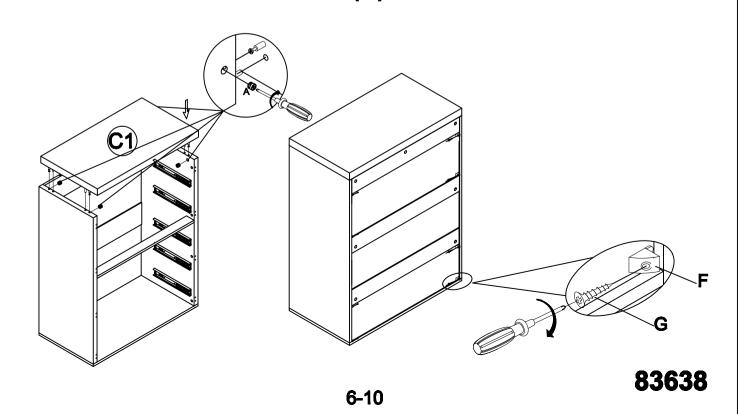


STEP 7: Attach Panel(C17) to Panel(C1&C3&C2). And turn Cam lock(A) to lock into the head of Cam Pin(A).

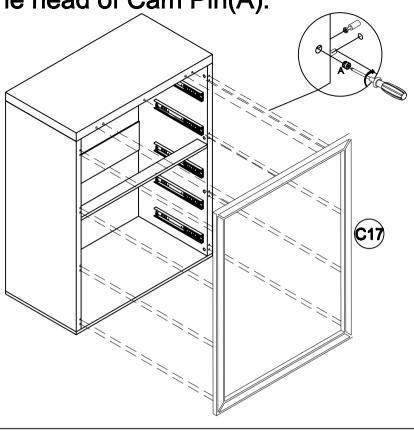


# STEP 8: Attach Cam Pin(A) to Panel(C10). Attach Panel(C11&C12&C14) to Panel(C10). And turn Cam lock(A) to lock into the head of Cam Pin(A).

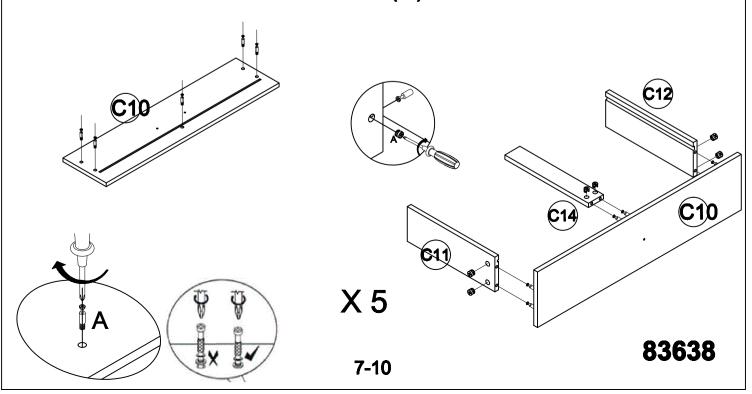

STEP 9: Insert Panel(C16) to groove. Attach Panel(C13) to Panel(C11&C12) with Screw(K).

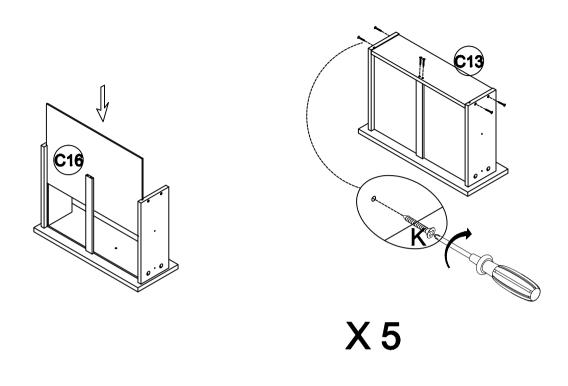


STEP 10: Attach Runner(H2) to Panel(C11&C12) with Screw(C). Attach Runner(N) to Panel(C10) with Bolt(E).

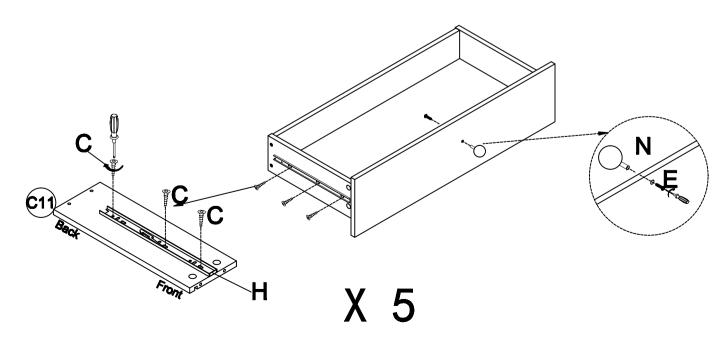


83638

# STEP 11: Insert Drawers into body.

Please slot in the drawer with TIPPING WARNING STICKER inside is slotted to top layer.

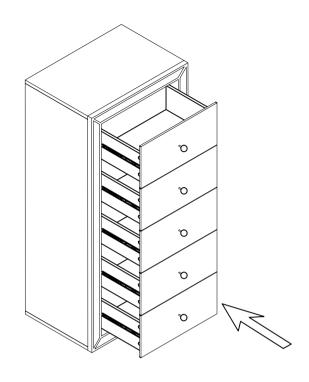

## **Assembly is complete**

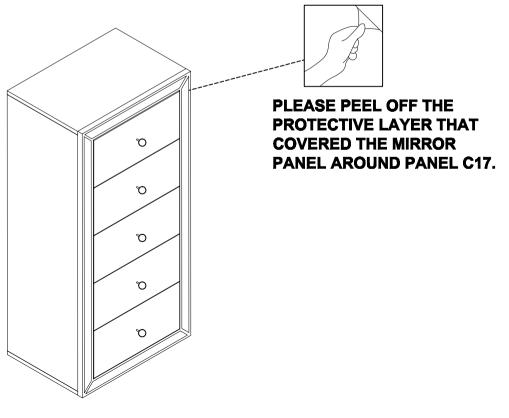

83638


Note -Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.




#### SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

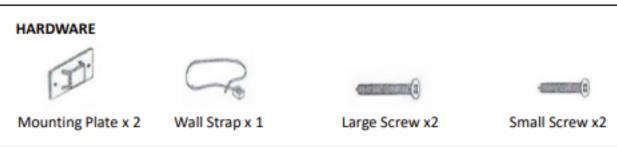

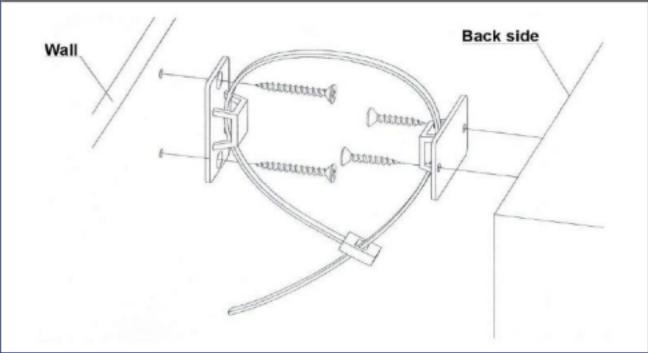

## **General Product Care**

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.