
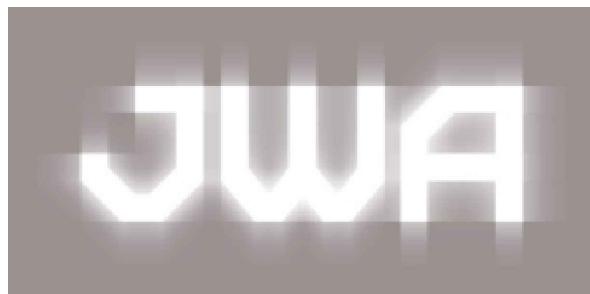


ASSEMBLY INSTRUCTION

BRADY

REVANNA 4 DOOR BUFFET

Item Code-86584

 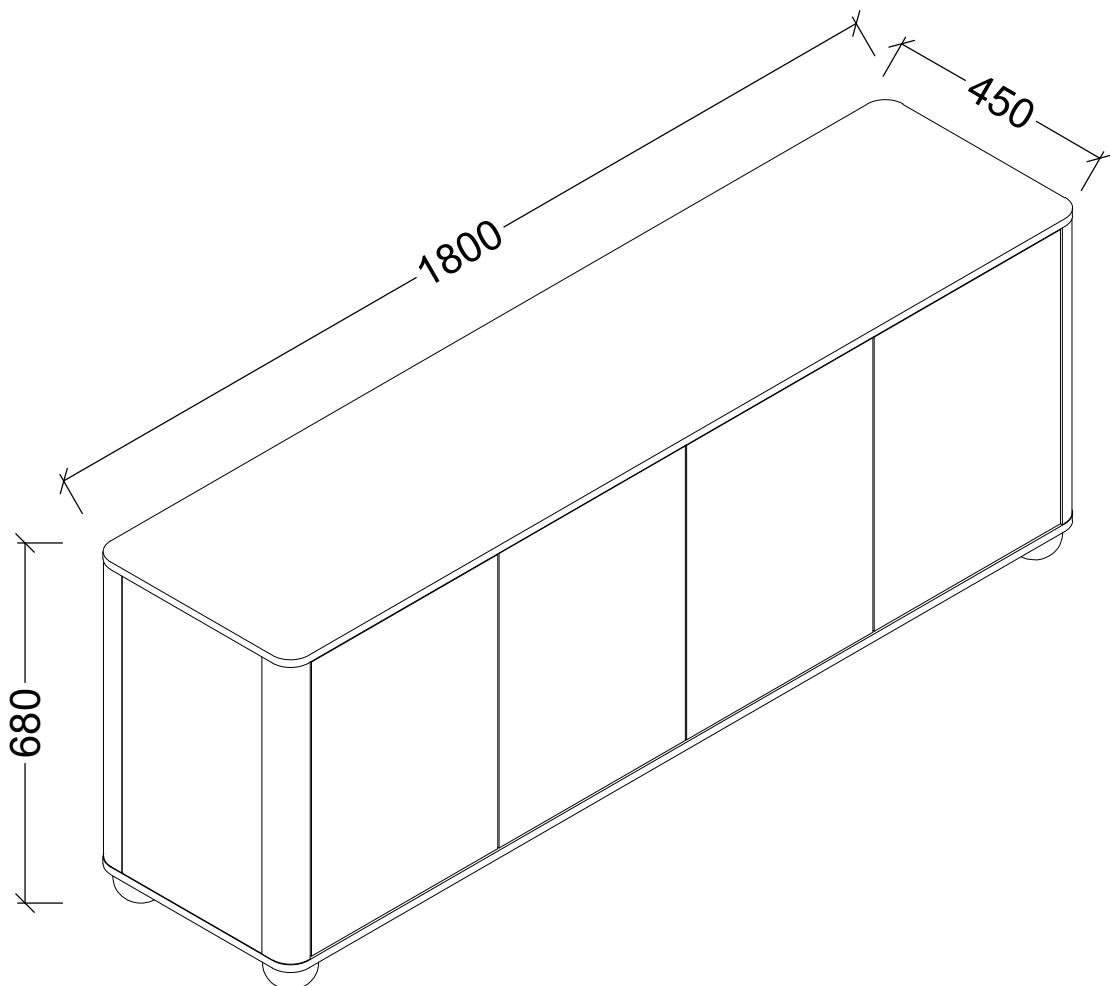



Imported by JWA Furniture Pty Ltd, Brisbane, QLD, Australia
For any assistance with assembly or for missing parts, please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

		IF REQUIRED 
Allow 60 min	For 1 person	Low speed (Ø6mm)
ADDITIONAL TOOLS REQUIRED   		

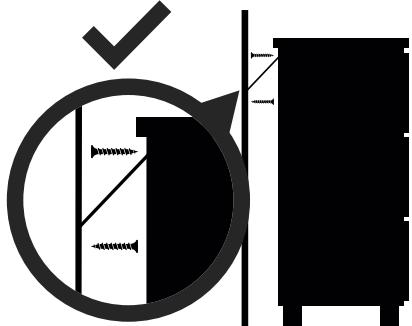
WARNING		
		Children have died from furniture tipover. <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture</p>  <p>This is a permanent label. Do not remove!</p>

TO USE CAM LOCK FASTENERS

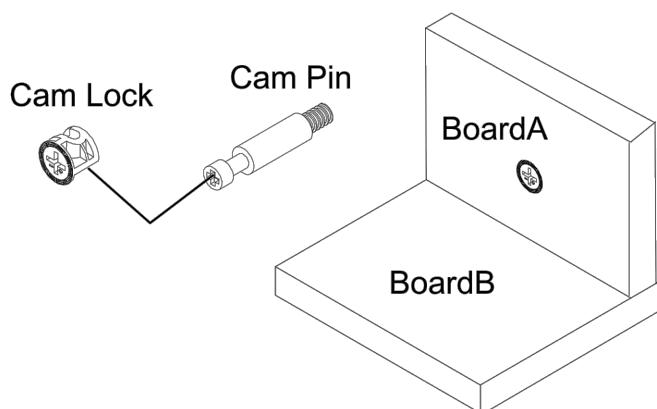


To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.



Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

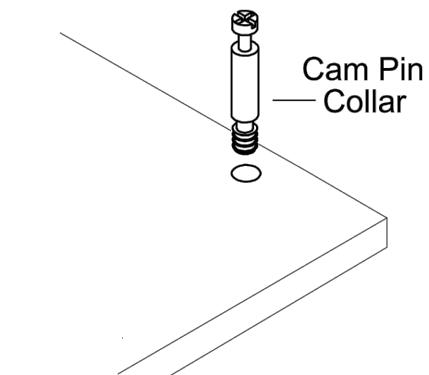


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle. Cam pin is to be inserted up to collar Too far and it wont catch the Cam Lock (Do Not Overtighten) Not enough and the resulting product will not be stable.

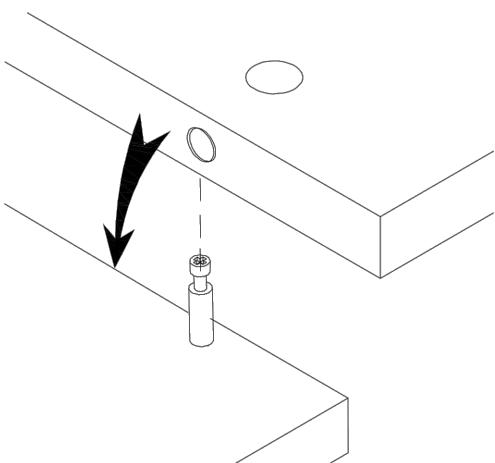


Now fit the hole in the edge of the joining board over the Cam Pin.

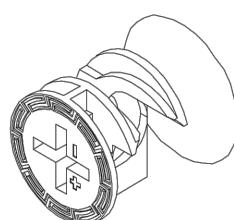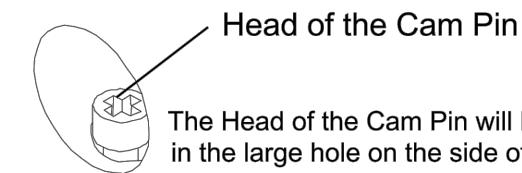


Notice the Cam Lock has a "C" Shaped Back. An arrow or +/- signs on the front indicate the open section on the back of the Cam Pin.

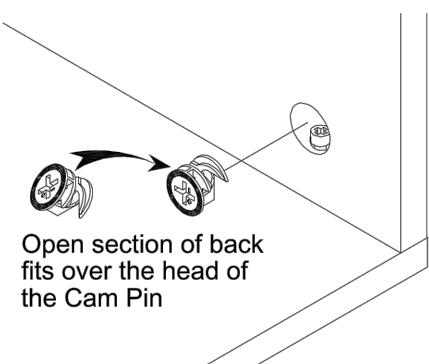

Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

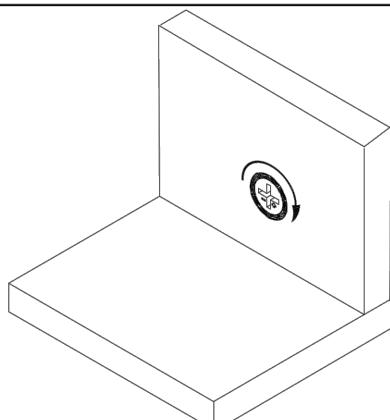













Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

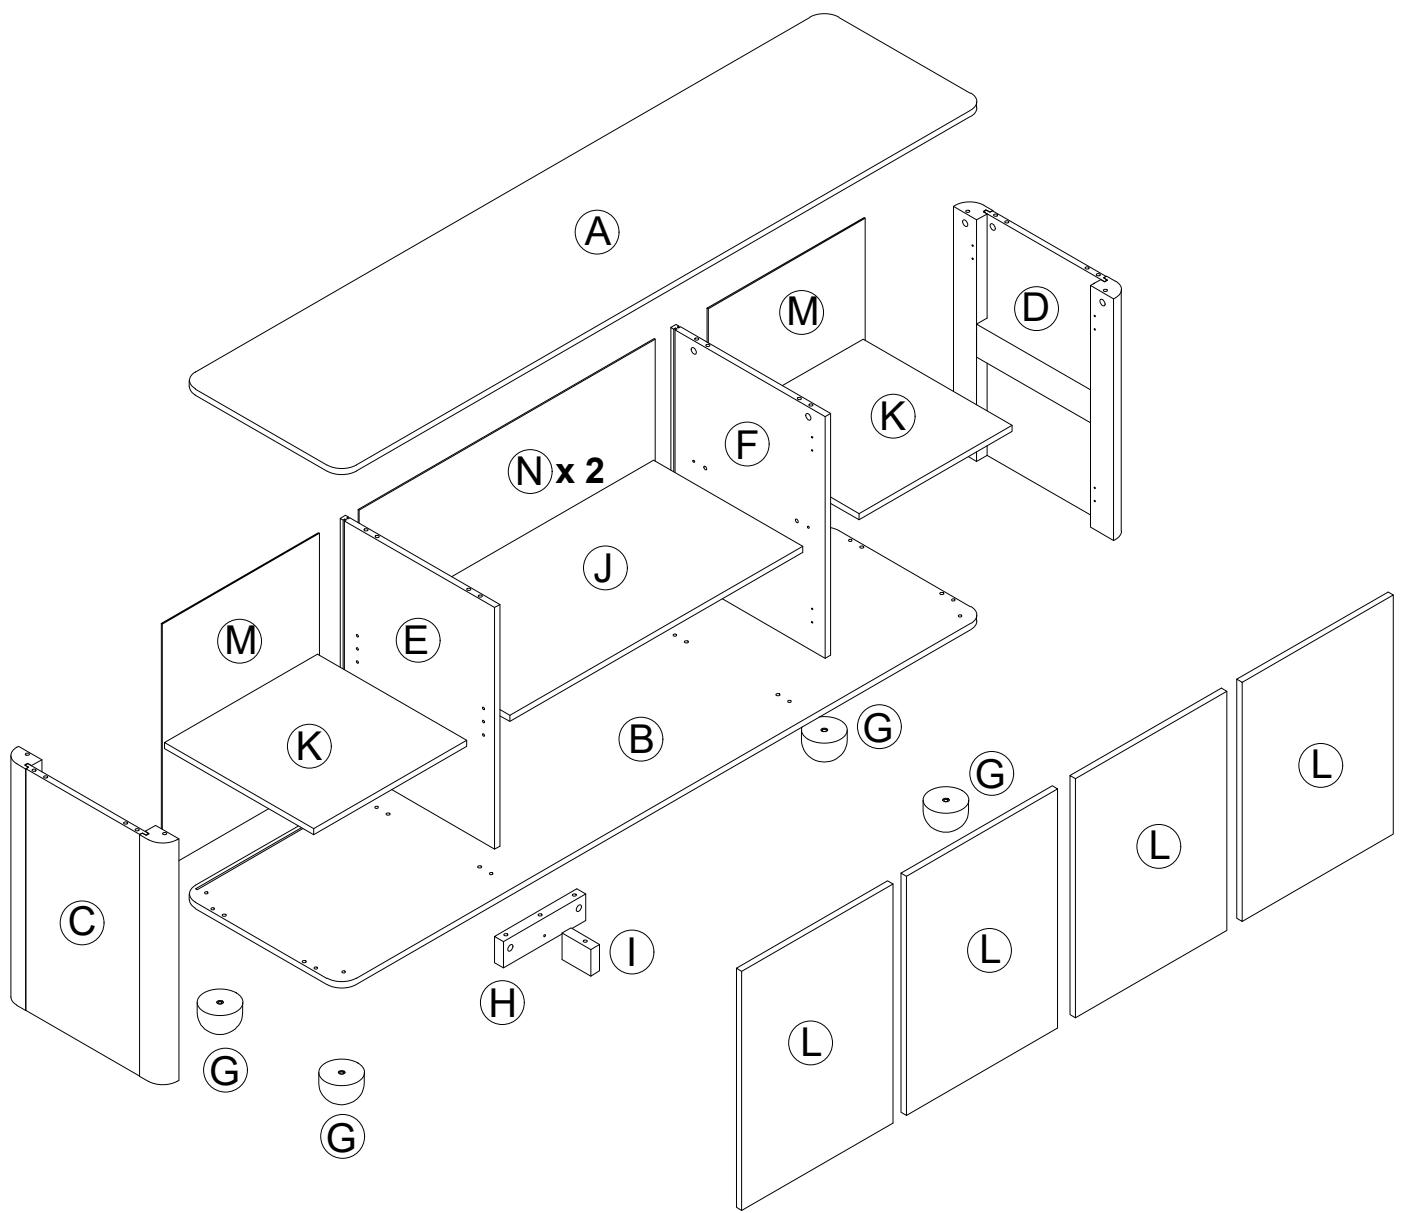


Item Code-86584


Panel(Mark)	Packing carton	Quantily	Picture	Dimension
A	(BOX 1)	1PC		1800 x 450 x 15mm
B	(BOX 1)	1PC		1800 x 450 x 15mm
C	(BOX 2)	1PC		585 x 448 x 46mm
D	(BOX 2)	1PC		585 x 448 x 46mm
E	(BOX 3)	1PC		585 x 432 x 15mm
F	(BOX 3)	1PC		585 x 432 x 15mm
G	(BOX 2)	4PCS		Ø80 x 65mm
H	(BOX 2)	1PC		230 x 64 x 25mm
I	(BOX 2)	1PC		80 x 64 x 25mm
J	(BOX 2)	1PC		819 x 426 x 15mm
K	(BOX 3)	2PCS		427 x 414 x 15mm
L	(BOX 3)	4PCS		423 x 579 x 15mm
M	(BOX 1)	2PCS		438 x 596 x 3mm
N	(BOX 1)	2PCS		828 x 295 x 3mm

        Please note - All Hardwares in box 2 .

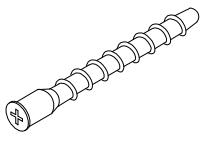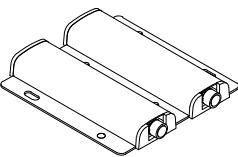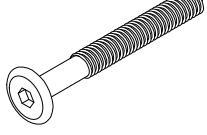
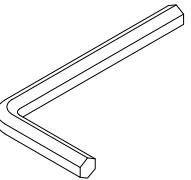
1	20 PCS	2	20 PCS	3	29 PCS	4	12 PCS
	$\varnothing 15 \times 12\text{mm}$		$\varnothing 6 \times 34\text{mm}$		$\varnothing 8 \times 30\text{mm}$		$\varnothing 6.3 \times 50\text{mm}$
5	8 PCS	6	1PC	7	2 PCS	8	14 PCS
							$\varnothing 3.5 \times 12\text{mm}$
9	2 PCS	10	4 PCS	11	2 PCS	12	2 PCS
	$\varnothing 4 \times 33\text{mm}$						$\varnothing 9 \times \varnothing 6 \times 25\text{mm}$
13	4 PCS	14	4 PCS	15	32 PCS	16	20 PCS
					$\varnothing 4 \times 14\text{mm}$		
17	22 PCS	18	4 PCS	19	1 PC		
	$\varnothing 3.5 \times 14\text{mm}$		$\varnothing 6 \times 50\text{mm}$				

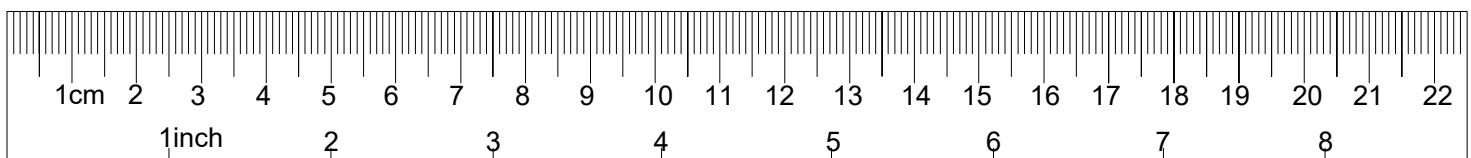


1

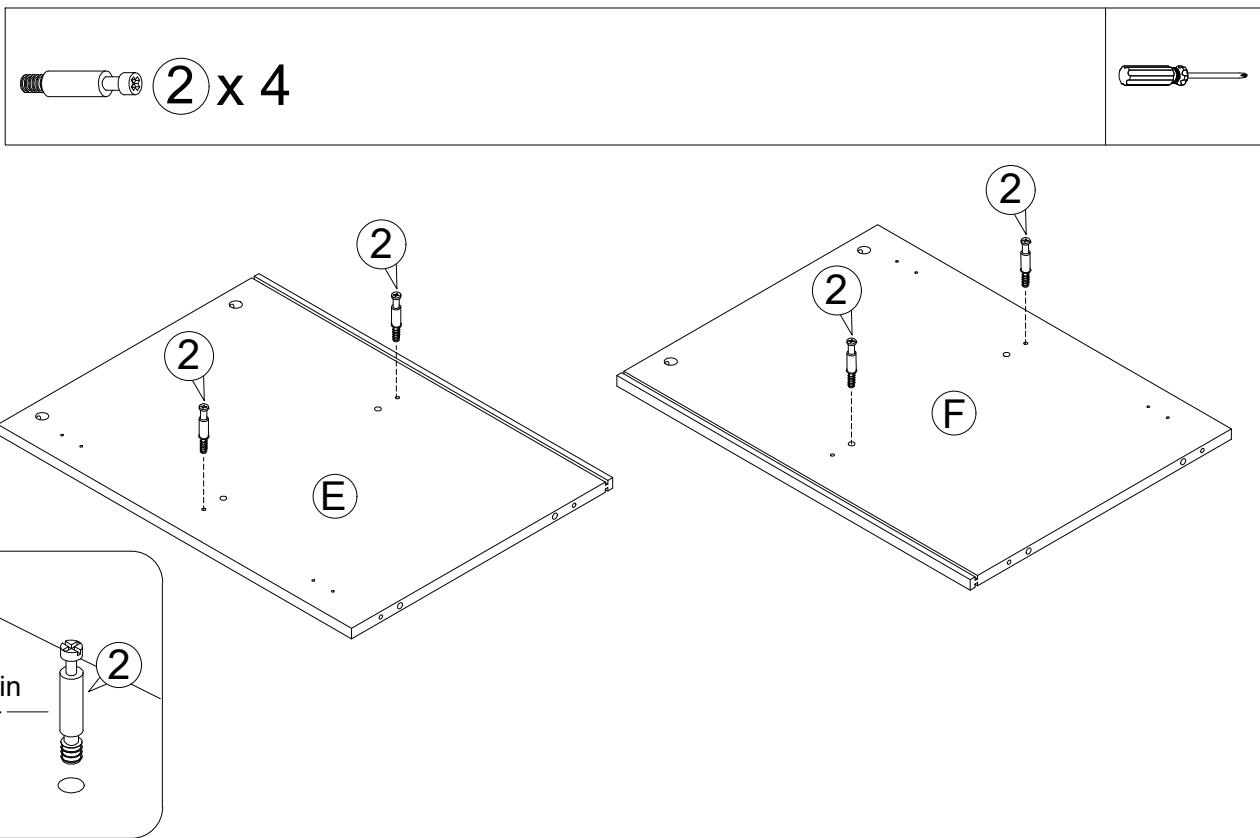


2

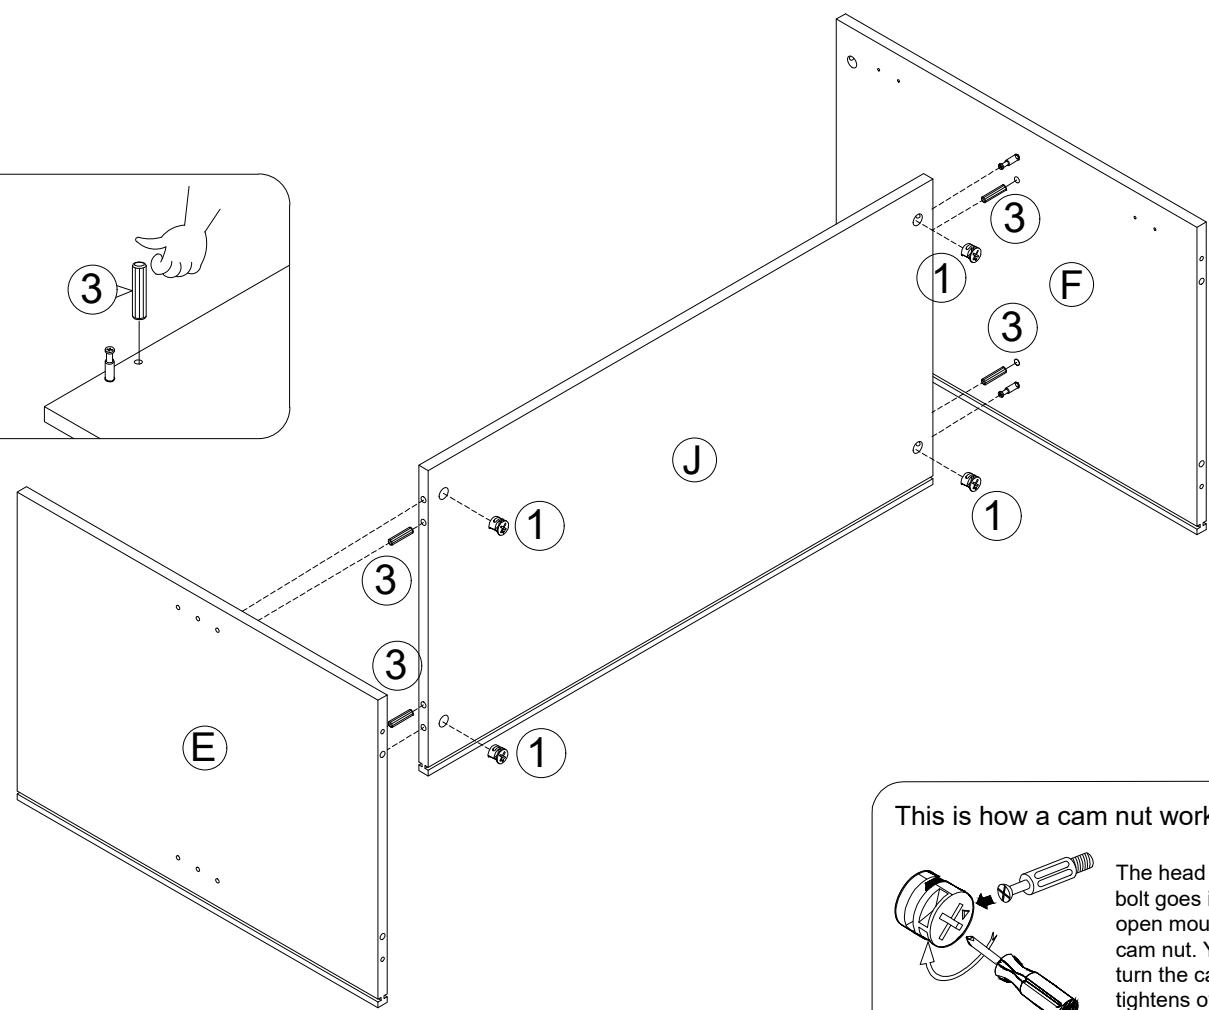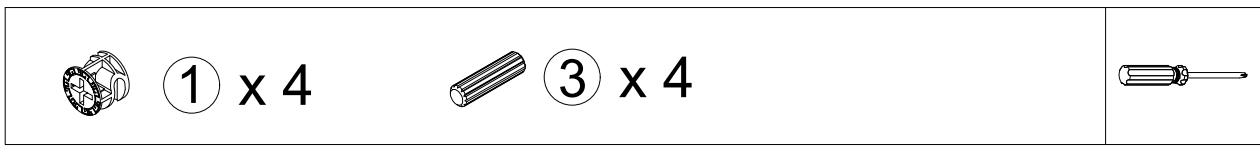


This is how a cam nut works.....

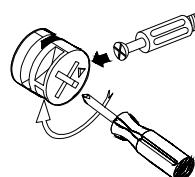

3

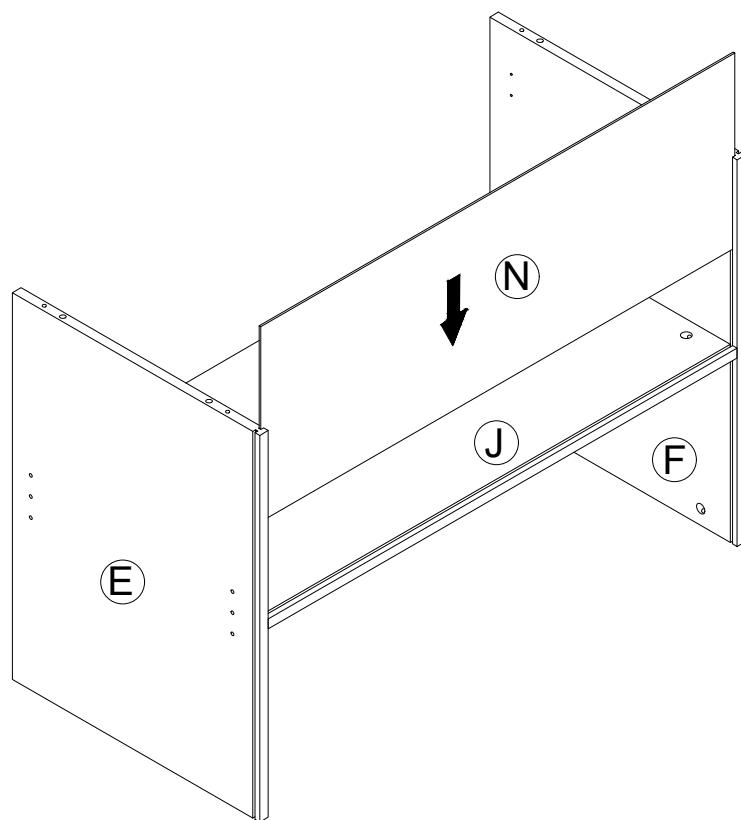

4

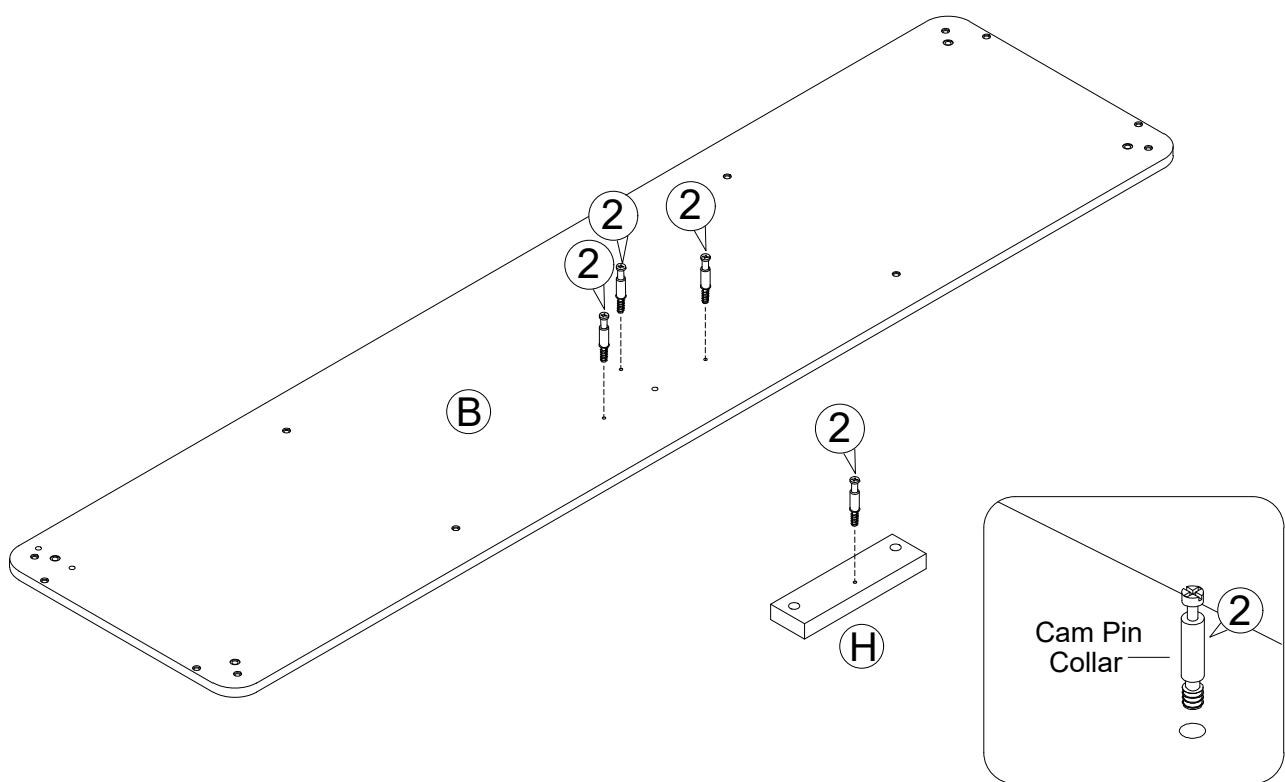



5



1 x 4




3 x 1

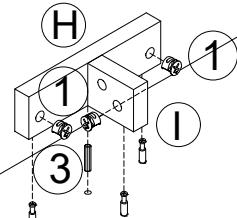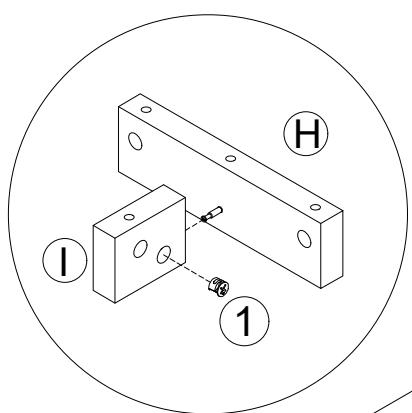

B

This is how a cam nut works.....

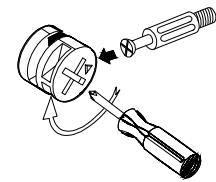

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.


 
6






4 x 12






3 x 8

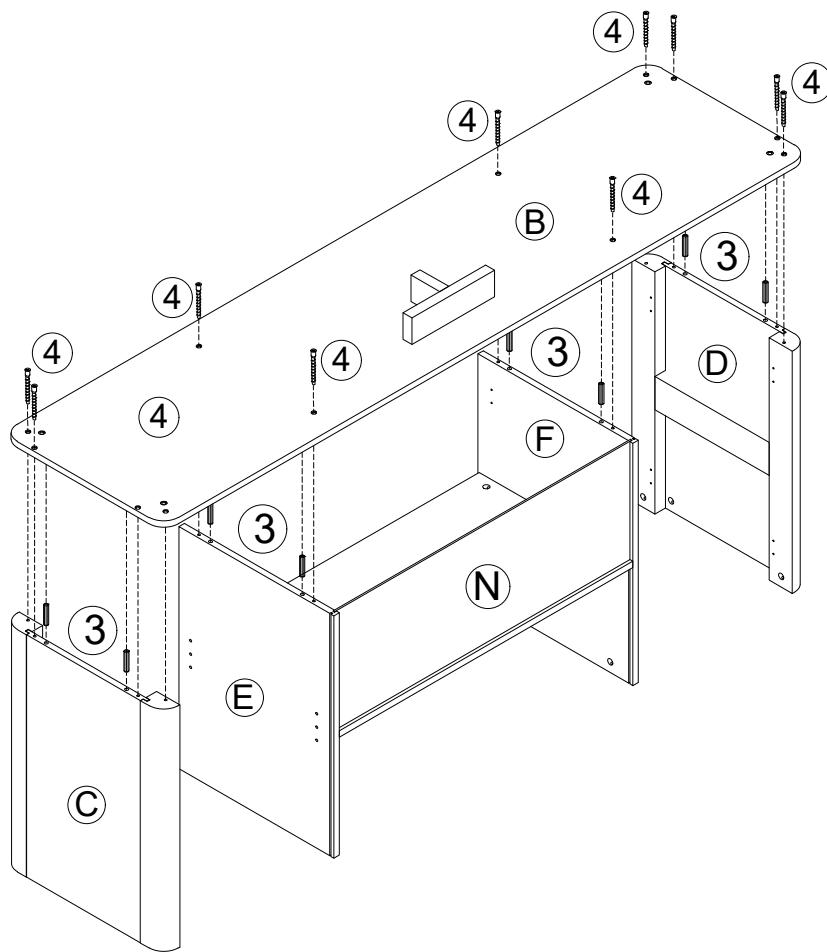

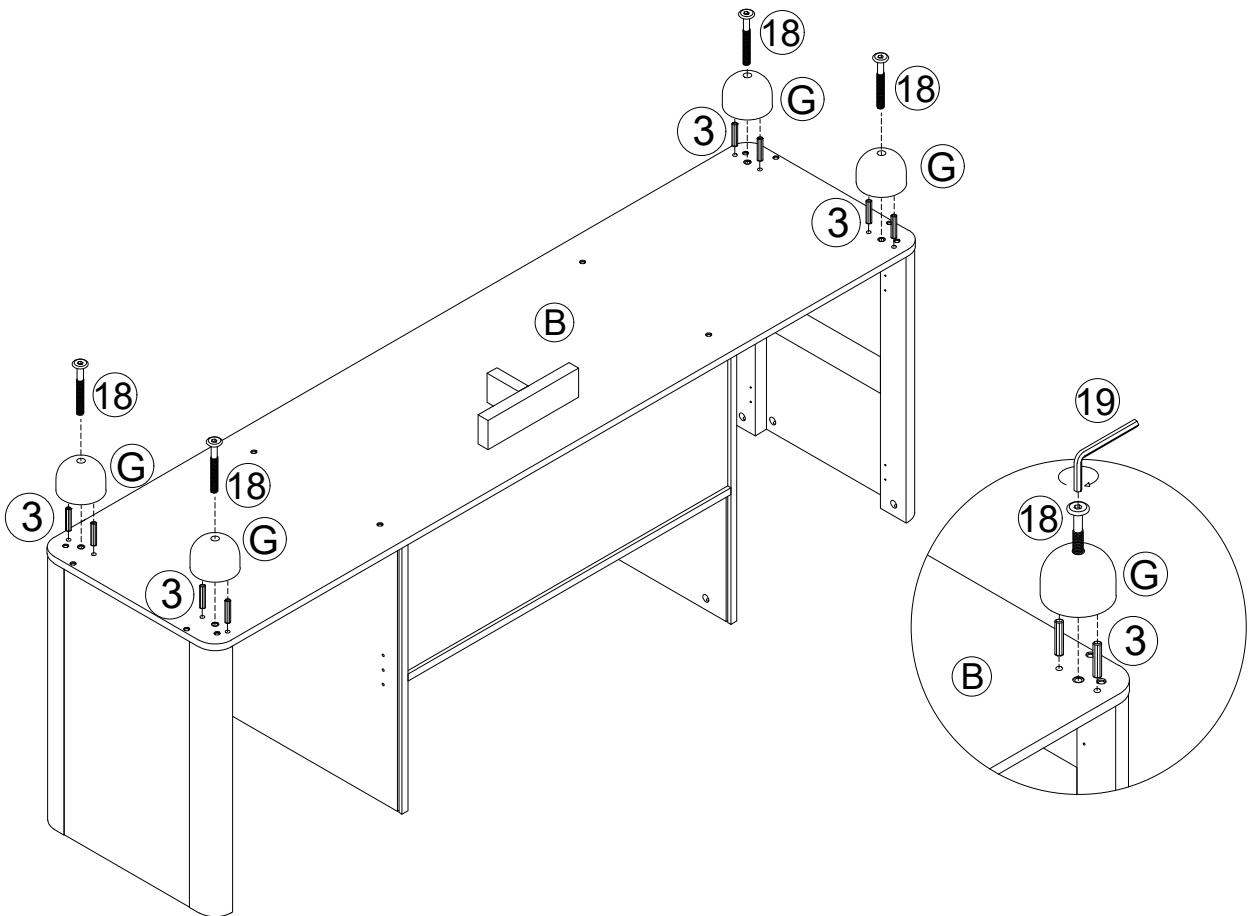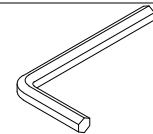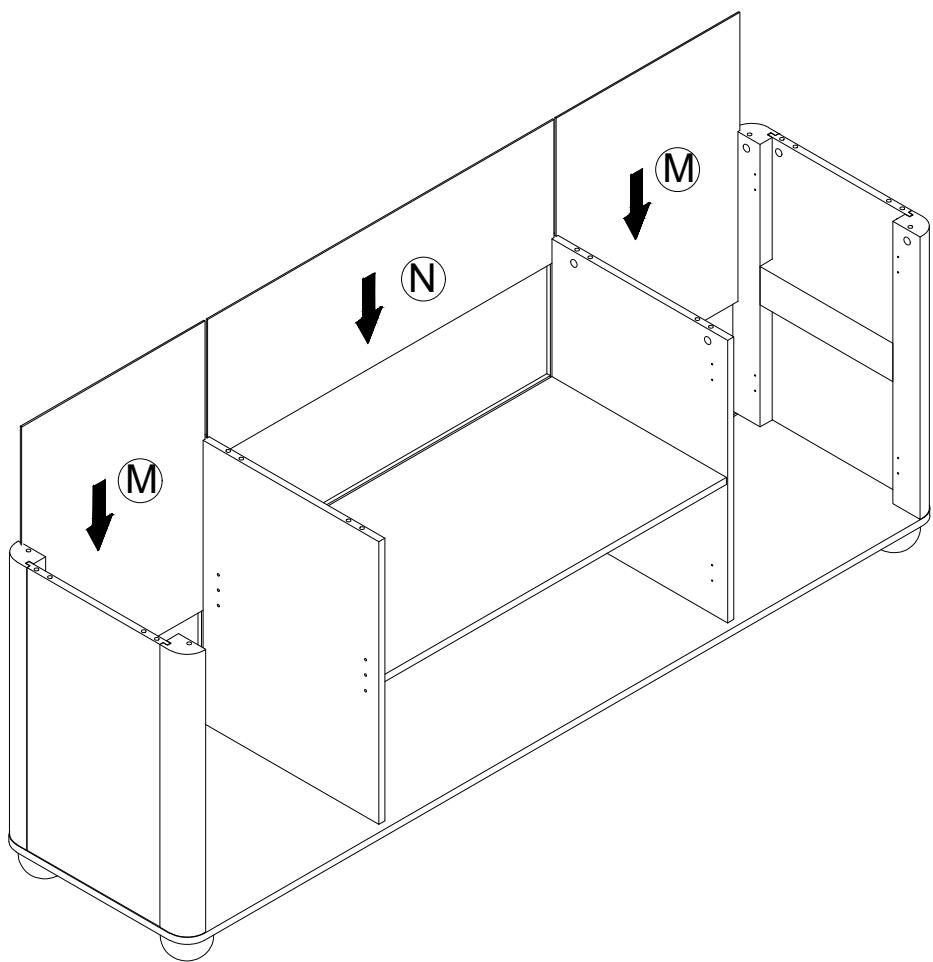7**18 x 4****3 x 8****8**


9

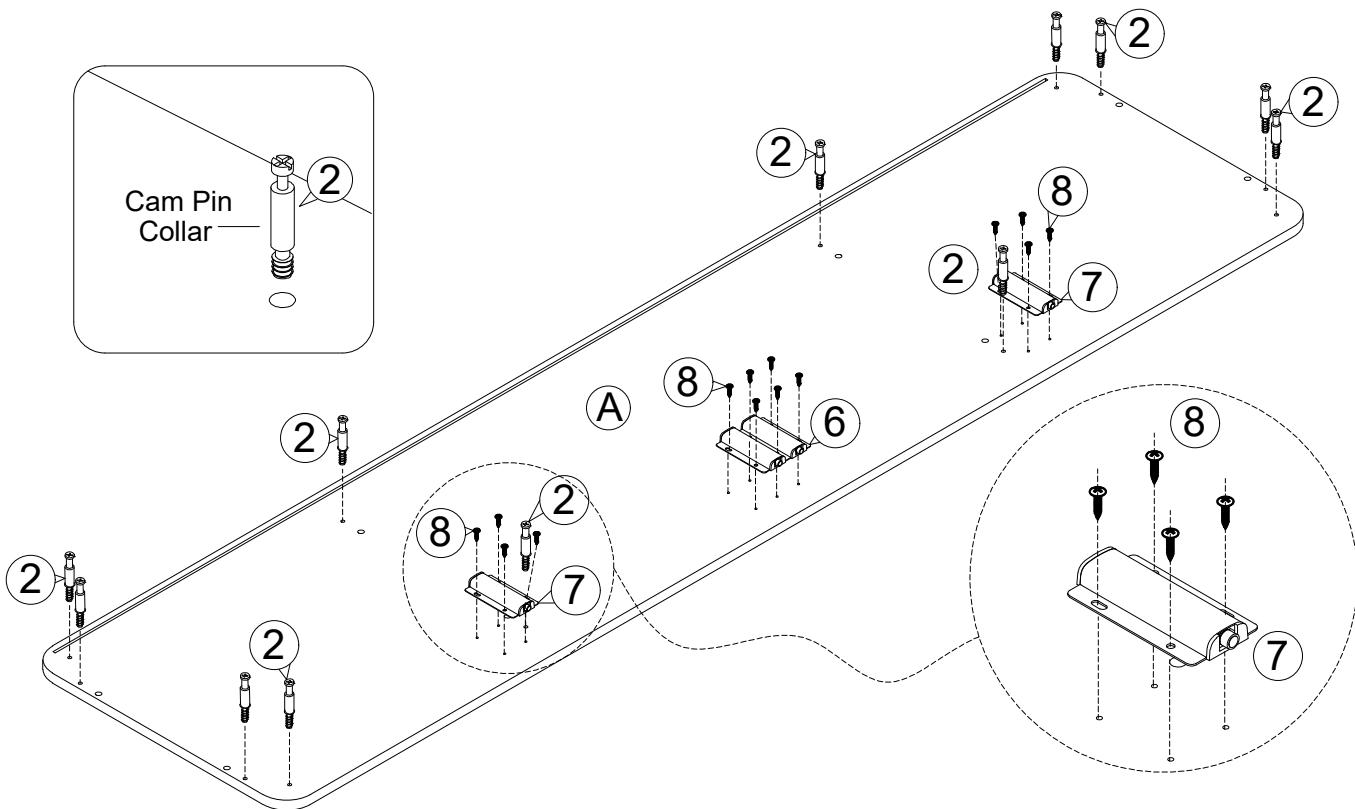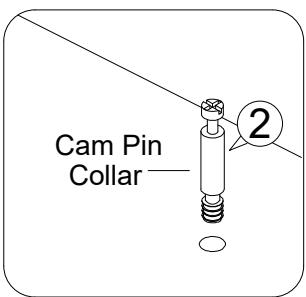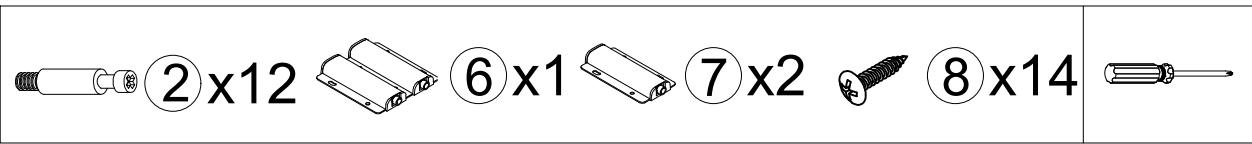

10




1 x 12

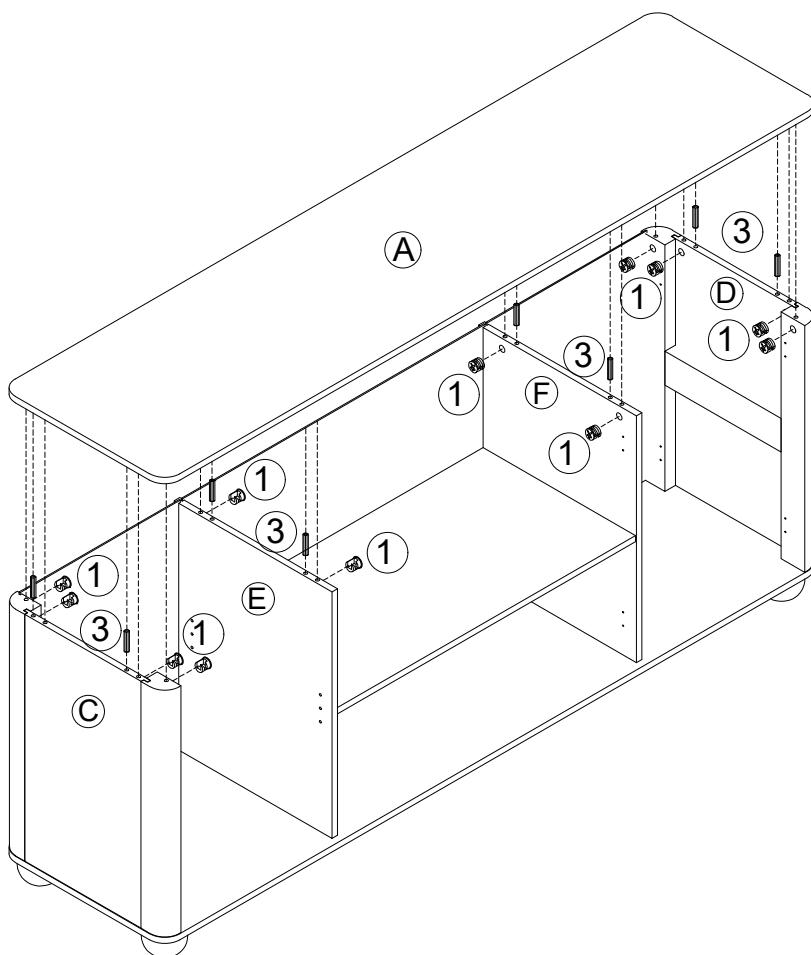

11



5 x 8

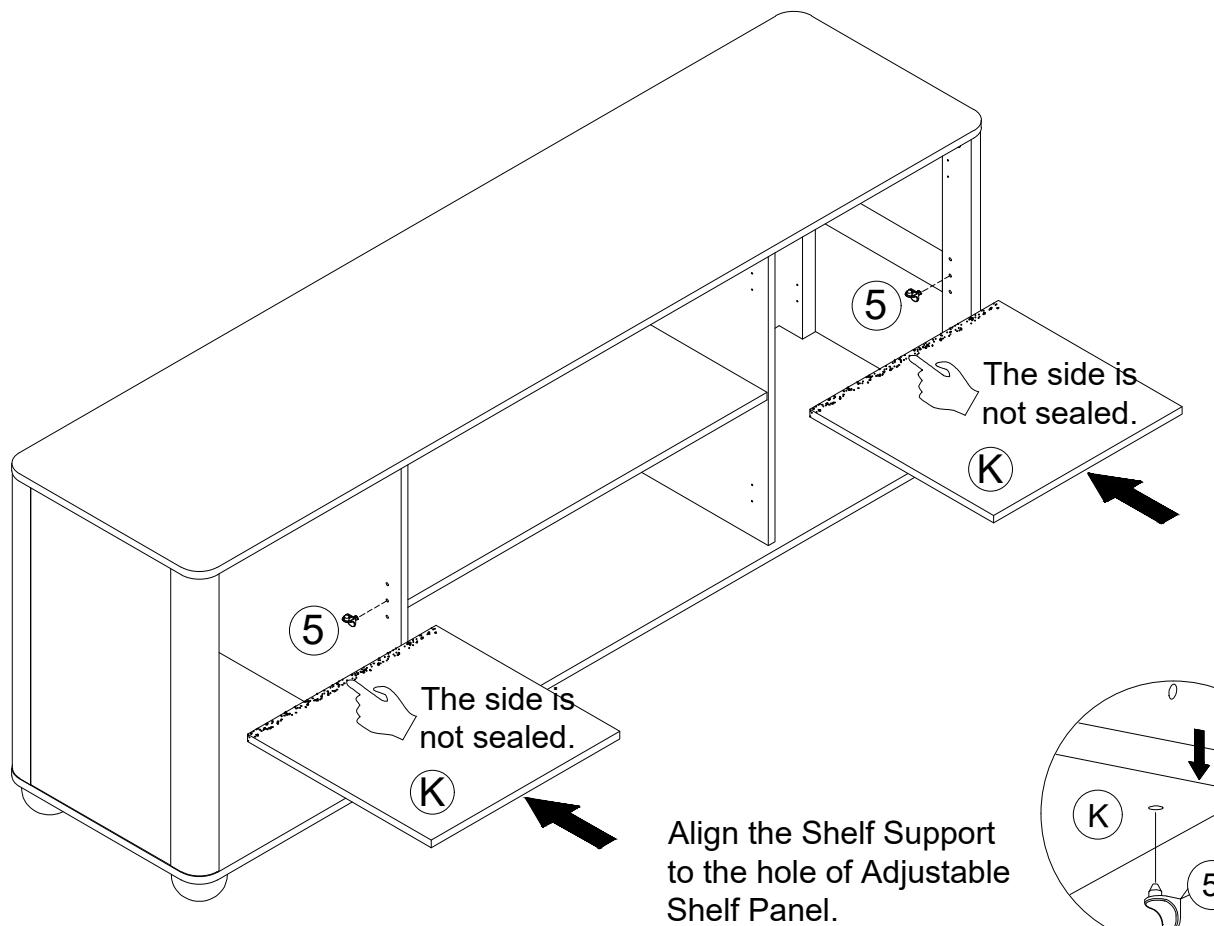

Align the Shelf Support
to the hole of Adjustable
Shelf Panel.


 
12



13 x 4




15 x 8

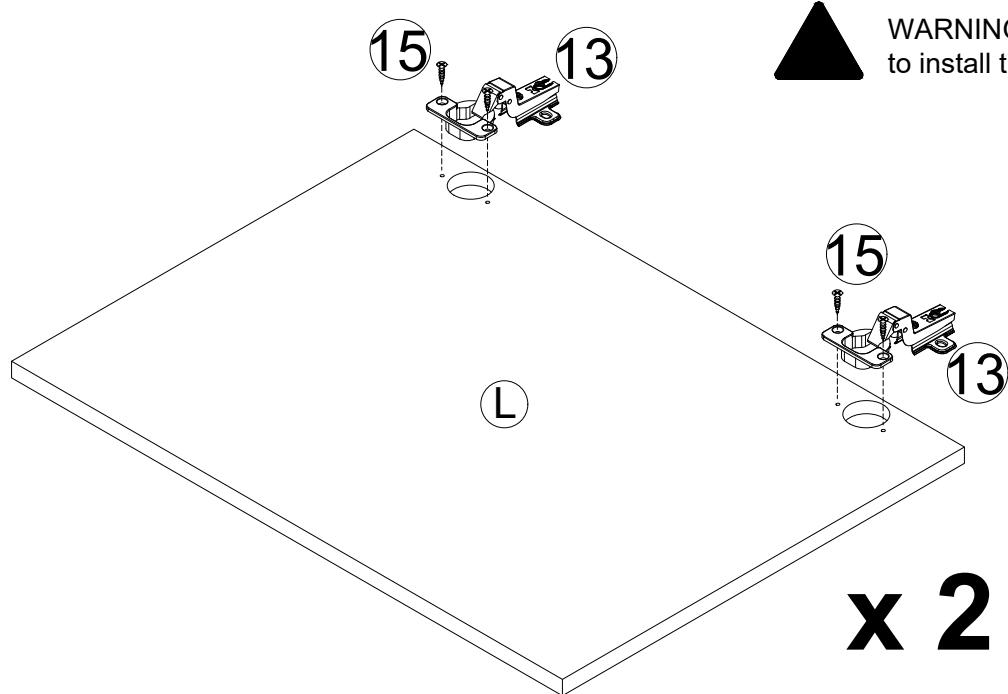

WARNINGS: only need
to install the hinge "13"

13

15 x8

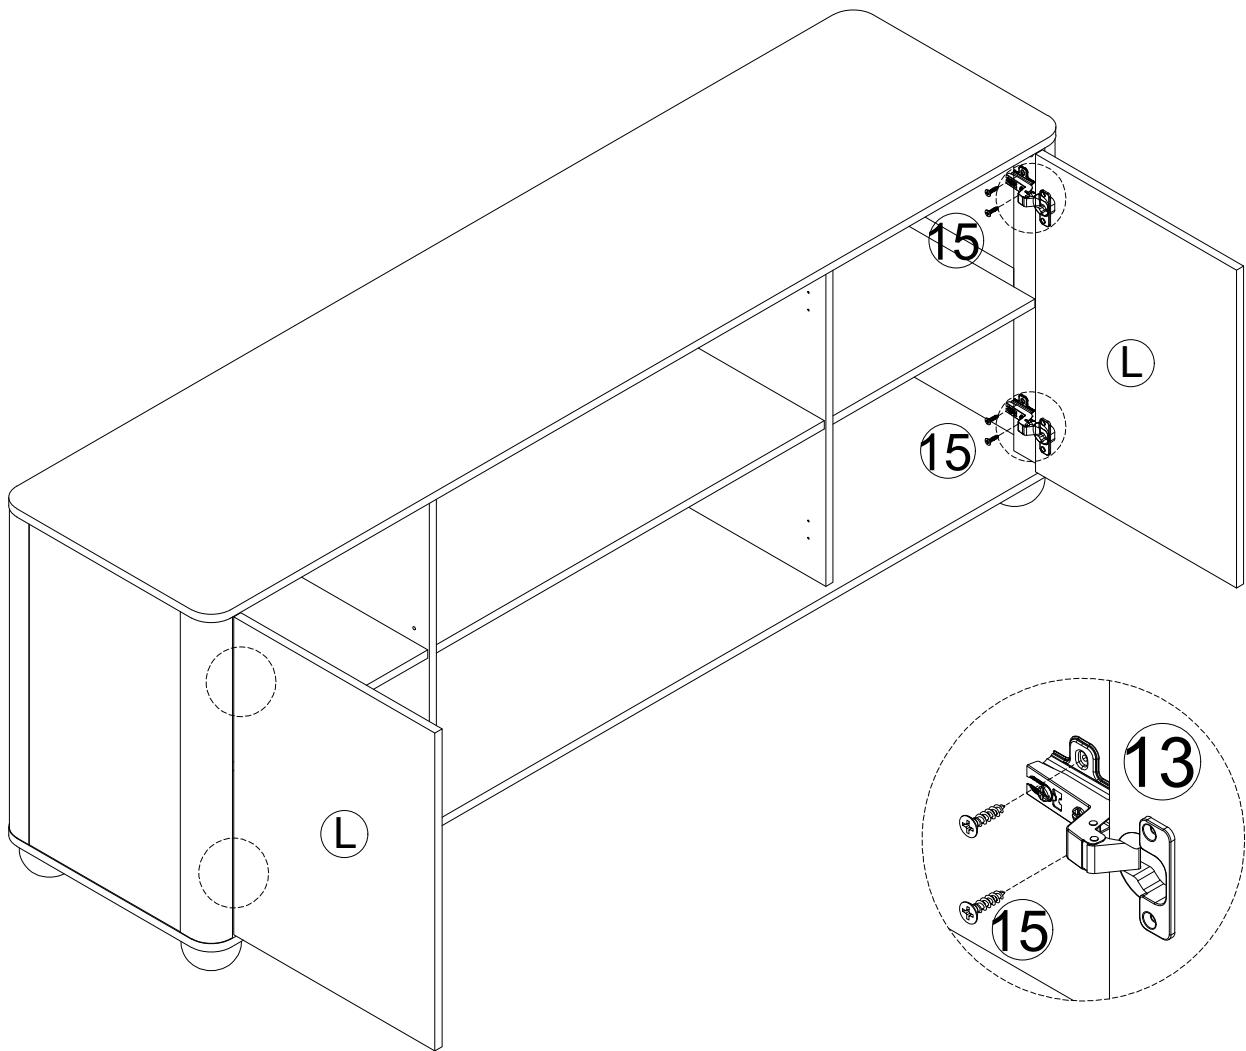


14

14 x 4

15 x 8





WARNINGS: only need
to install the hinge "14"

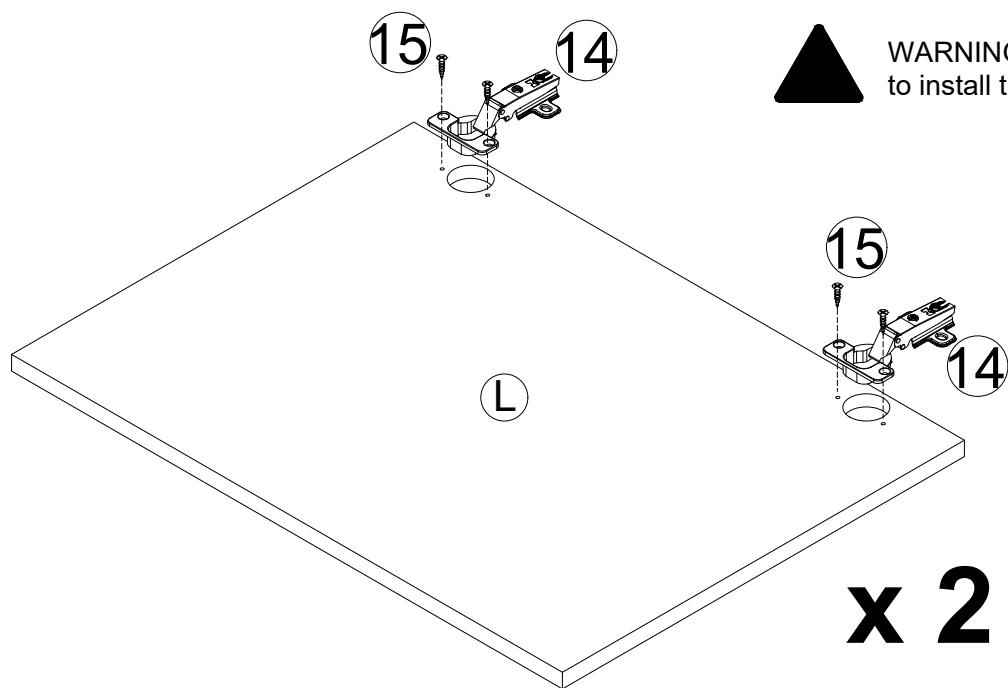

15

15 x 8

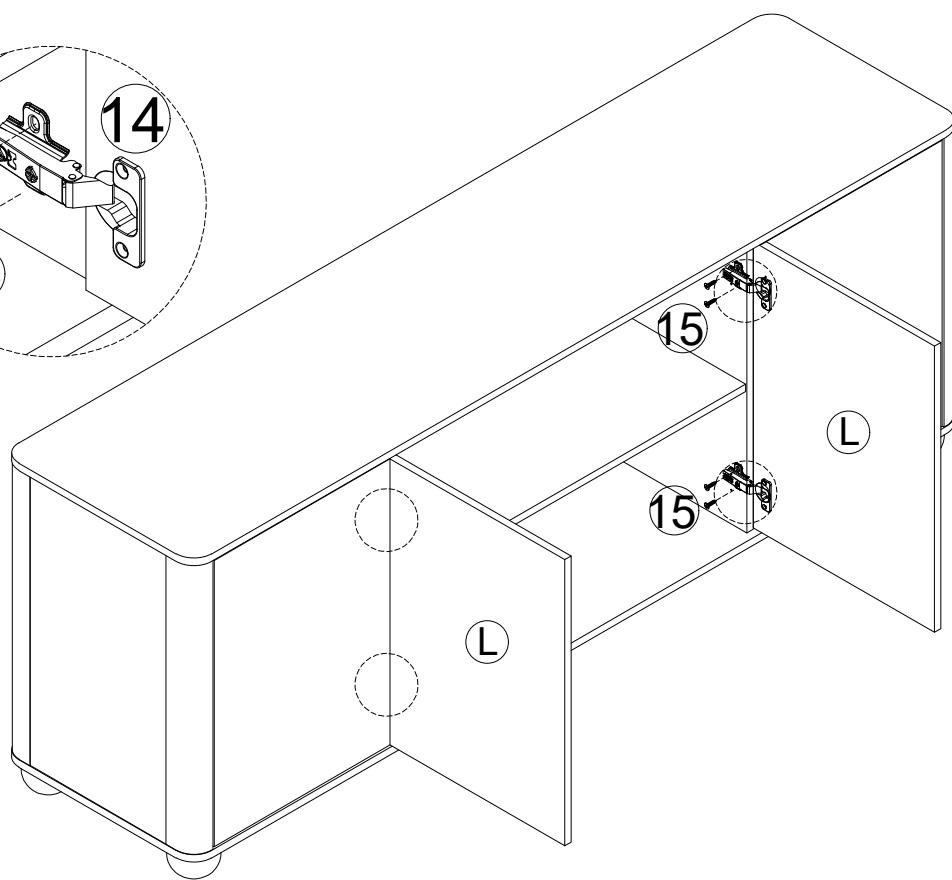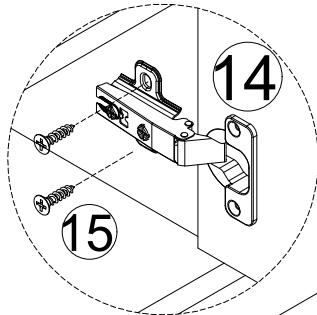



16



16 x 20





 17 x 20

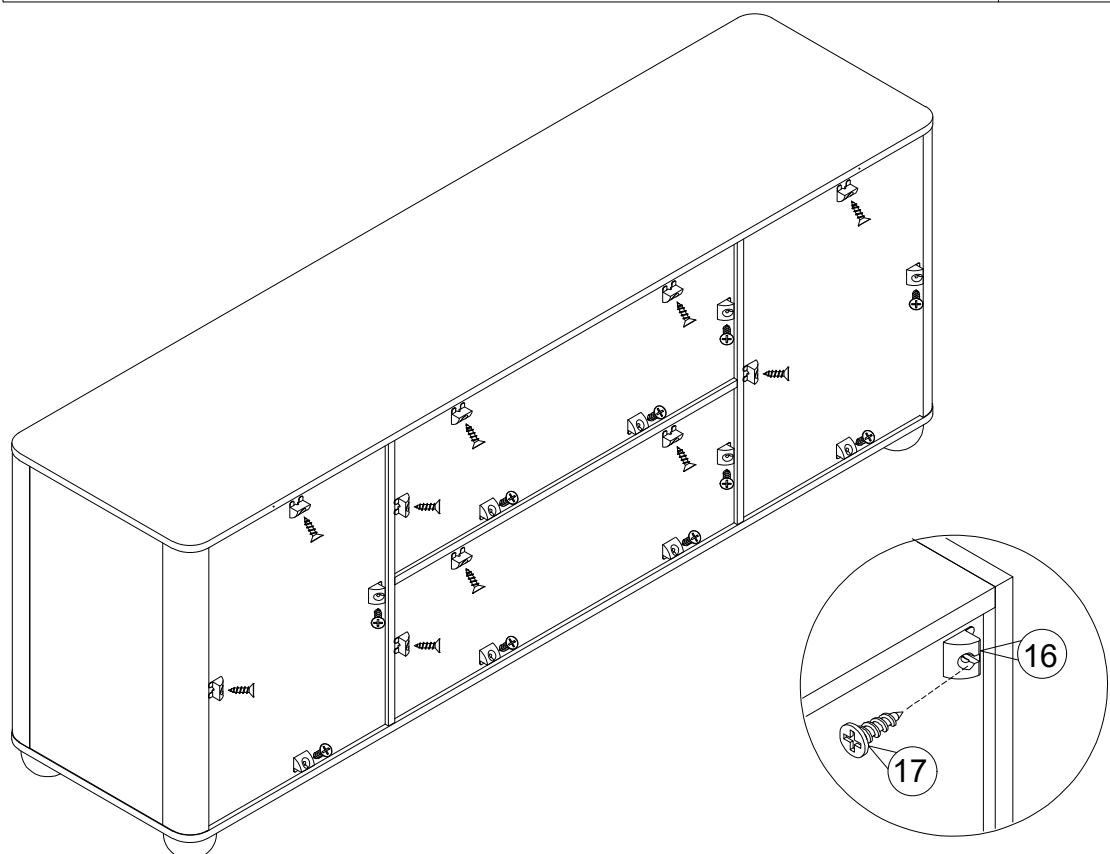


17

If there is misalignment after you install,
adjust the screw to the best condition

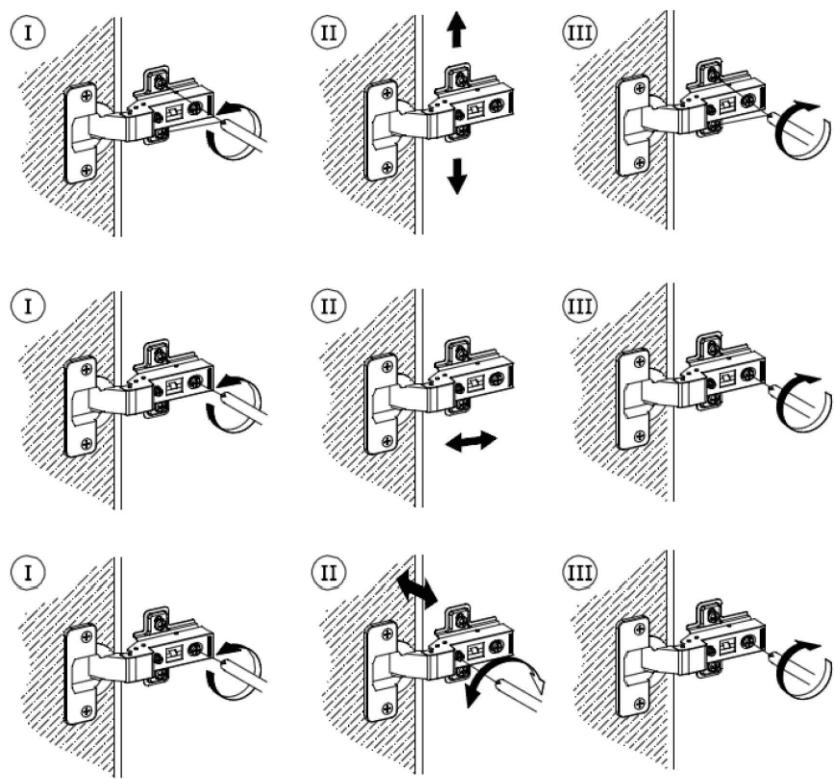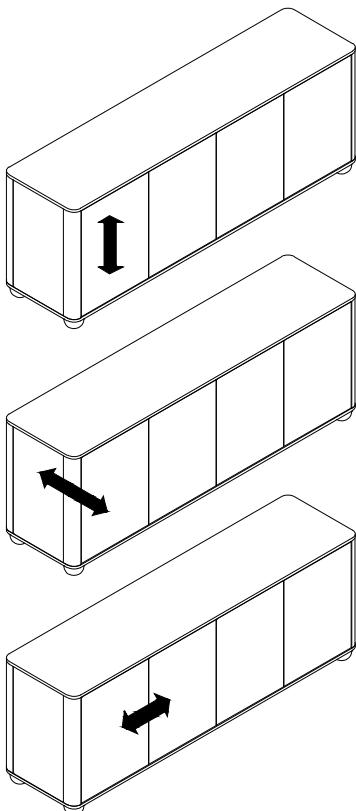

18

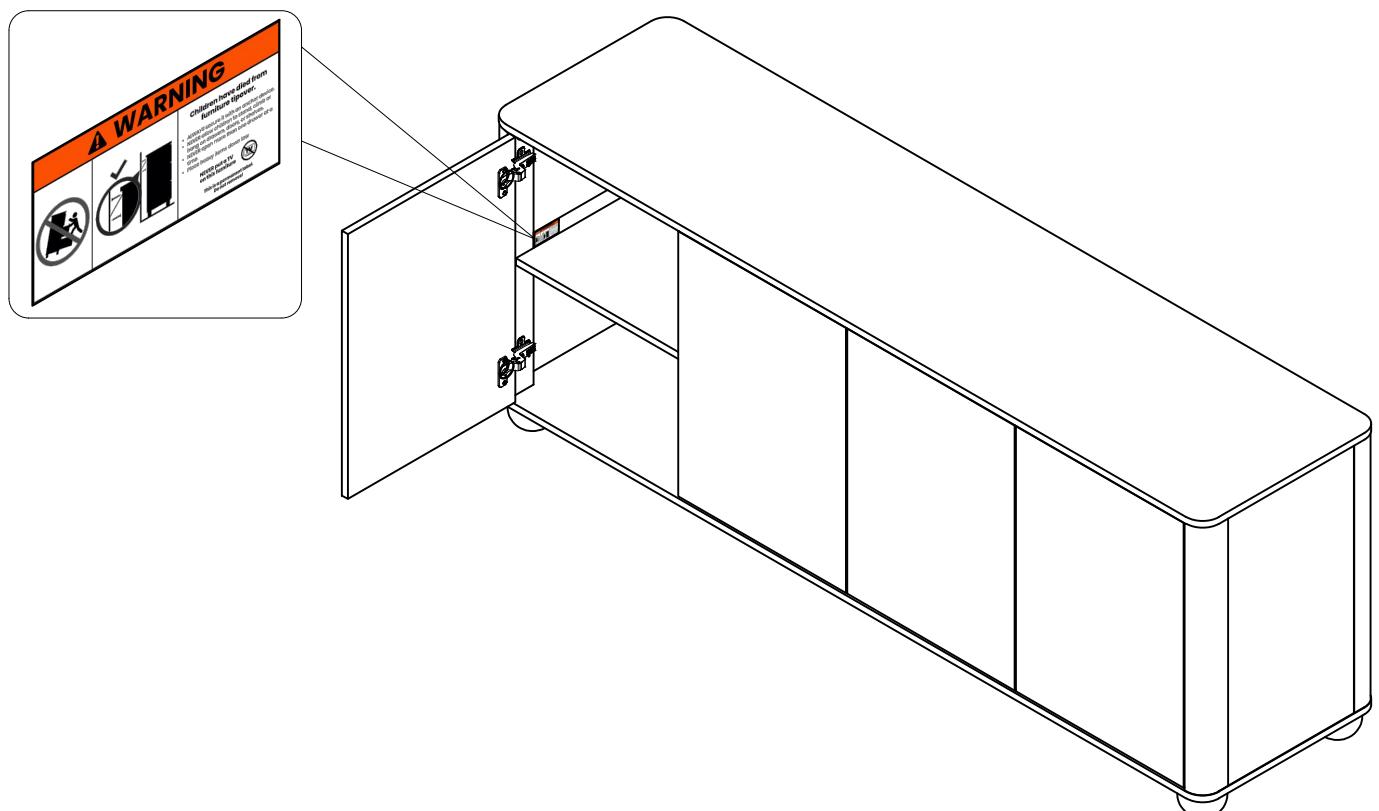


19



10 x 2



17 x 2

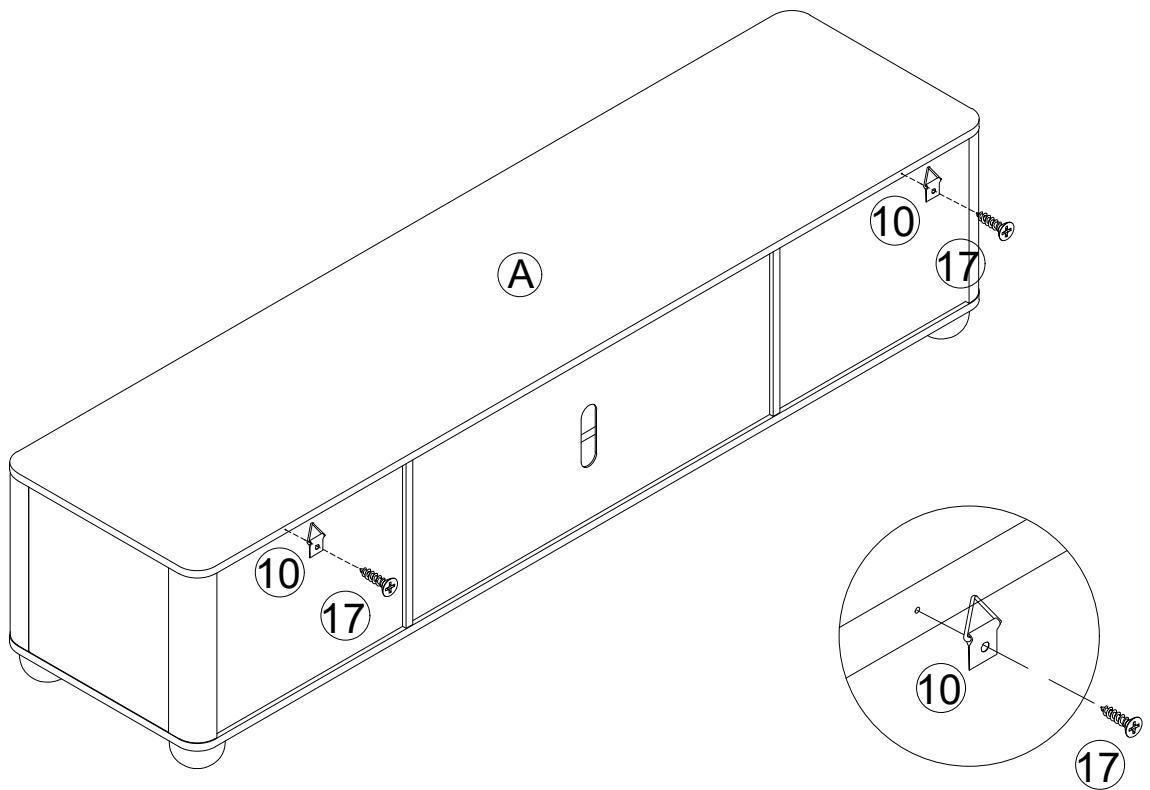


20




10 x 2



17 x 2

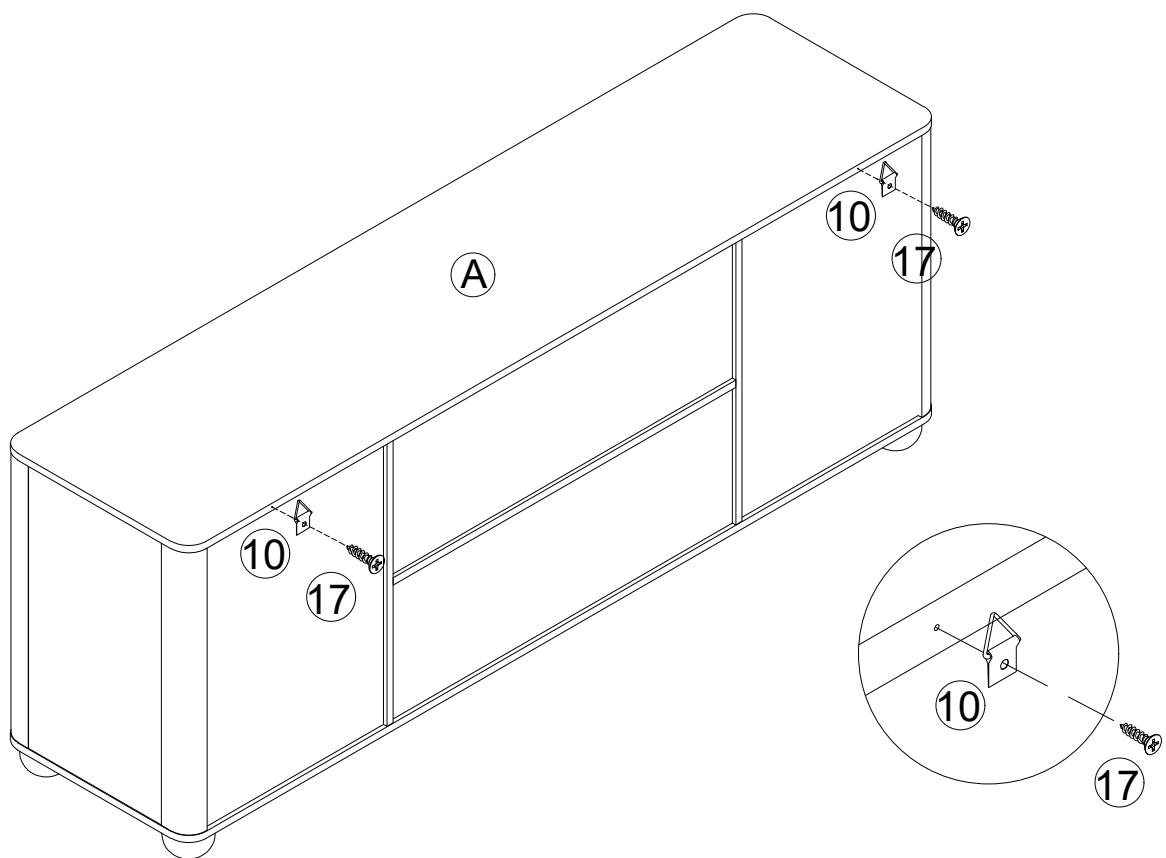


21

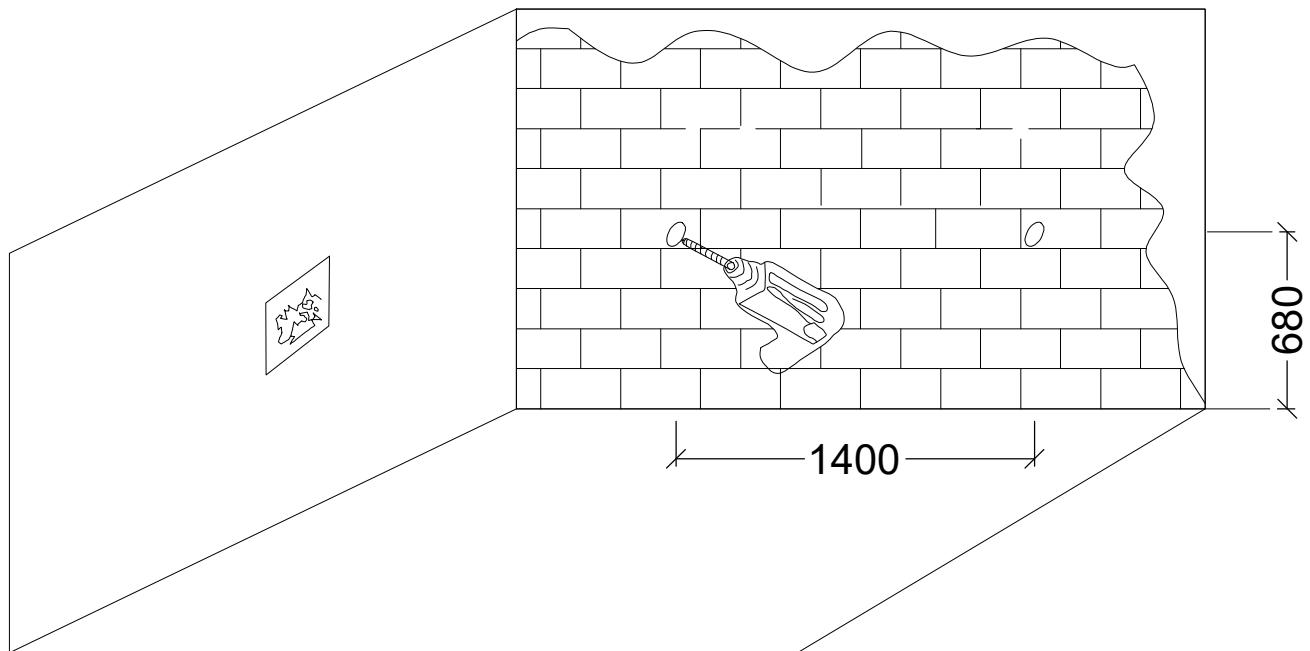

22

12 x 2

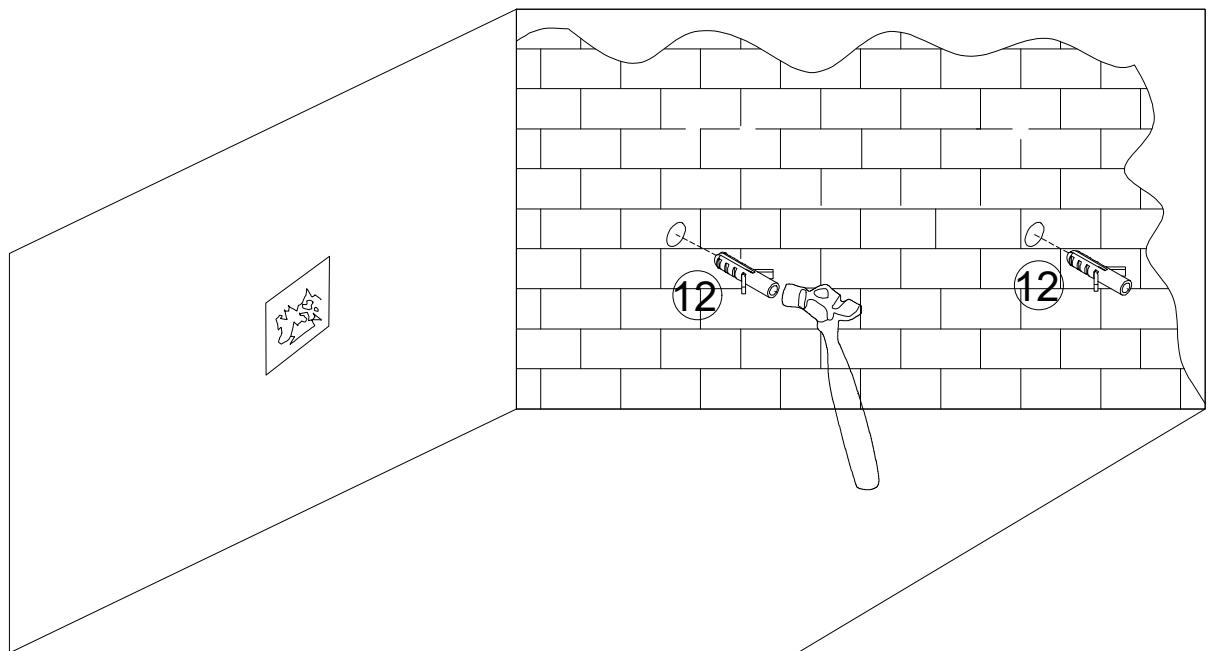



23



10 x 2



 
9 x 2

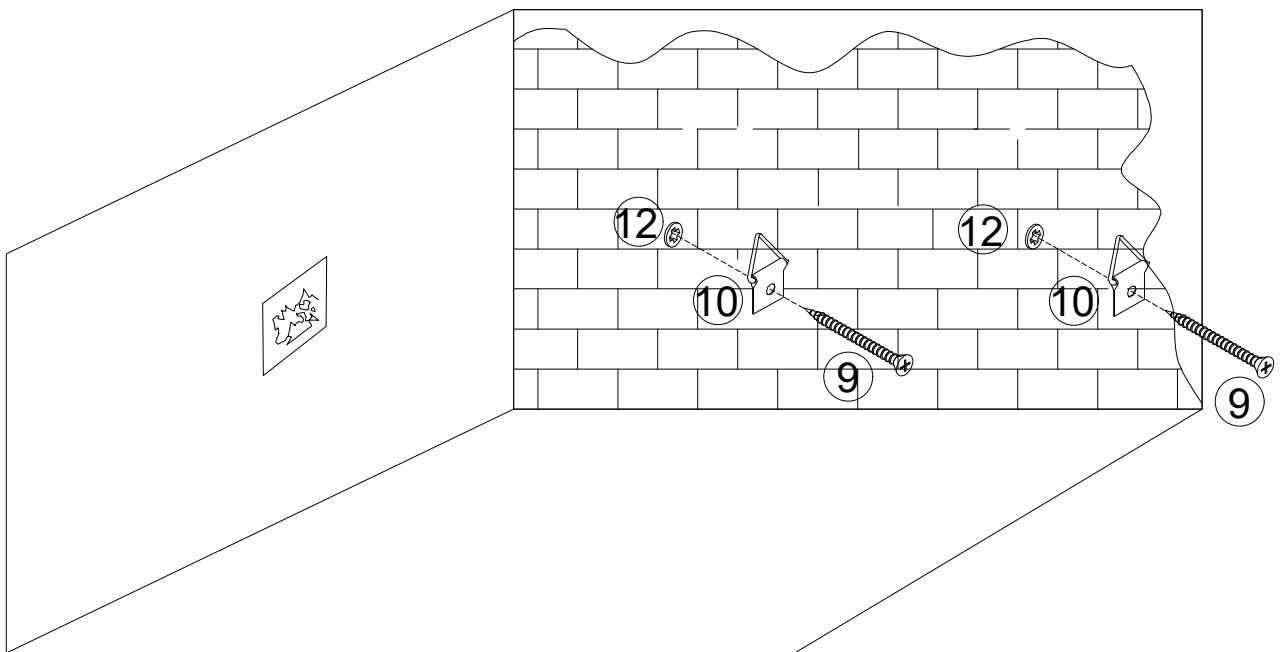

24



11 x 2

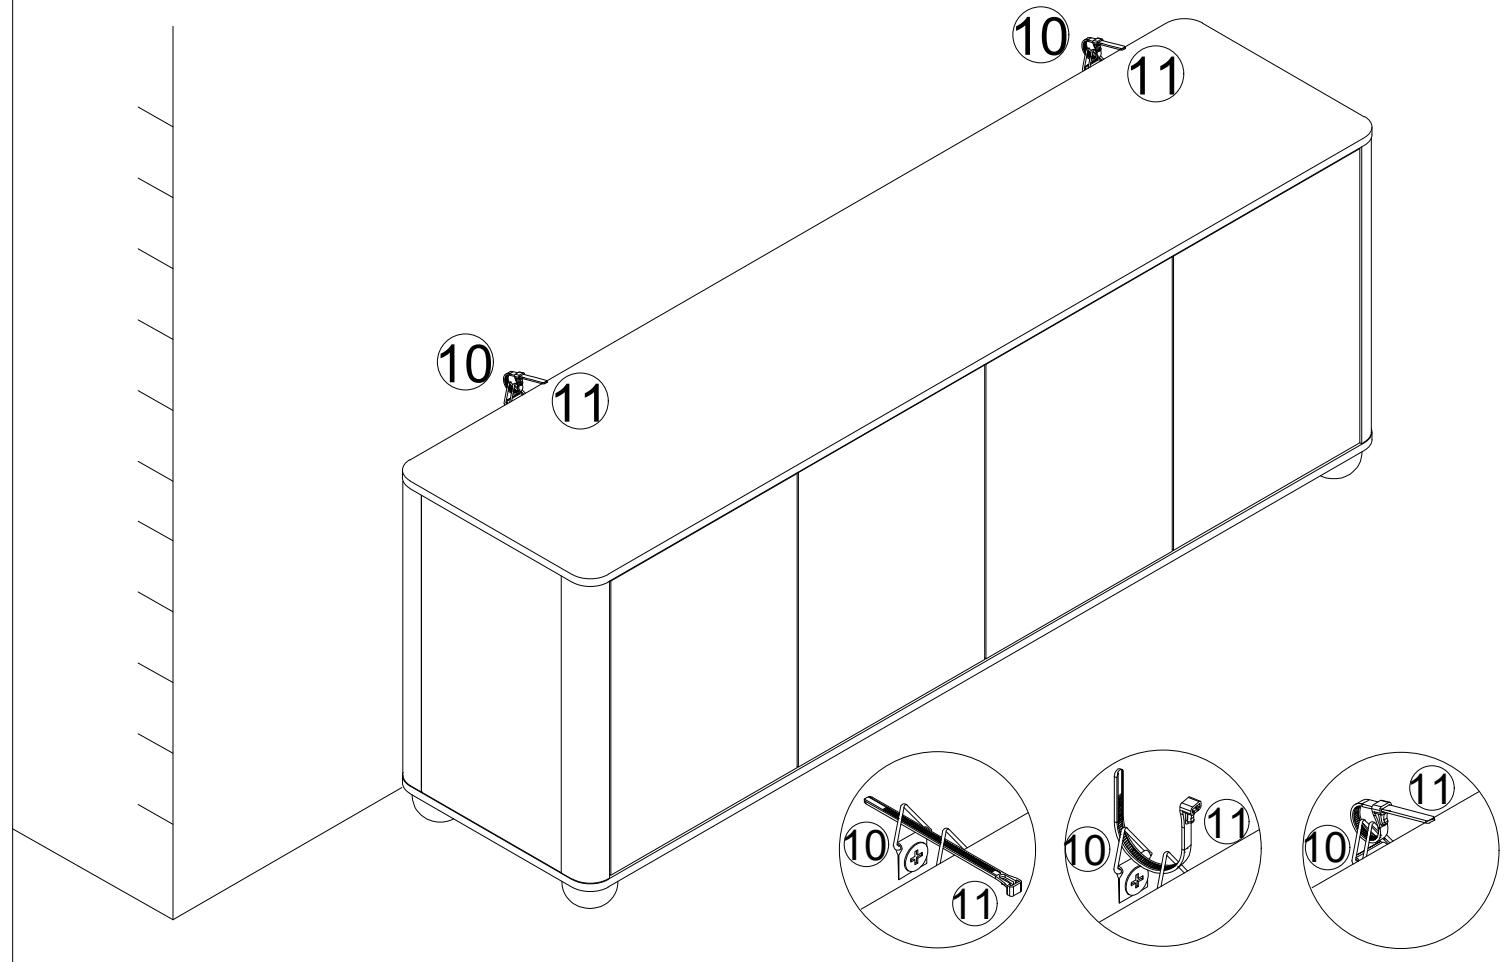

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface surface of furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void.