


ASSEMBLY INSTRUCTION

JESI

ENTERTAINMENT UNIT
ITEM CODE: 86831

 
 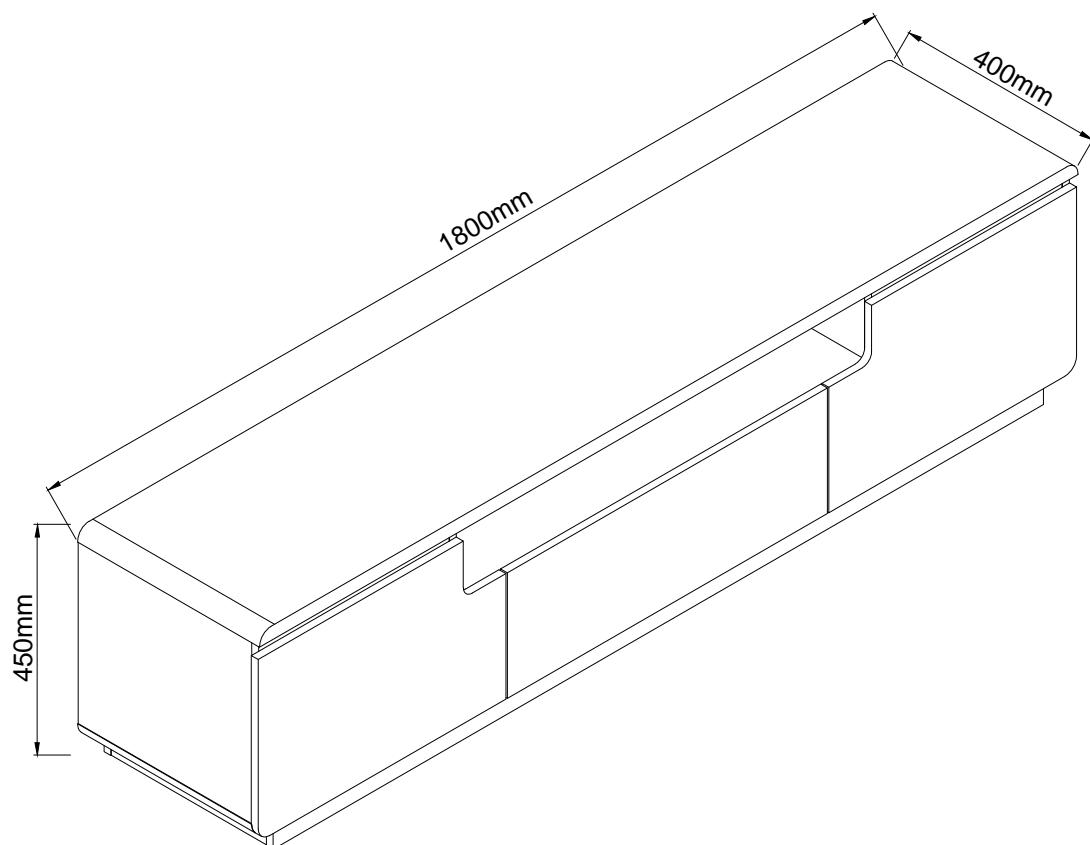


Imported by JWA Furniture Pty Ltd, Brisbane, QLD, Australia
For any assistance with assembly or for missing parts, please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

		IF REQUIRED 
Allow 60 min	For 2 person	Low speed (Ø6mm)
   ADDITIONAL TOOLS REQUIRED		



WARNING

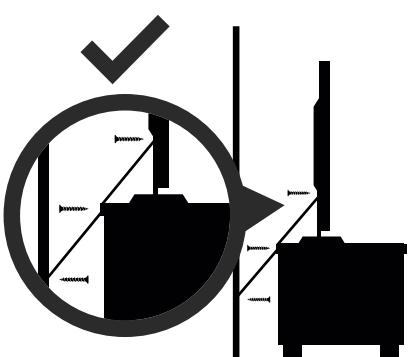


Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.


**This is a permanent label.
Do not remove!**

TO USE CAM LOCK FASTENERS

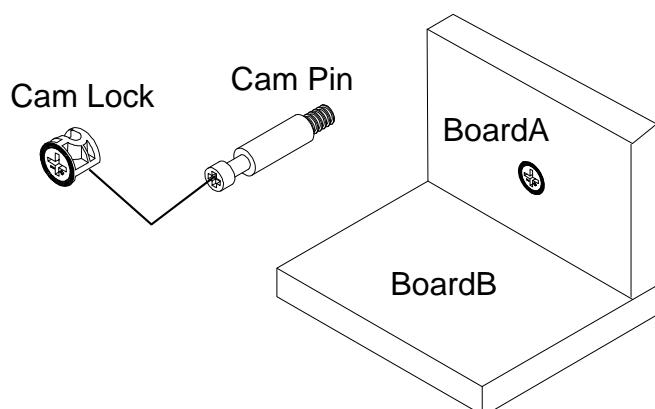


To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

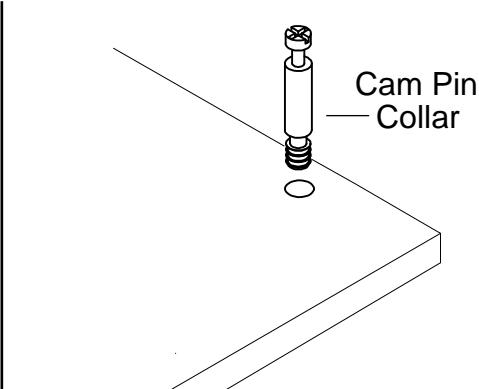


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle. Cam pin is to be inserted up to collar Too far and it wont catch the Cam Lock (Do Not Overtighten) Not enough and the resulting product will not be stable.

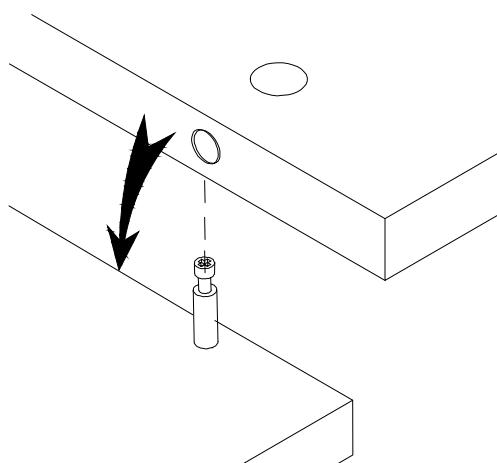


Now fit the hole in the edge of the joining board over the Cam Pin.

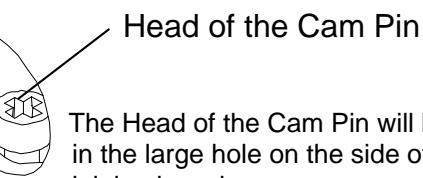


The Head of the Cam Pin will be visible in the large hole on the side of the joining board.

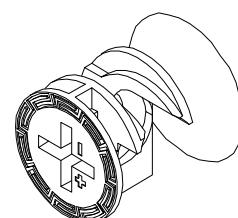


Notice the Cam Lock has a "C" Shaped Back. An arrow or +/- signs on the front indicate the open section on the back of the Cam Pin.

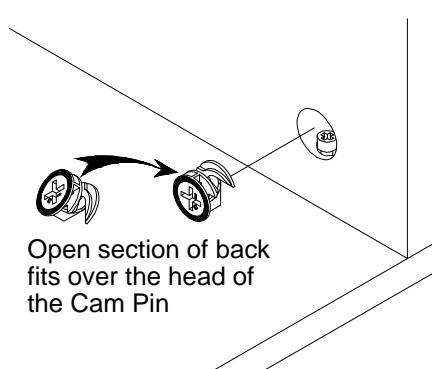

Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

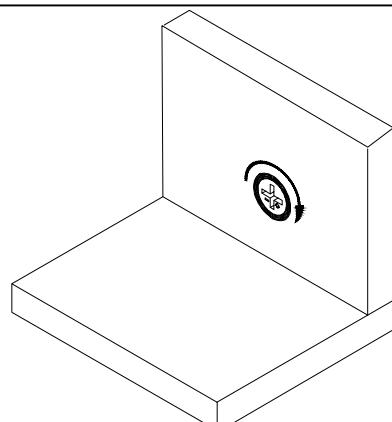

Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

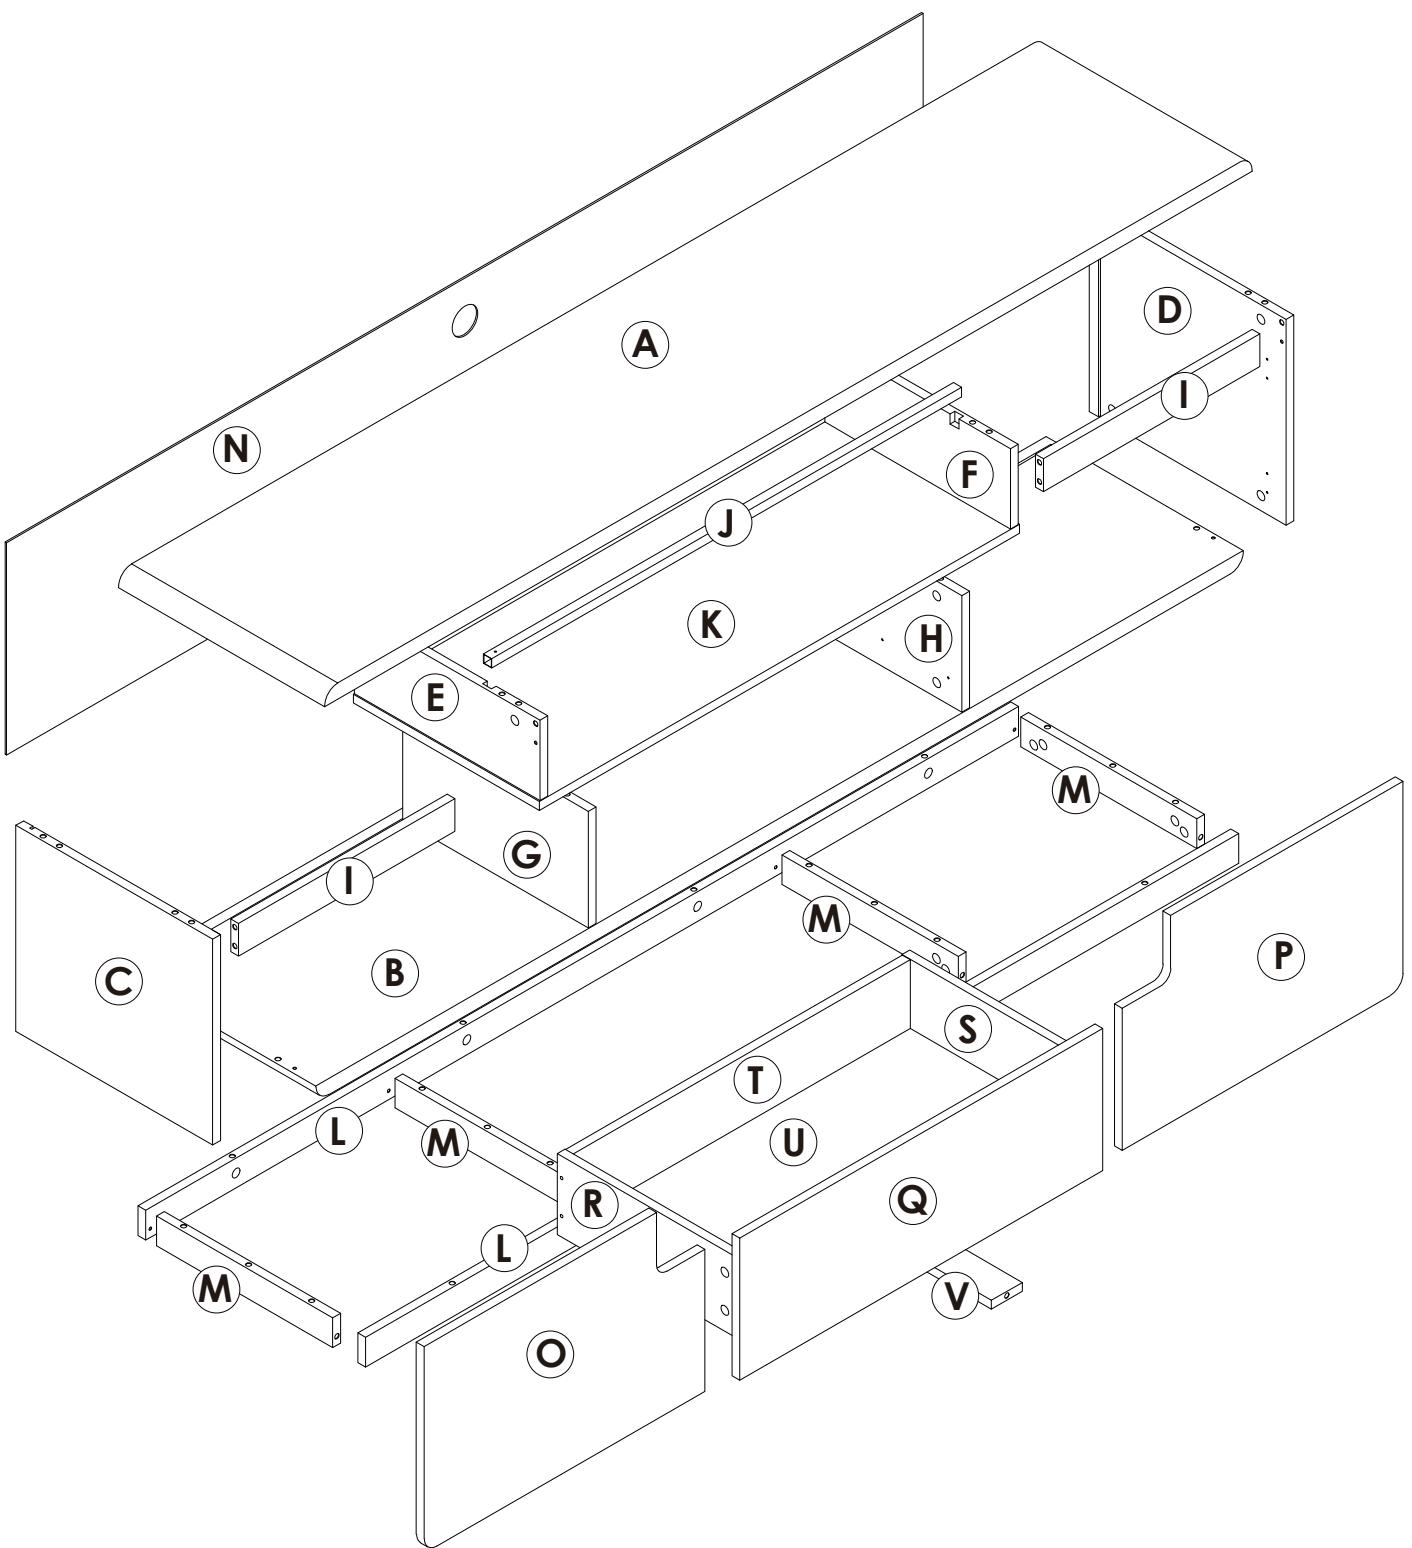

Item Code-86831









Box 1


Panel(Mark)	Packing carton	Quantily
A	(Box 1)	1PC
B	(Box 1)	1PC
L	(Box 1)	2PCS
M	(Box 1)	4PCS
N	(Box 1)	1PC

Box 2

Panel(Mark)	Packing carton	Quantily
C	(Box 2)	1PC
D	(Box 2)	1PC
E	(Box 2)	1PC
F	(Box 2)	1PC
G	(Box 2)	1PC
H	(Box 2)	1PC
I	(Box 2)	2PCS
J	(Box 2)	1PC
K	(Box 2)	1PC
O	(Box 2)	1PC
P	(Box 2)	1PC
Q	(Box 2)	1PC
R	(Box 2)	1PC
S	(Box 2)	1PC
T	(Box 2)	1PC
U	(Box 2)	1PC
V	(Box 2)	1PC

       
 
Please note - All Hardware in box 2.

 Ø15x12 mm 53 PCS	 Ø6x34mm 53PCS	 Ø8x30mm 32 PCS	 Ø 6.3x50mm 4 PCS	 4 PCS	 Ø13xØ1.4x17mm 8 PCS	 M4x14mm 16 PCS
 M3.5x14mm 22 PCS	 Ø8xØ4x33mm 6 PCS	 10 PCS	 M3x14mm 3 PCS	 2 PCS	 M3.5x14mm M4x33mm	
CL 1 PC  L350mm	CR 1 PC  L350mm	DL 1 PC  L350mm	DR 1 PC  L350mm			

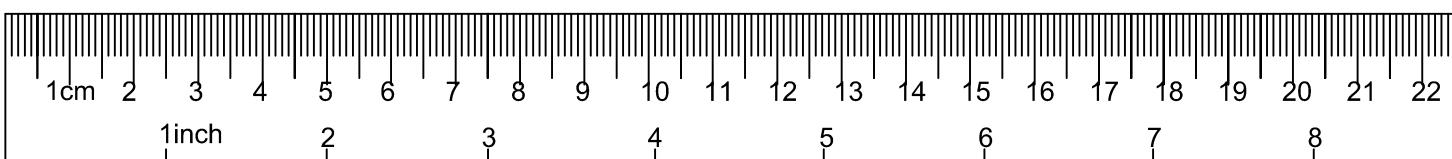

1

CL X 1 CR X 1 ⑧ X 6

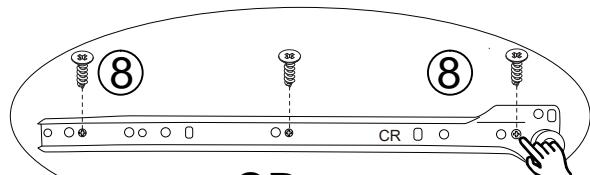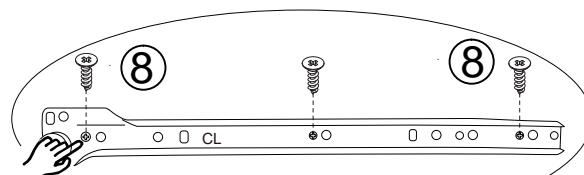


CL

CR


CL

G

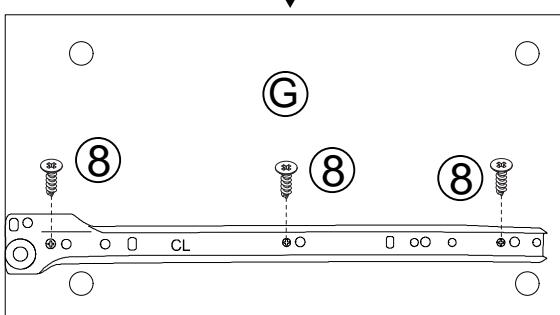


CR

H

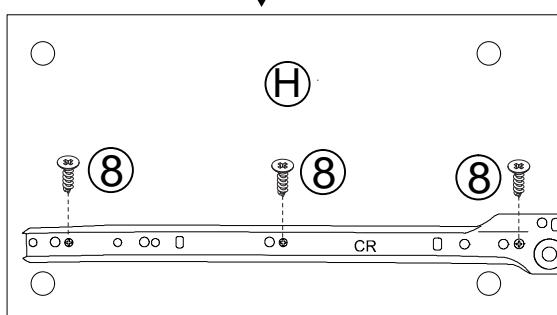


2


② X 4

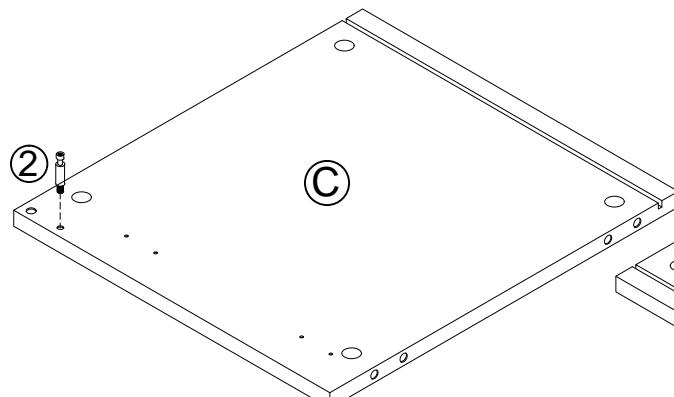


C

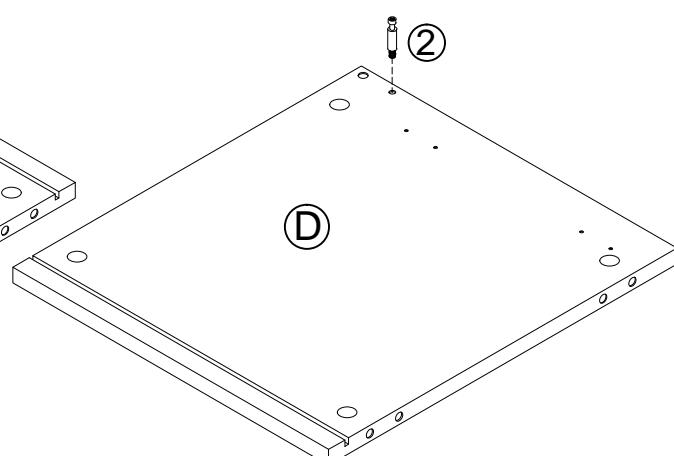

D

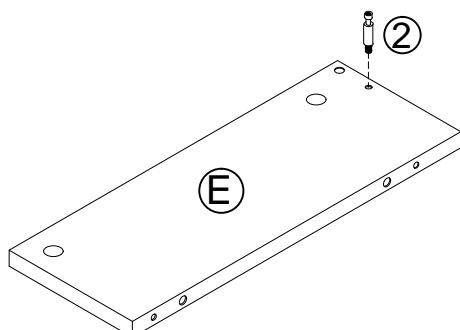


E

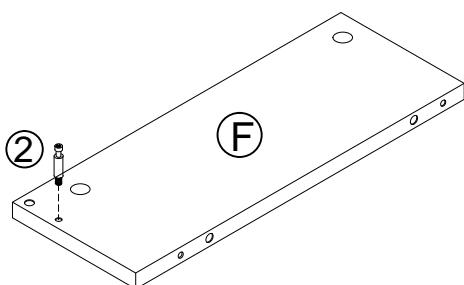

F


3

1 x 2 3 x 2


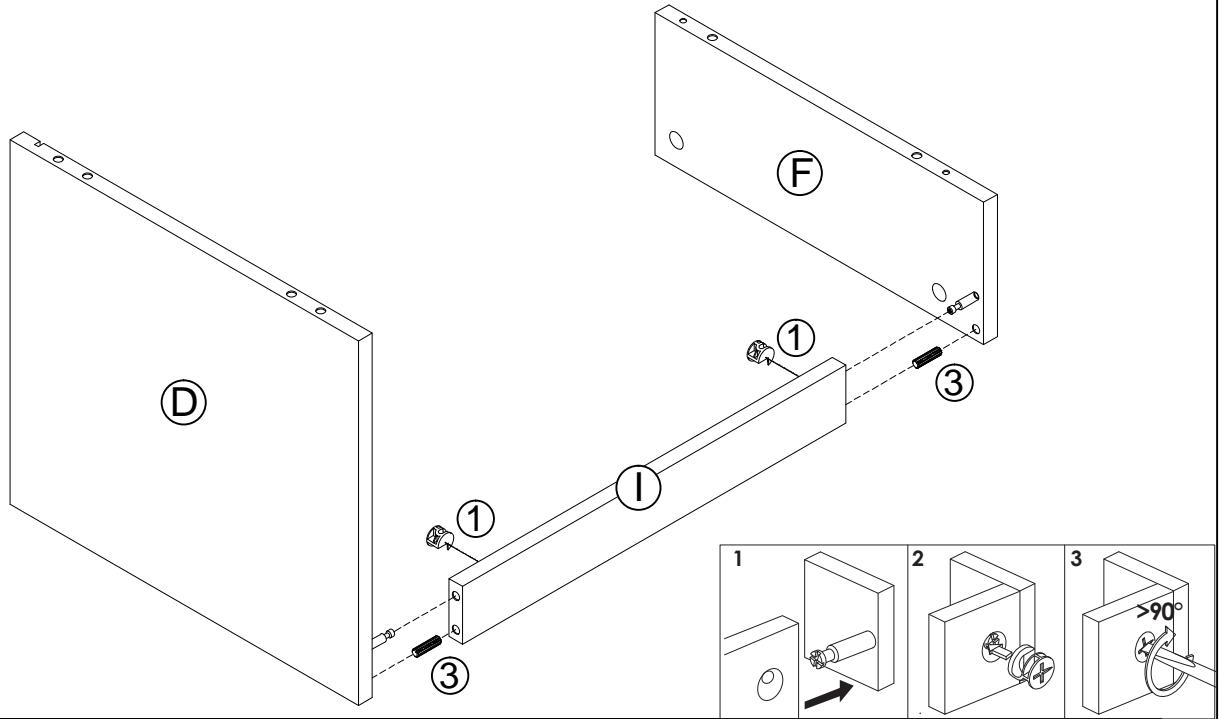


4


1 x 2 3 x 2

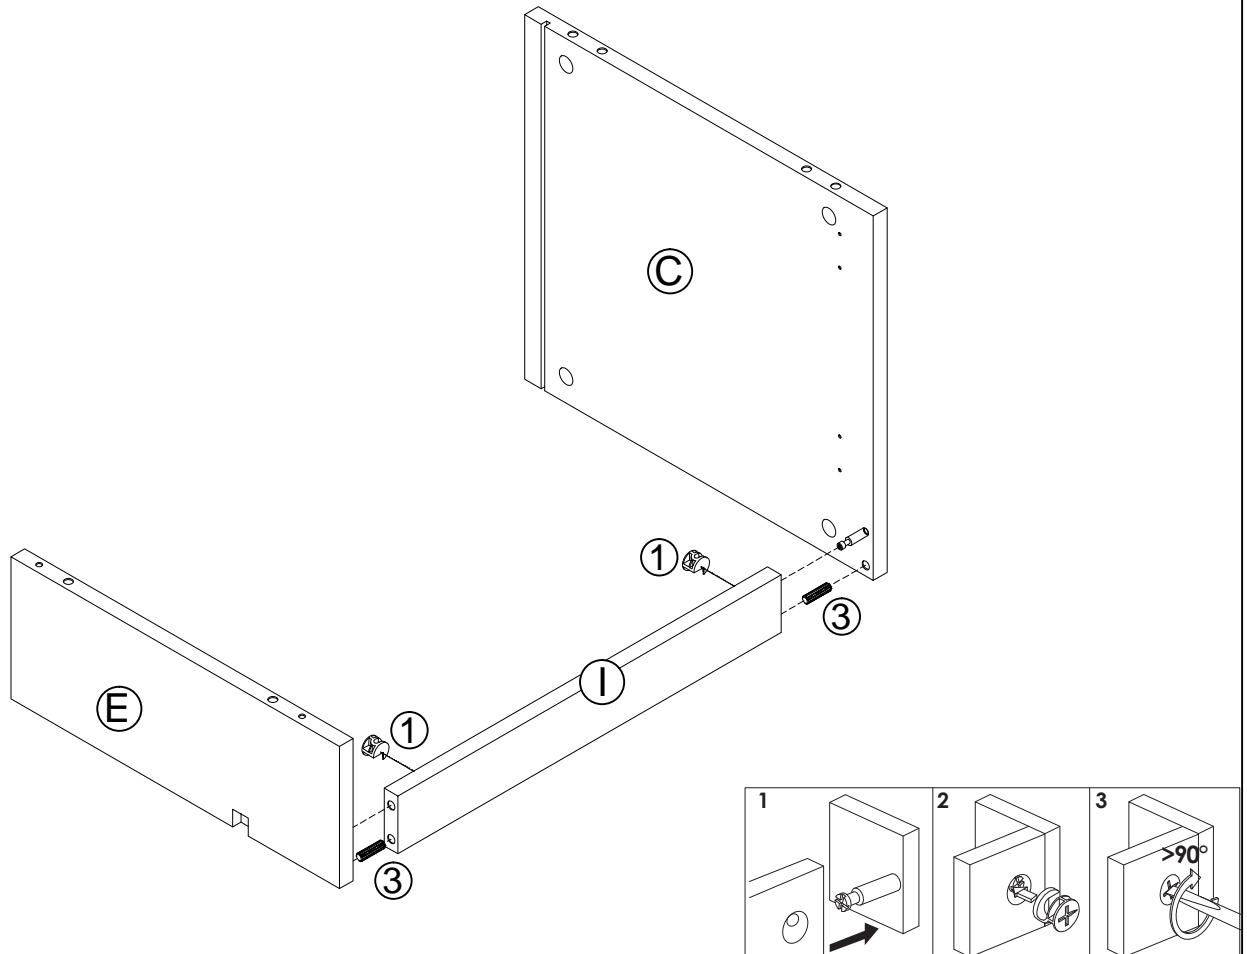

5

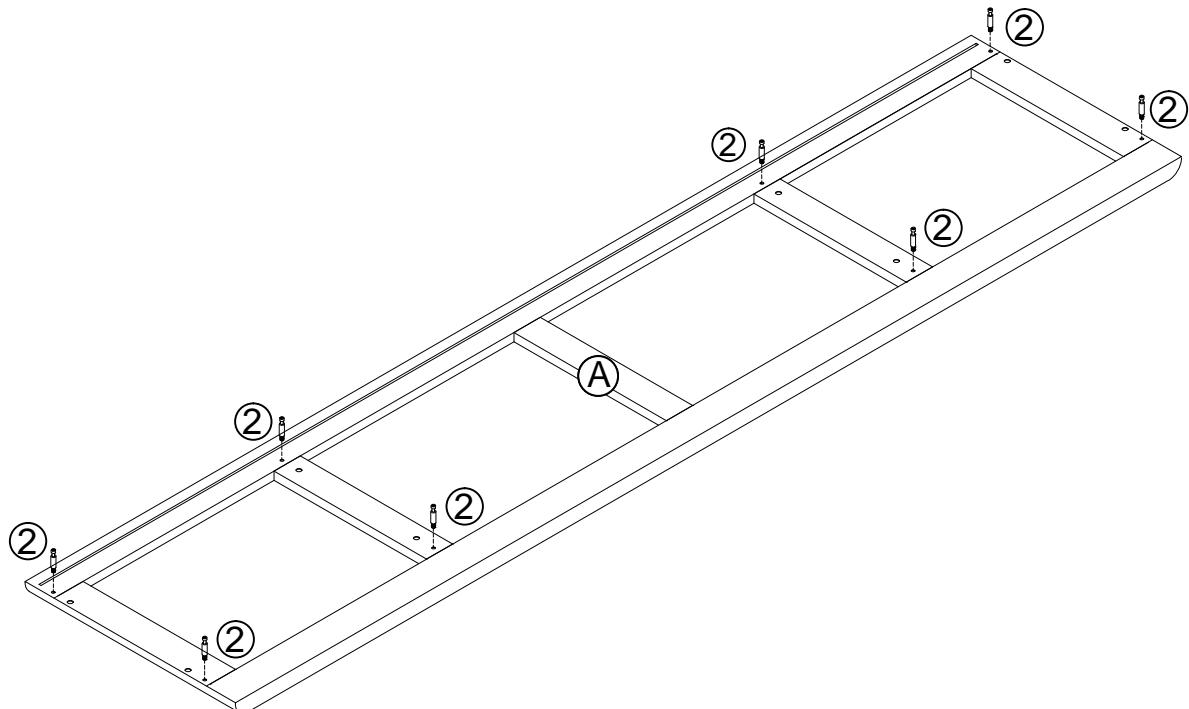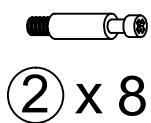


6

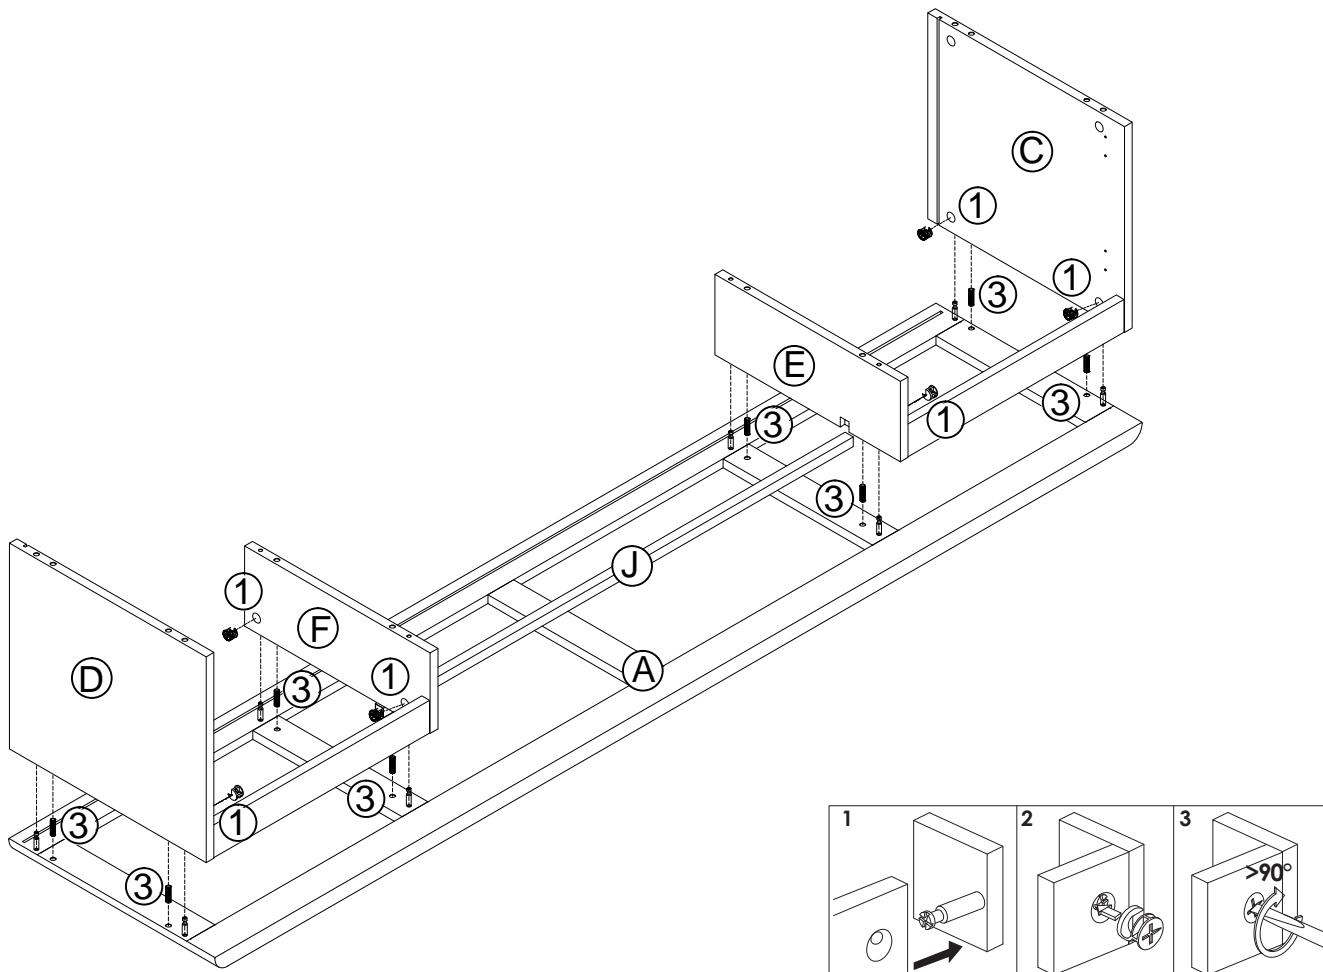



7

 (3) x 4  (4) x 4

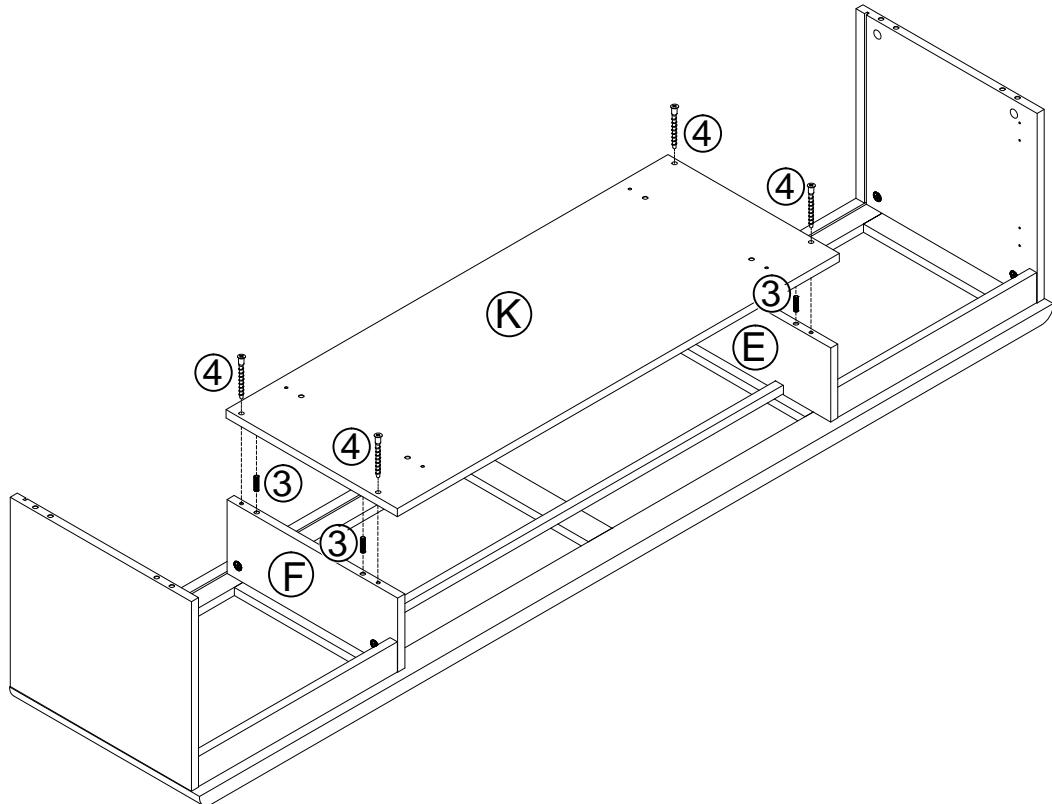

8

 
 (2) x 4

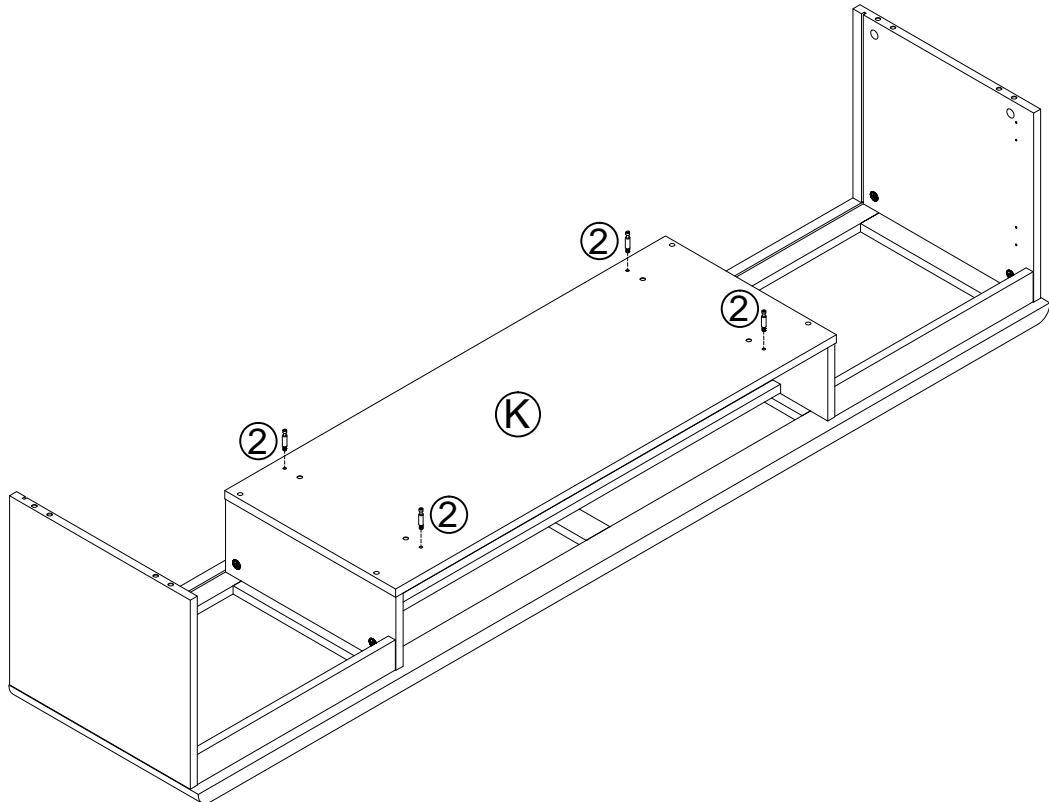


9




10

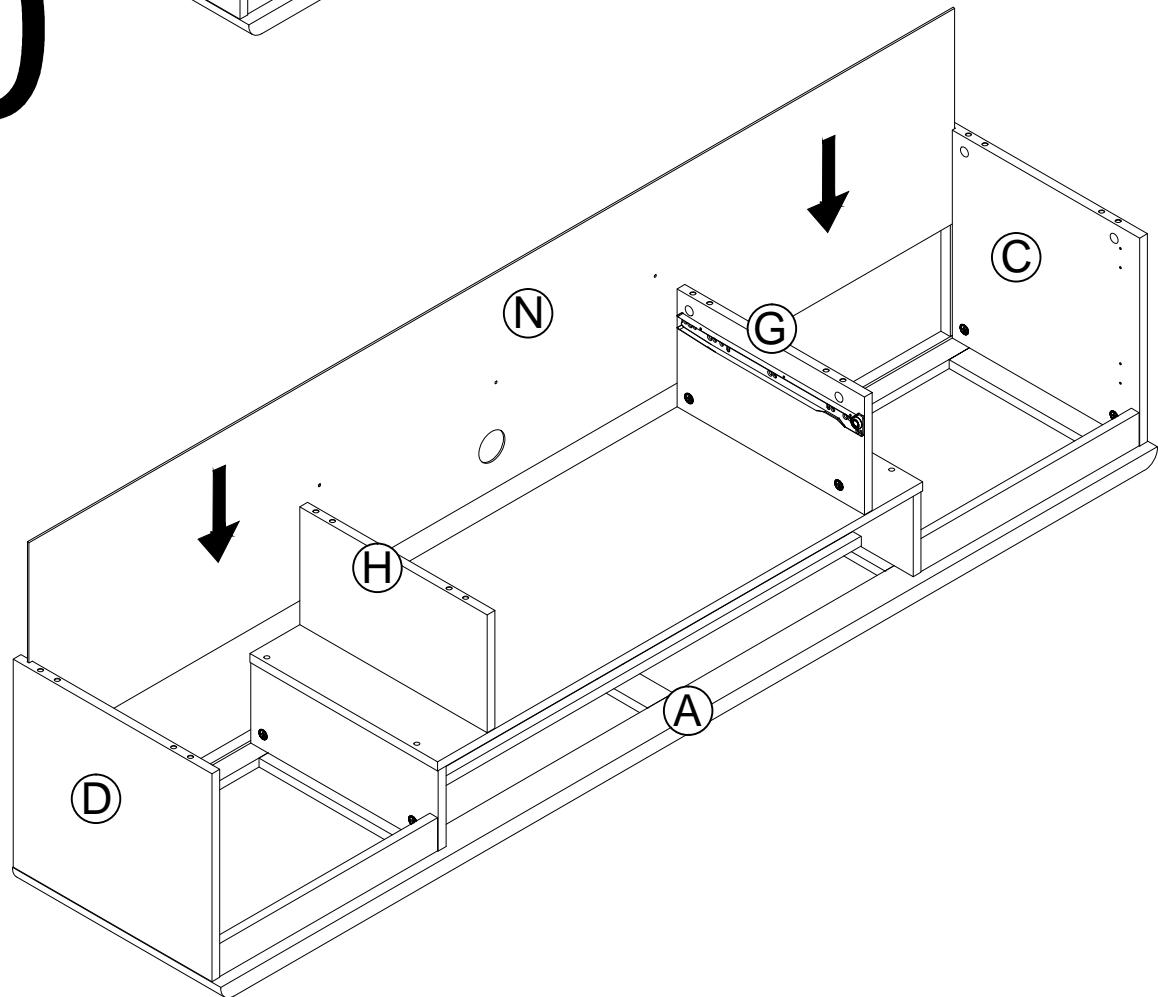

11

 

② x 8

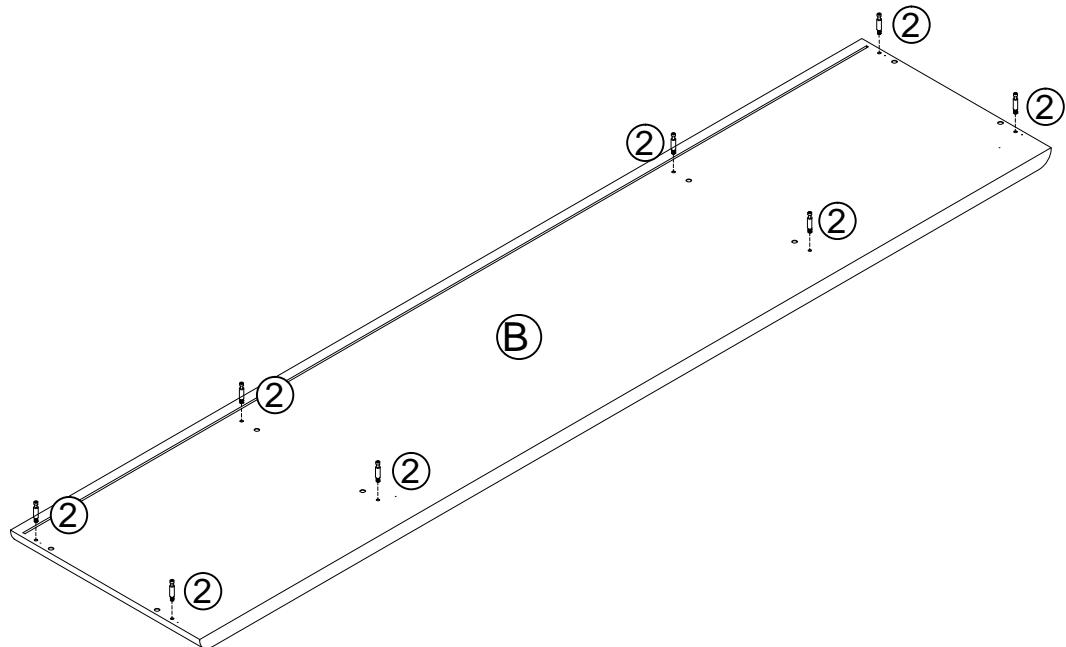


12



① x 8


③ x 8

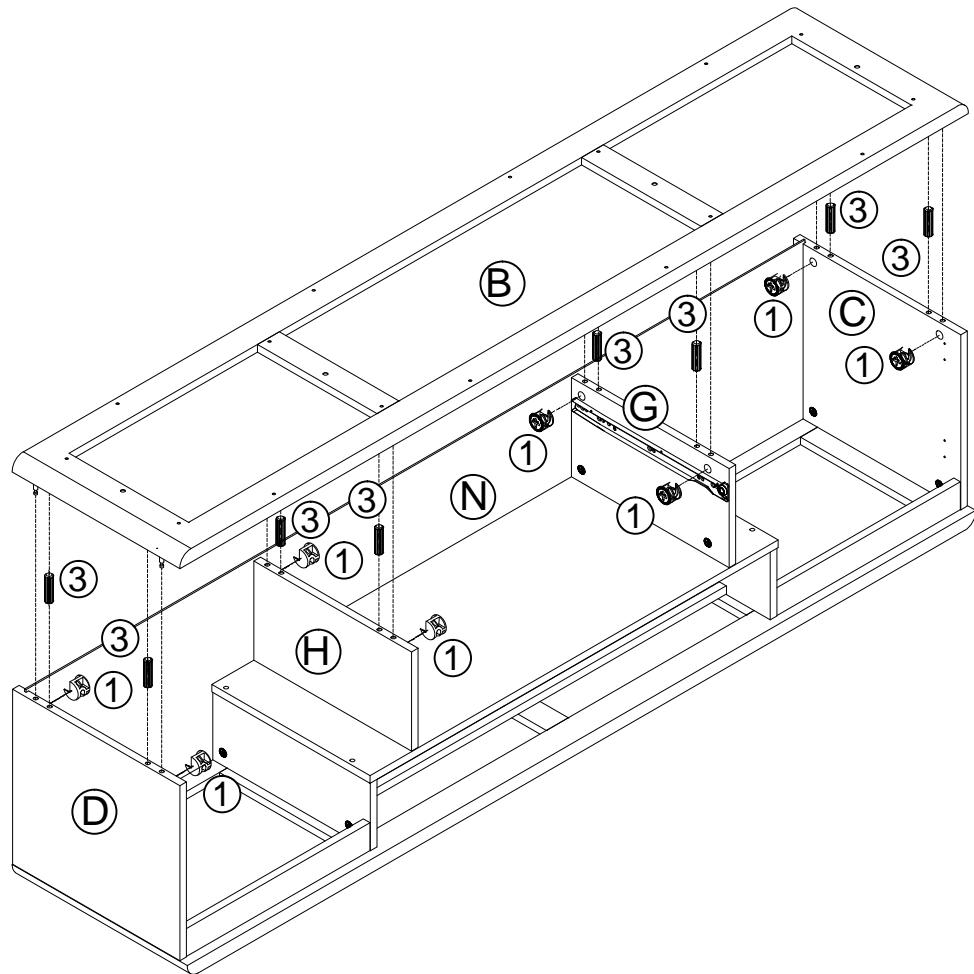

13




② x 16

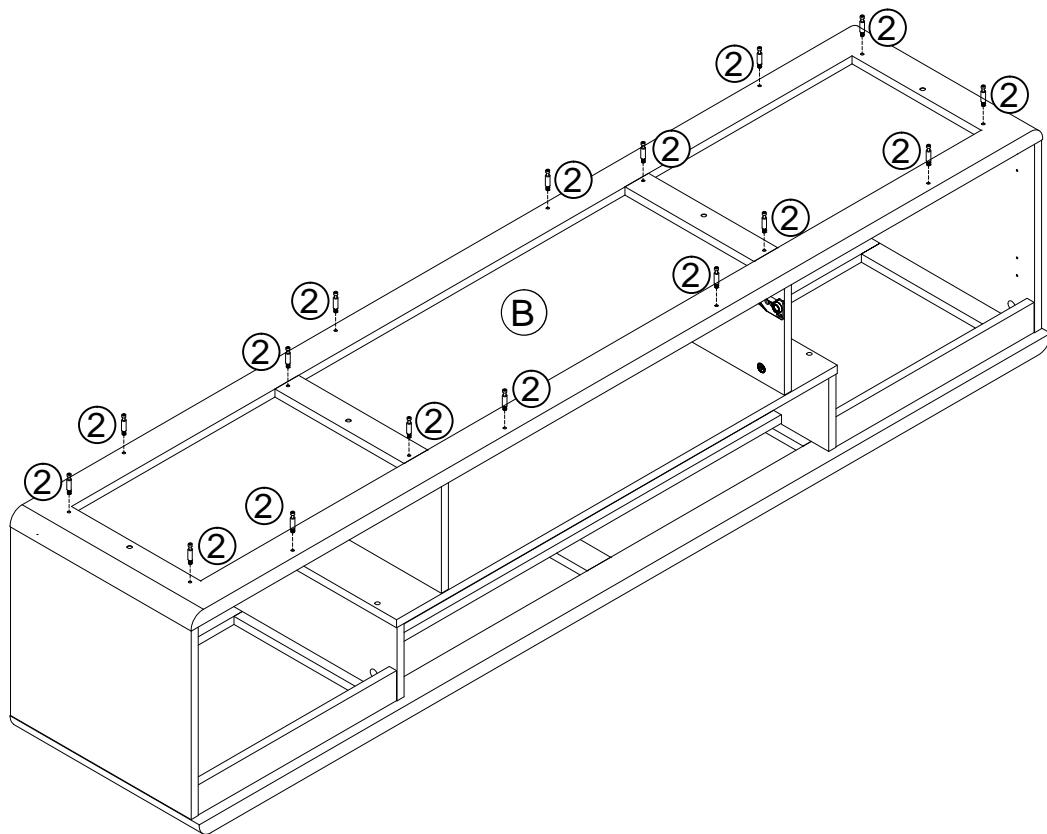


14



 ① x 8




② x 8

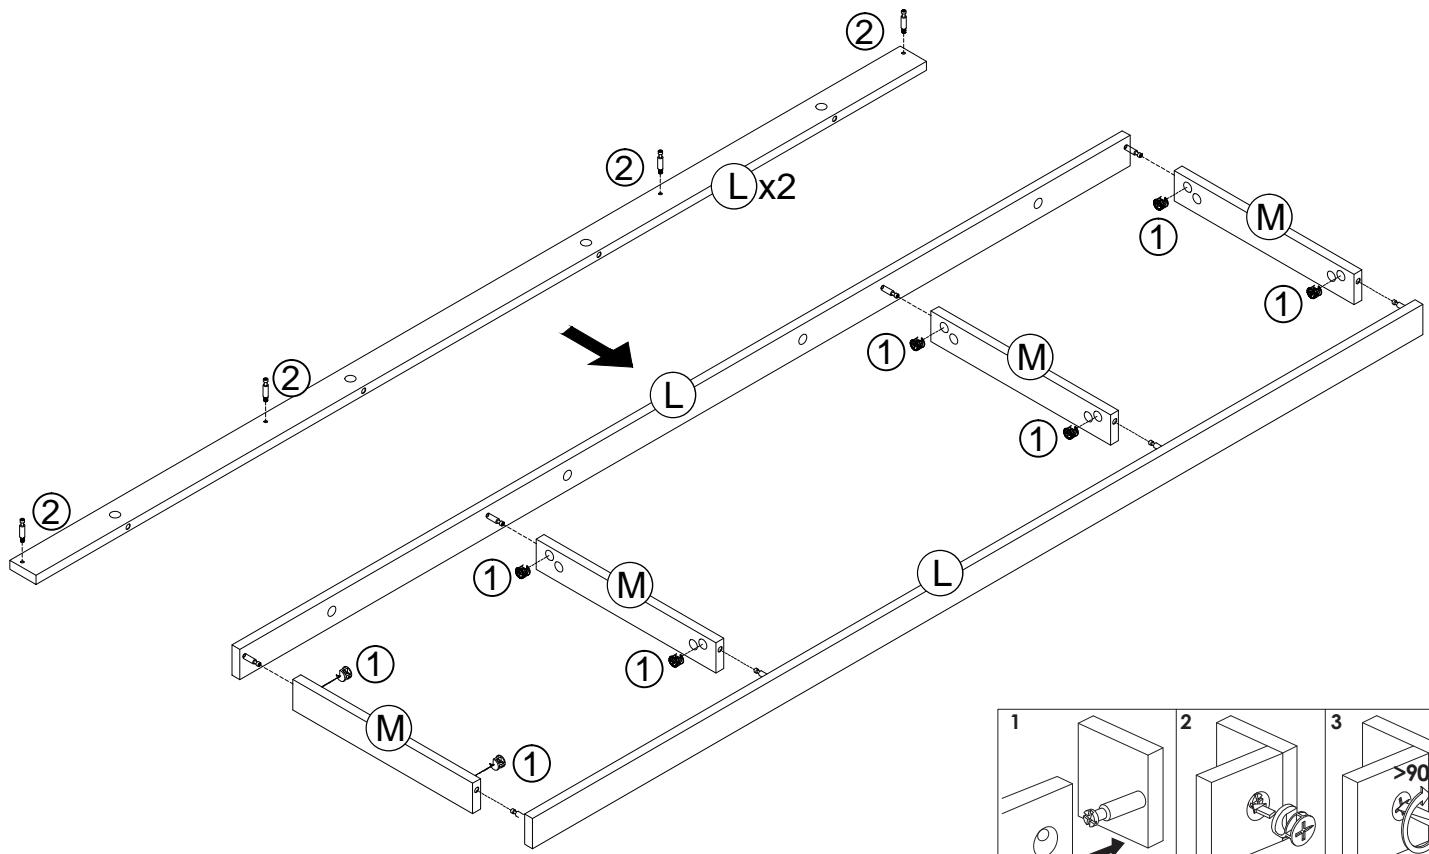


15

① x 16 ③ x 4

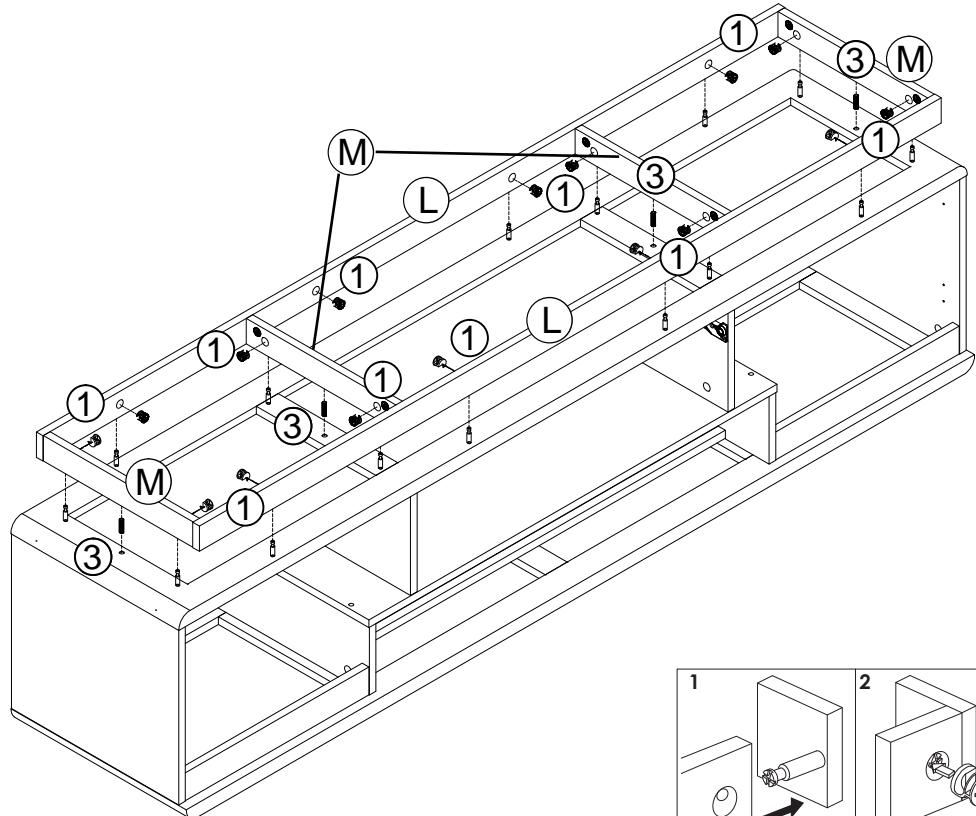


16


⑥ x 8

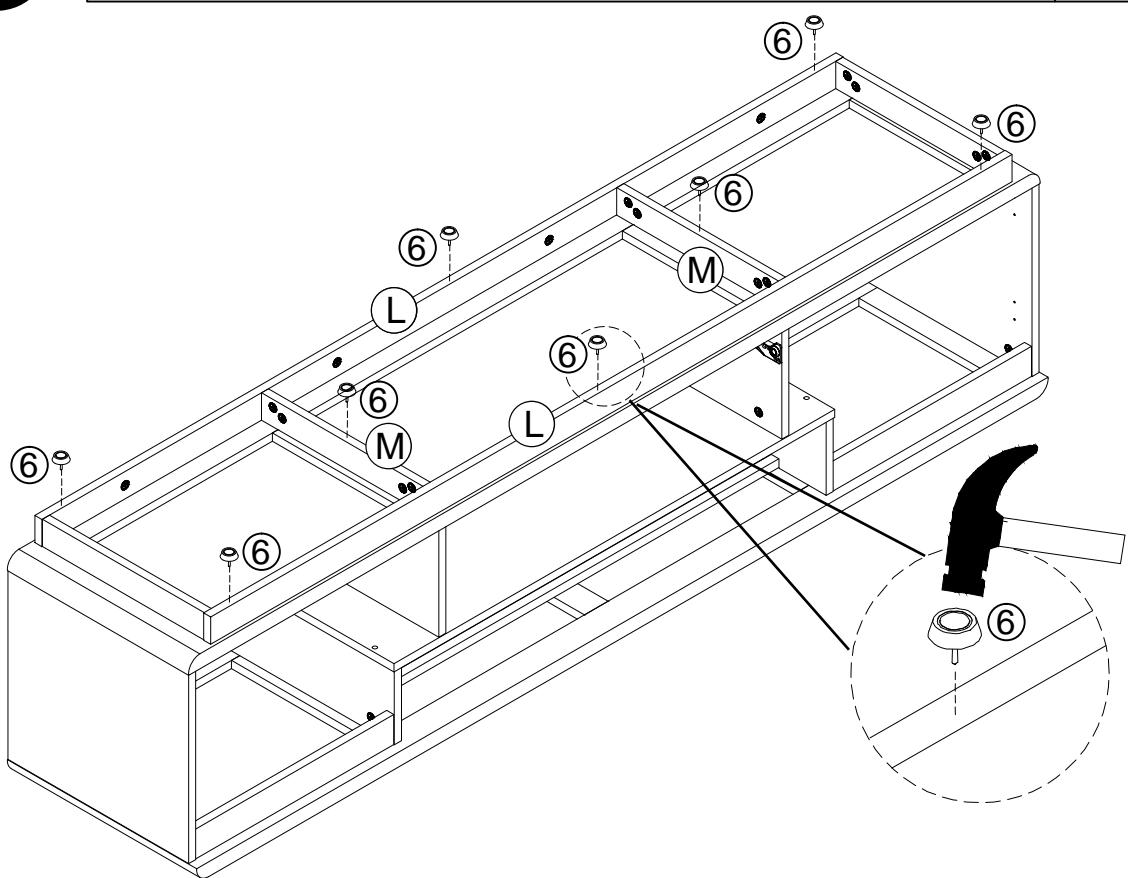




17

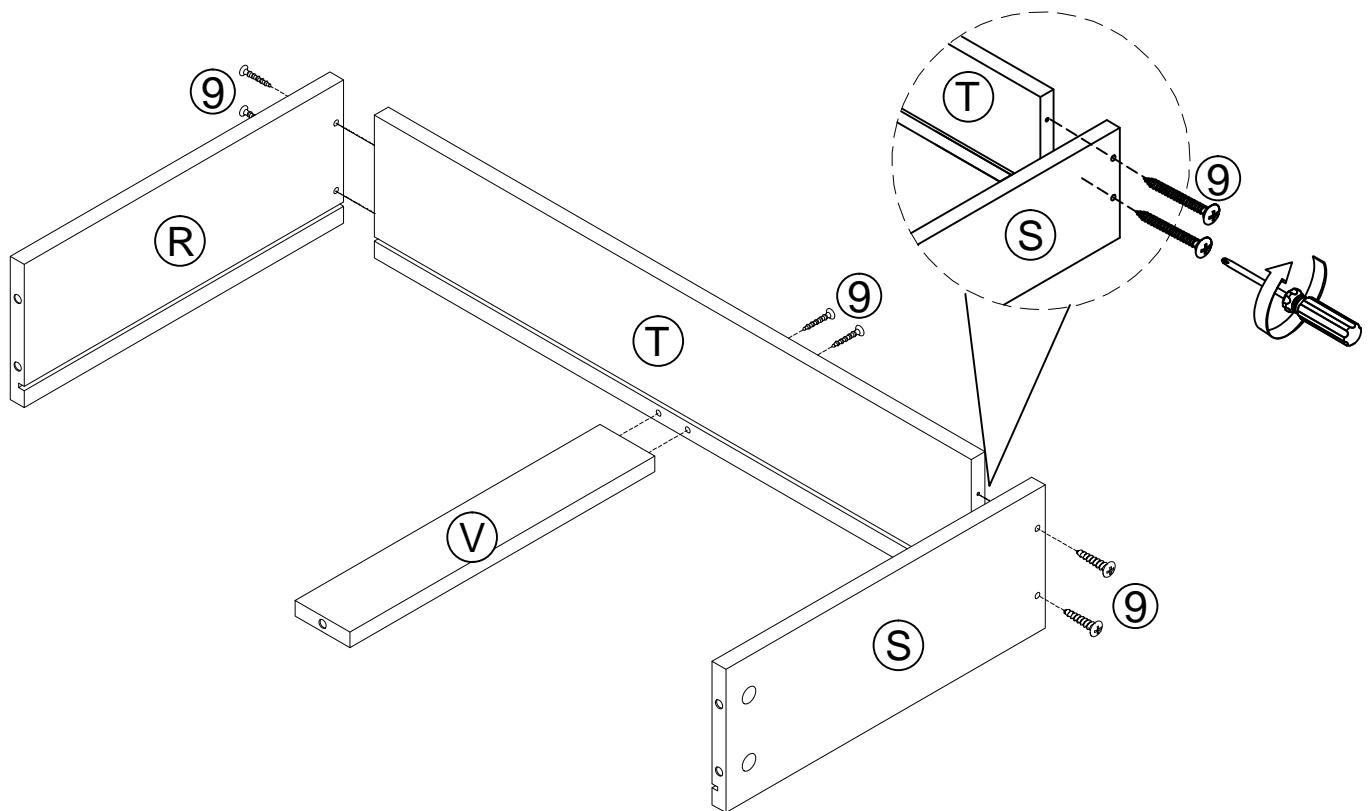


18

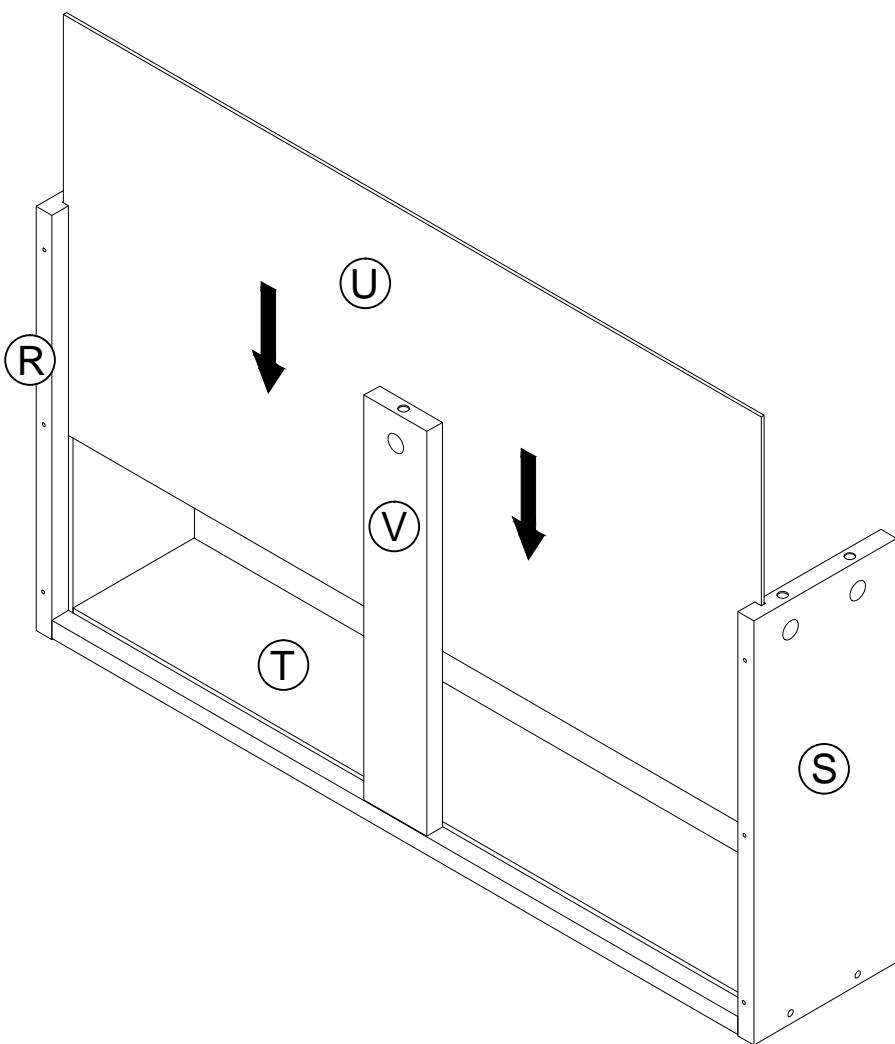


19

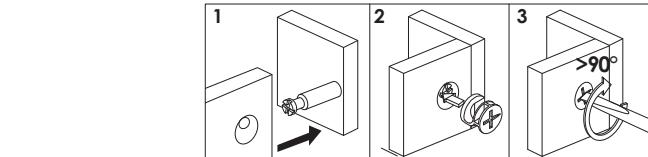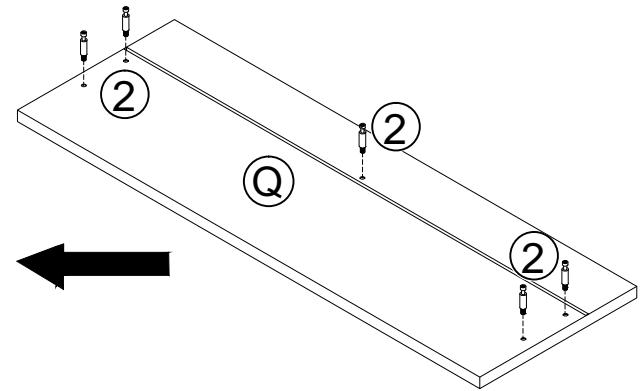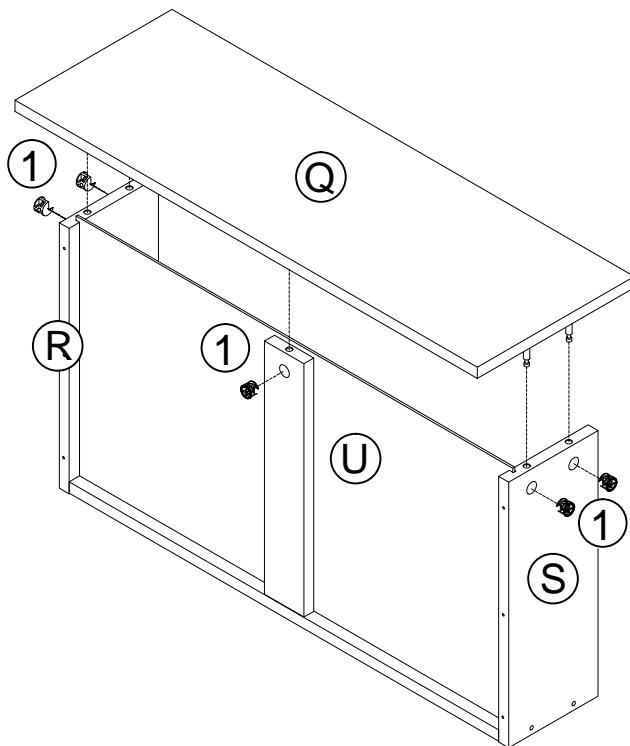



20

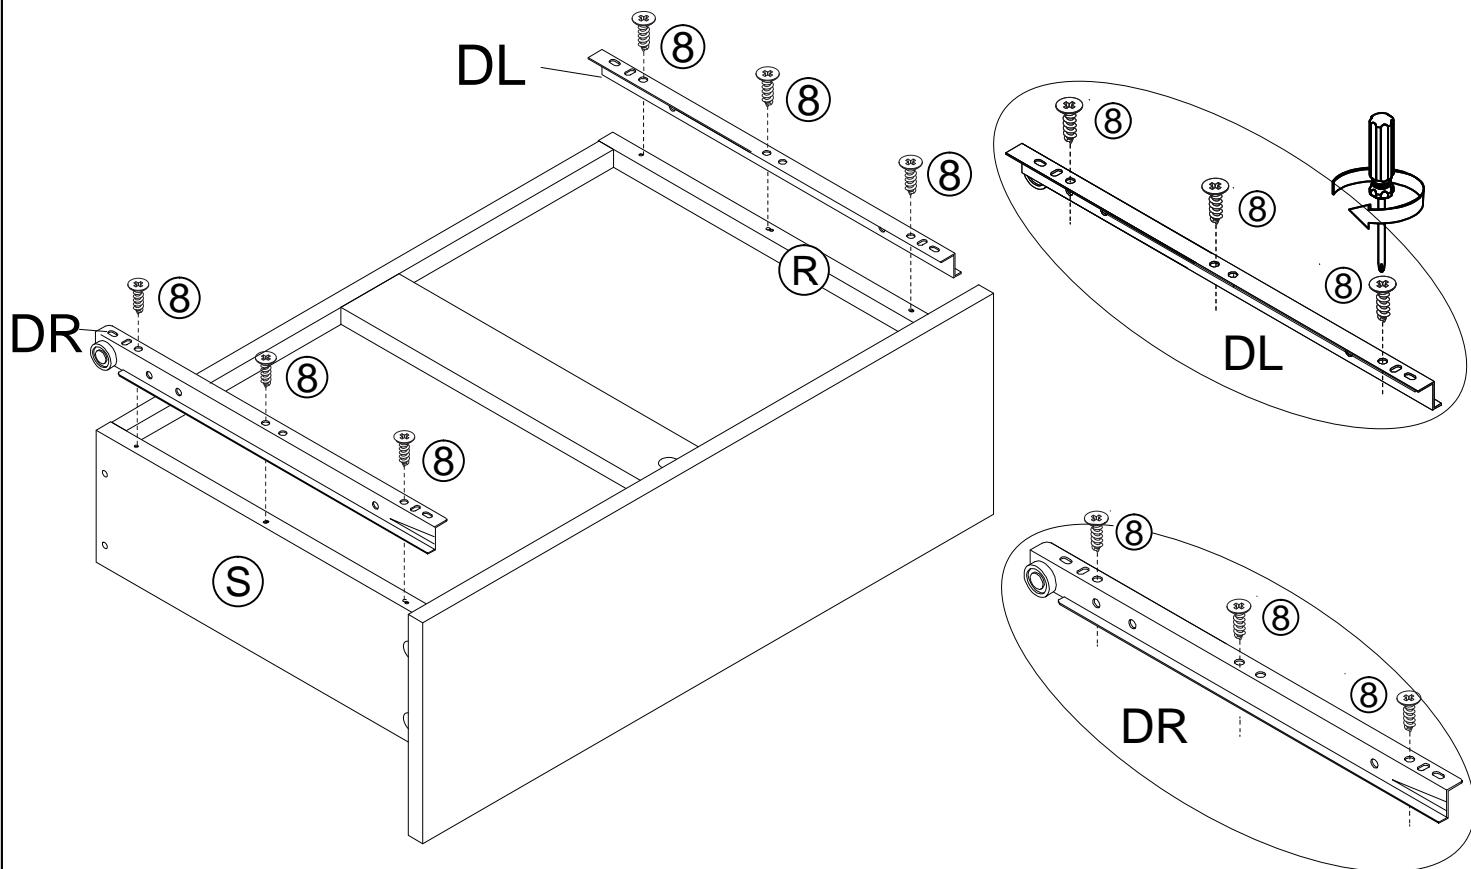


21

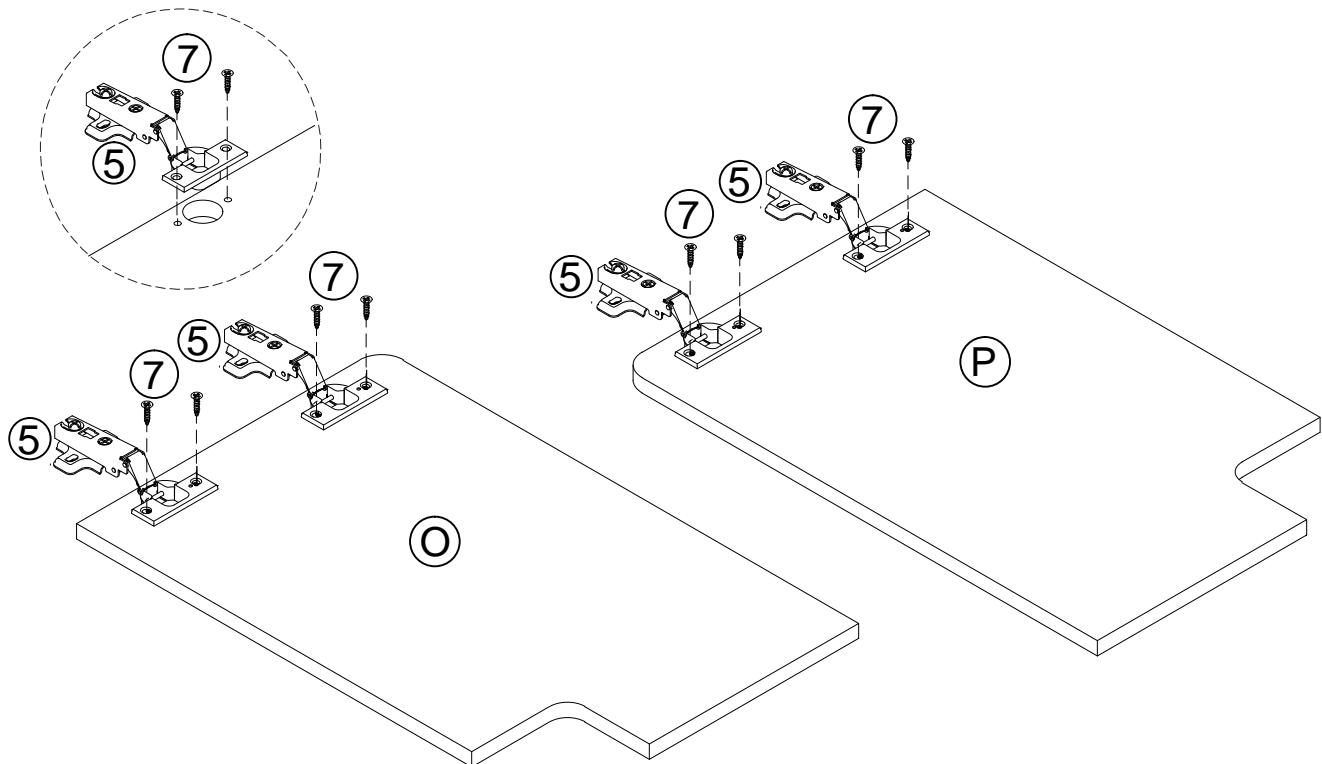

22

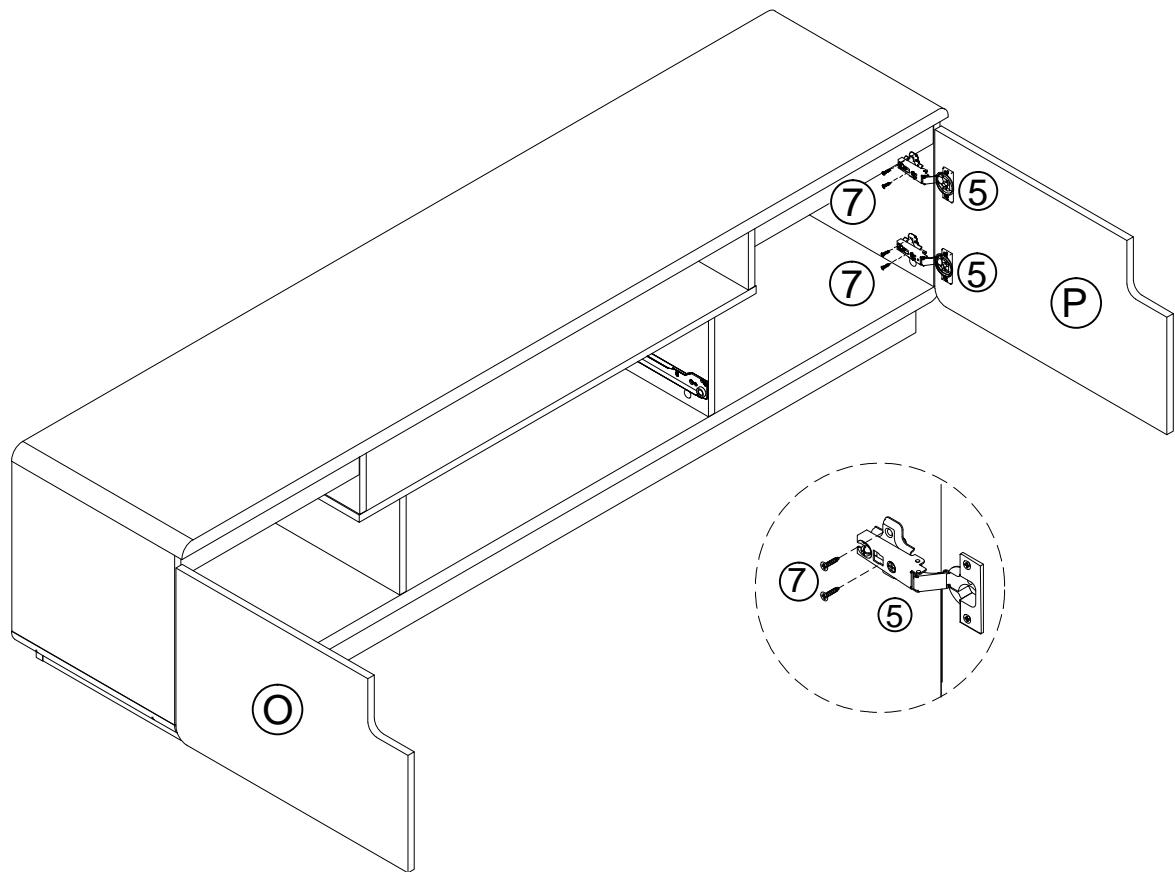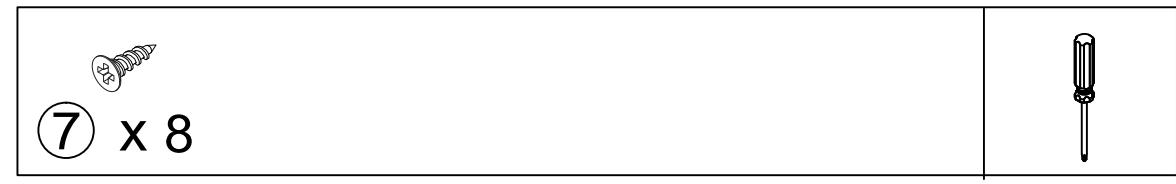


23

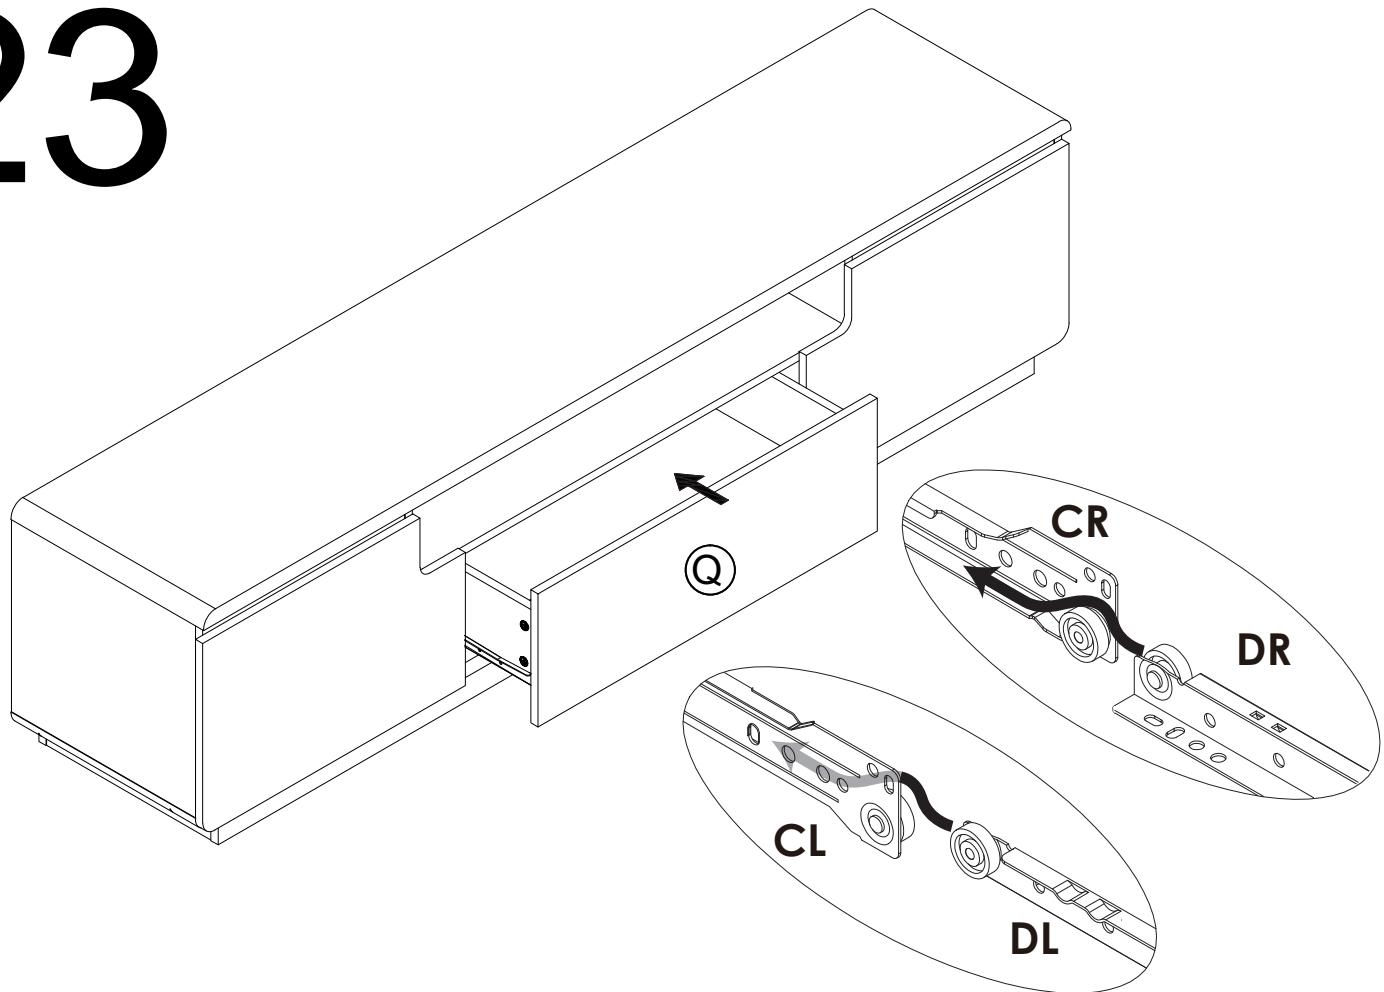







24

⑧ x10 ⑩ x10 ⑪ x3 ⑫ x2

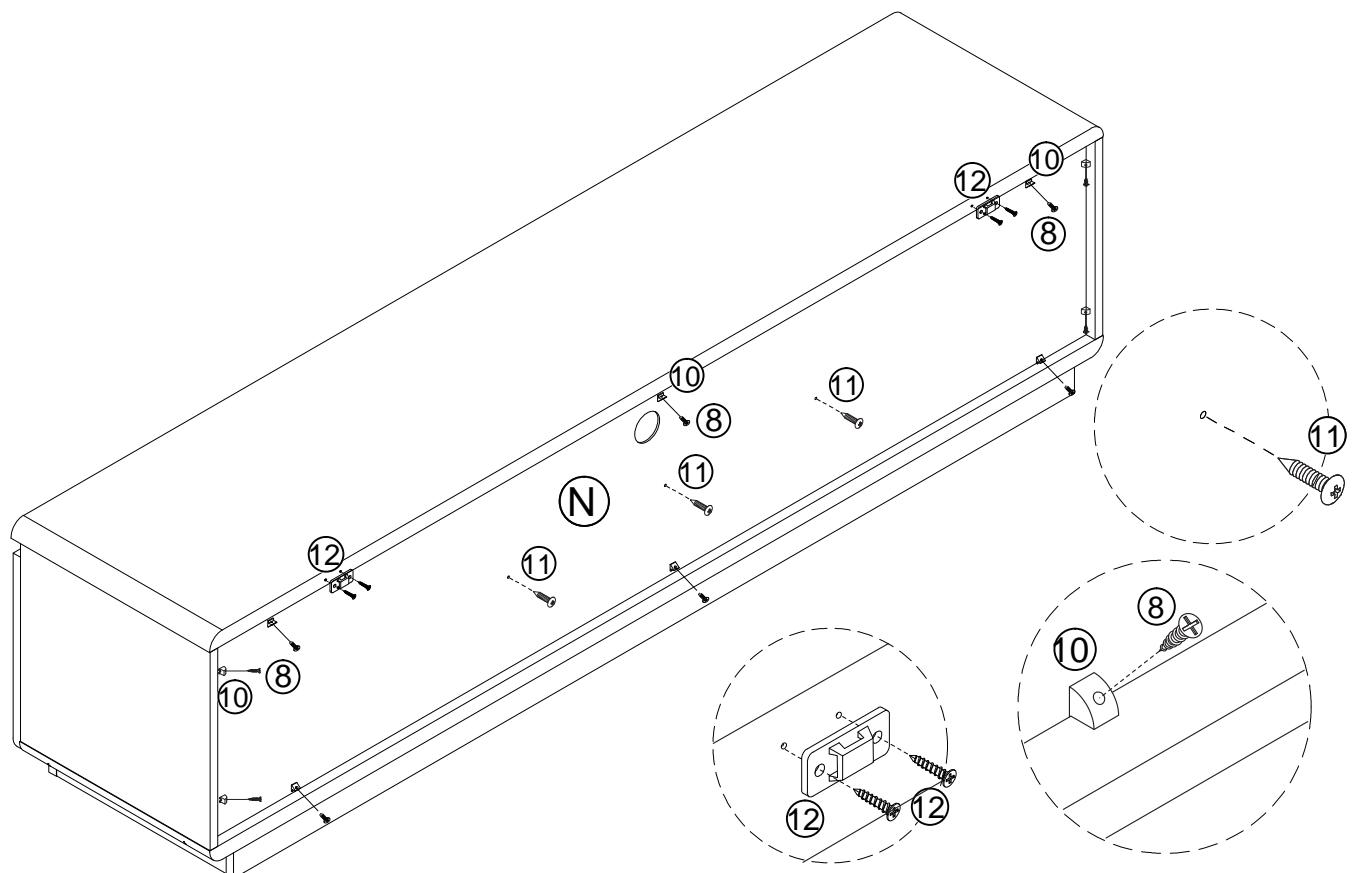


25

If there is misalignment after you install,
adjust the screw to the best condition

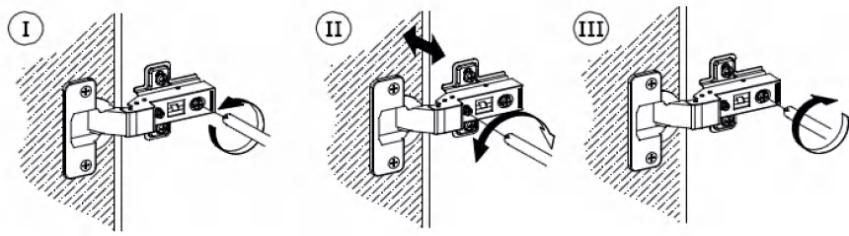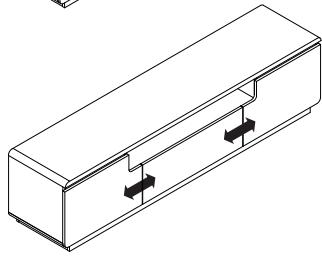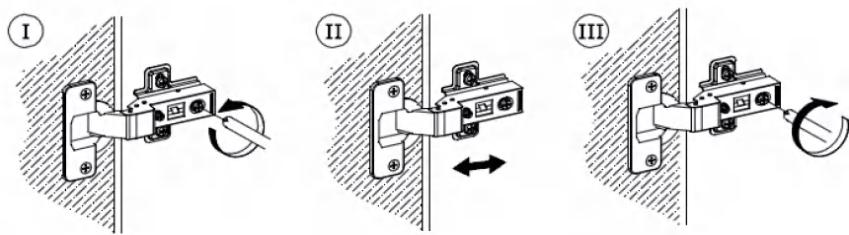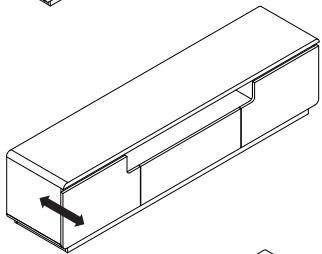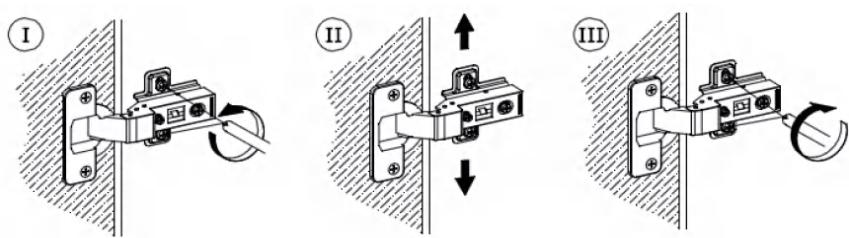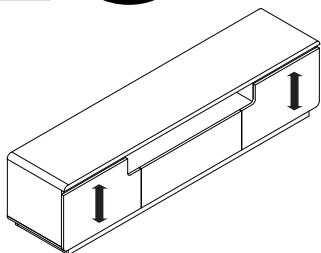

26

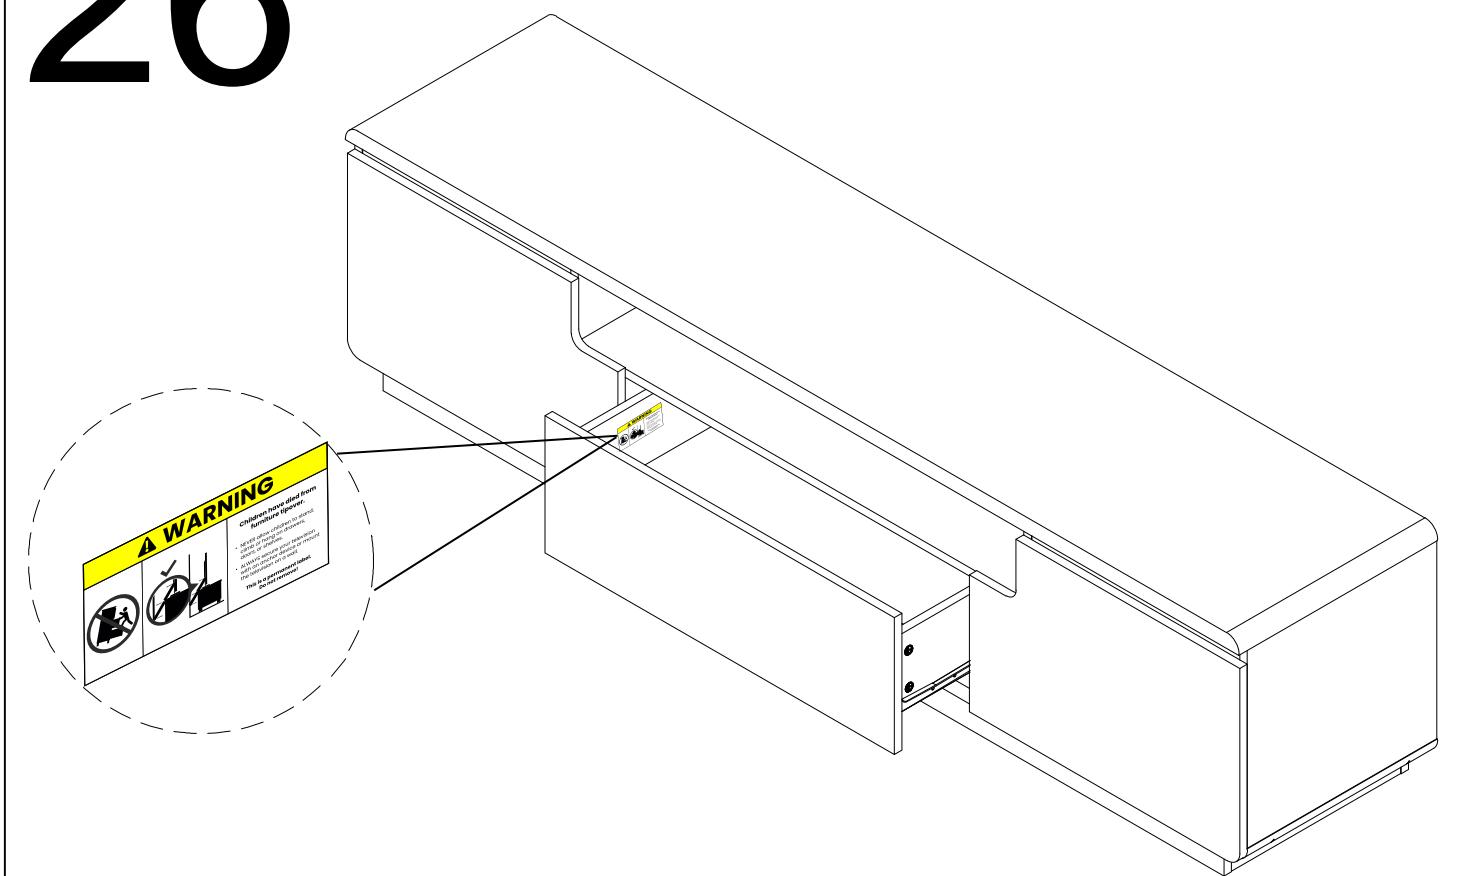


SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short screws .
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

 
HARDWARE



Mounting Plate x4



 
Wall Strap x2




4 PCS
 $\varnothing 9 \times \varnothing 6 \times 25\text{mm}$
Plastic Screw




 
4 PCS
M3.5×14mm
Small Screw x2




4 PCS
M4×33mm
Large Screw

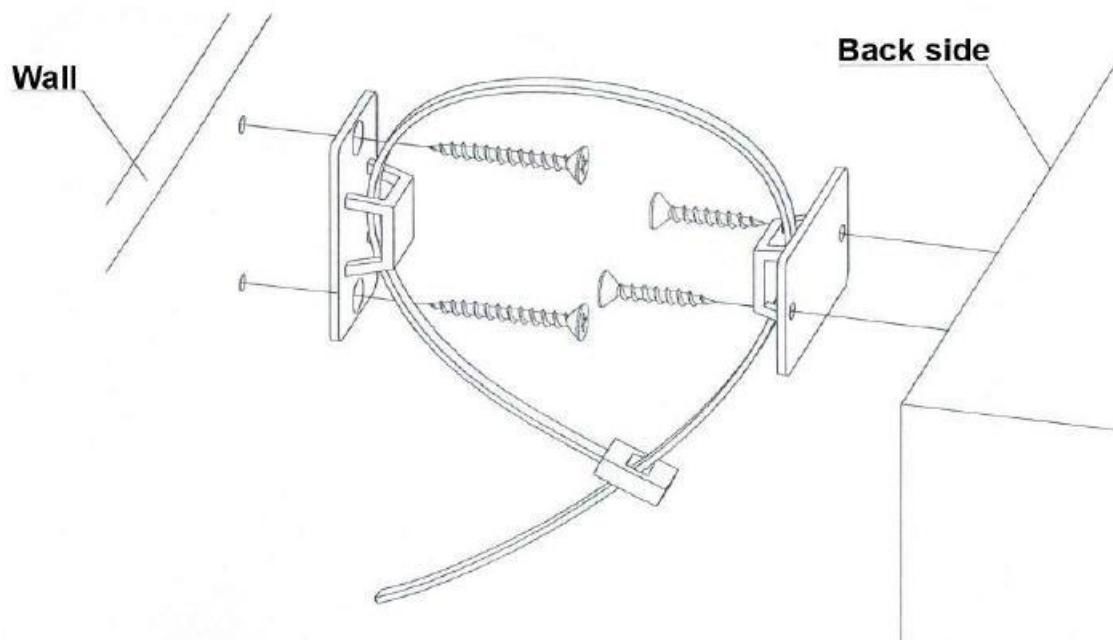


27

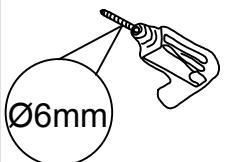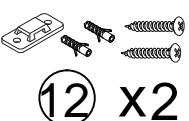


Drill 2 holes on the wall at the required position for anti-falling device installation.

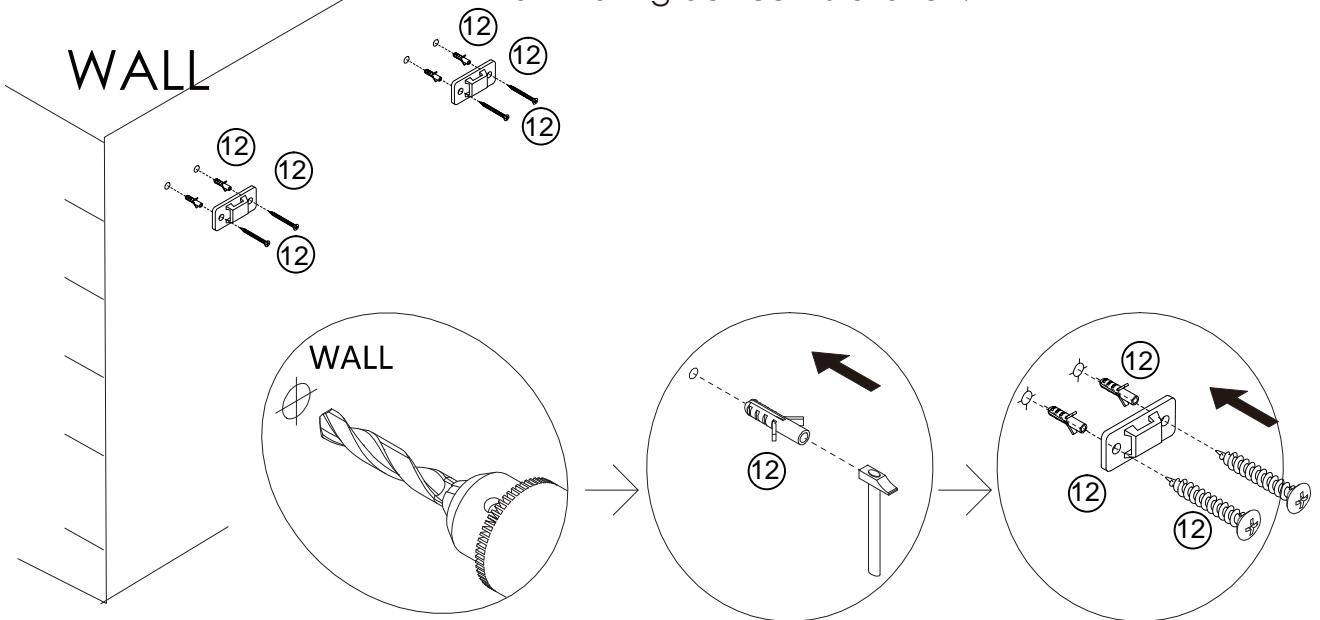


28

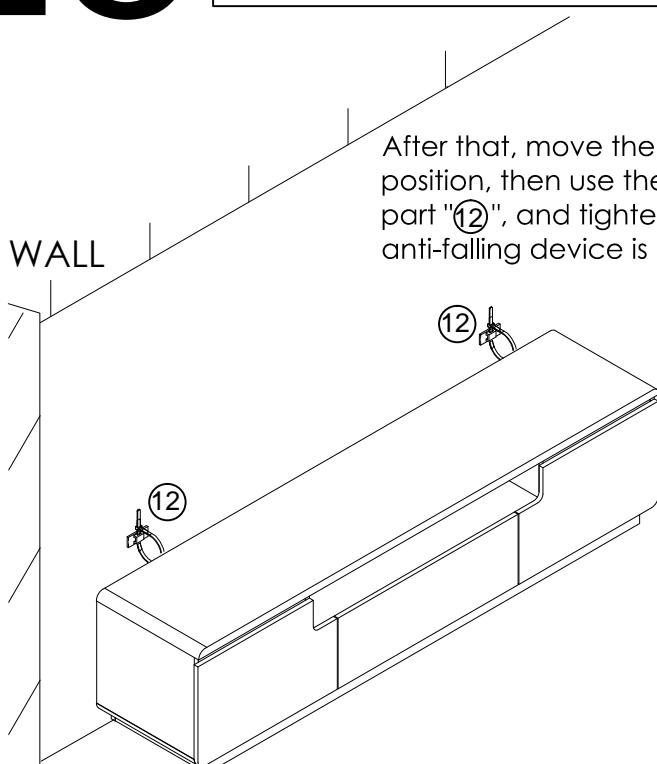

After that, move the cabinet to the corresponding position, then use the part "12" to pass through the part "12", and tighten it. The installation of the anti-falling device is completed.

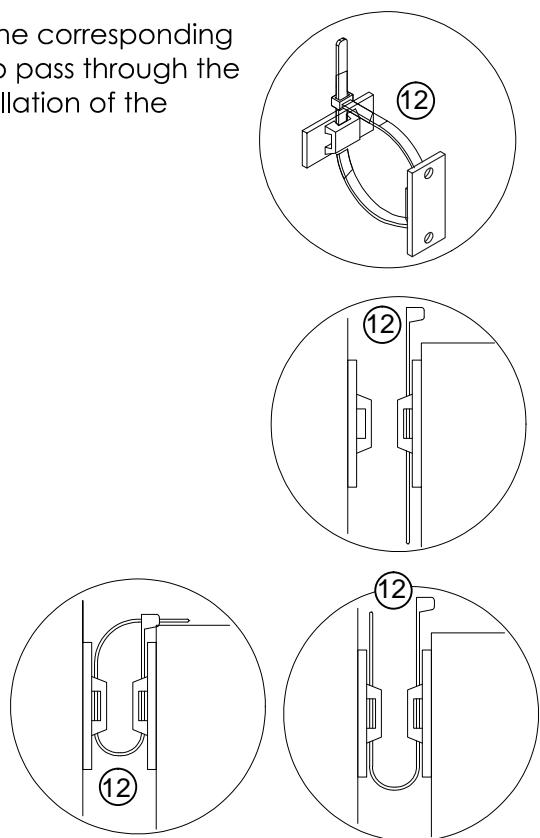

ASSEMBLY IS COMPLETE

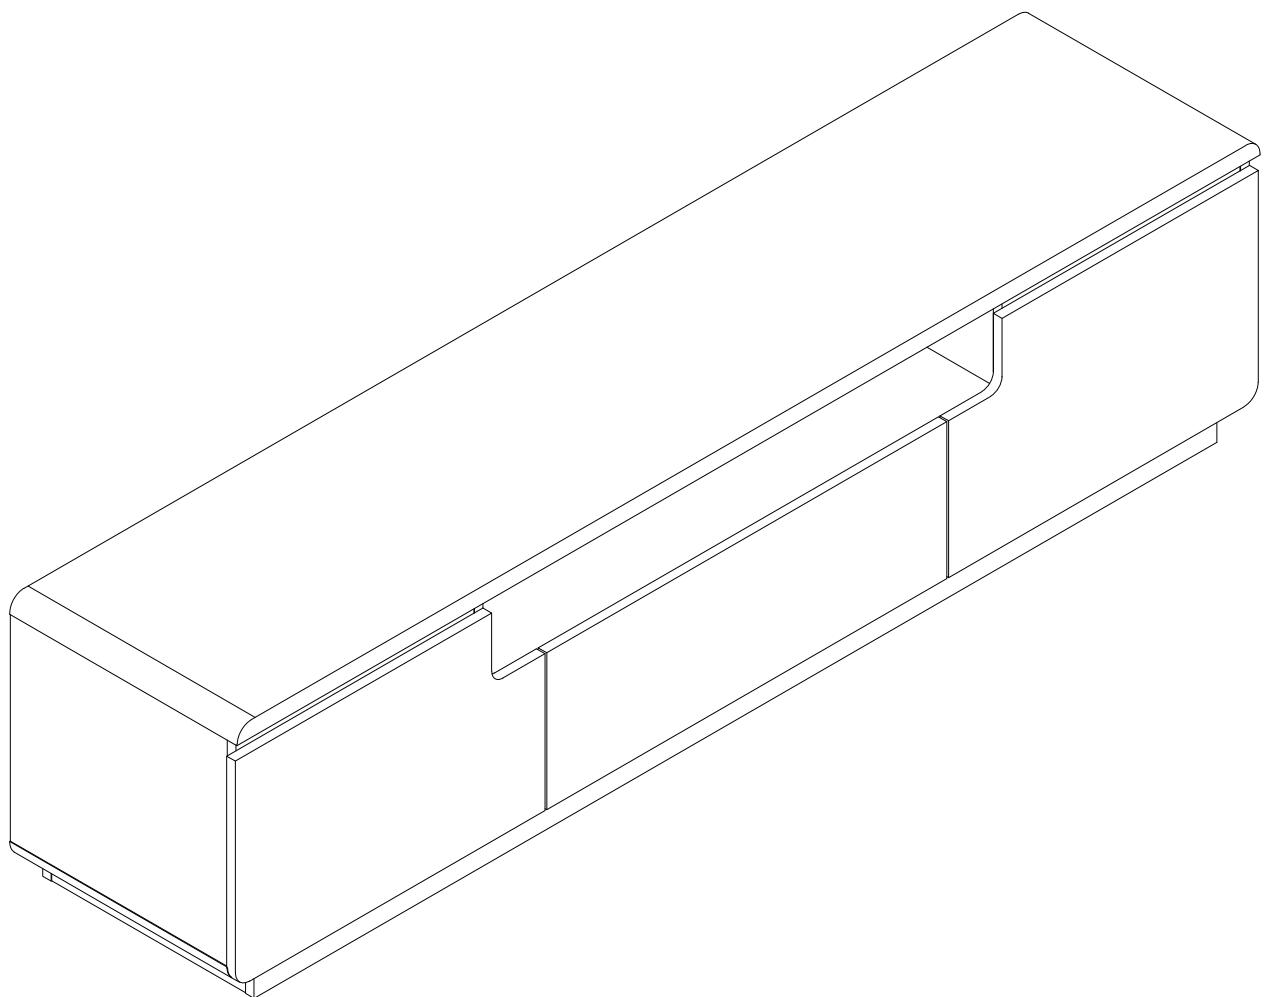

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface surface of furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void.