


ASSEMBLY INSTRUCTION

SPACESAVER MKII MODULE 4 DRAWER 1590

ITEM CODE 82076

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 937 566

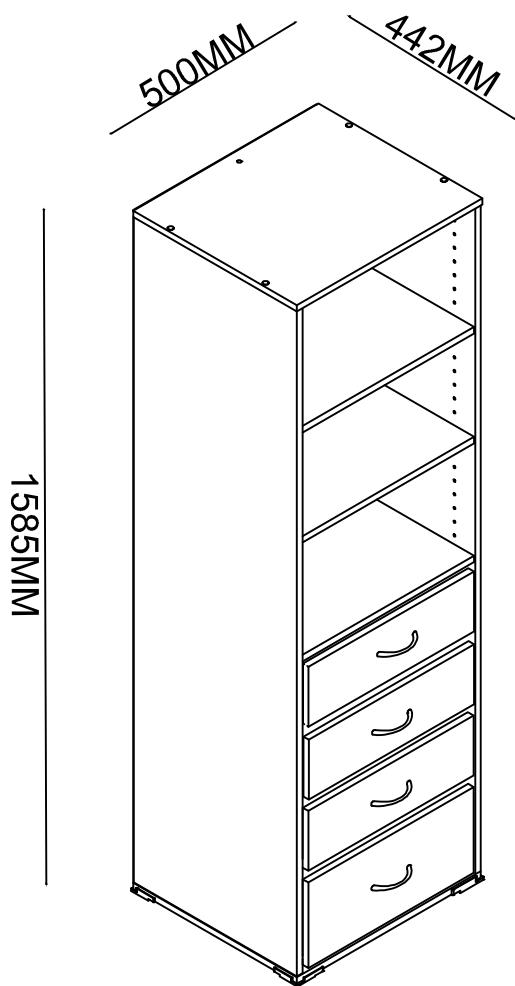


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 937 566


PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

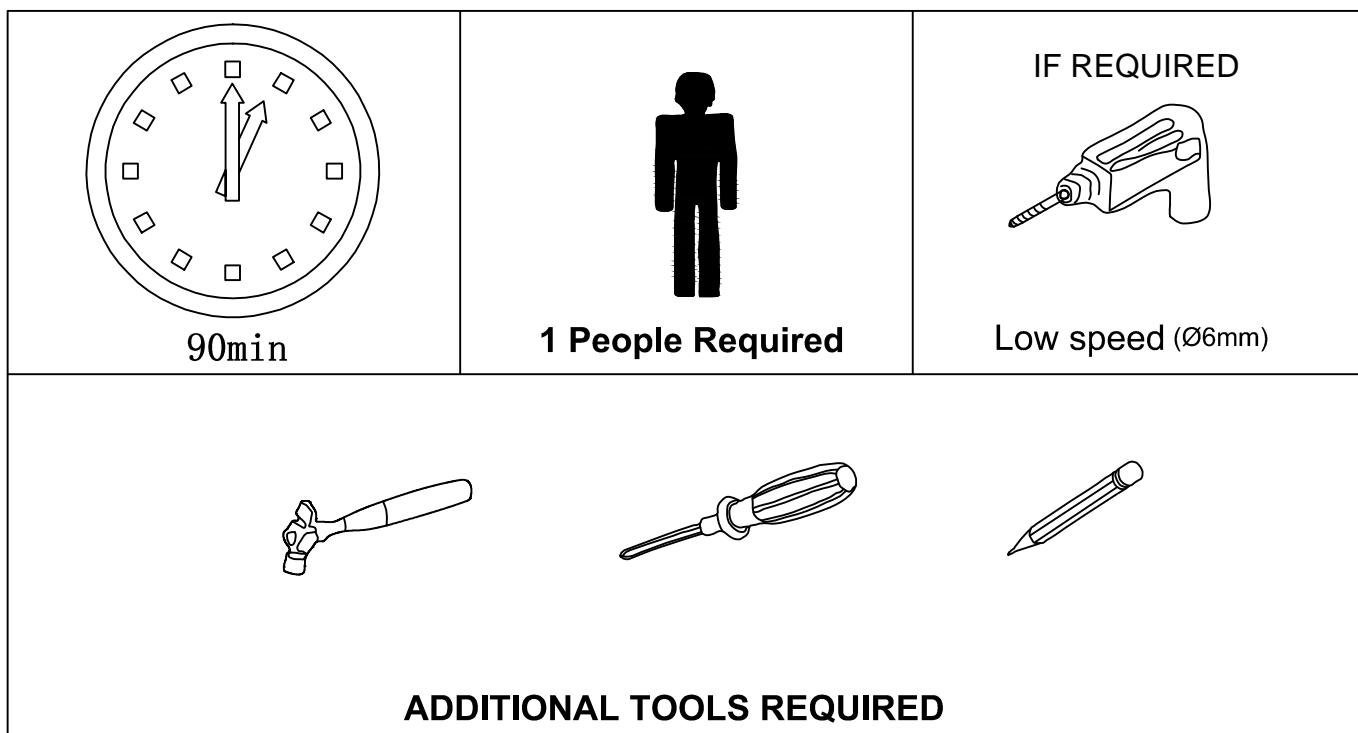

⚠ WARNING

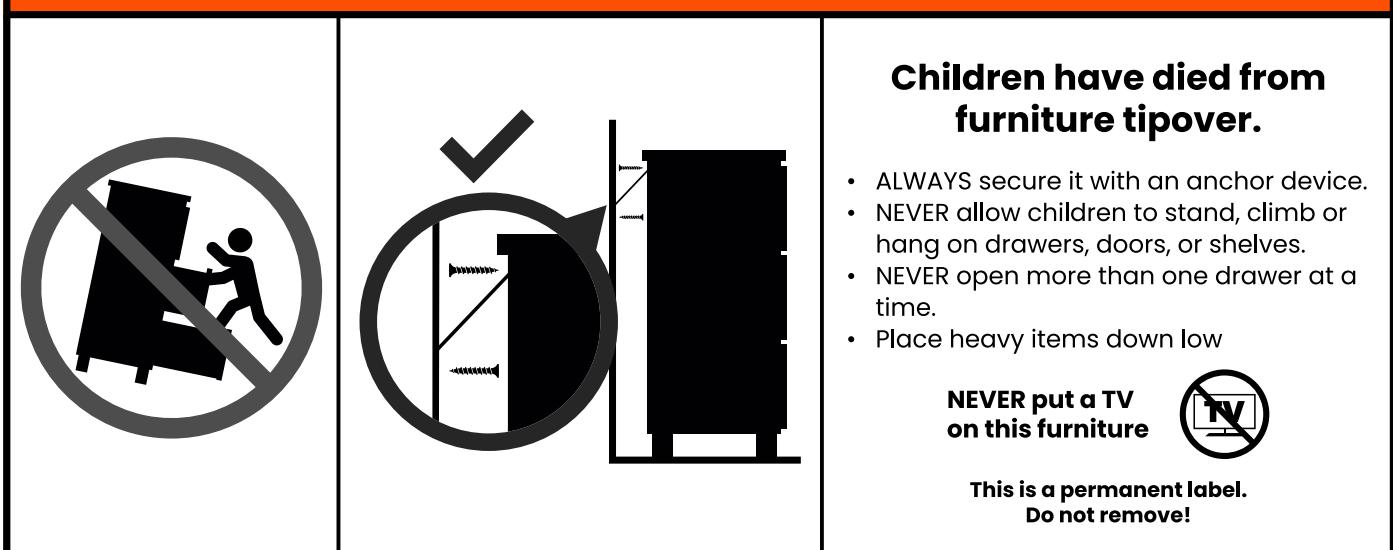


TO USE CAM LOCK FASTENERS

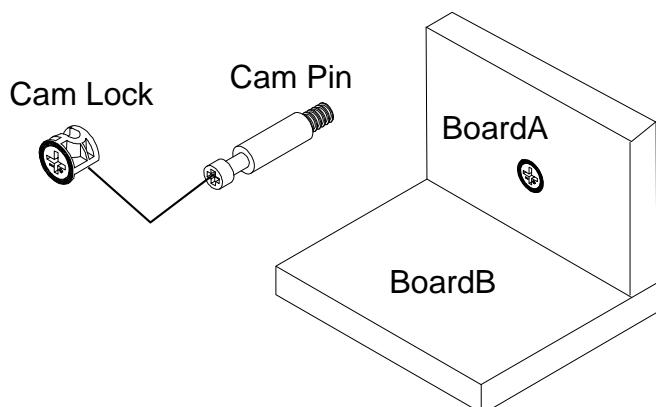


To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).

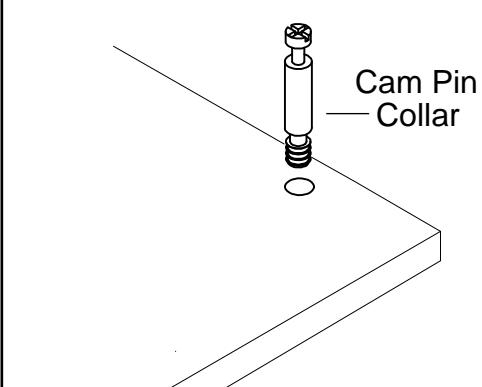


The Cam Pin is inserted into the flat side of a board, it is important that: The cam pin is kept vertical and is not put in on an angle. Cam pin is to be inserted up to collar Too far and it wont catch the Cam Lock (Do Not Overtighten) Not enough and the resulting product will not be stable.

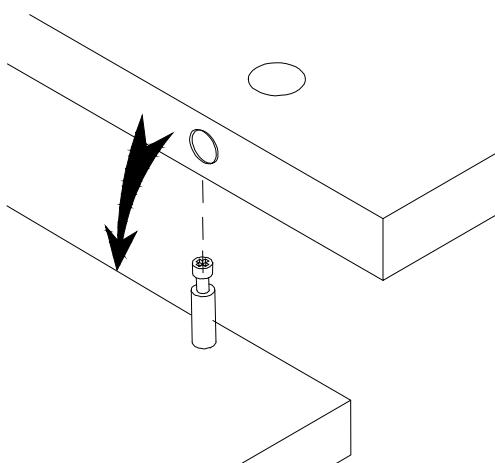

Now fit the hole in the edge of the joining board over the Cam Pin.

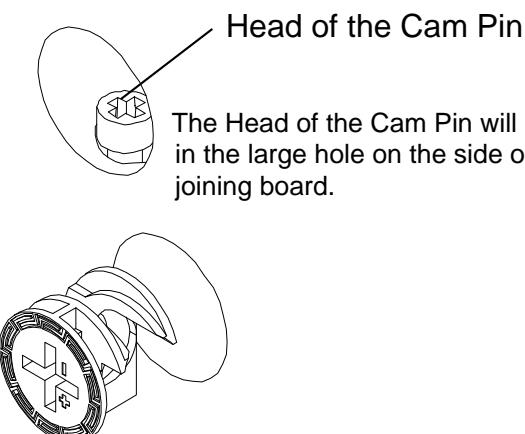


The Head of the Cam Pin will be visible in the large hole on the side of the joining board.

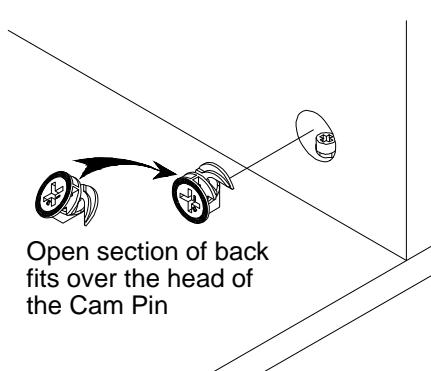


Open section of back fits over the head of the Cam Pin

Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin.

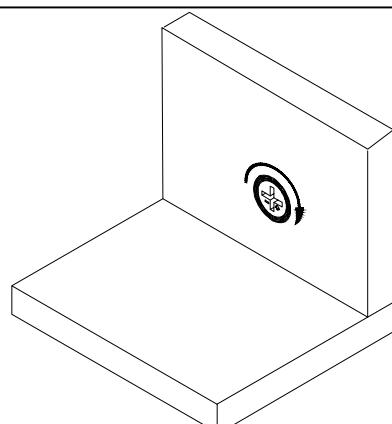

Use a Flat screwdriver to turn the Cam Lock clockwise one half turn so it locks onto the head of the Cam Pin. Turn only until it is snug. Over tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (Counter-clockwise) one full turn, and try the Cam Lock again.

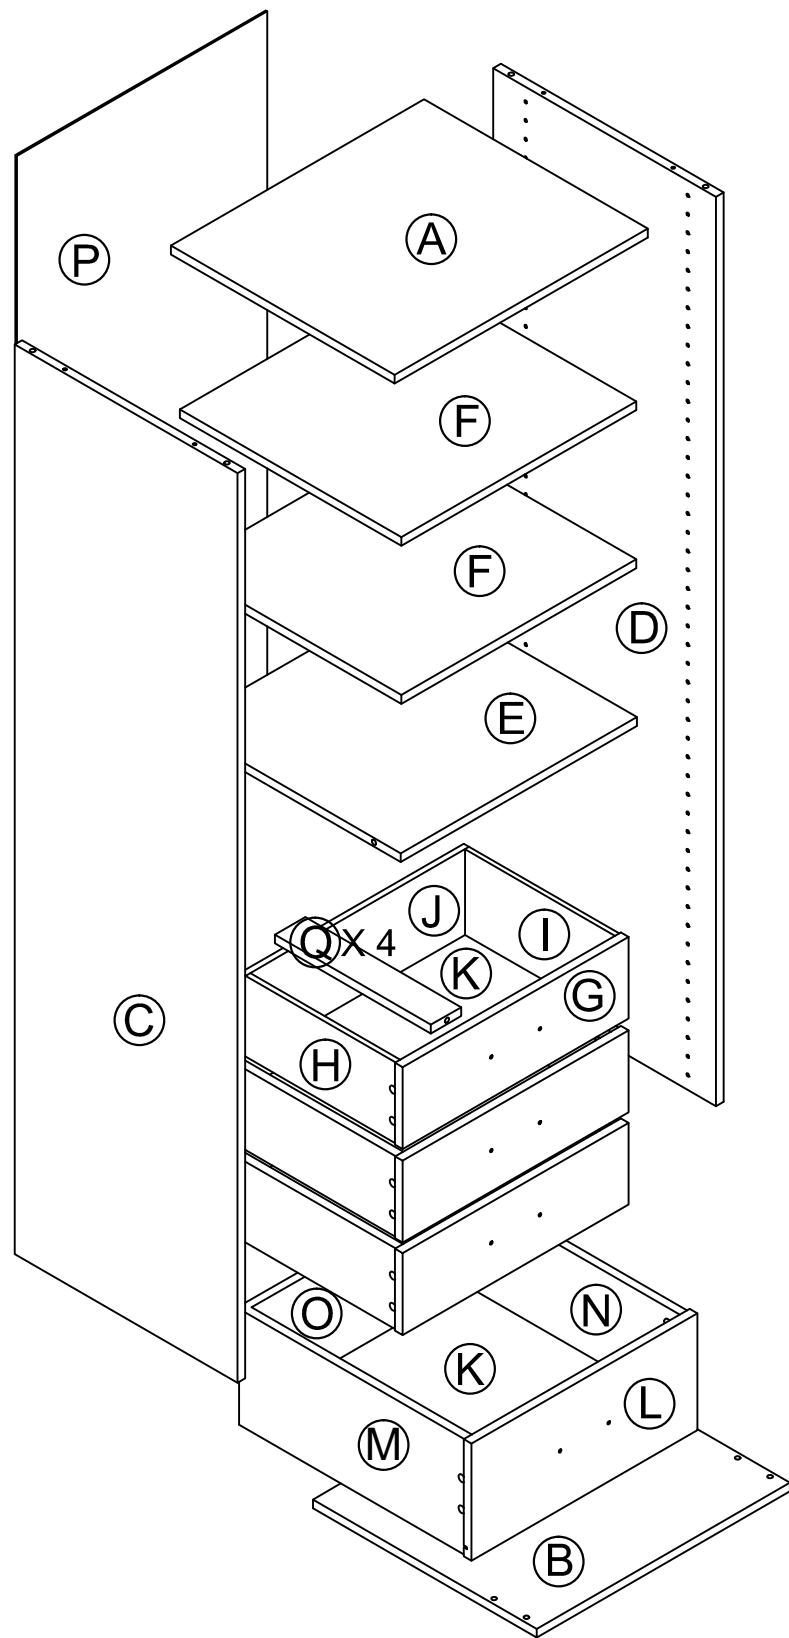


Item Code- 82076

Panel(Mark)	Packing carton	Quantily	Picture	Dimension
A	(Box 2)	1 PC		500 x 442 x 15mm
B	(Box 2)	1 PC		500 x 442 x 15mm
C	(Box 1)	1 PC		1555 x 440 x 15 mm
D	(Box 1)	1 PC		1555 x 440 x 15 mm
E	(Box 1)	1 PC		466 x 437 x 15mm
F	(Box 1)	2 PCS		464 x 437 x 15mm
G	(Box 2)	3 PCS		446 x 140 x 15mm
H	(Box 2)	3 PCS		400 x 136 x 15mm
I	(Box 2)	3 PCS		400 x 136 x 15mm
J	(Box 2)	3 PCS		410 x 136 x 15mm
K	(Box 1)	4 PCS		419 x 394 x 3mm
L	(Box 2)	1 PC		446 x 200 x 15mm
M	(Box 2)	1 PC		400 x 196 x 15mm
N	(Box 2)	1 PC		400 x 196 x 15mm
O	(Box 2)	1 PC		410 x 196 x 15mm
P	(Box 1)	1 PC		1581 x 492 x 3mm
Q	(Box 2)	4 PCS		384 x 60 x 15mm

Please note - All Hardwares in box 2.


	24 PCS Ø15 x 12 mm		24 PCS Ø6 x 34 mm		8 PCS Ø8 x 30 mm		8 PCS Ø10 x Ø7 x 50 mm		4 PCS Ø15 x Ø3 x 7 mm		53 PCS Ø4 x Ø2 x 15 mm		4 PCS 65 x 65 x 13 mm		16 PCS Ø6 x 10 mm
	4 Sets 16"		32 PCS Ø3.5 x 14 mm		24 PCS Ø8 x Ø4 x 33 mm		4 PCS 115 x 10 x30 mm		8 PCS Ø8 x M4 x 19 mm		8 PCS Ø5 x 22 x 9 x 17mm		16 PCS Ø17.5 x 4 mm		1 PC 20 x 40 x 1.2mm
	1 PC Ø9 x Ø6 x 25mm		1 PC Ø9 x Ø4 x 15mm		1 PC Ø9 x Ø4 x 25mm										

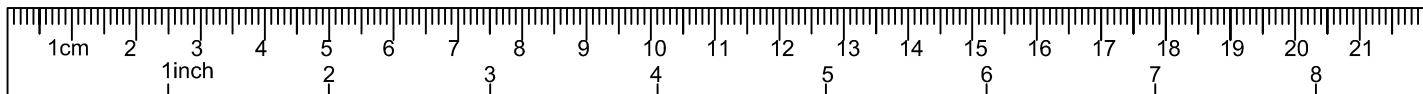

1

② x 4

③ x 8

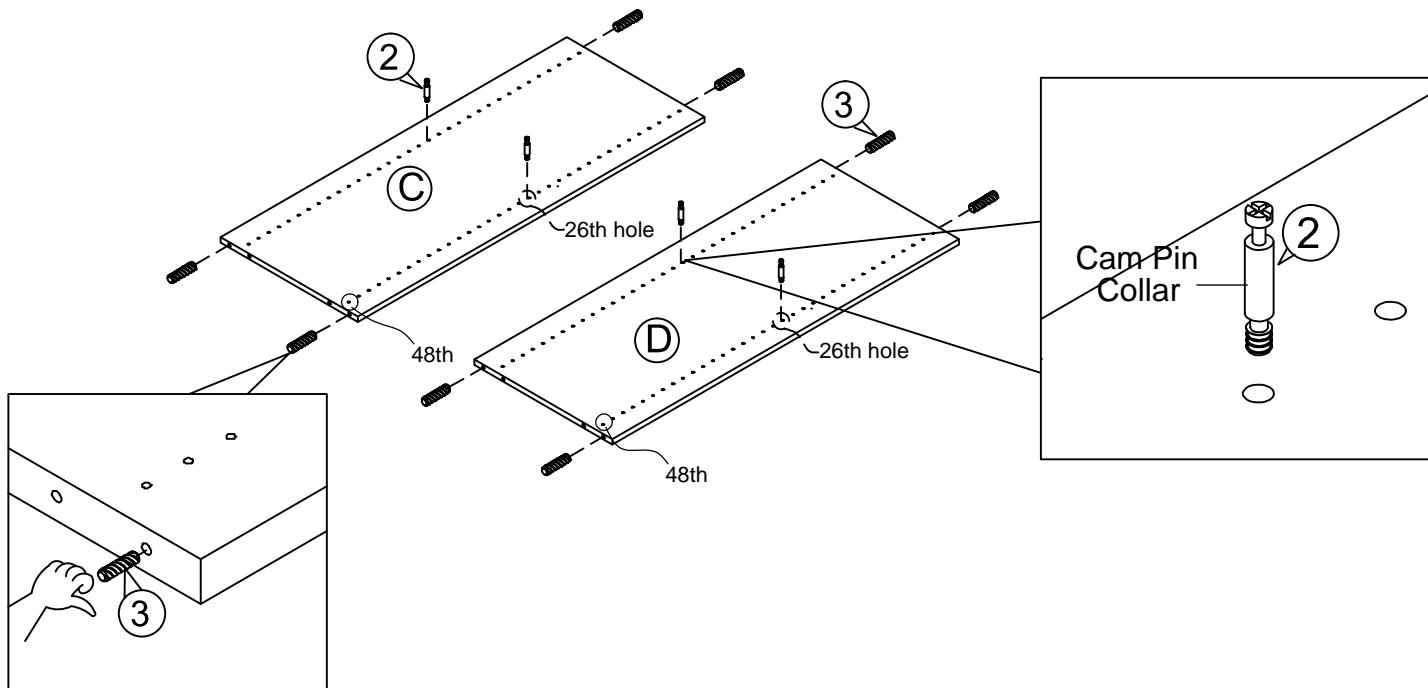


2

⑧ x 16




⑨a x 4

⑨c x 4




⑩ x 8

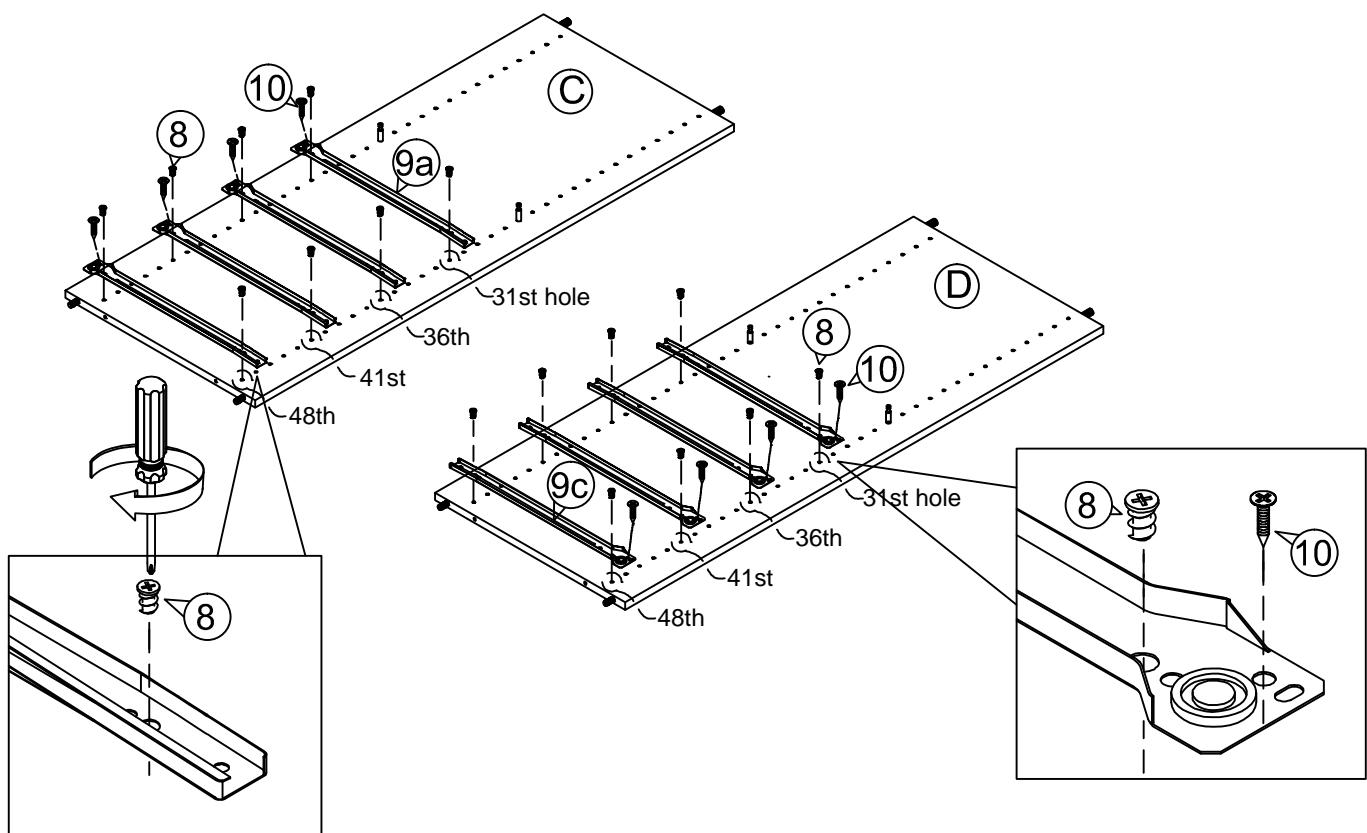

3

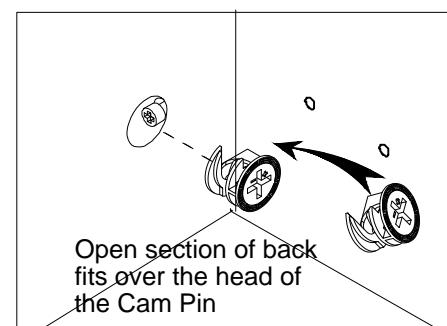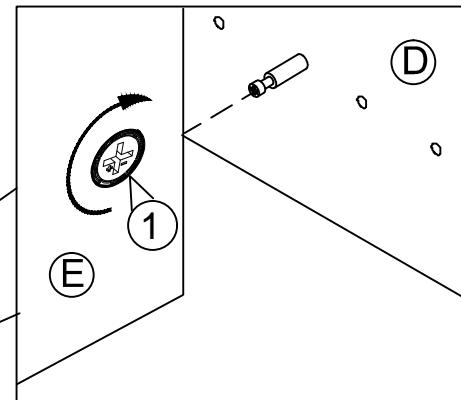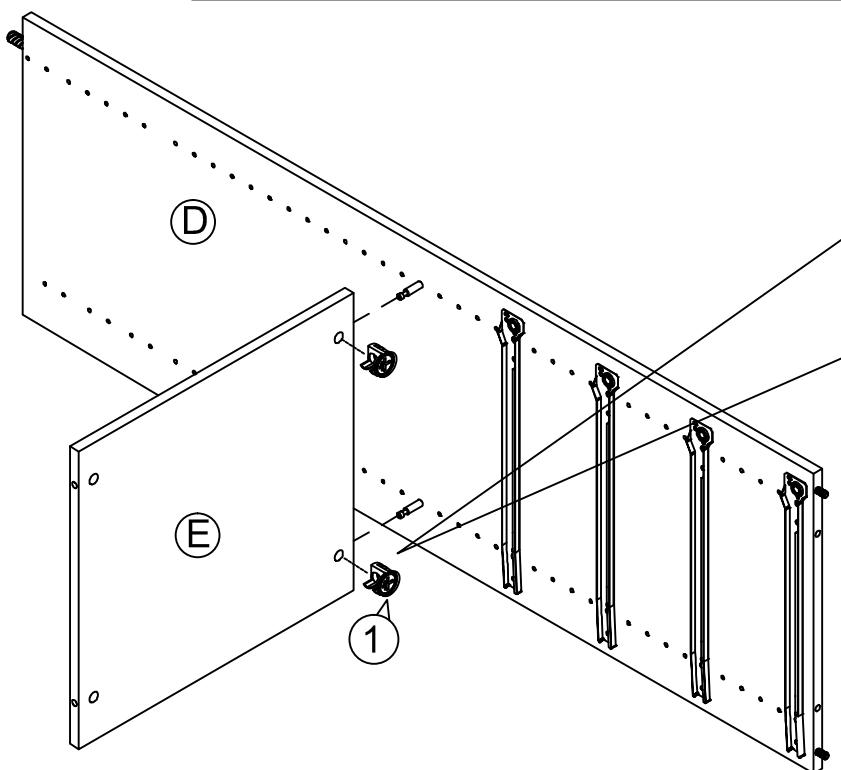


4

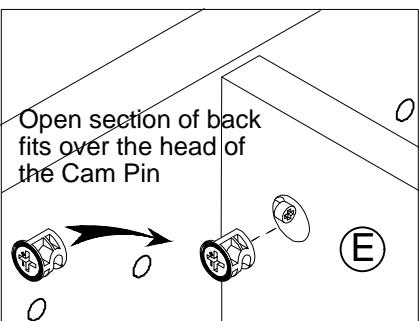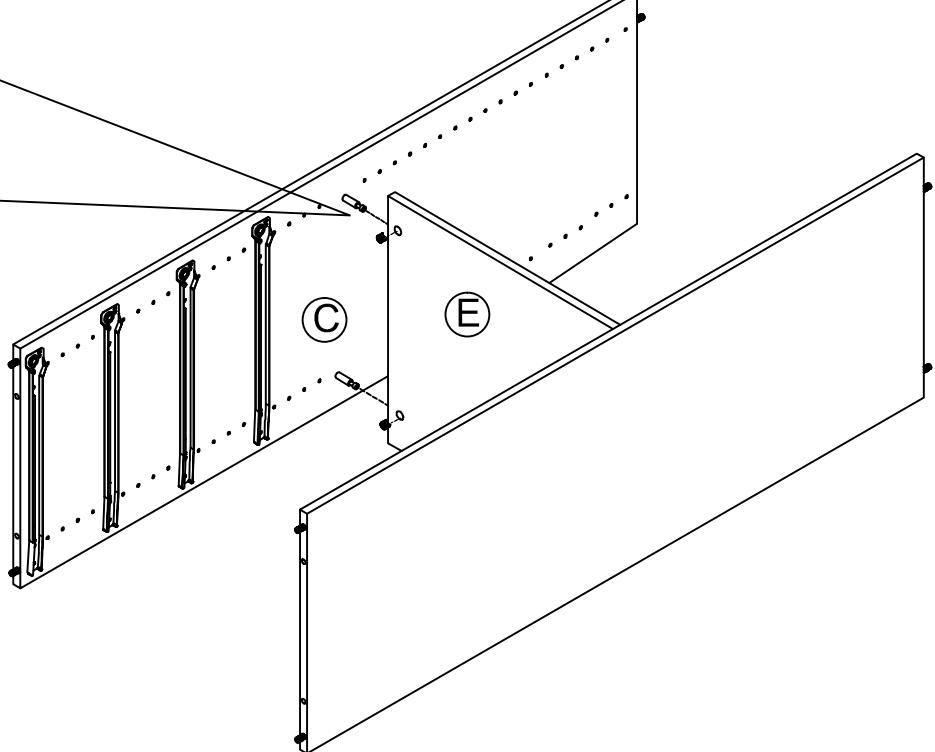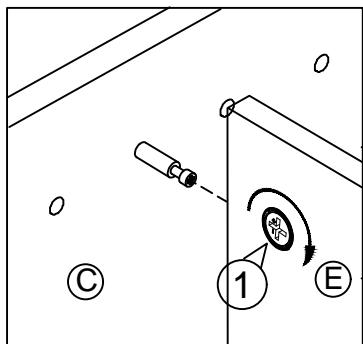


5

④ x 4


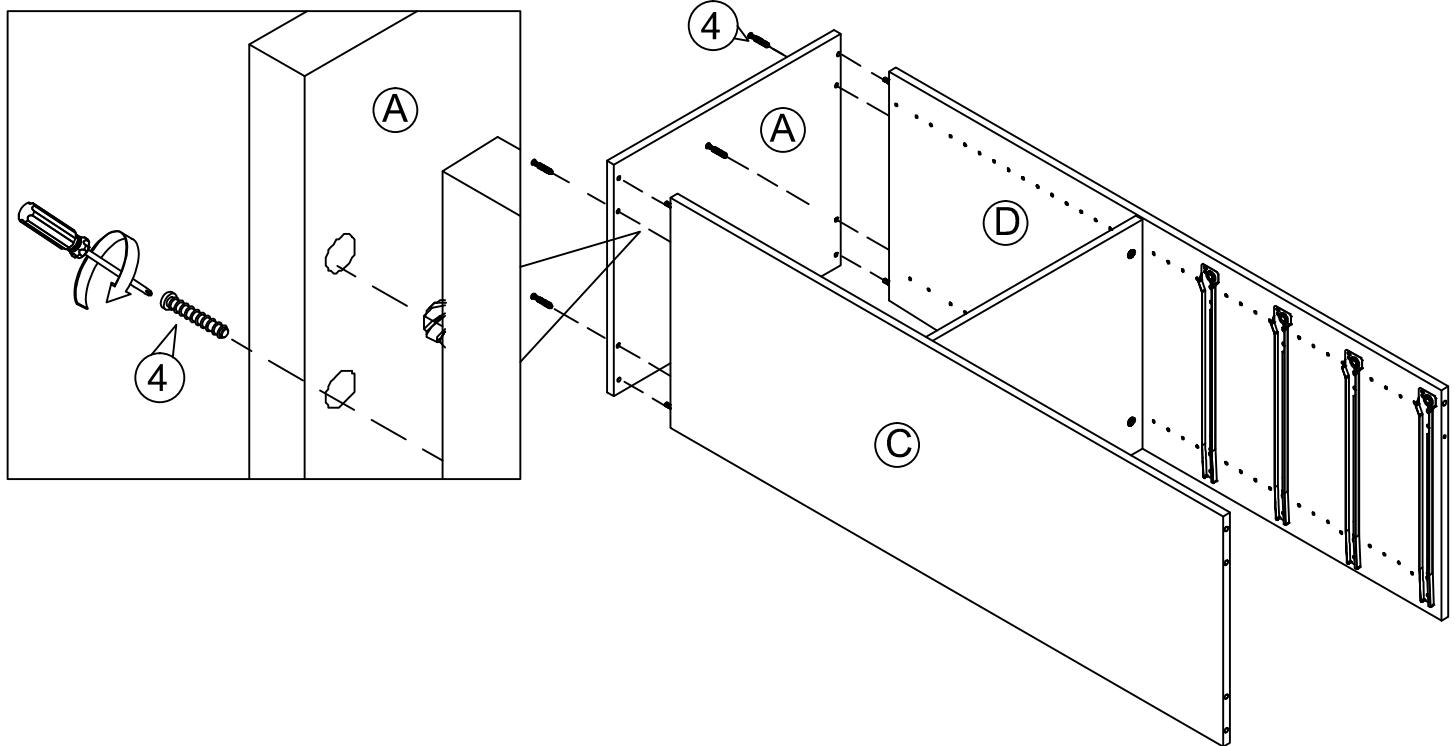


6



④ x 4

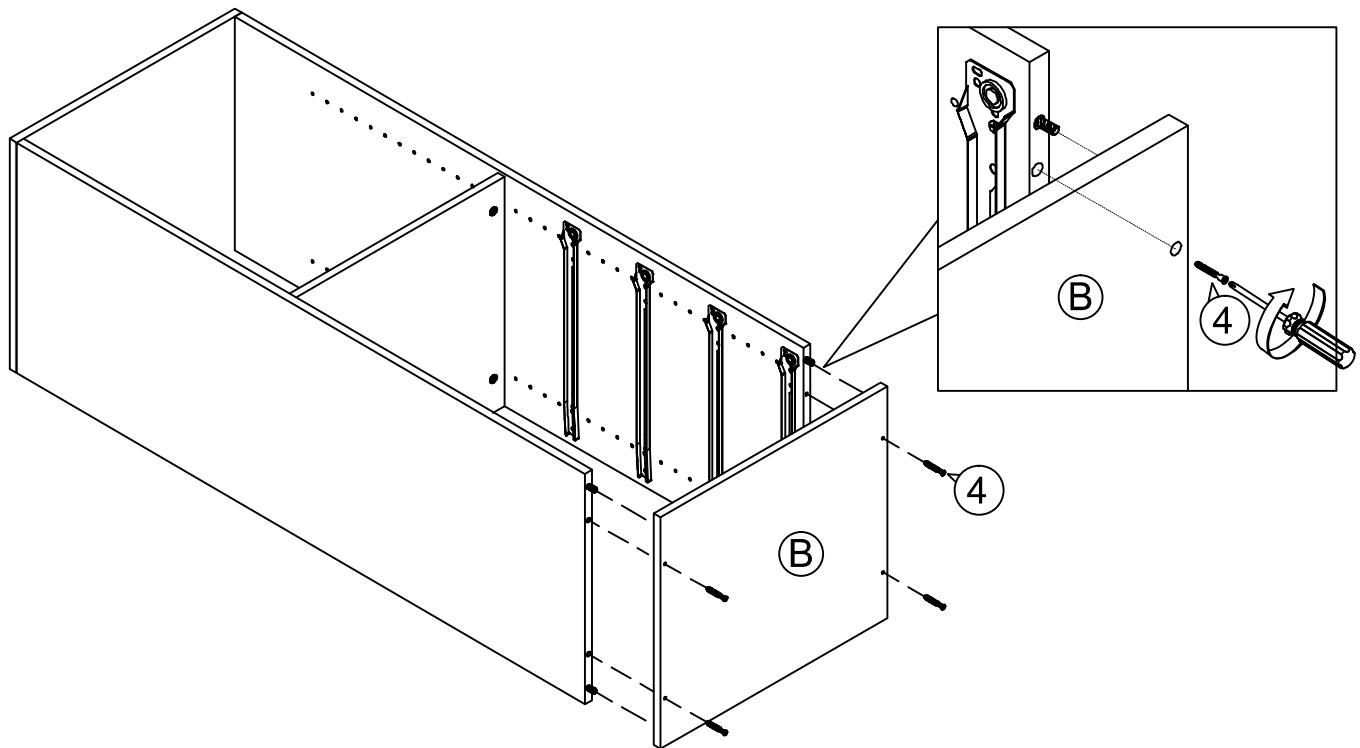

7

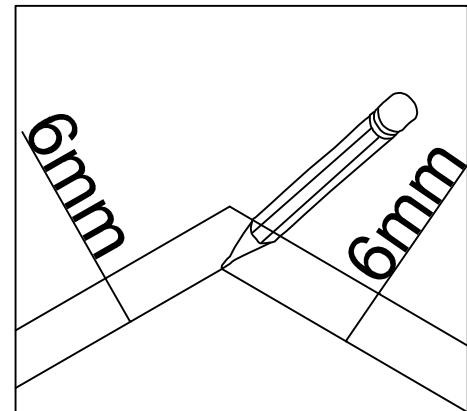
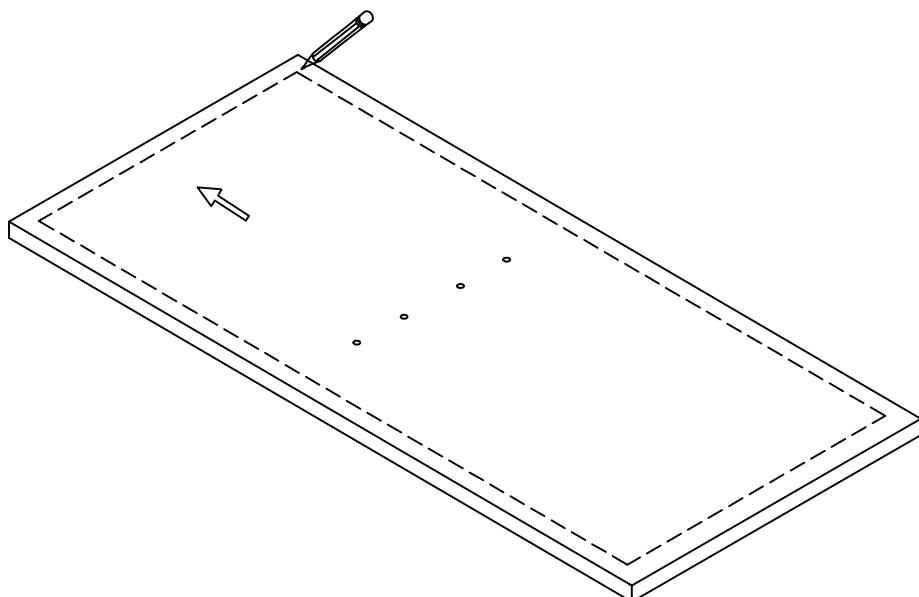


8

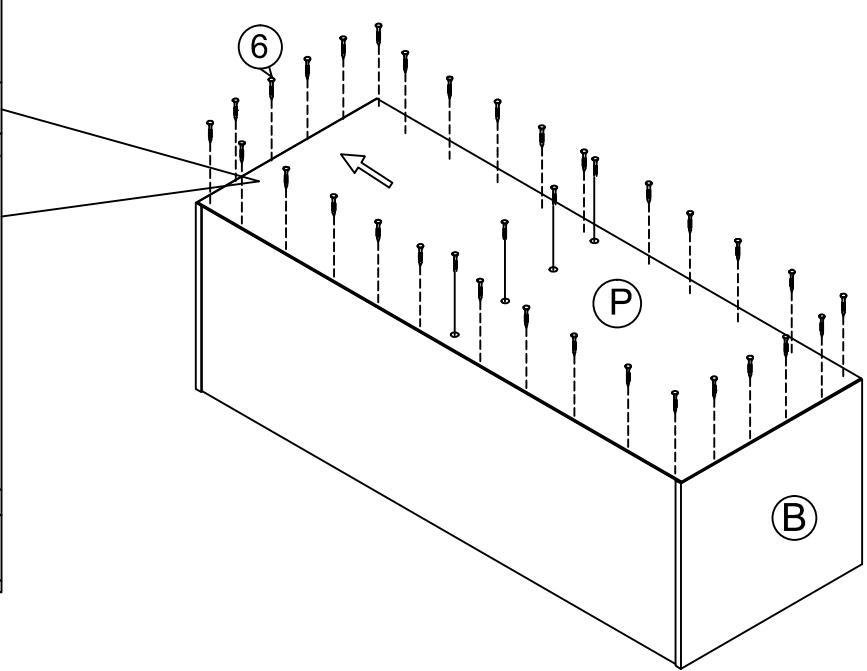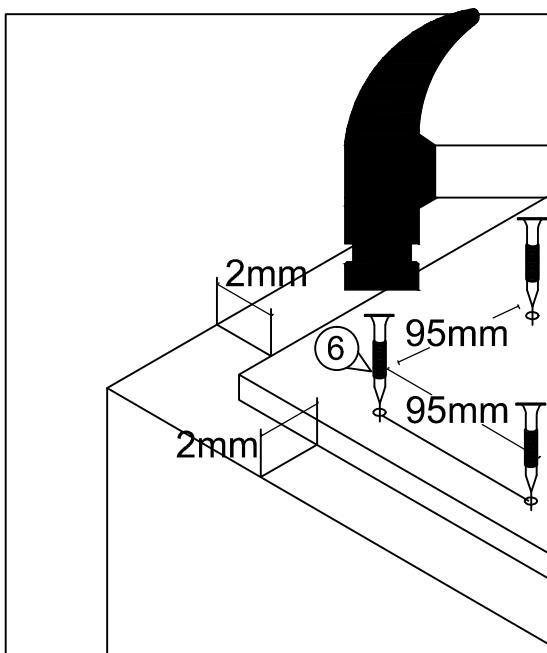



9

6 x 8 7 x 4

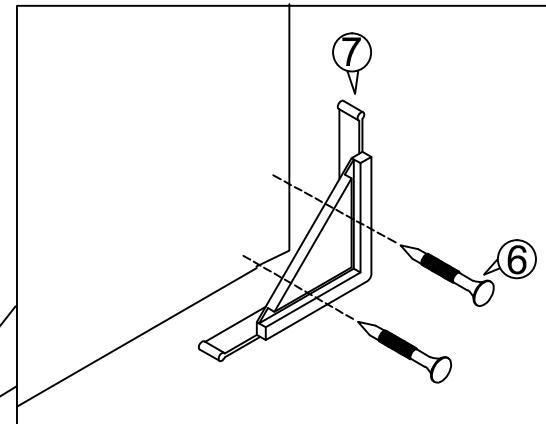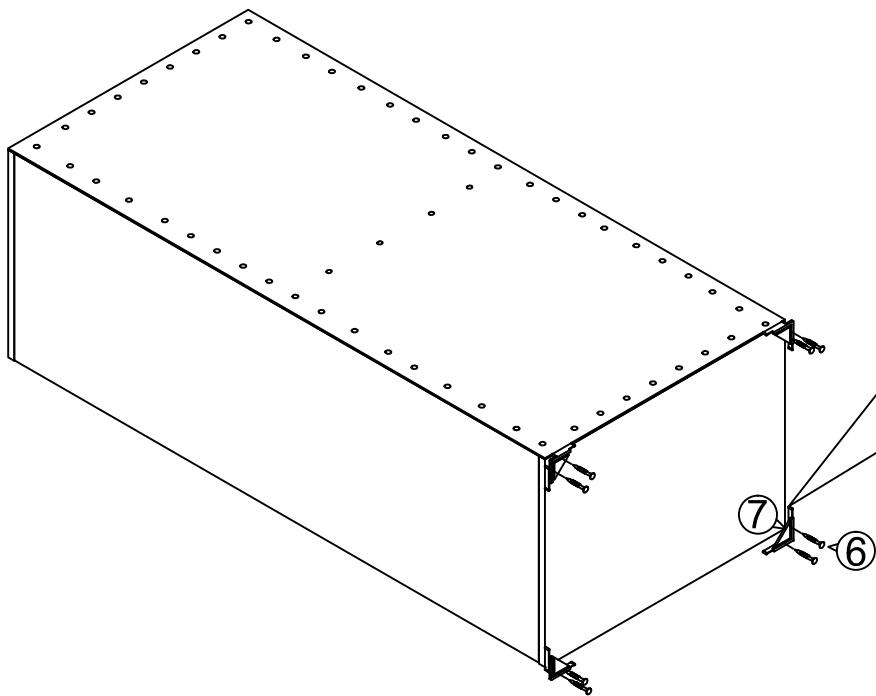


10


14 x 8

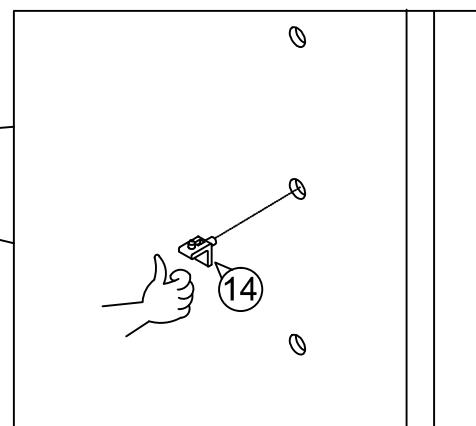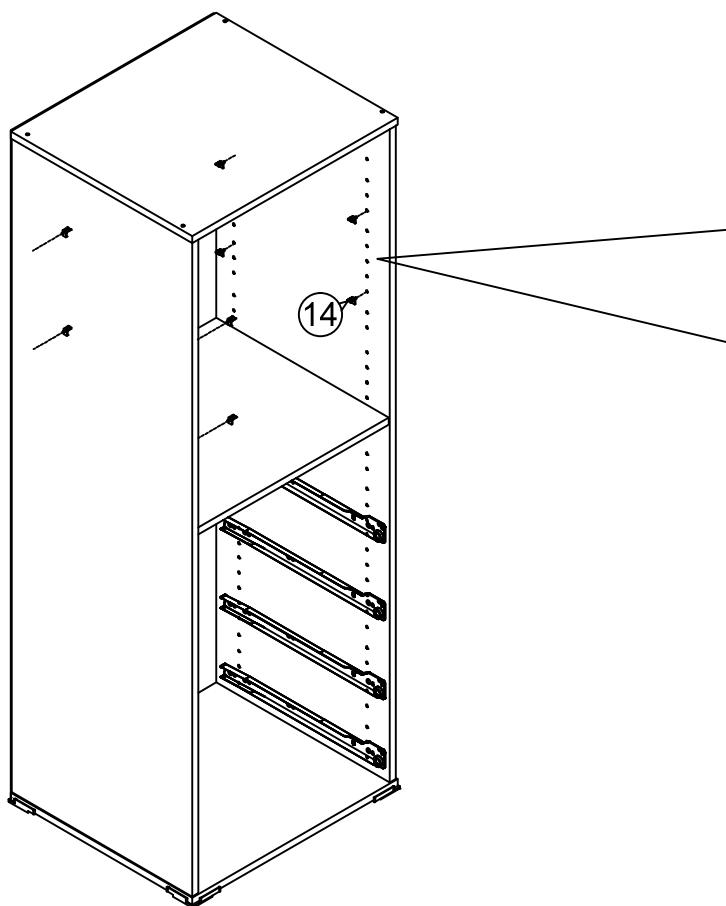


11

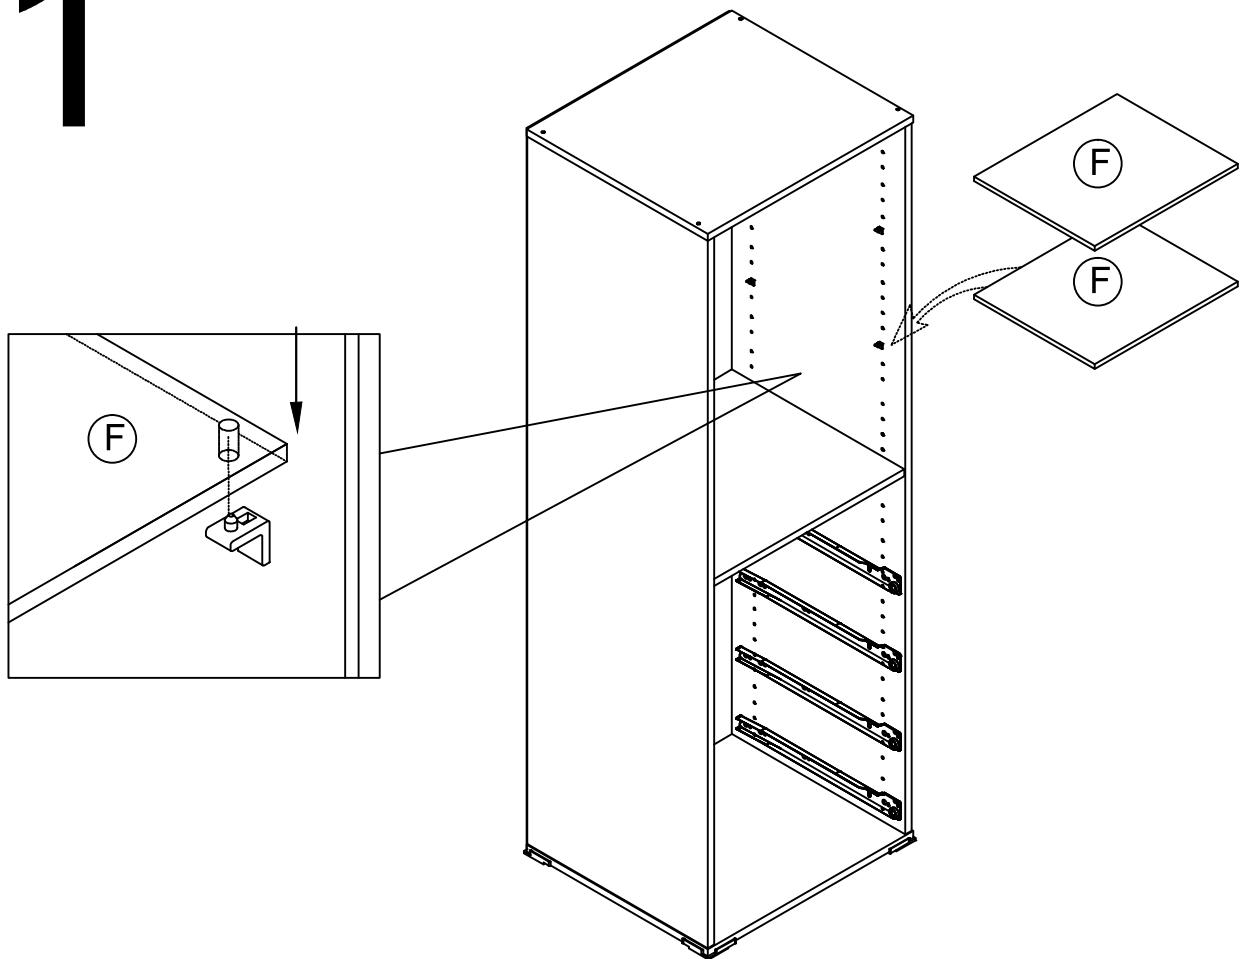


12

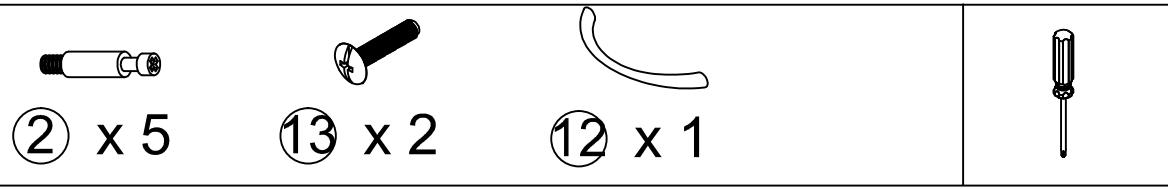


X 3

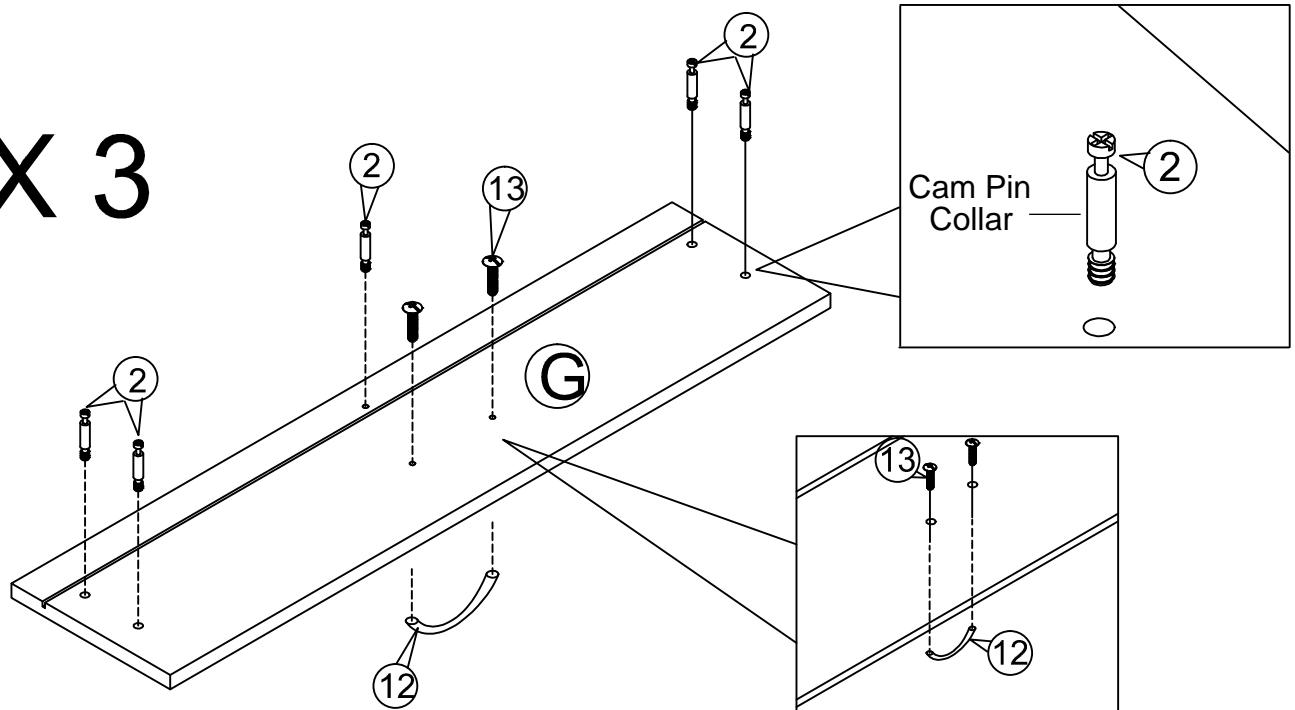

13

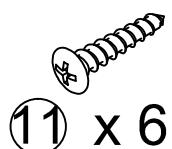


11 x 6

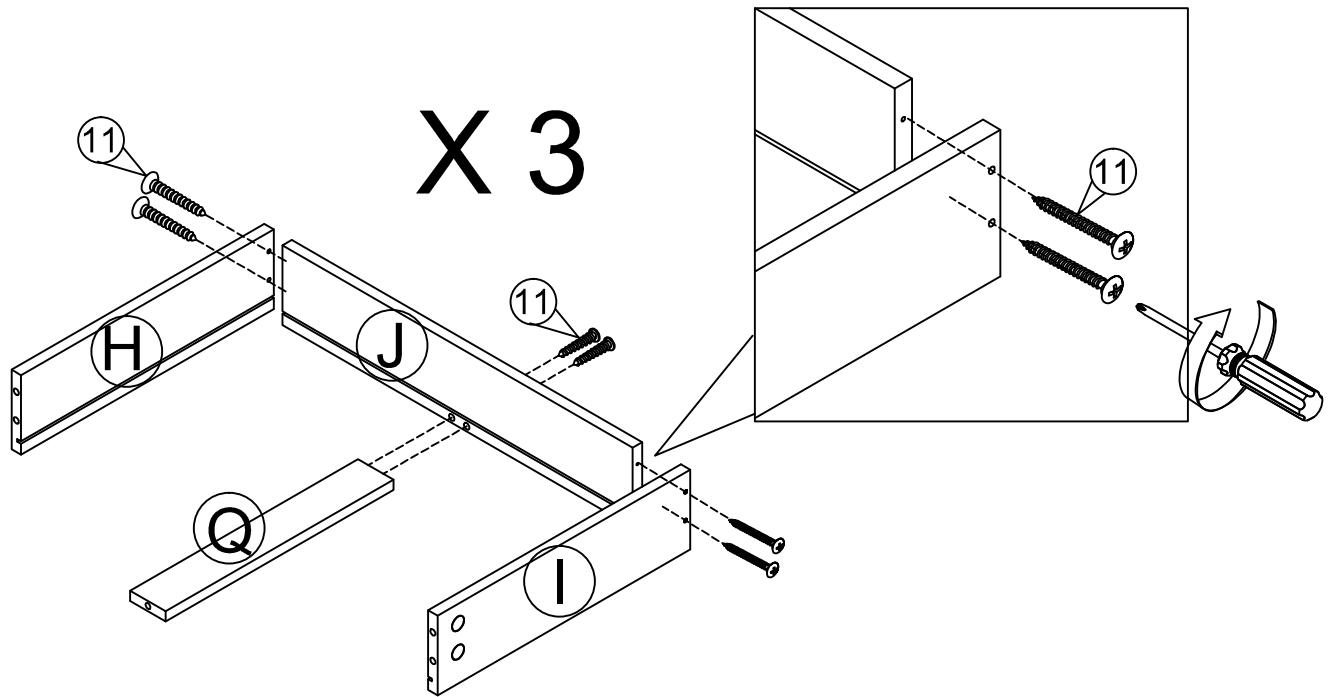


14

X 3

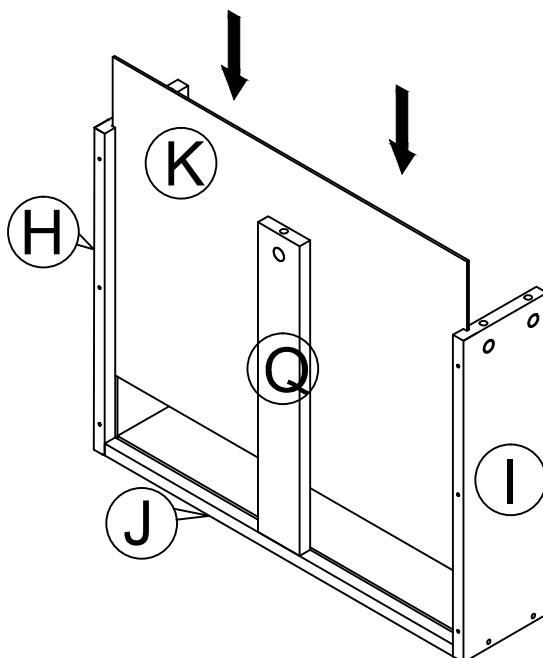

15

① x 5

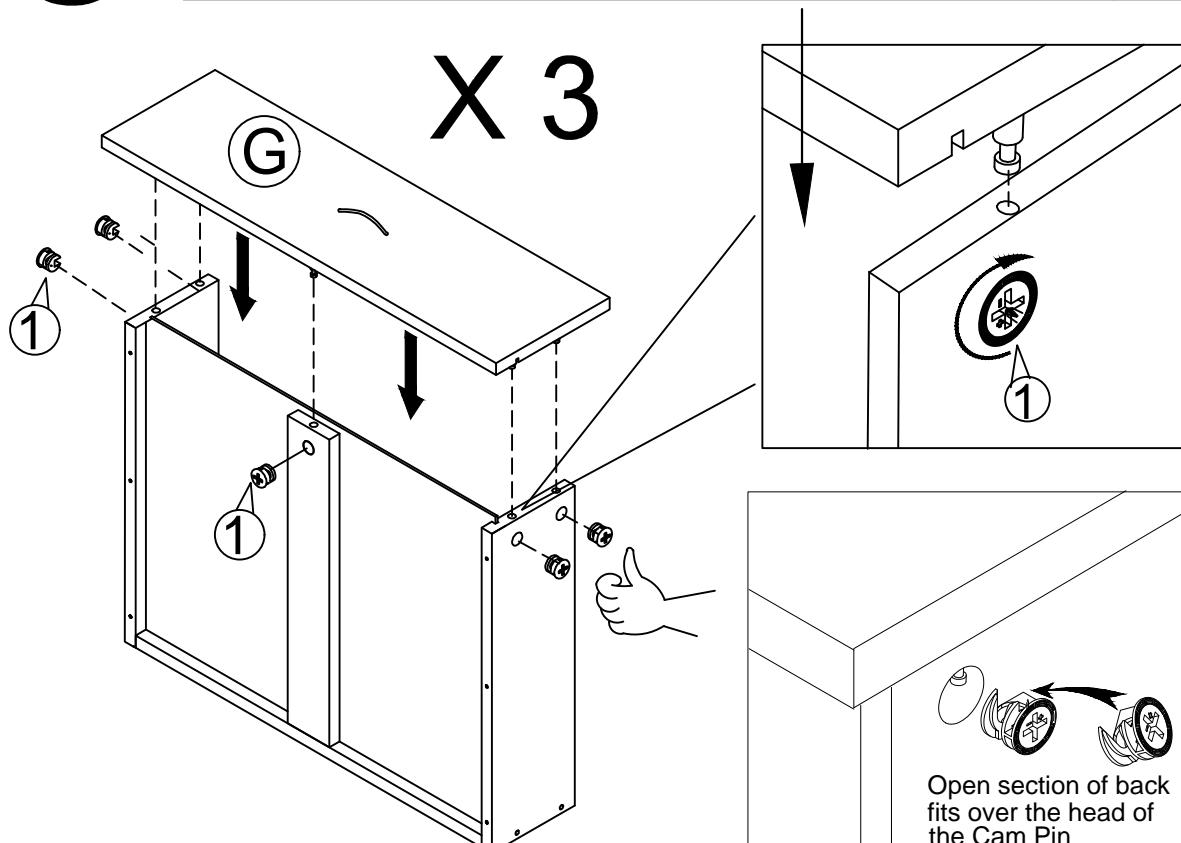

16


⑩ x 6

⑨b x 1


⑨d x 1




X 3

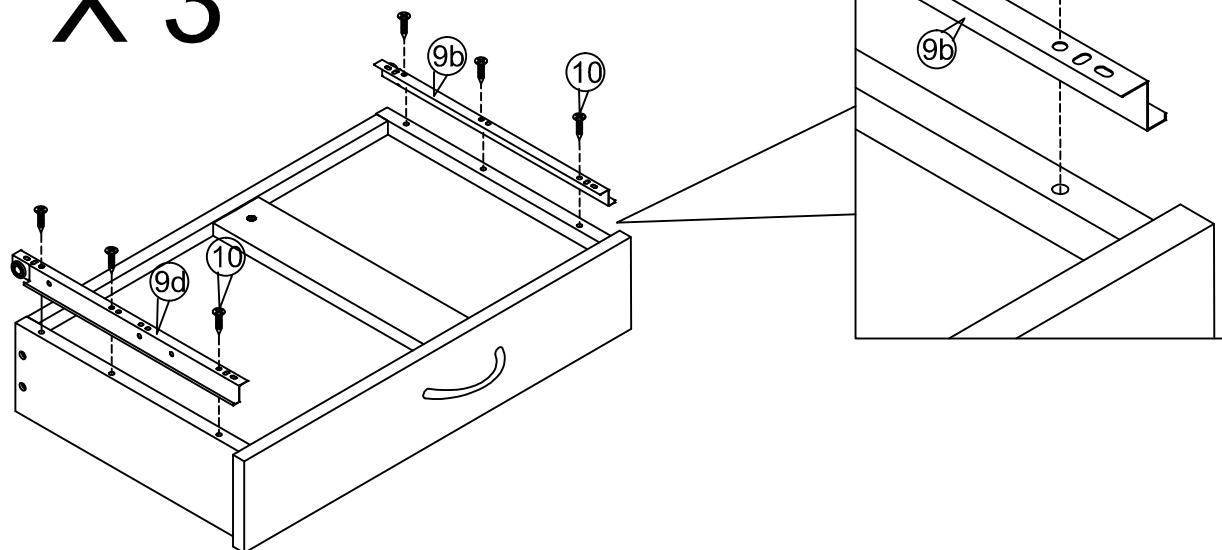


17

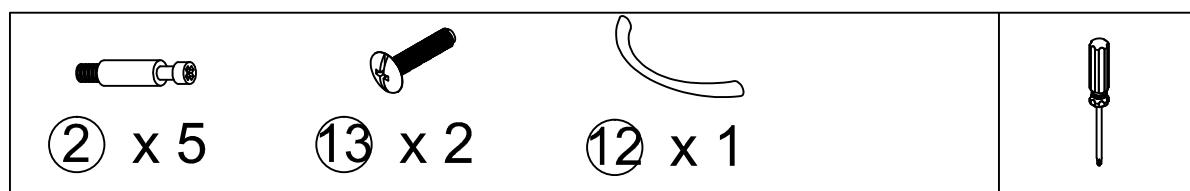


X 1

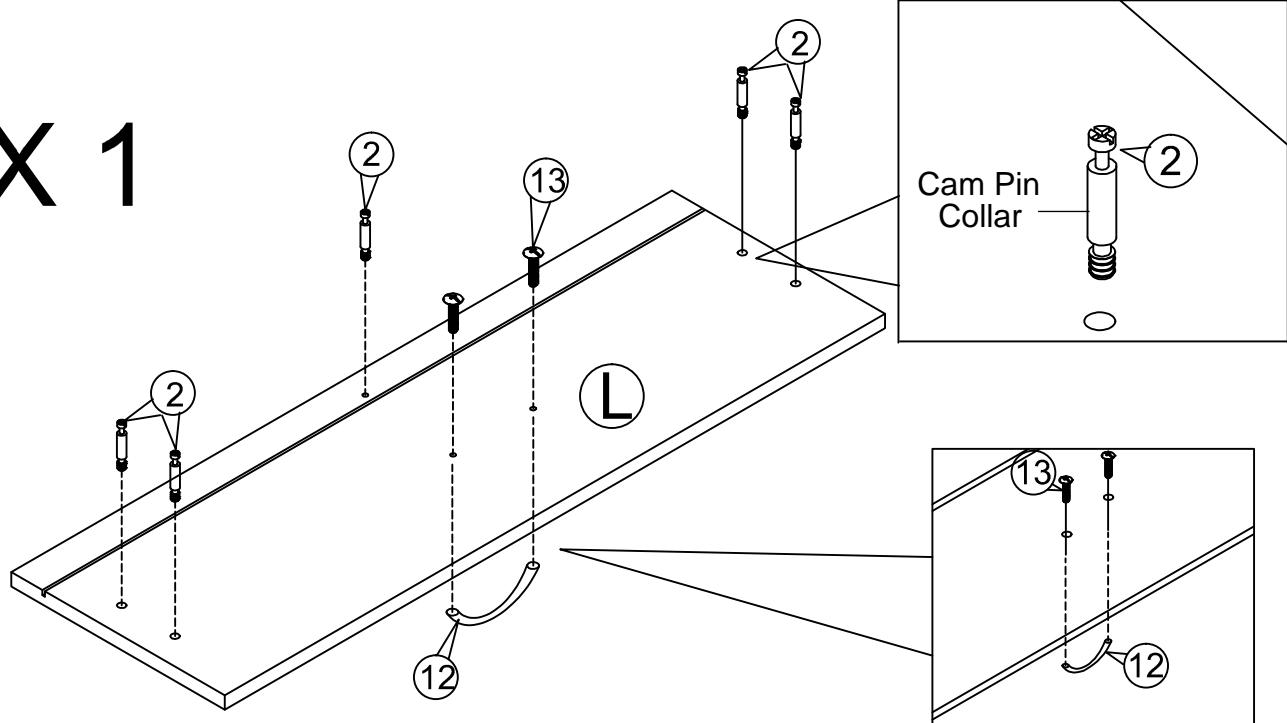

18

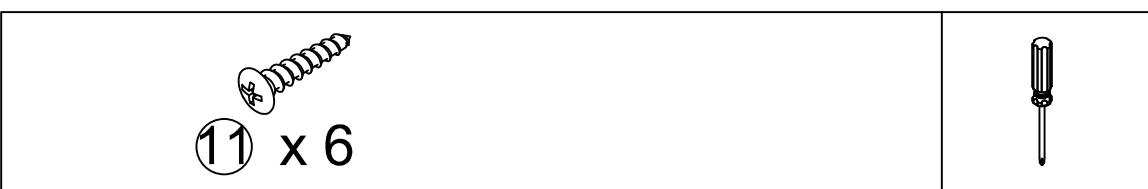


X 1

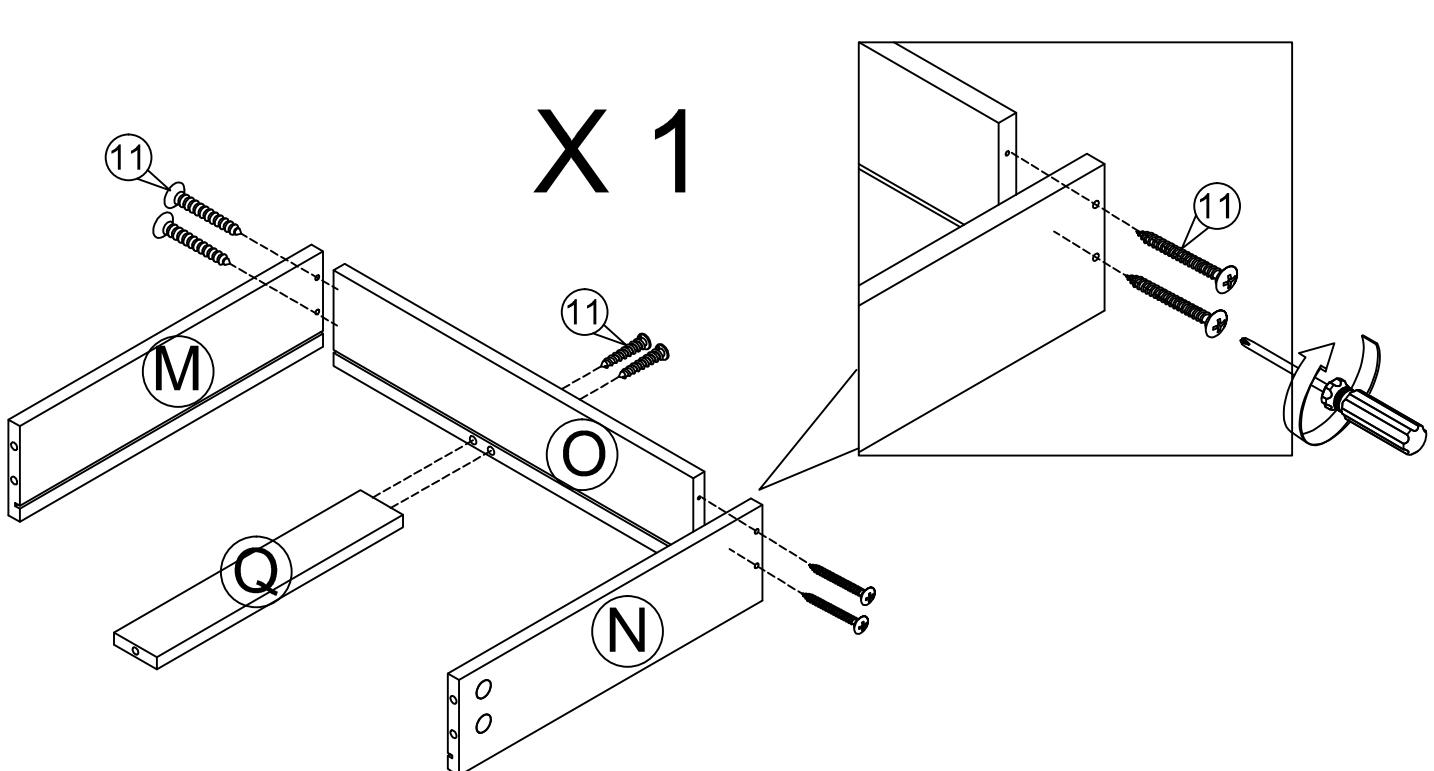




19

X 1

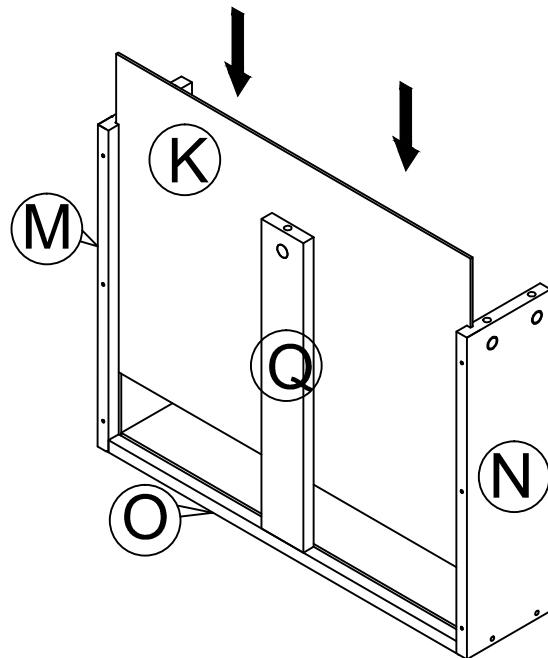

20

① x 5

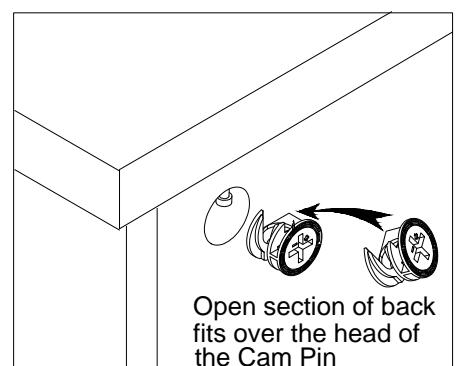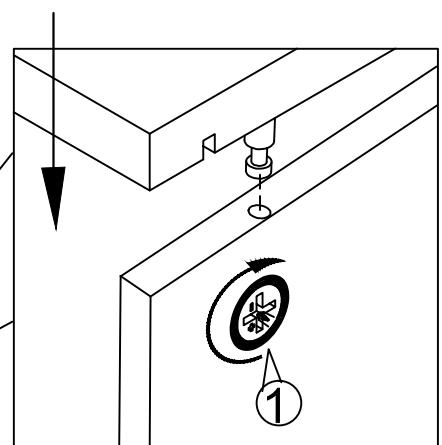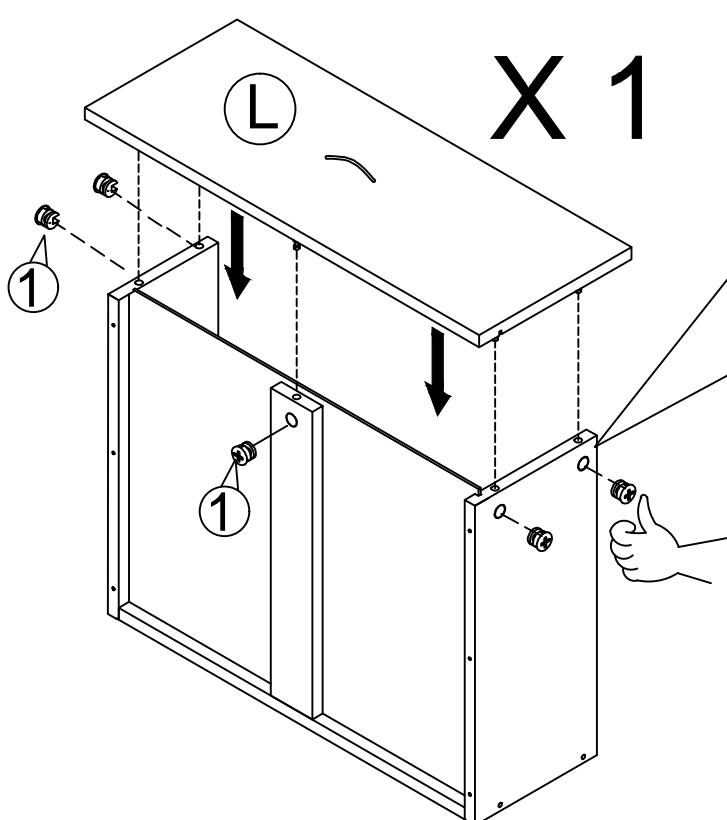


21

10 x 6

9b x 1



9d x 1


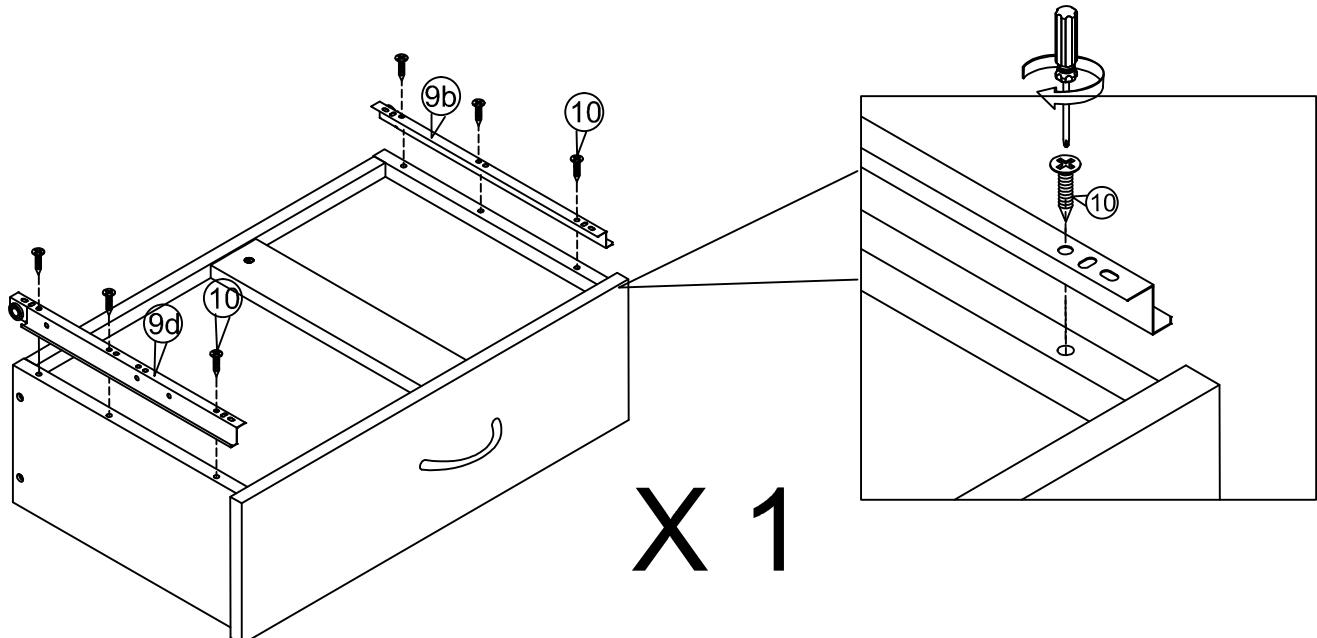


22

5 x 4



15 x 16

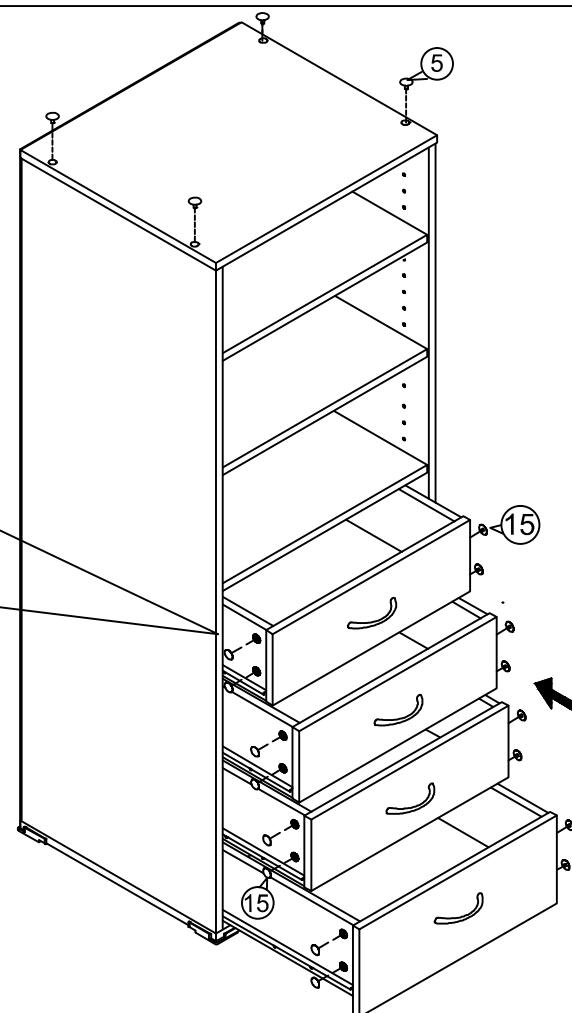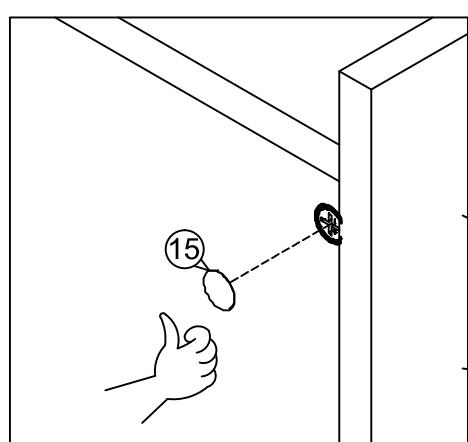

SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.


HARDWARE



1 PC
20 x 40 x 1.2mm
Wall Bracket

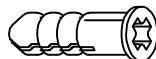


1 PC
Ø9 x Ø6 x 25mm
Plastic Screw

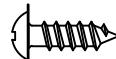


1 PC
Ø9 x Ø4 x 15mm
Screw




1 PC
Ø9 x Ø4 x 25mm
Screw

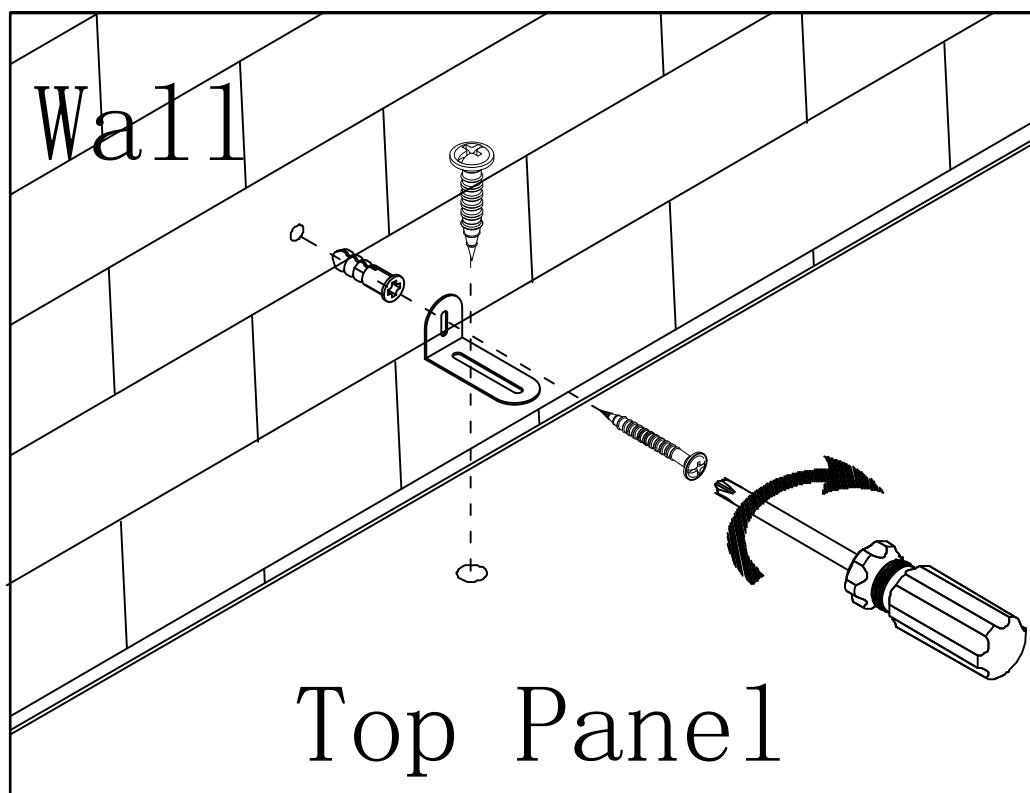


23

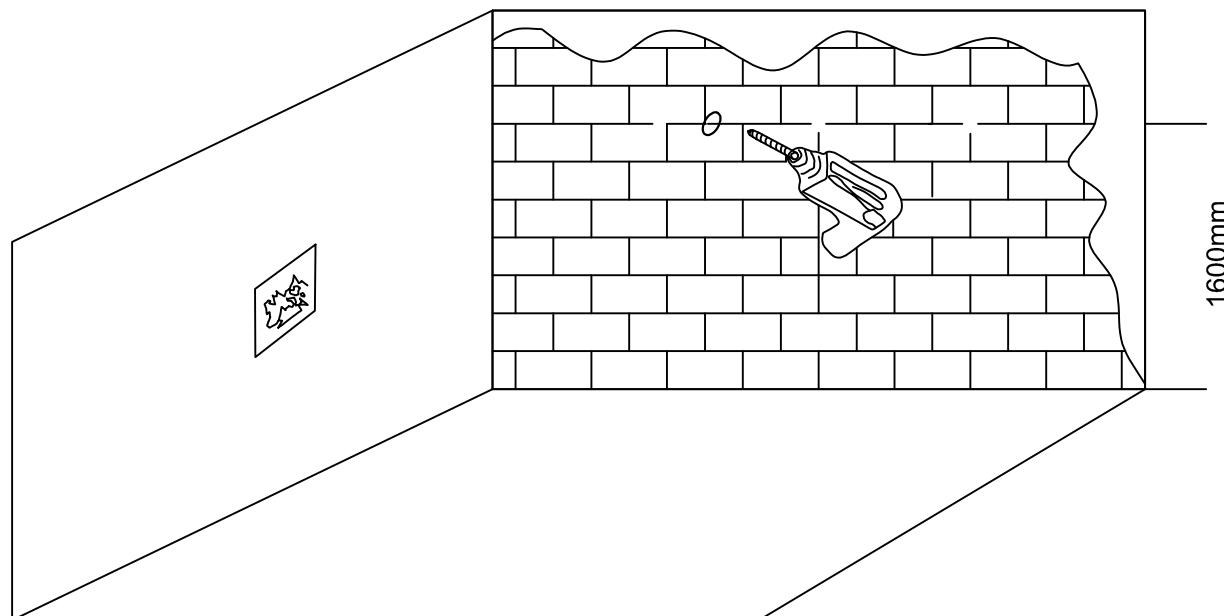


24

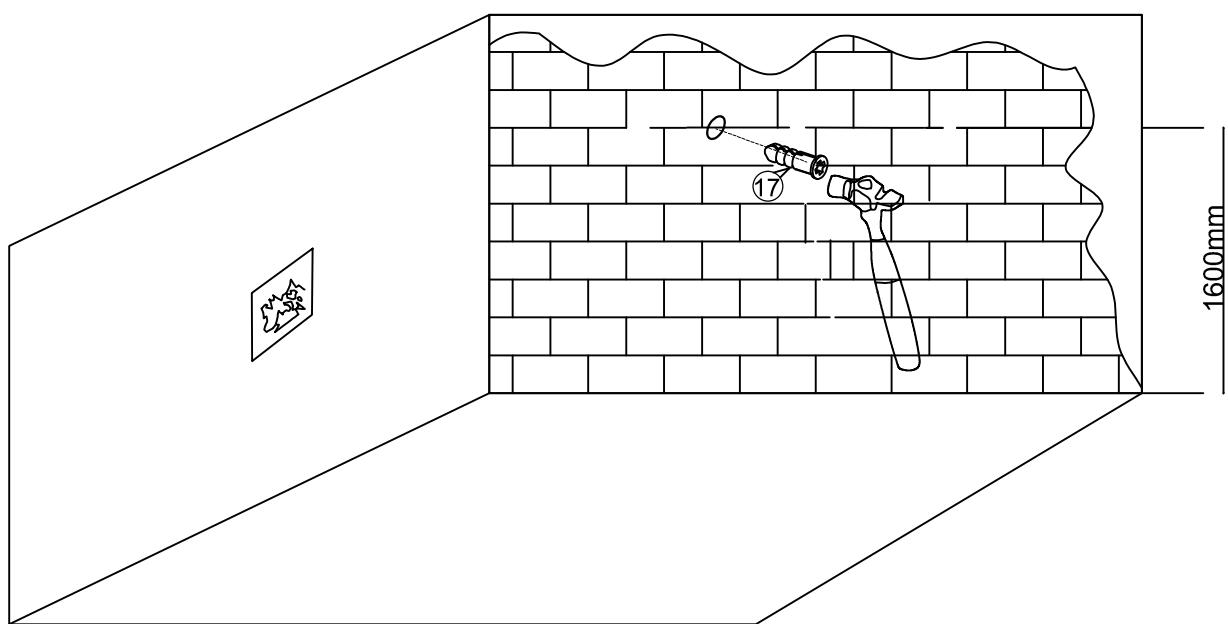


25

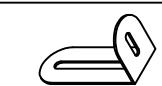



16 x 1

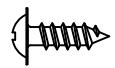


18 x 1

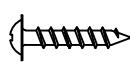


19 x 1

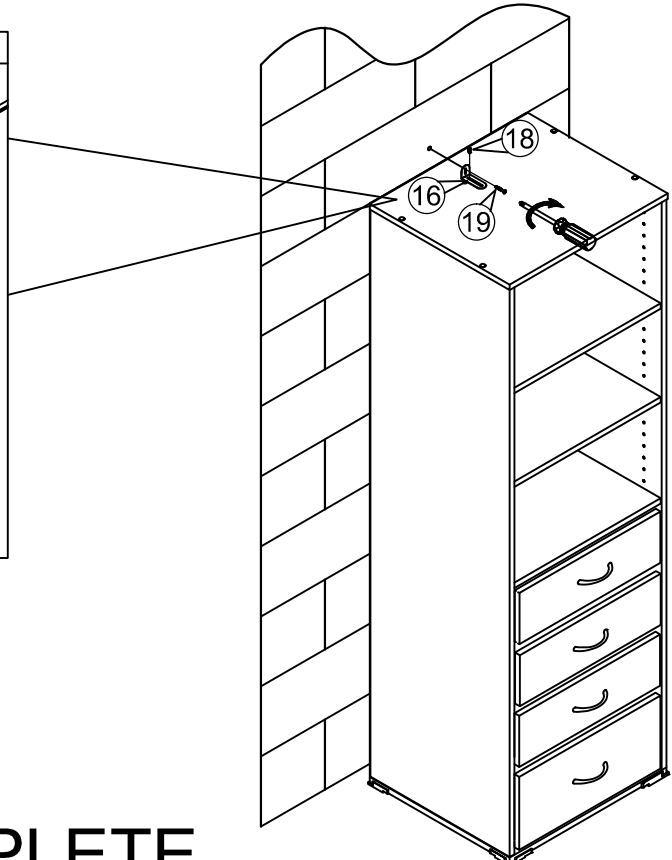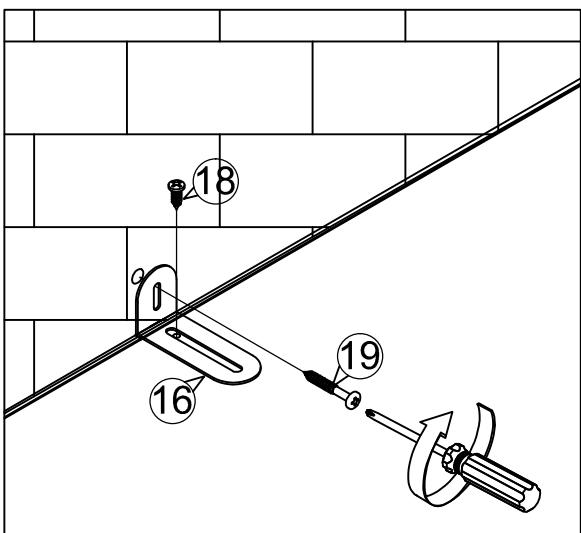


ASSEMBLY IS COMPLETE

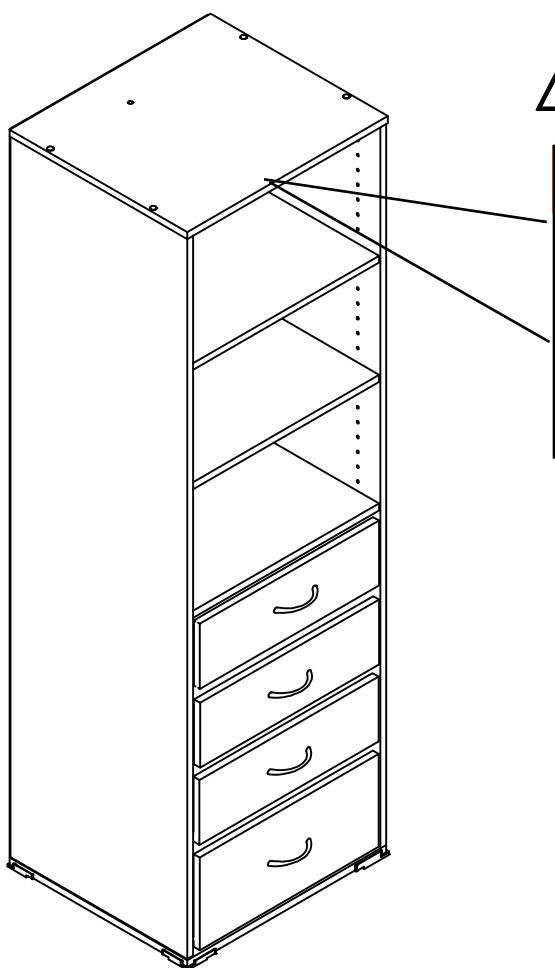

on the back side of the top panel next to coo label

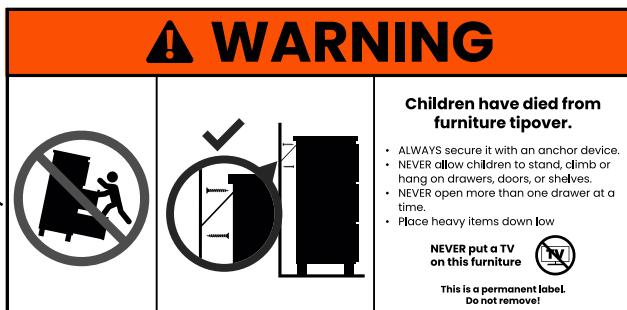

Product Care

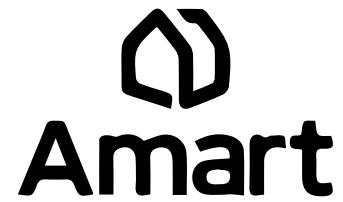

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time

1