 


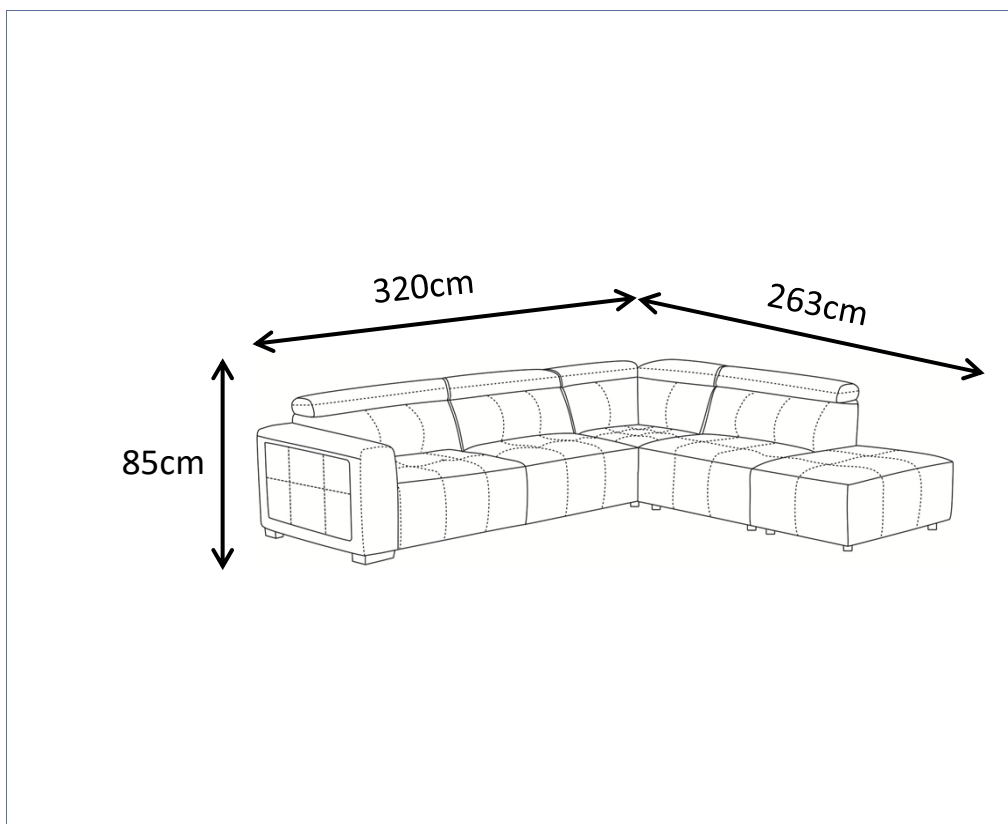

ASSEMBLY INSTRUCTION
FARRINGTON FABRIC CORNER LOUNGE
ITEM CODE 86290

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084





Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

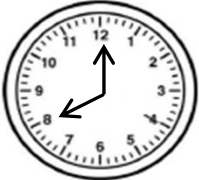	
ALLOW 40MINUTES	PEOPLE REQUIRED
ADDITIONAL TOOLS REQUIRED	

  
WARNING


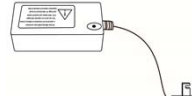



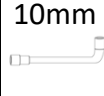


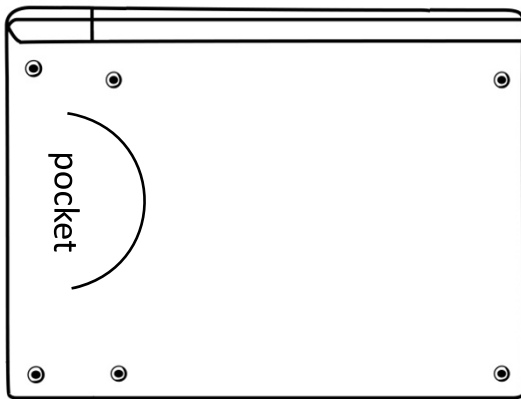

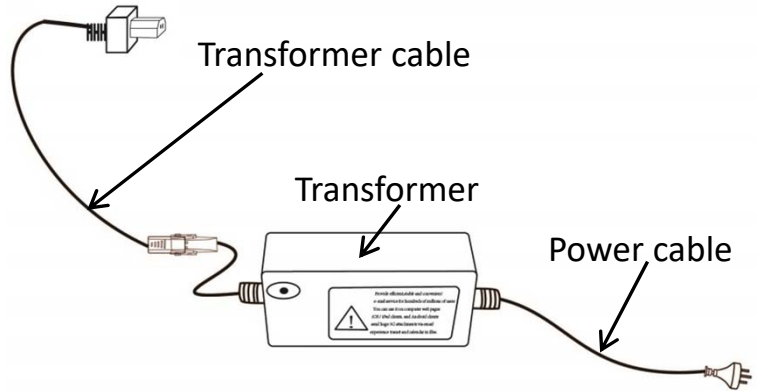

- Do Not allow children to play on this mechanised furniture or operate the mechanism. Leg rest folds down on closing so that a child could possibly be injured. Always leave in an upright and closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it.
- Do Not stub your toes on the connection clip poking out from the bottom of the sofa.

Step1: Locate package of sofa legs with fittings and slider power pack that are placed into zipper pocket at the bottom of one-arm facing slider.




Power Parts Connection




 <p>Transformer cable 1pcs</p>	 <p>Transformer 1pcs</p>	 <p>Power cable 1pcs</p>	 <p>g. Caster 2pcs</p>	 <p>h. Bolt M6X20mm 4pcs</p>	 <p>i. Wrench 10mm 1pcs</p>
 <p>a. Rectangle Leg 2pcs</p>	 <p>b. Round Leg 4pcs</p>	 <p>c. Bolt M8X80mm 2pcs</p>	 <p>d. Bolt M8X70mm 4pcs</p>	 <p>e. Washer 15*8.5*1.5mm 6pcs</p>	 <p>f. Allen key M5 1pcs</p>

 Step2: Tighten the rectangle legs (a) to the bottom of one-arm facing slider with bolts (c) and washers (e) by Allen key (f).

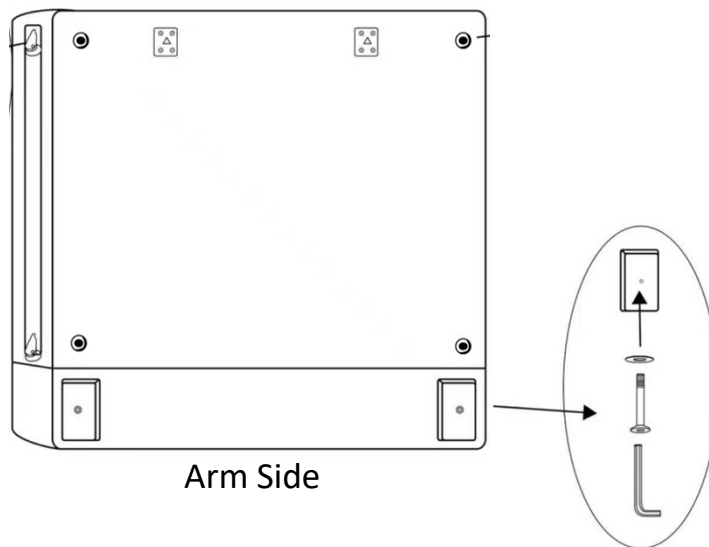


clockwise turning of Allen key for tighten of bolt

 
Step3: Tighten the round legs (b) to the bottom of one-arm facing slider with bolts (d) and washers (e) by Allen key (f).

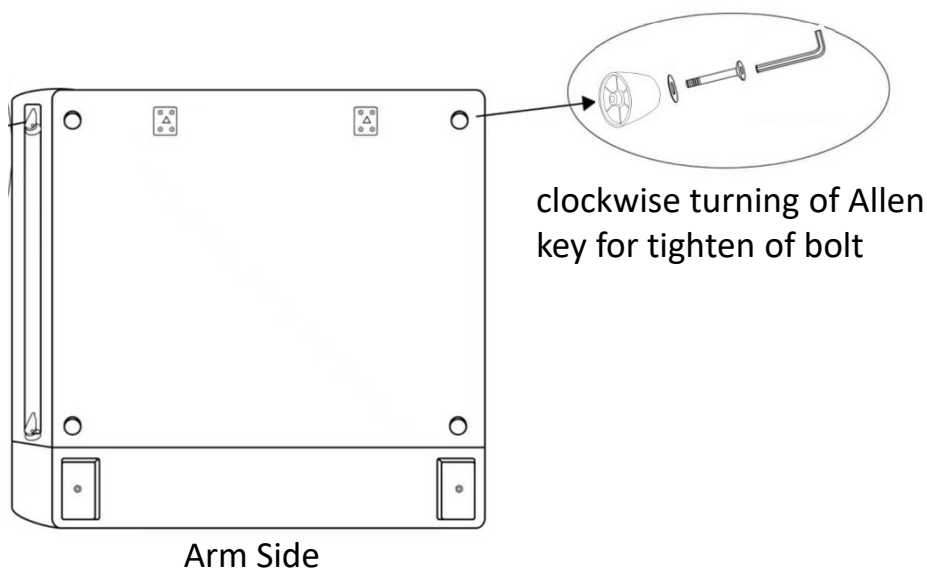

   
Step4: Tighten the casters (g) to the bottom of one-arm facing slider with bolts (h) by Wrench (i).

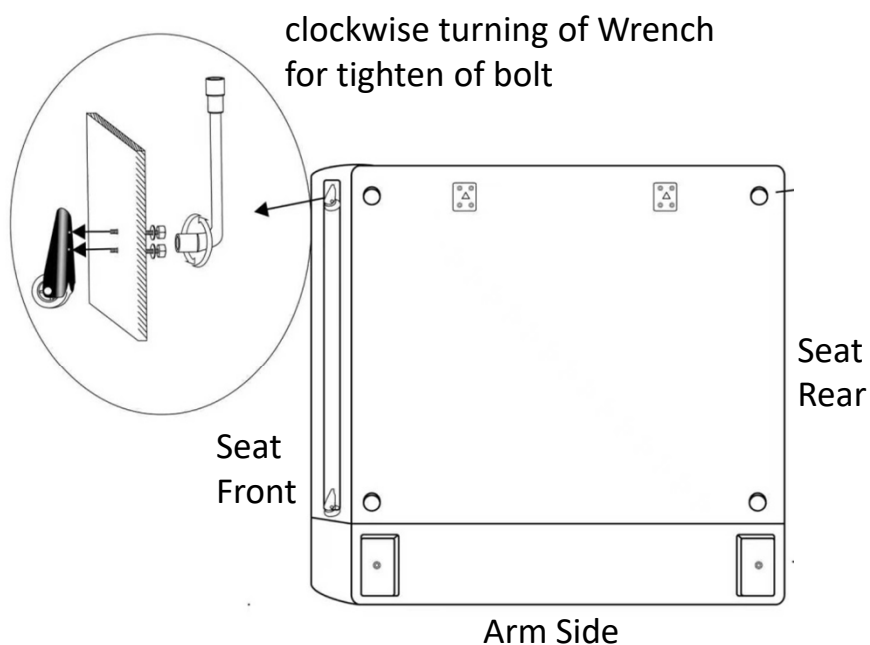



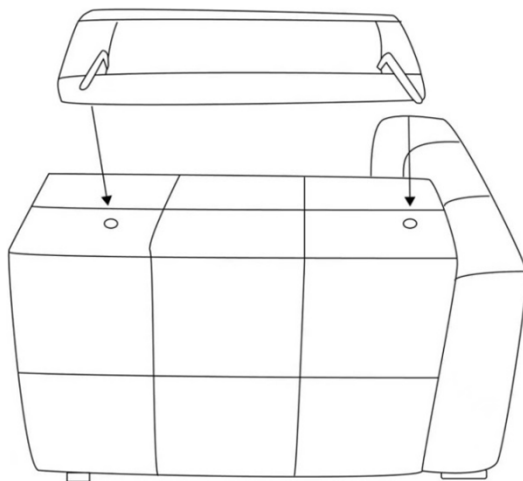

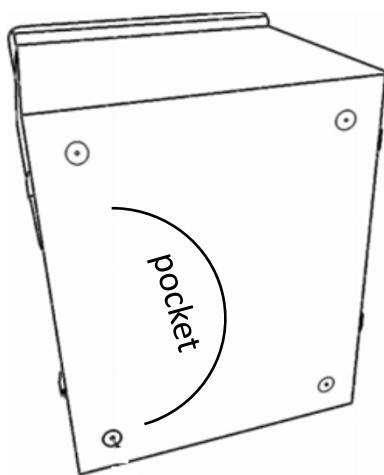


Step5: Connect the headrest to the backrest by sliding the headrest bracket into the holes at the backrest. Press firmly and evenly down on both sides of the headrest to ensure this is fully locked into place.




Step6: Locate package of sofa legs with fittings that is placed into zipper pocket at the bottom of the armless slider.




g. Caster  2pcs	h. Bolt M6X20mm  4pcs	i. Wrench 10mm  1pcs	
b. Round Leg  4pcs	d. Bolt M8X70mm  4pcs	e. Washer 15*8.5*1.5mm  4pcs	f. Allen key M5  1pcs

 
Step7: Tighten the round legs (b) to the bottom of armless slider with bolts (d) and washers (e) by Allen key (f).

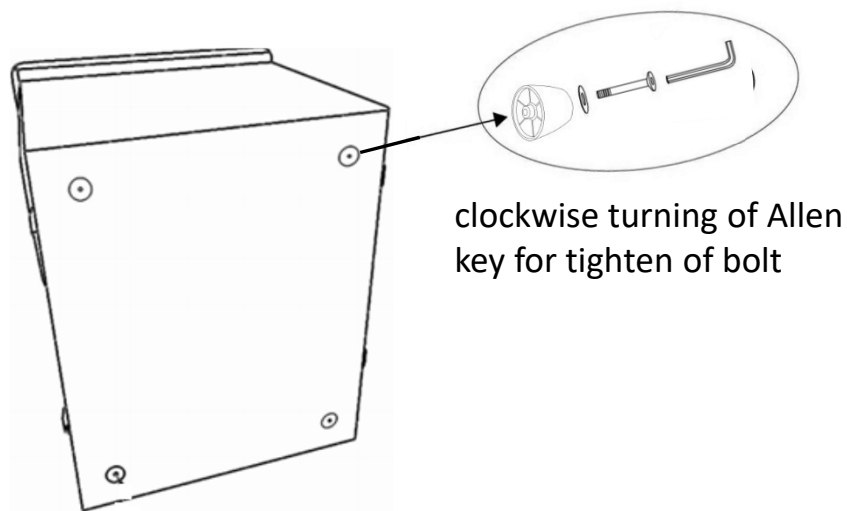

  
Step8: Tighten the casters (g) to the bottom of armless slider with bolts (h) by Wrench (i).

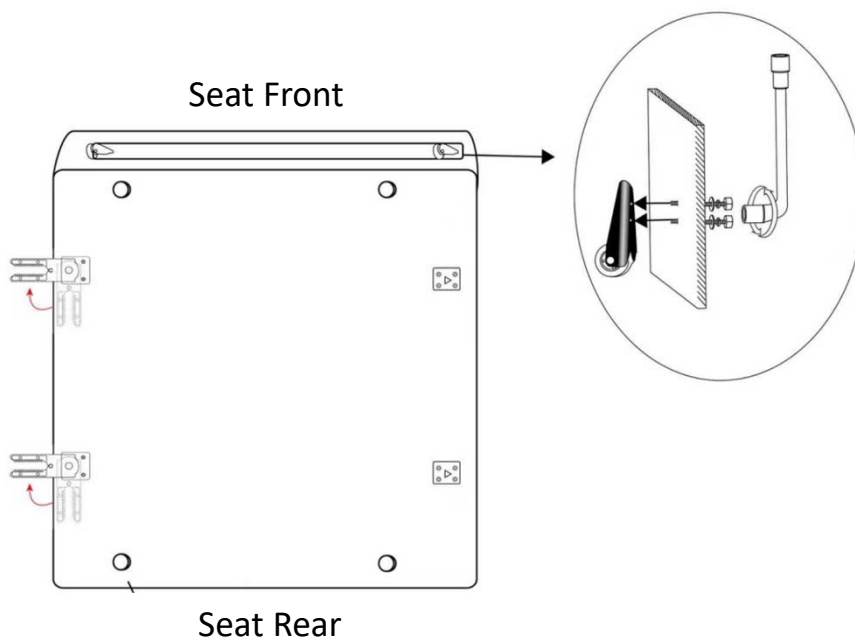

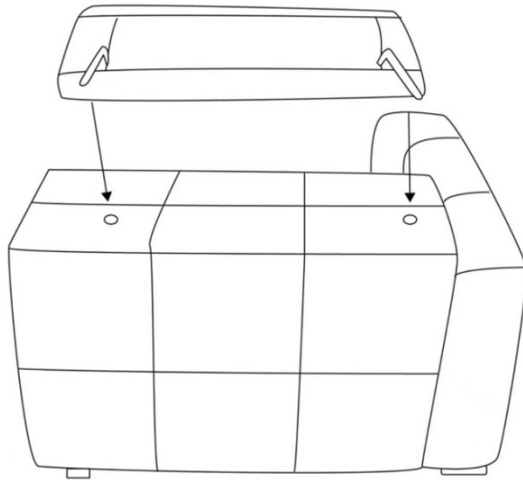


 
Step9: Connect the headrest to the backrest by sliding the headrest bracket into the holes at the backrest. Press firmly and evenly down on both sides of the headrest to ensure this is fully locked into place.

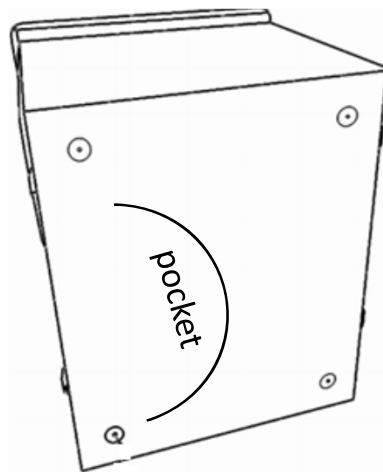


 Step10: Locate package of sofa legs with fittings that is placed into zipper pocket at the bottom of the wedge.




<p>b. Round Leg</p>  <p>4pcs</p>	<p>d. Bolt M8X70mm</p>  <p>4pcs</p>	<p>e. Washer 15*8.5*1.5mm</p>  <p>4pcs</p>	<p>f. Allen key M5</p>  <p>1pcs</p>
---	--	---	--

   
Step11: Tighten the round legs (b) to the bottom of wedge with bolts (d) and washers (e) by Allen key (f).

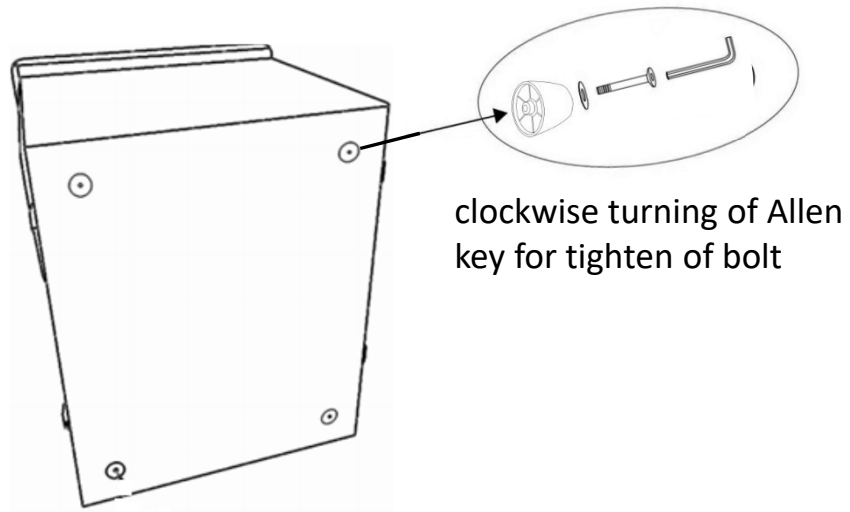



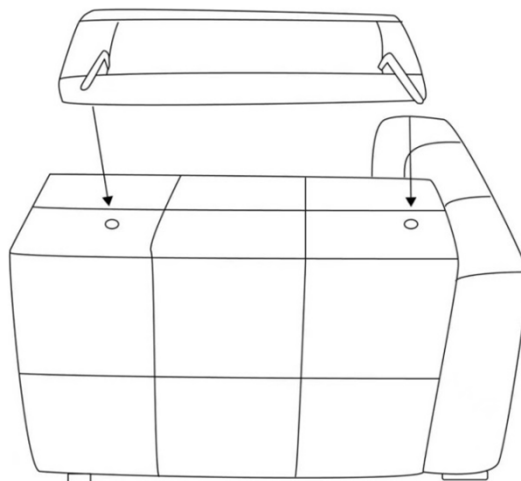



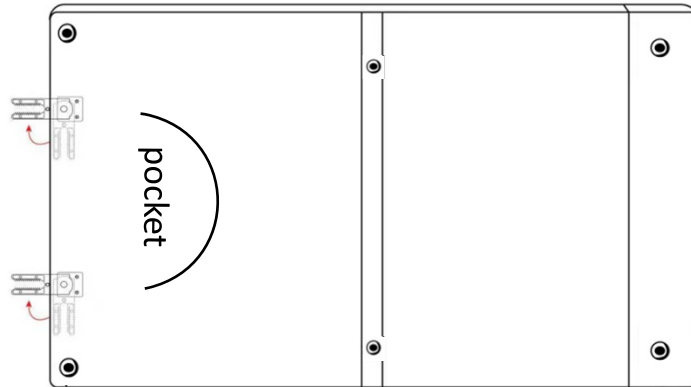




Step12: Connect the headrests to the backrests by sliding the headrests bracket into the holes at the backrests. Press firmly and evenly down on both sides of the headrest to ensure this is fully locked into place.




Step13: Locate package of sofa legs with fittings and backrest assembly fittings that are placed into zipper pocket at the bottom of terminal chaise piece.




j. Support Leg  2pcs	k. Bolt M8X60mm  2pcs	l. Washer 25*8.5*2mm  2pcs	m. Spring Washer 8mm  2pcs	n. Allen key M6  1pcs
--	--	---	---	---

a. Rectangle Leg  2pcs	b. Round Leg  2pcs	c. Bolt M8X80mm  2pcs	d. Bolt M8X70mm  2pcs	e. Washer 15*8.5*1.5mm  4pcs	f. Allen key M5  1pcs
---	---	--	--	---	--

 
Step14: Tighten the rectangle legs (a) to the bottom of terminal chaise piece with bolts (c) and washers (e) by Allen key (f).

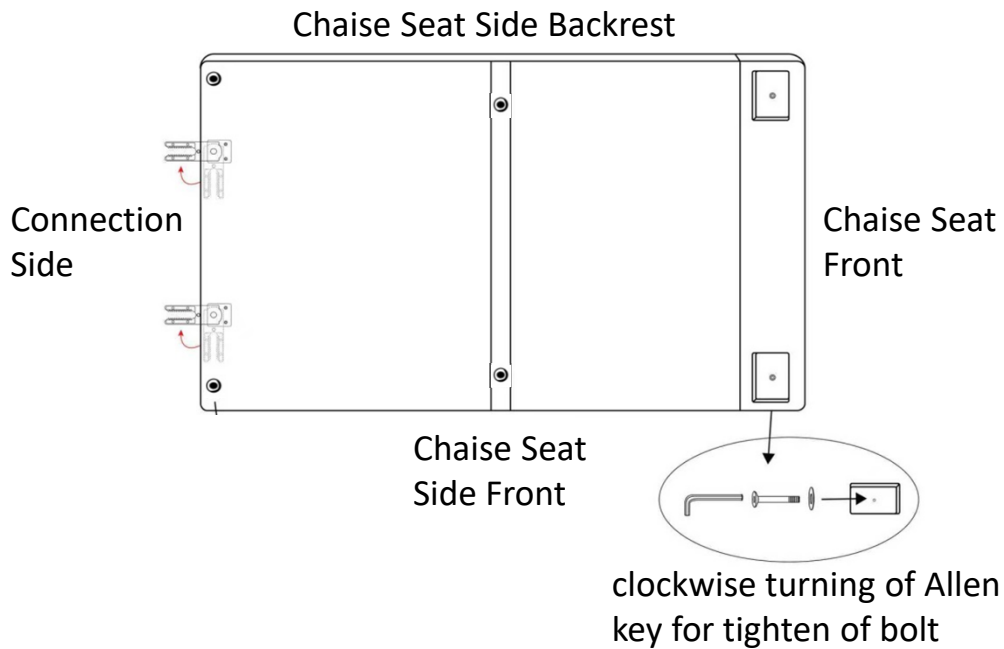

 
Step15: Tighten the round legs (b) to the bottom of terminal chaise piece with bolts (d) and washers (e) by Allen key (f), also secure the 2 x support legs (j) by placing the legs in the pre-drilled holes and turning the legs in a clockwise direction to tighten.

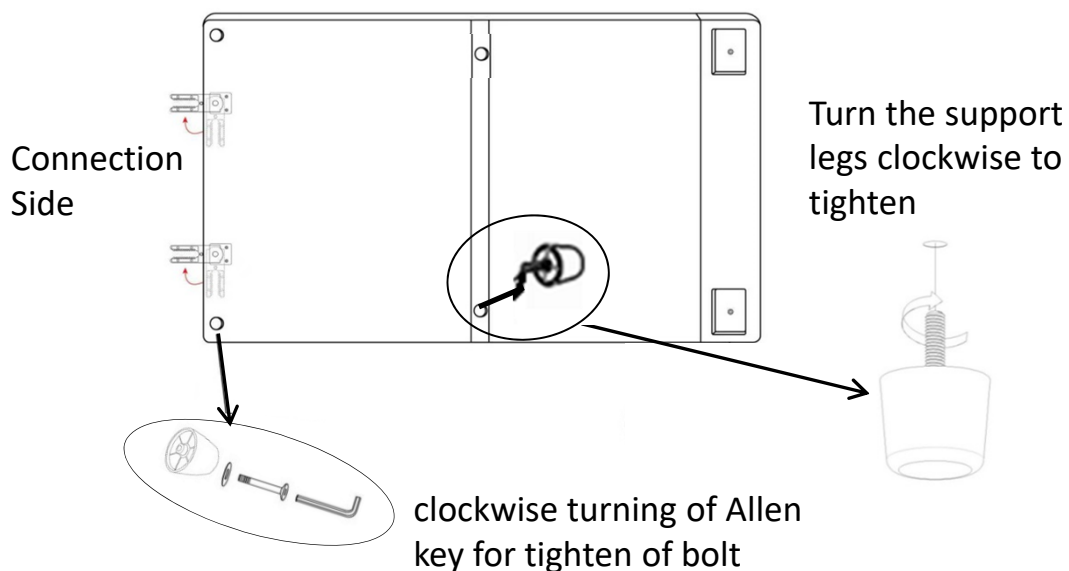

 
Step16: Remove protective packaging from the terminal chaise backrest packaged individually. Then tighten the backrest to the seat base with bolts (k) and washers (l) and spring washers (m) by Allen key (n) .

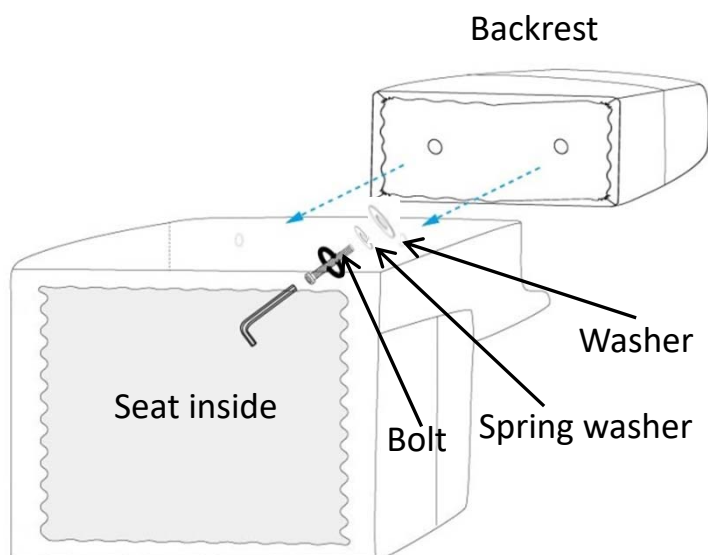

 Step17: Unfold connection clips to poke out from bottom of the terminal chaise and place slideway parts at bottom of the wedge into the clips. Then, unfold connection clips to poke out from bottom of the wedge and place slideway parts at bottom of the armless slider into the clips. Then, unfold connection clips to poke out from bottom of the armless slider and place slideway parts at bottom of the one-arm slider into the clips.

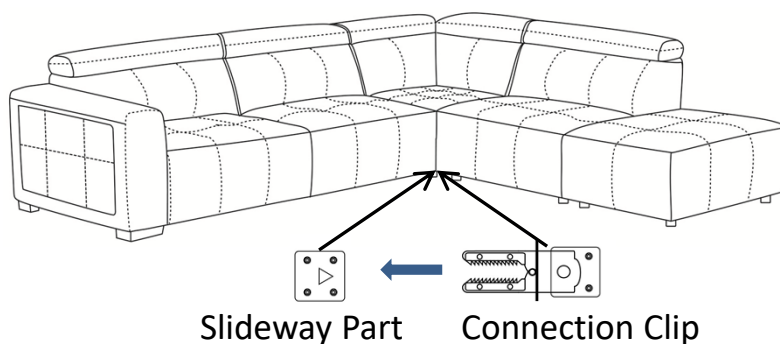

 
Step18: At the rear and base of lounge, connect the cords between one-arm slider and the armless slider for electric function of each piece.

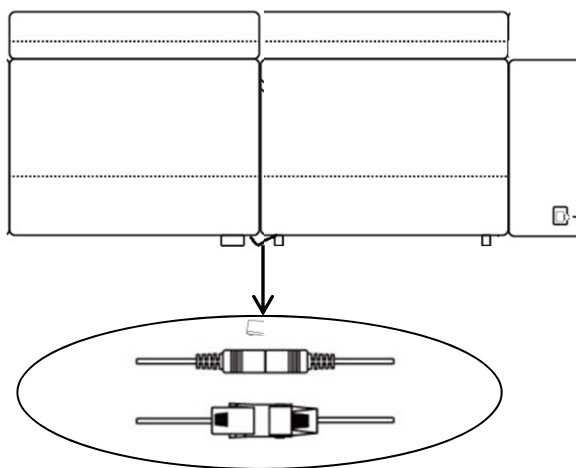

IMPORTANT NOTE: PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. FAILURE TO DO SO MAY SEVERE YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

SAFETY NOTE WARNING! AVOID POTENTIAL EQUIPMENT DAMAGE OR ELECTRIC SHOCK! DO NOT PLACE THE TRANSFORMER UNDER OR WITHIN THE RECLINER STRUCTURE. DO NOT COVER THE TRANSFORMER. KEEP IT IN AN OPEN, WELLVENTILATED AREA FREE FROM FOREIGN MATERIAL / DEBRIS TO ENSURE PROPER OPERATION.

 
Step19: Plug power parts connection (refer to step 1) into socket at back panel of the one-arm slider, then connect into power source / wall.

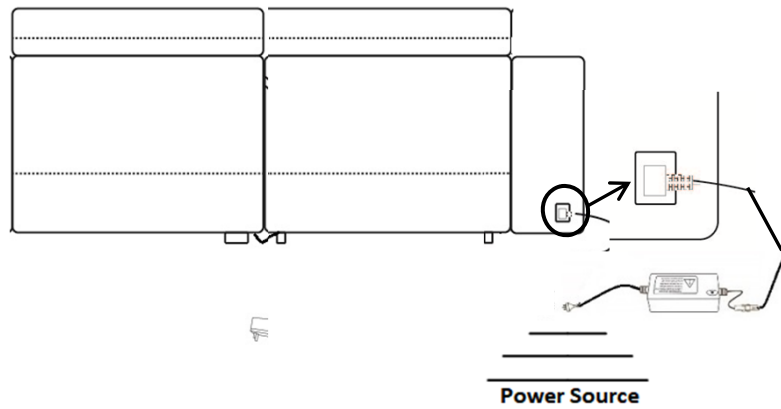


IMPORTANT NOTE: PLEASE ENSURE THAT ALL ELECTRICAL CORDS AND CABLES ARE CLEAR OF THE FRAME AND MECHANISM. FAILURE TO DO SO MAY SEVER YOUR POWER CORD RESULTING IN SERIOUS INJURY OR DEATH.

SAFETY NOTE WARNING! AVOID POTENTIAL EQUIPMENT DAMAGE OR ELECTRIC SHOCK! DO NOT PLACE THE TRANSFORMER UNDER OR WITHIN THE RECLINER STRUCTURE. DO NOT COVER THE TRANSFORMER. KEEP IT IN AN OPEN, WELLVENTILATED AREA FREE FROM FOREIGN MATERIAL / DEBRIS TO ENSURE PROPER OPERATION.

 Step20: Your sofa should now slide. Refer to the below diagram on how to use the switch.

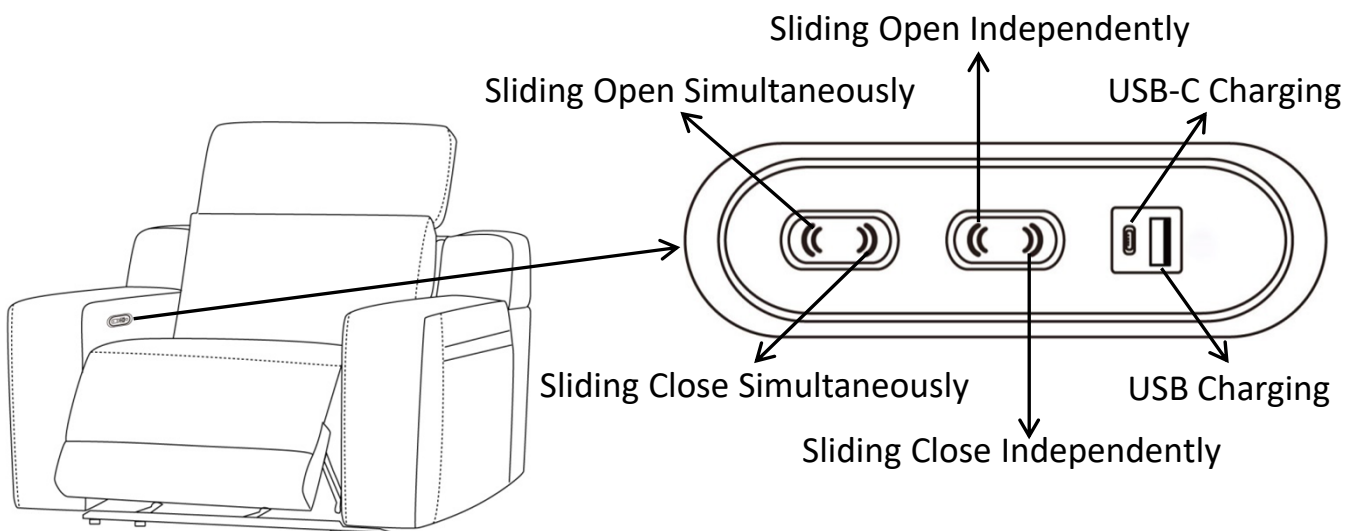

ASSEMBLY IS COMPLETE

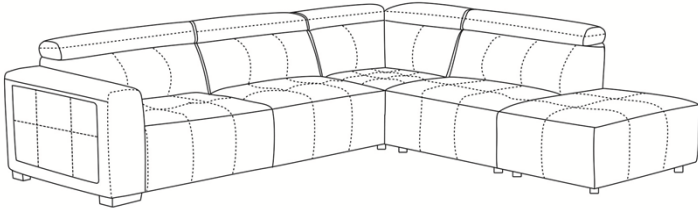 

READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE:

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:

Always unplug from electric outlet before cleaning.
Always place transformer well away from recliner mechanism base.

WARNING: RISK OF INJURY

Keep children away from extended footrest and any moving parts.

CAUTION: Do not allow children to play on this electric recliner or operate the powered mechanism.

The leg rest folds when closing and could possibly cause injury to a child.
Always leave the recliner in an upright and closed position when not in use.
Keep hands and feet clear of mechanism. Only the occupant should operate it.
Keep pets away from underside of recliner.

POWER CORD SAFETY

WARNING: Unplug and remove power cord from wall when not in use and store out of reach of children.
Take care when moving recliner that wall and transformer cords are not under the base or they may get damaged.

NEVER OPERATE ELECTRIC RECLINER IF IT HAS A DAMAGED CORD OR PLUG.

WARNING: TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY TO

PERSONS:

- Use only for its intended purpose.
- Never press or activate control switch if you are not seated in recliner.
- Only the occupant should activate the control switch.
- Never operate with more than one person occupying seat.
- Never sit or stand on the footrest.

READ THESE INSTRUCTIONS THOROUGHLY BEFORE USE:

It is crucial to handle your reclining sofa with care. Following the intended usage guidelines will ensure safety and product longevity.

Recliners have a metal mechanism base, with moving parts to allow reclining functions. These components are flexible but can be easily bent or twisted if subjected to excessive weight, improper use, or excessive motion.

Safety

Moving parts; particularly reclining mechanisms can be dangerous if used incorrectly:

- ALWAYS supervise children when they are around or on reclining furniture. Prevent them from operating the mechanism or playing on the recliner.
- Only the occupant should operate the recliner. When not in use, ensure it is returned to the lounges closed position.
- When closing the recliner-
- Always check underneath the mechanism to ensure that the footrests are folded down properly.
- Avoid placing hands and feet near the mechanism.
- Be mindful of children and pets, and the possibility of trapping items like clothing or blankets in the mechanism.

It is recommended that the closing motion be closed slowly.

General Care

It is crucial to use recliners carefully and in accordance with their intended design to maintain their structural integrity. Misuse of the reclining mechanism can lead to bending or bowing. All Amart sofas have a weight capacity of 120kg per seat.

- Always ensure that footrests are fully closed before entering or exiting the seat. Using the seat with the footrest open can damage the structure and is not the intended usage.
- While reclined, the footrests are designed to support the weight of a single person's feet. Excessive weight, especially from pets and children, can overload the mechanism and cause twisting and bowing.
- Avoid leaning on the sides of the recliner at any time. Reclining seats are designed to be sat on in the middle as the centre of the cushion provides structural support. Leaning over the sides of the seat can twist the mechanism.
- Ensure that when you close the mechanism that equal weight is placed on the centre of the footrest panel. Do not close from the edges of the recliner's footrest. This causes stress on the mechanism and leads to a broken and bent mechanism. This is not a manufacturing fault but a result of improper use.

Positioning your recliner

It is imperative that you ensure your recliner is positioned on a level surface to ensure its longevity.

Positioning your recliner on an unlevel or sloping surface can put additional strain on the internal components of your recliner.

The internal components of the recliner, such as the frame, levers, and hinges may experience increased stress if the recliner is constantly used on an uneven surface. Over time, this leads to premature wear and tear, affecting the recliner's durability, stability, and performance.

Additional issues that can impact electric recliners if positioned on an unlevel floor are as follows:

- 1. Motor strain** – The motor in an electric recliner is designed to operate under conditions where the load is evenly distributed. When the floor is not level, the motor works harder to adjust the recliner, leading to increased wear and tear over time.
- 2. Uneven Movement** – An electric recliner on an uneven floor may not operate smoothly or evenly. This can result in jerky movements, uneven reclining, or difficulty in adjusting the position, potentially causing discomfort for the user.

Moving your recliner?

- Always ensure that the recliner is upright when transporting.
- Moving or transporting reclining sofas can be challenging due to their weight, which includes the mechanism and frame. Always ensure there are at least two people to lift the weight properly and avoid dragging or dropping the recliner as it can cause bending and bowing of the mechanism.
- Do not pull your sofa by the cushions and fabric as this will result in tears and rips.

Product Care for Fabric Items

REGULAR CARE:

- Protect from direct sunlight
- Vacuum regularly using low suction
- Rotate reversible cushions regularly
- Avoid exposure to new clothing, cushions or throws as this may lead to dye transfer and permanent staining

CLEANING:

- Do not remove cushion covers for separate cleaning even though they may have zippers
- Do not wash, Do not dry clean, Do not shampoo clean
- Clean only with hot water extraction machine. Professional cleaning recommended
- Do not use dishwashing liquid or laundry detergent. Use only upholstery detergents
- Do not wet filling
- Dry in shade away from direct heat and sunlight
- Allow to dry thoroughly before re-use

SPOT CLEANING:

- Do not rub
- Do not spot clean with any solvent
- Treat spills and stains as soon as possible
- Gently scrape off any soil or blot any liquid from the surface of the fabric before applying cleaner
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- Do not saturate the fabric or interior with water or other cleaning liquids

WARNING:

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

* PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY

* PILLING IS A NORMAL OCCURRENCE IN WOVEN FABRICS AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC. IT IS EASILY REMOVED BY USE OF A BATTERY OPERATED DE-PILLING MACHINE AS THE NEED ARISES