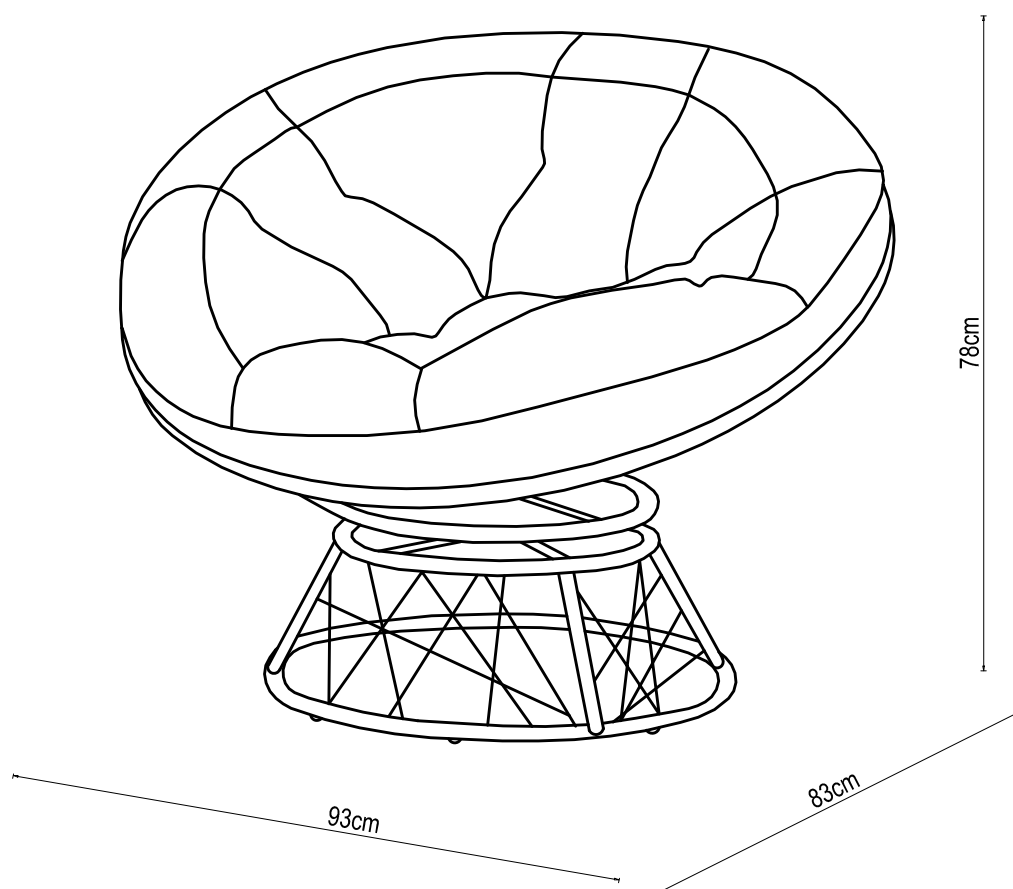


ASSEMBLY INSTRUCTION

PACHECO

OUTDOOR SWIVEL ARMCHAIR

ITEM CODE 87361


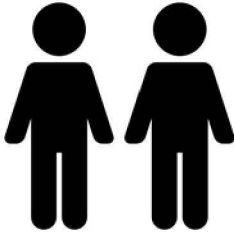



Imported by JWA Furniture Pty Ltd, Brisbane, QLD, Australia
For any assistance with assembly or for missing parts, please refer to your receipt


PRE-ASSEMBLY PREPARATION



 

Before you start:


 
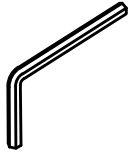
1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

		
Allow 60min	For 2 person	You will need a tape measure.


 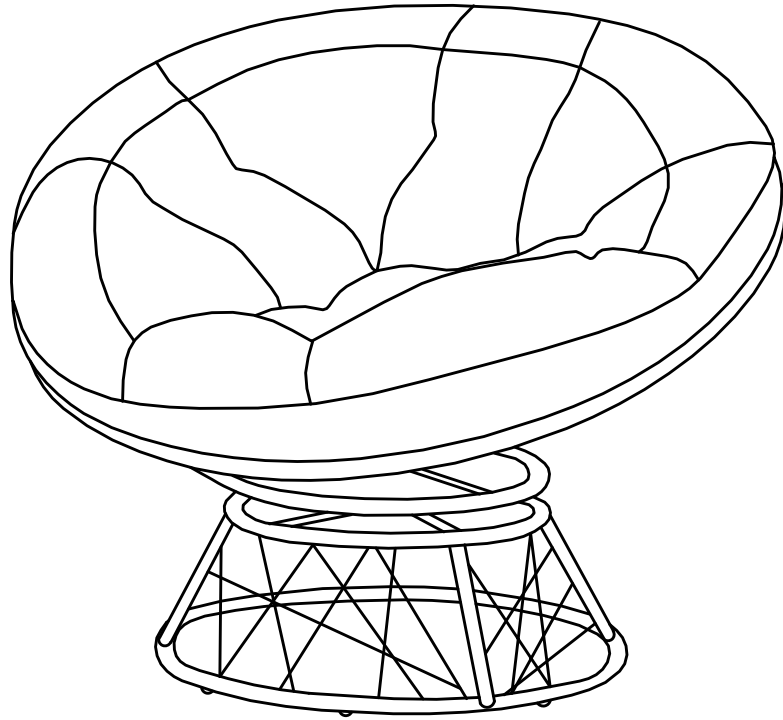


 
PARTS LIST

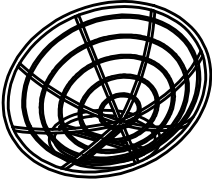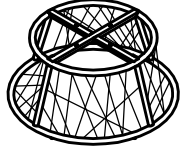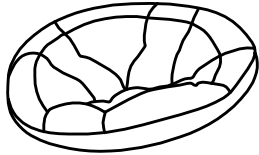

<p>1. Seat</p>  <p>1PC</p>	<p>2. Base Plate</p>  <p>1PC</p>
<p>3. Turntable</p>  <p>1PC</p>	<p>4. Cushion</p>  <p>1PC</p>


<p>A. Bolt</p>  <p>M6*15 , 8PCS</p>	<p>B. Washer</p>  <p>M6 , 8PCS</p>	<p>C. Allen Key</p>  <p>M6 , 1PC</p>
---	--	---

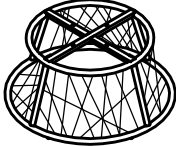You will need the following



 
2.	Base Plate	1PC	3.	Turntable	1PC
					
A.	Bolt	B.	Washer	C.	Allen Key
					
M6*15*4PCS		M6*4PCS		M6*1PC	

Step 1:

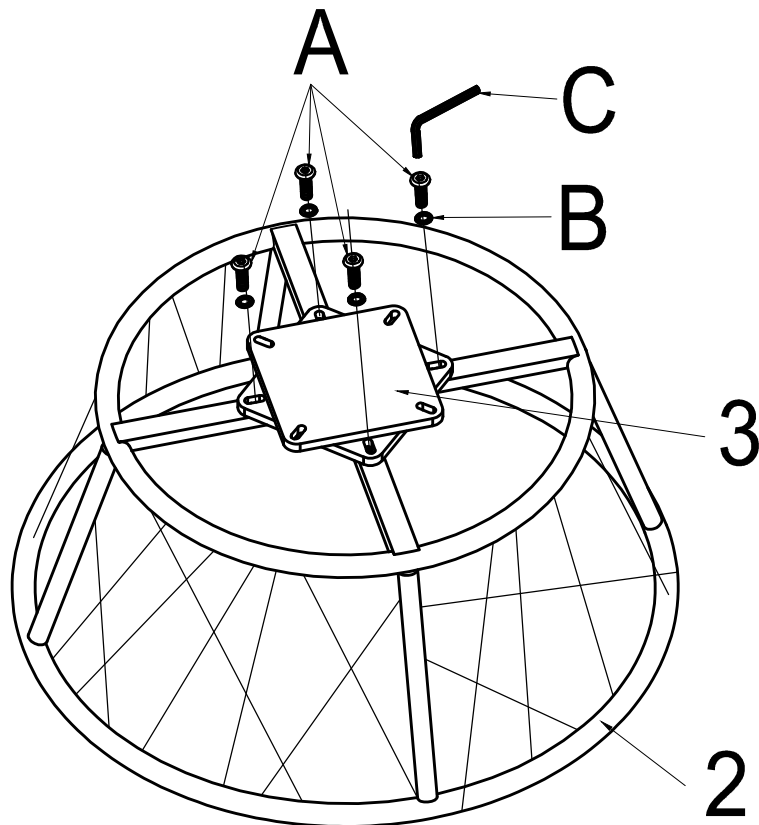- Attach turntable (3) to base plate (2) using bolt (A) with washer (B) .
- Tighten with allen key (C) .




You will need the following


1. Seat 1PC		
A. Bolt  M6*15*4PCS	B. Washer  M6*4PCS	C. Allen Key  M6*1PC

Step 2:

- Attach seat (1) to turntable (3) using bolt (A) with washer (B) .
- Tighten with allen key (C) .

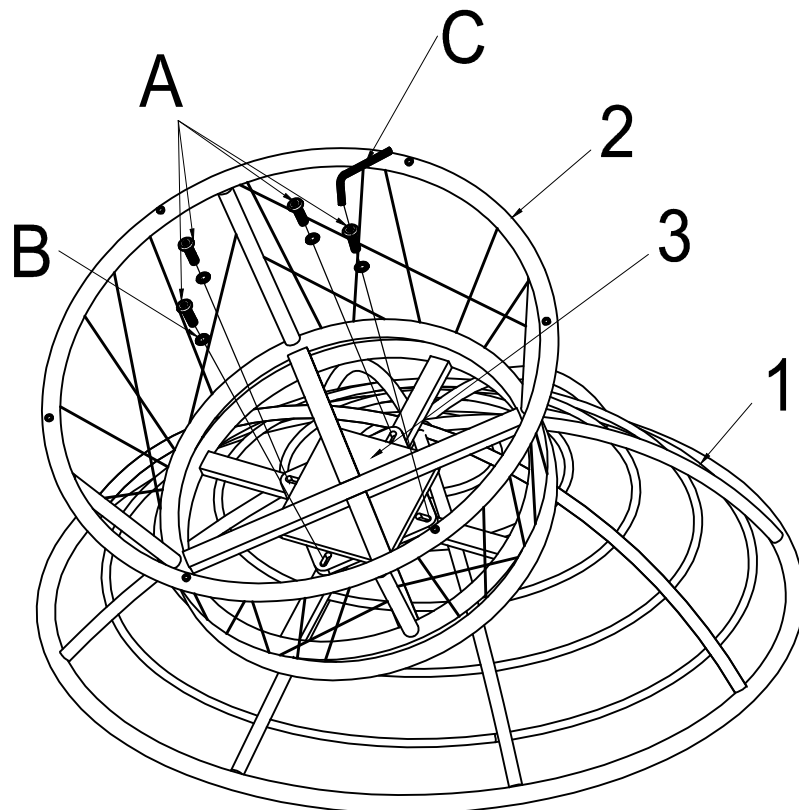


You will need the following

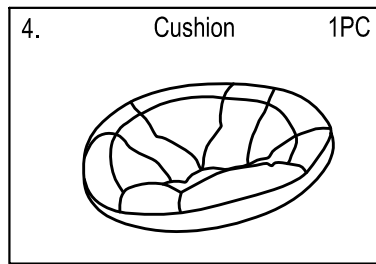

Step 3:

- Put the seat cushion (4) on the seat (1).

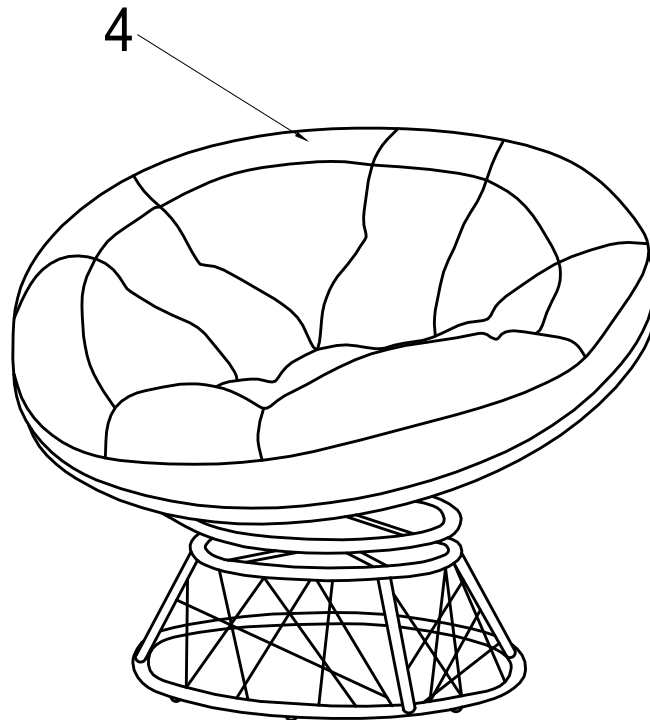

PRODUCT CARE:

Metal

To ensure the longevity and maintain the appearance of your steel outdoor furniture, please follow these care instructions:

1. Usage and Storage:

Galvanised steel is designed for short term outdoor use due to its protective zinc coating, but, like all man-made materials, it can suffer damage if left exposed to the elements. To extend its life, avoid prolonged exposure to weather conditions. Store the furniture indoors or under cover when not in use or use an outdoor cover (do not store on grass).

2. Avoid Excess Moisture:

DO NOT allow the furniture to remain wet or sit in standing water for long periods. Wipe the furniture dry immediately if it becomes wet. Excess moisture can compromise the protective coating and lead to rust formation.

3. Avoid exposure to chlorine & salt water:

Chlorine/salt can disrupt the protective zinc oxide layer on steel, leading to accelerated corrosion. Once the protective layer is compromised it more susceptible to rust. This is particularly problematic in environments with high chlorine concentrations, such as in swimming pools, homes within a short distance of the ocean or areas with heavy chlorination.

4. Cleaning:

Clean your furniture with care. Avoid using harsh solvents, abrasives, or chemicals. To remove dirt and grime, rinse with fresh water and dry thoroughly. For a deeper clean, use a sponge and a mild detergent solution as needed. Abrasive cleaners will scratch/damage the surface.

Live by the beach? Due to a process called "aerosolisation", sea water is broken up into tiny droplets by the wind and waves and salt particles are released into the air. This process accelerates the corrosion of metal surfaces over time. It is essential to use furniture covers when the product is not in use and clean your product more frequently.

By following these simple steps, you will help keep your furniture in great condition and ensure it remains a beautiful and functional part of your outdoor space.

PRODUCT CARE:

Outdoor Wicker Furniture Care Instructions:

- **What is Wicker?**

• Wicker is a weaving technique used to create outdoor furniture, baskets, and decorative items. It involves weaving thin, flexible strands of materials like rattan, bamboo, or synthetic materials to form intricate patterns. Wicker furniture is known for its natural beauty and durability, making it a popular choice for outdoor spaces. In this guide, we'll share care instructions to help you maintain the appeal and longevity of your wicker outdoor furniture.

- **Regular Cleaning:**

1. **Frequency:** Every 4-6 weeks, clean your outdoor wicker furniture to maintain its appearance and longevity.
2. **Cleaning Solution:** Use a mild detergent mixed with warm water for cleaning.
3. **Washing:** Gently wash the furniture with the detergent solution, paying attention to intricate woven areas. Use a soft cloth or a soft brush to remove dirt and debris.
4. **Rinse:** Thoroughly rinse the furniture with clean water to remove any soap residue.
5. **Drying:** Ensure the furniture is dried thoroughly after cleaning to prevent oxidization. Let it air dry completely in a well-ventilated area, preferably in indirect sunlight.
6. **Dust Regularly:** Dust your furniture regularly with a soft brush or vacuum cleaner with a brush attachment to prevent dust buildup, which can damage the surface.

- **Seasonal Maintenance:**

1. **Sunlight Exposure:** Avoid leaving your furniture uncovered in direct sunlight for extended periods, as prolonged exposure can cause fading and material deterioration.
2. **Cushion Care:** Remove cushions from the furniture and store them in a covered or undercover area when the furniture is not in use. This helps protect the cushions from the elements.
3. **Weather Protection:** Amart always recommends the use of an outdoor protective cove for your outdoor wicker furniture when not in use. Ensure the covers are clean and completely dry before use to prevent mold and mildew growth. Even when your wicker furniture is under a patio or awning, Amart still recommends the use of cover – to prevent fading or sun damage.

By following these instructions, you can maintain the longevity and appearance of your outdoor wicker furniture.

PRODUCT CARE:

Cushions

To keep your outdoor cushions looking their best and ensure they last, please follow these simple care instructions:

1.Sun Exposure:

Direct sunlight can cause rapid fading of the fabric. For best results, avoid exposing the cushions to direct sunlight.

2.Weather Protection: To prolong the life of your cushions, do not leave them permanently exposed to weather conditions. Leaving cushions exposed puts the product at risk of mould and mildew growth. Store them indoors or under cover when not in use.

3.Cleaning: Spot clean using a mild detergent and a damp cloth. After cleaning, dry the cushions by laying them flat in a shaded area to prevent any potential damage.

4.Handling:

- 1.Do not unzip the cushion covers.
- 2.Do not remove the cushions from their covers.
- 3.Do not put in the washing machine.
- 4.Do not tumble dry.
- 5.Do not bleach.
- 6.Do not dry clean.

By following these simple steps, you will help keep your furniture in great condition and ensure it remains a beautiful and functional part of your outdoor space.By following these simple steps, you will help keep your furniture in great condition and ensure it remains a beautiful and functional part of your outdoor space.