ASSEMBLY INSTRUCTION
COLWYN BAY TALL CHEST
ITEM CODE 82510

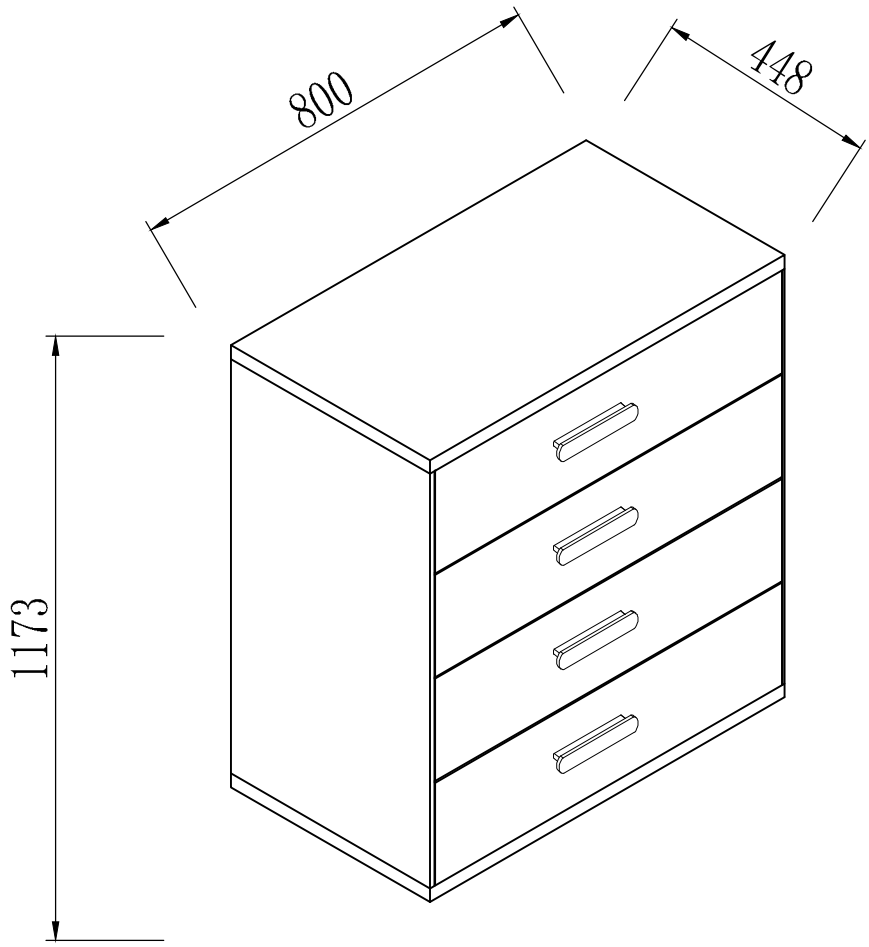

Imported by Amart Furniture Pty Ltd .Qld.Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture Customer Service Free call 1800 351 084

82510

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean,level.spacious assembly area.Avoid hard surfaces that may damage the product
2. Take care when lifting.Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

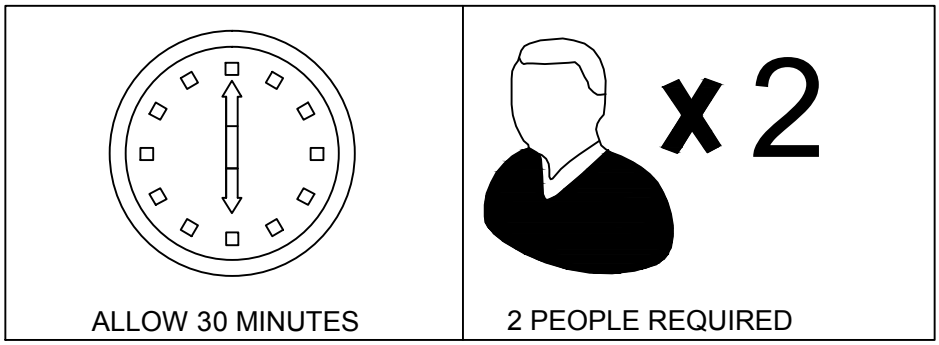

PARTS LIST

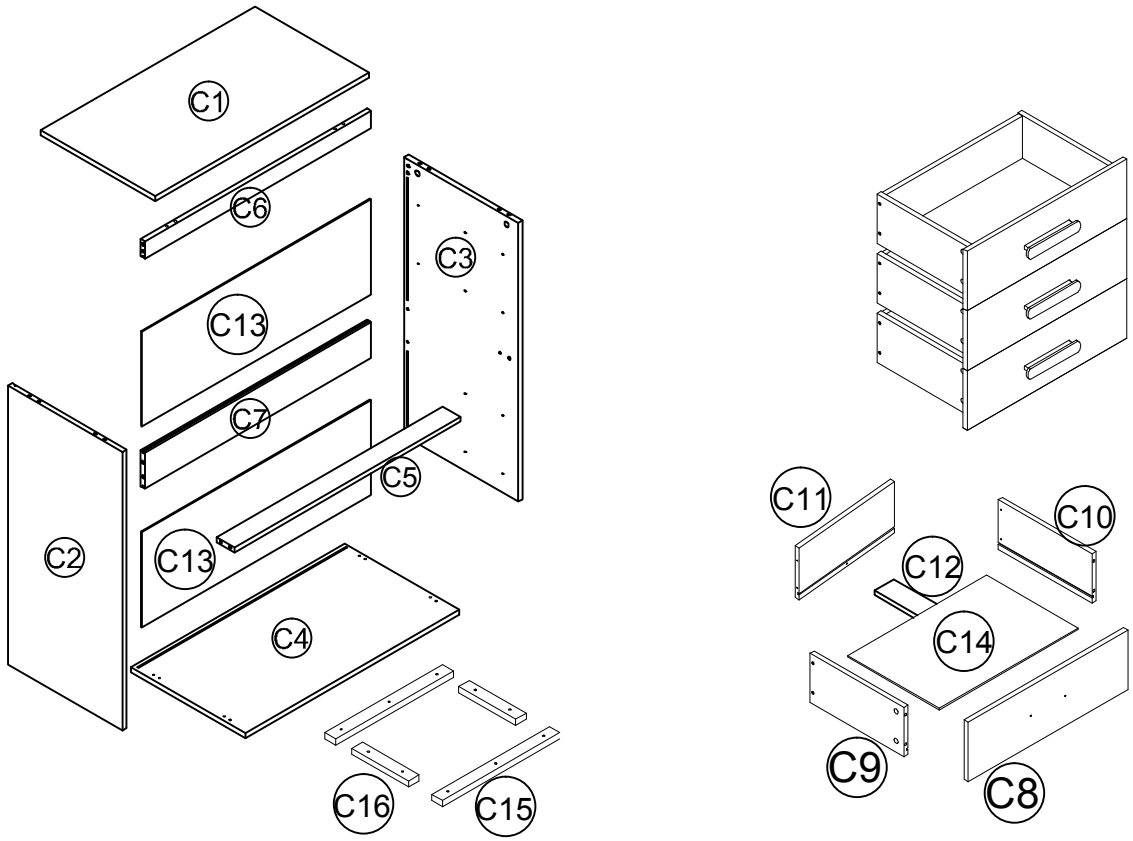

C1	Top Panel	C9	Drawer Left Side Panel
C2	Left Side Panel	C10	Drawer Right Side Panel
C3	Right Side Panel	C11	Drawer Back Panel
C4	Bottom Panel	C12	Support Panel
C5	Support Panel	C13	Back Panel
C6	Back Rail	C14	Drawer Bottom Panel
C7	Back Rail	C15	Leg
C8	Drawer Front Panel	C16	Leg

A.Cam lock and Cam pin Ø15X35 ☐  45PCS	B.Dowel Ø8x30 ☐  18PCS	C.Screw Ø3.5x12 ☐ 48PCS	D.Bolt Ø6x35 ☐ 10PCS	E.Bolt M4x20 ☐  8PCS	F.Connector 18x16x10 ☐  8PCS	G.Screw Ø3x18 ☐  8PCS
H.Runner 250mm ☐  8PCS	I.GLUE ☐ 1PCE	J.Hex key M4 ☐ 1PCE	K.Ø3.5x30 ☐ 30PCE	L.Protect Foam Ø35X5mm ☐ 4PCS	M.Safety Bracket Kit 2PCS	N.Handle ☐ 4PCS

82510

STEP 1：

Runner slide separately(H=H1+H2)

Carefully pull out the runner slide(H2)and press plastic clip to fully separate runner slide as diagram shown

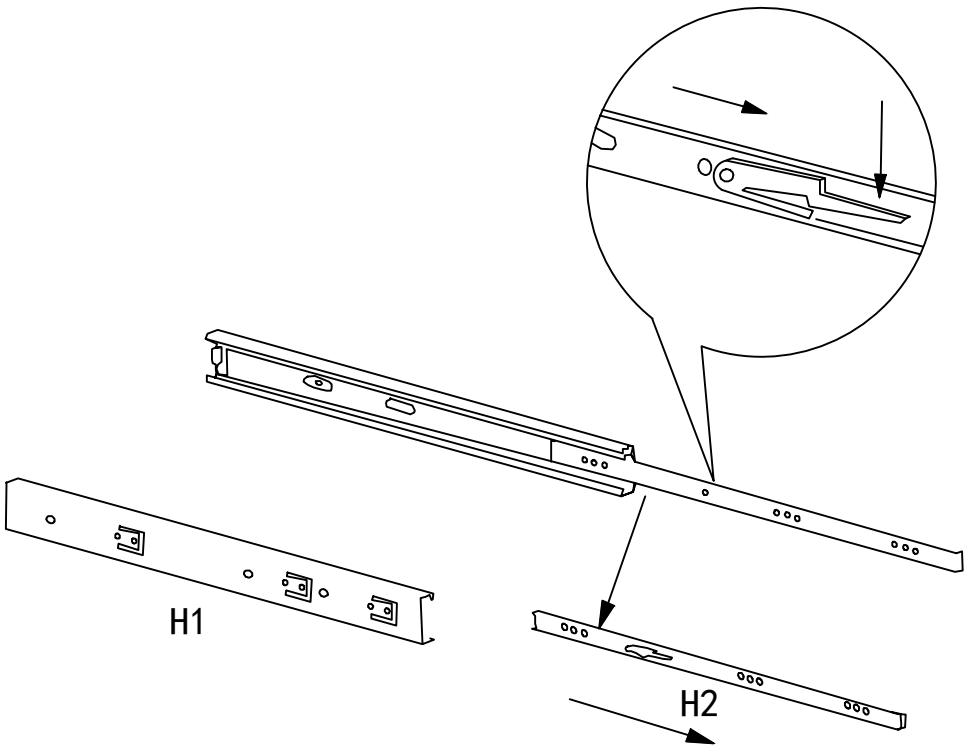

STEP 2：

Insert Cam Pin(A) and Dowel(B) to Panel(C1&C4).

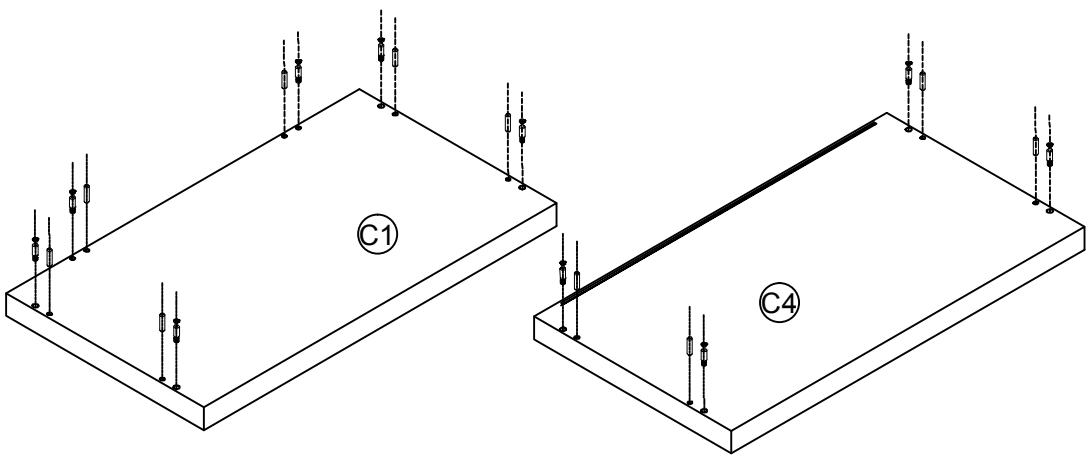

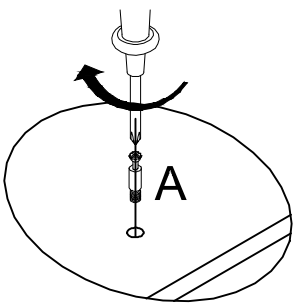

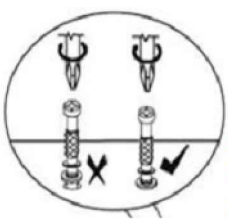

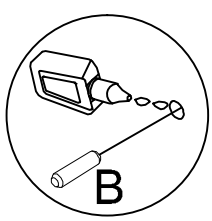

82510

STEP 3：
Insert Cam Pin(A) and Dowel(B) to Panel(C2&C3). Attach Runner(H1) to Panel(C2&C3) with Screw(C).

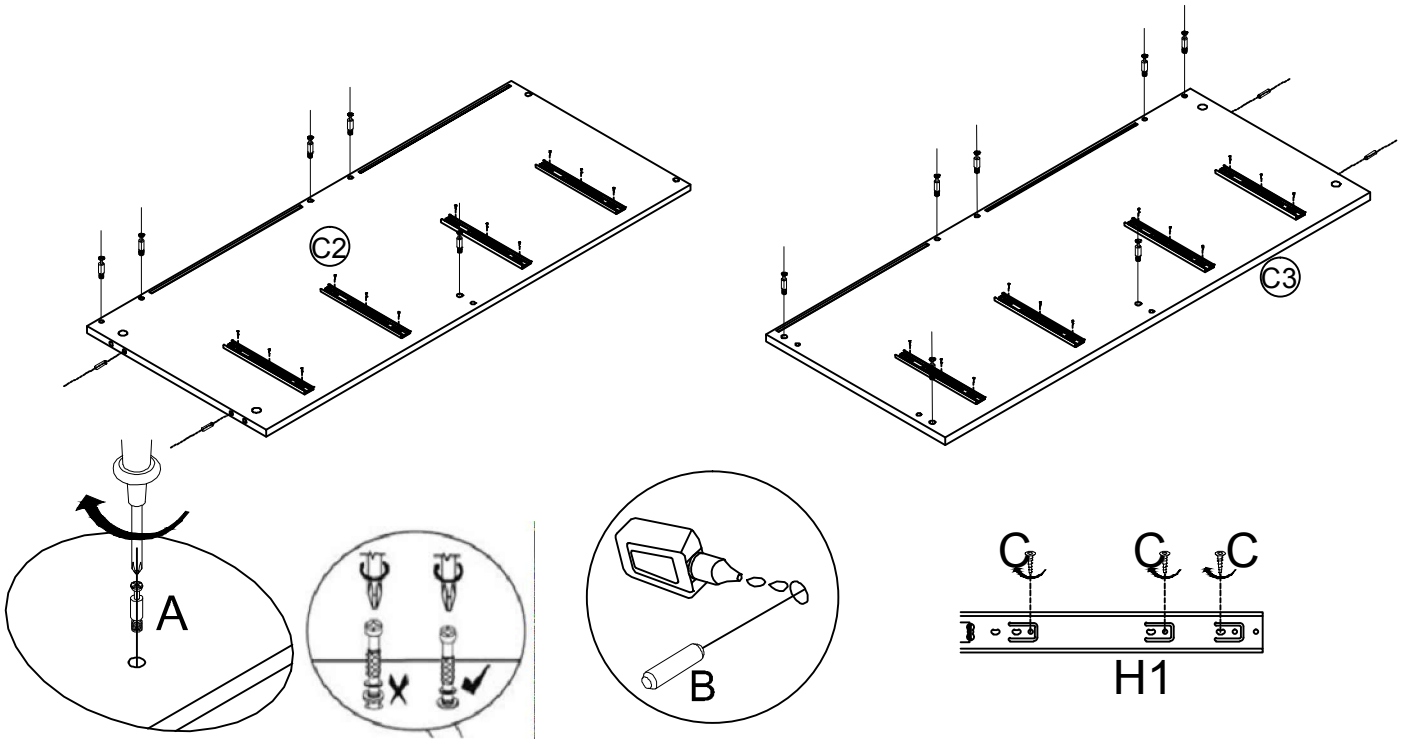

STEP 4：
Attach Panel(C4&C5&C8&C9) to Panel(C2).And turn Cam Lock(A) to lock into the head of Cam Pin(A).Insert Panel(C13) to groove.

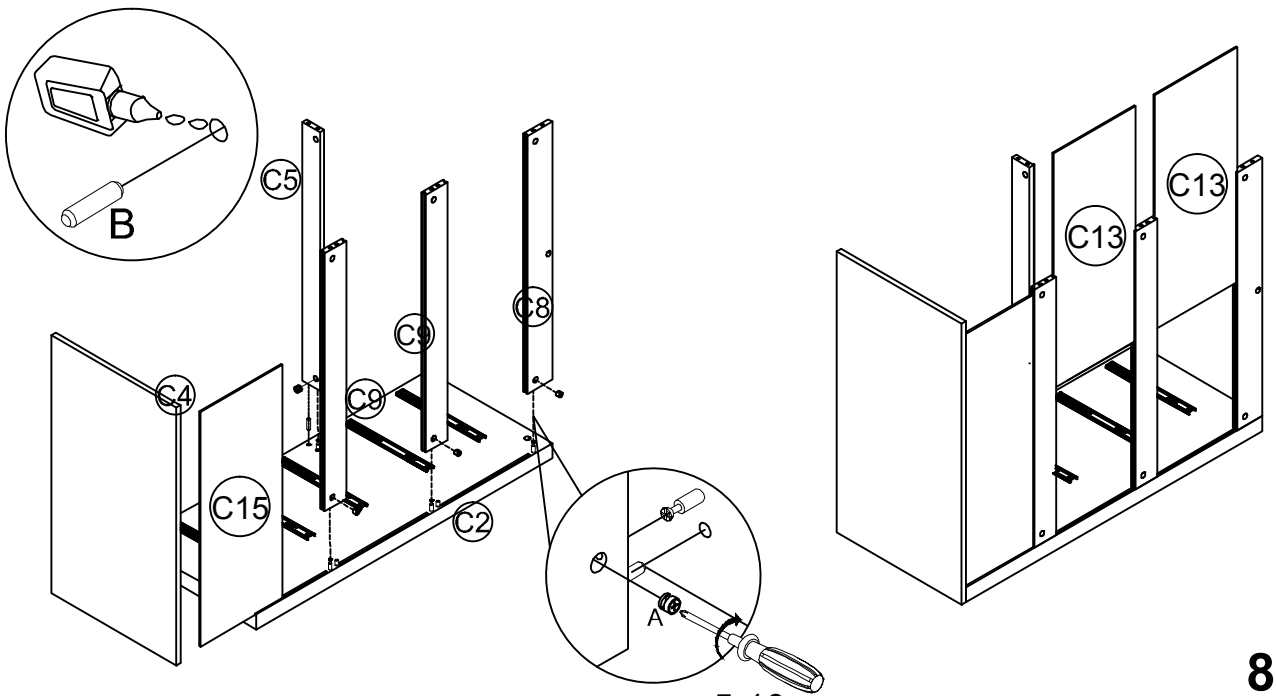

82510

STEP 5：
Attach Panel(C3) to Panel(C4&C5&C8&C9).And turn Cam Lock(A) to lock into the head of Cam Pin(A).Use Hex Key(J) to attach Panel(C15&C16) to Panel(C4) with Bolt(D). And then attach Protect foam(L) to Panel(C15&C16).

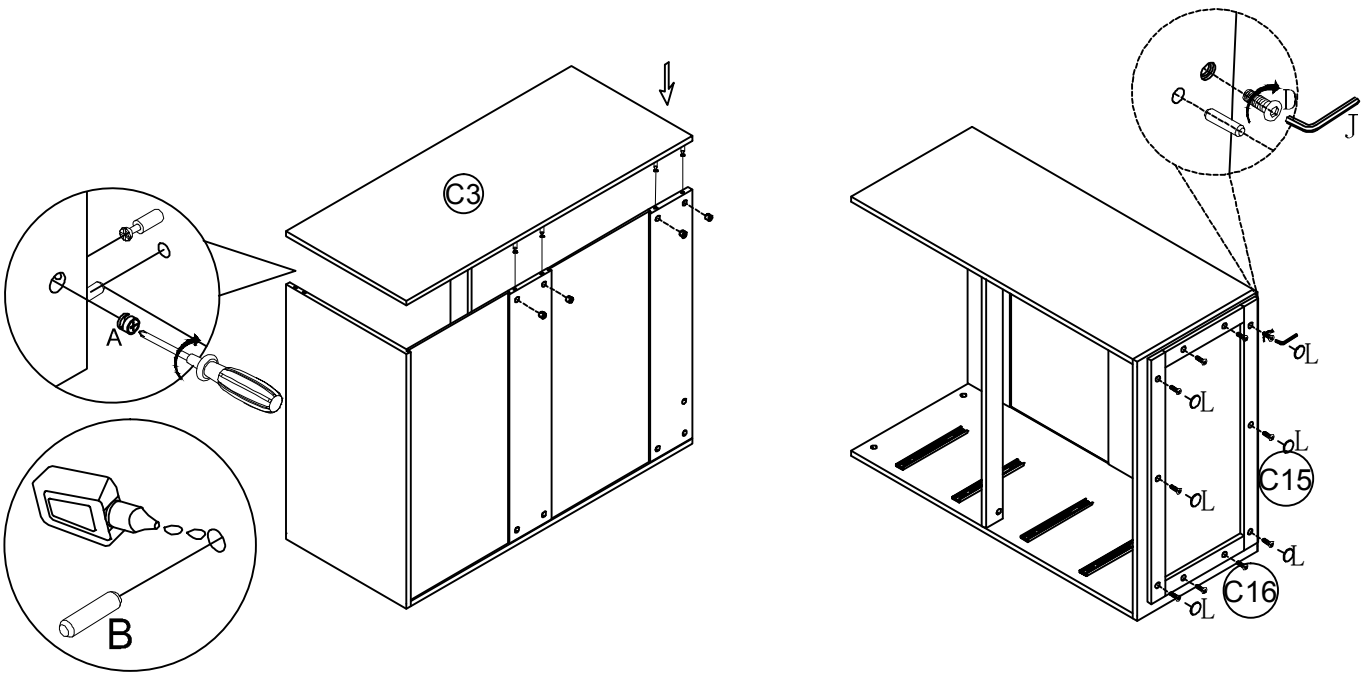

STEP 6：
Attach Panel(C1) to Panel(C2&C3).And turn Cam Lock(A) to lock into the head of Cam Pin(A).Attach Connector(F) to back corner with Screw(G).

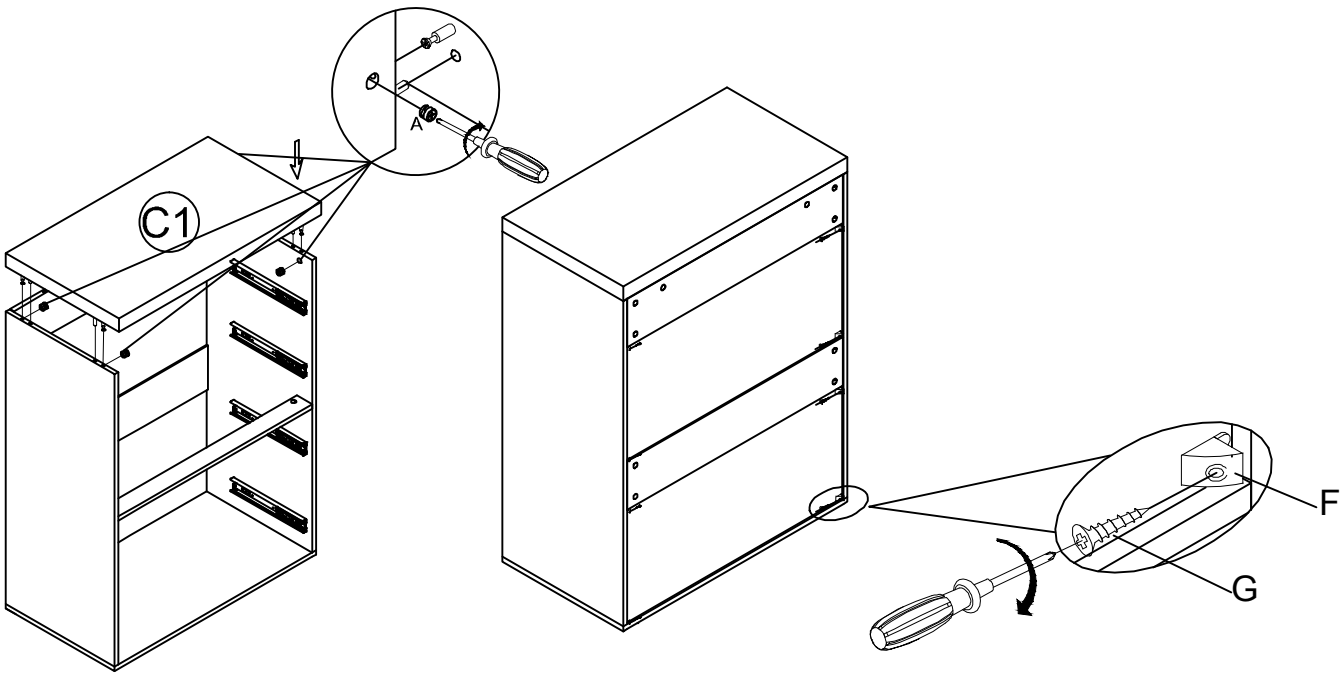

82510

STEP 7：
Insert Cam Pin(A) to Panel(C8). And attach Panel(C9&C10&C12) to Panel(C8).And turn Cam Lock(A) to lock into the head of Cam Pin(A).

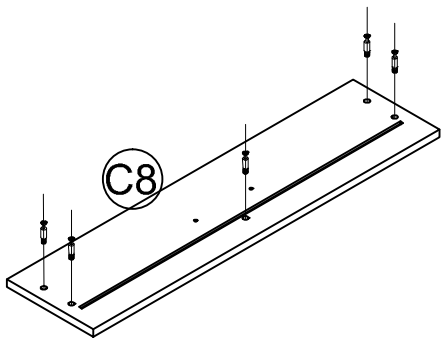

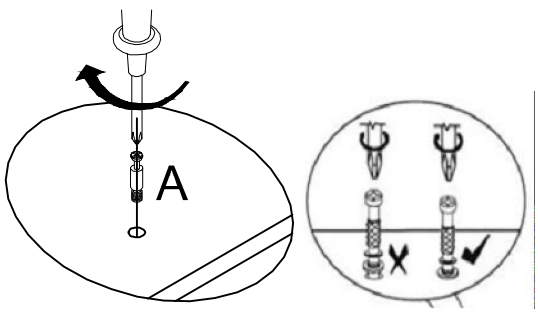

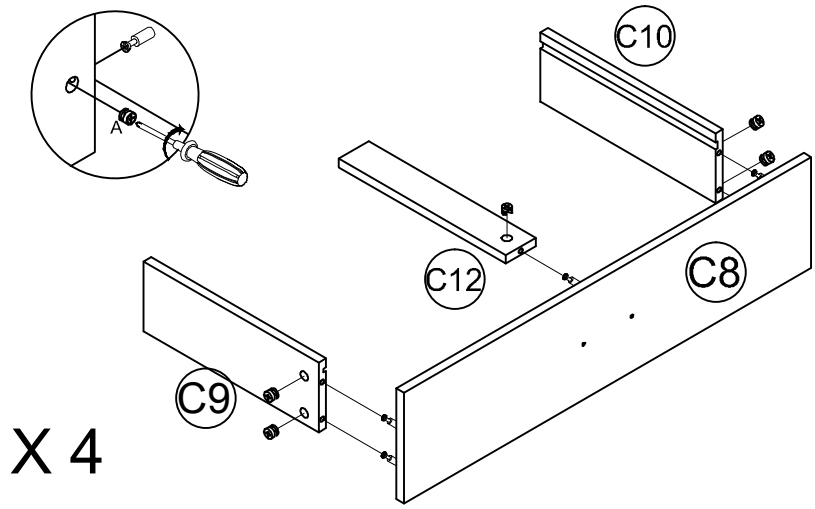

X 4

STEP 8：
Insert the Panel(C14) to groove. Attach Panel(C11) to Panel(C9&C10&C12) with Screw(K).

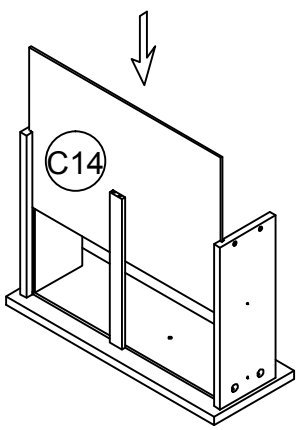

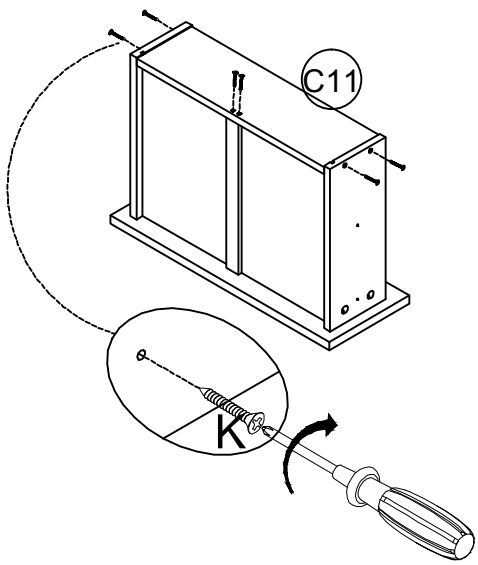

X 4

82510

STEP 9：
Attach Runner(H2) to Panel(C9&C10) with Screw(C). And attach Handle(N) to Panel(C8) with Bolt(E).

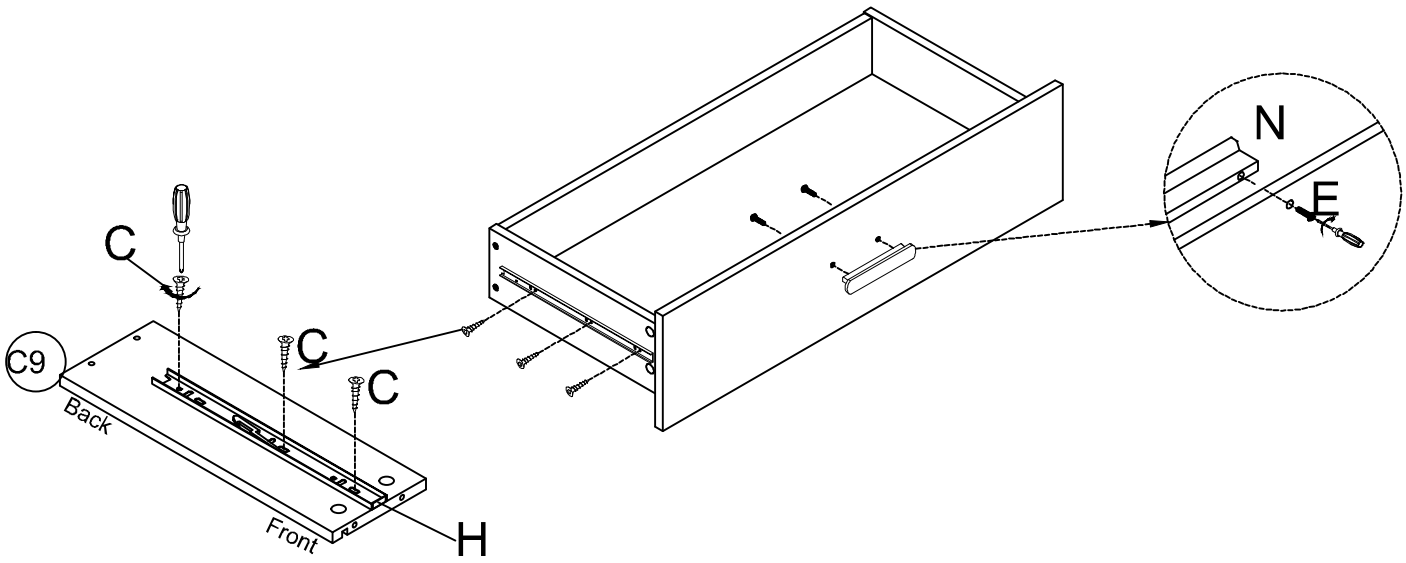

X 4

STEP 10：
Insert drawers into the body.Please insert the drawer with Tit Kip Label into Top drawer slot.

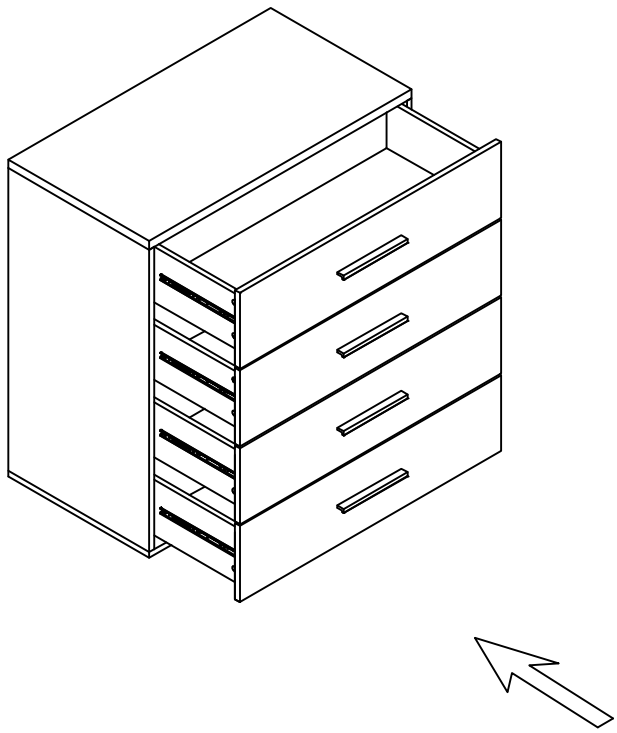

82510

Assembly is complete

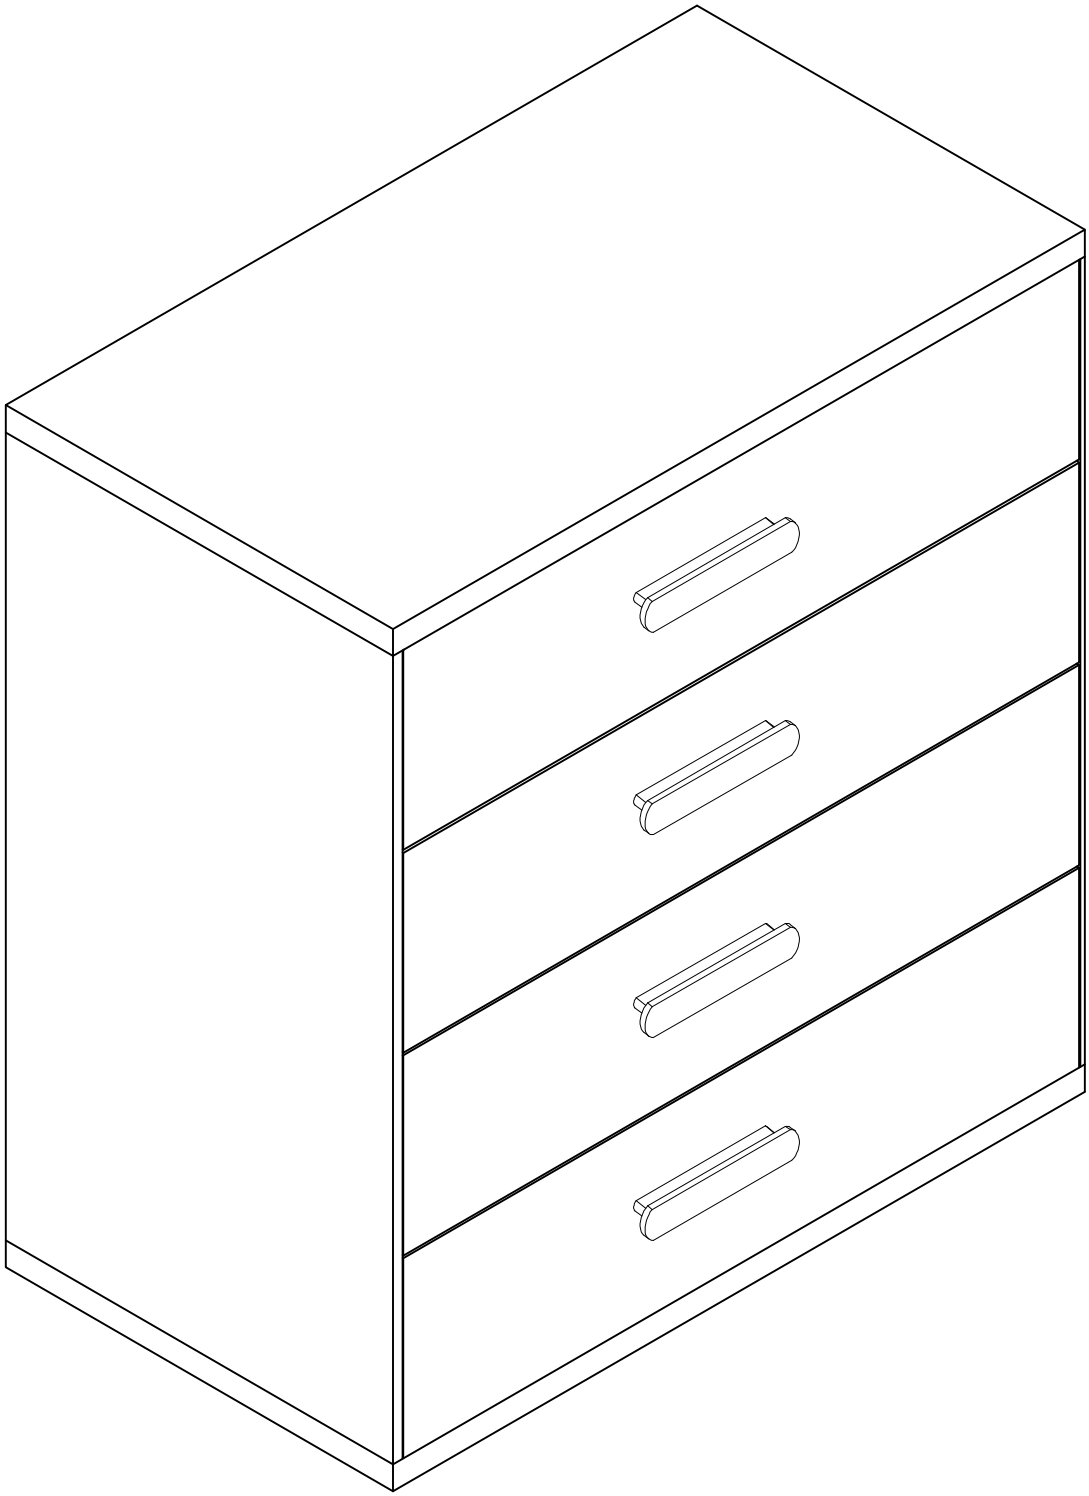

Note -
Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE

Mounting Plate x 2

Wall Strap x 1

Large Screw x2

Small Screw x2

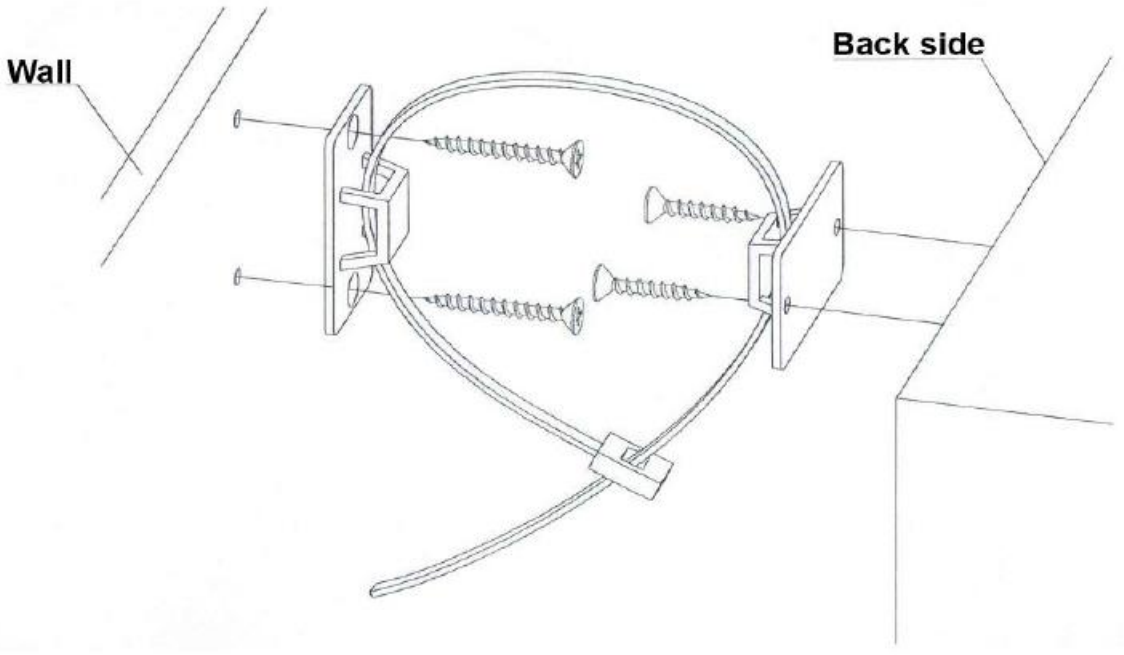

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void