Amart

600

448

550

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

82302
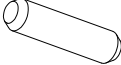
PRE-ASSEMBLY PREPARATION

Before you start:
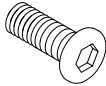
1. Choose a clean,level.spacious assembly area.Avoid hard surfaces that may damage the product

2. Take care when lifting.Product should be assembled as near as possible to the point of use

3. Ensure that you have all required contents for complete assembly.

4. Always read the assembly instructions carefully before beginning assembly.

5. Keep all hardware parts and packaging out of reach of small children.

6. Do not over tighten the screws and bolts as this may damage the threads

ALLOW 30 MINUTES

x1

2 PEOPLE REQUIRED

⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

NEVER put a TV on this furniture

This is a permanent label.
Do not remove!

82302

PARTS LIST
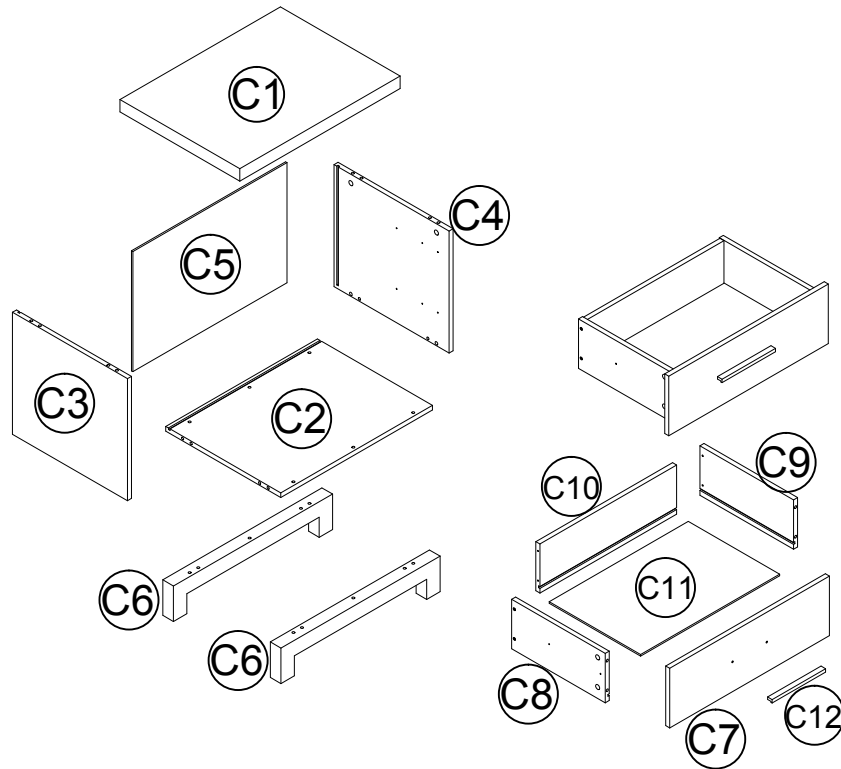
C1	Top Panel	C7	Drawer Front Panel
C2	Bottom Panel	C8	Drawer Left Side Panel
C3	Left Side Panel	C9	Drawer Right Side Panel
C4	Right Side Panel	C10	Drawer Back Panel
C5	Back Panel	C11	Drawer Bottom Panel
C6	Legs	C12	Handle

A.Cam lock and Cam pin Ø15X35	B.Dowel Ø8x30	C.Screw Ø3.5x12	D.Screw Ø3.5x30	E.Boit M4x20	F.Connector 18x16x10	G.Screw Ø3x18
16PCS	12PCS	24PCS	8PCS	4PCE	4PCS	4PCS
H.Bolt M6x35	I.Washer Ø13	J.Hex key M4	K.Runner 250mm	L.Protect foam Ø35x5	M.GLUE	N.Protect Foam Ø35X5mm
6PCS	6PCS	1PCE	4PCS	4PCS	1PCE	4PCS
O.Safety Bracket Kit						
1PCS						

82302

STEP 1:

Runner slide separately(K=K1+K2)

Carefully pull out the runner slide(K2)and press plastic clip to fully separate runner slide as diagram shown

K1

K2

STEP 2:
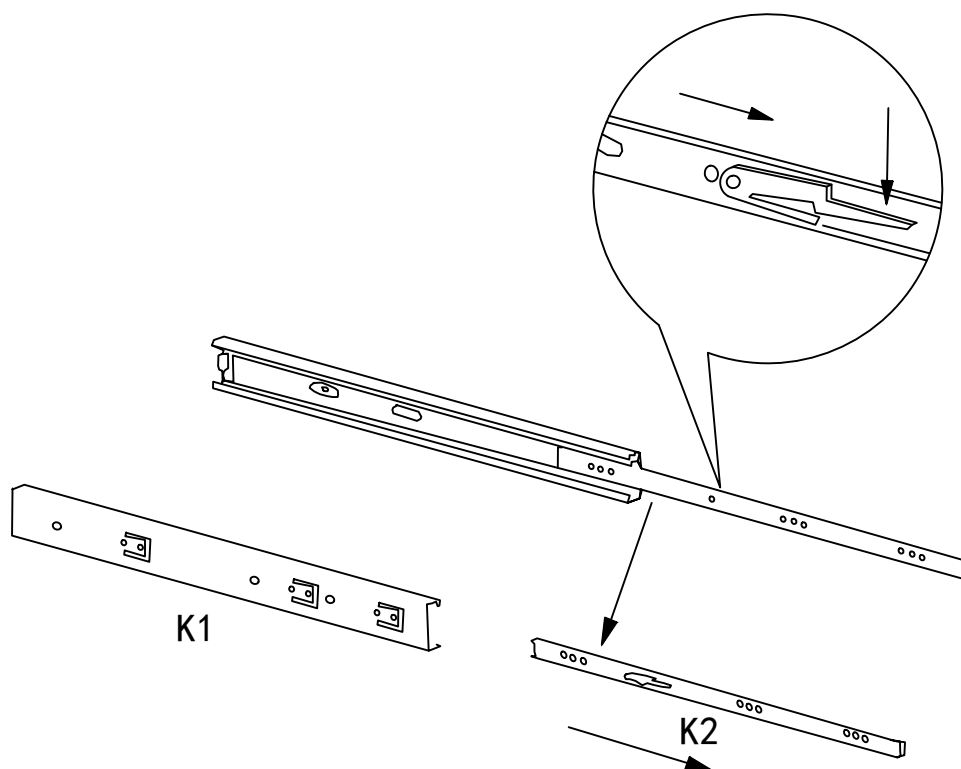
Insert the Cam Pin (A) and Dowel(B) to Panel (C1),(C2),(C3),(C4),(C7). Attach the Runner(K1) to the Panel(C3),(C4) with Screw(C).

B

C1

C7 x2

C3

C2

A

C4

C

C

C

K1

82302
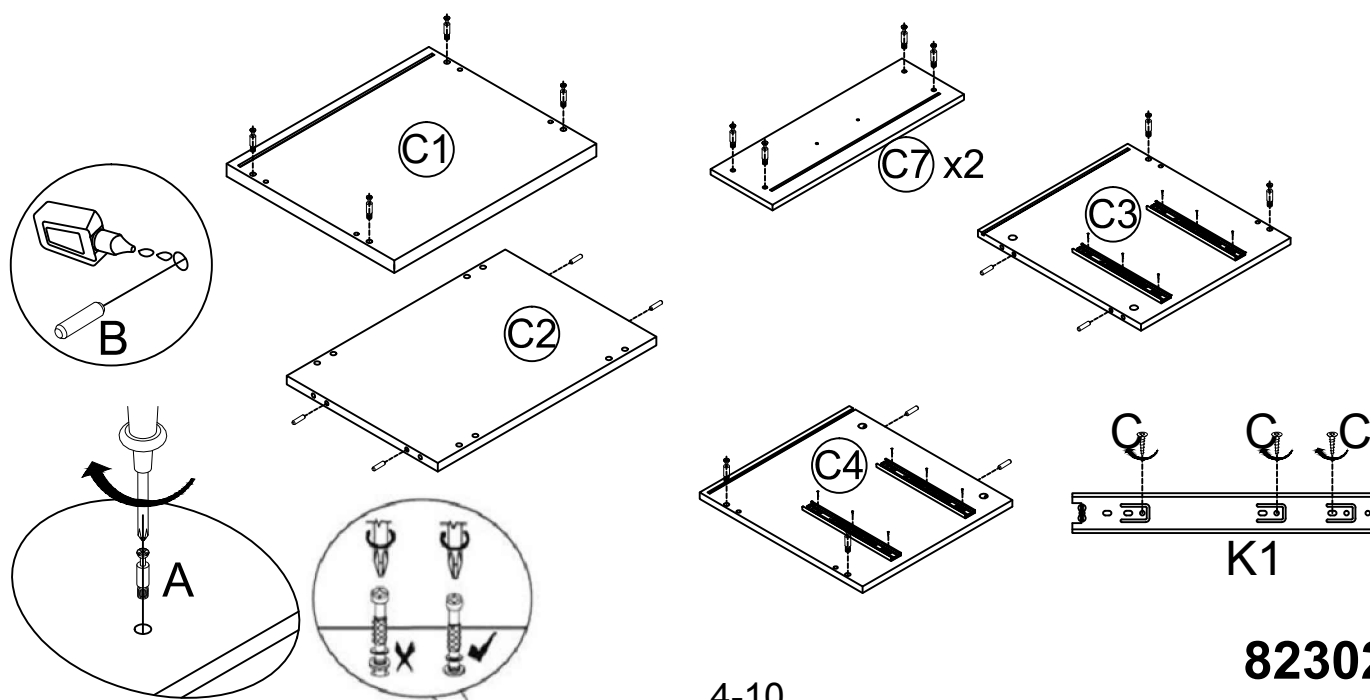
STEP 3：

Attach Panel(C3),(C4) to Panel(C2).And turn Cam lock(A) to lock into the head of Cam Pin(A).
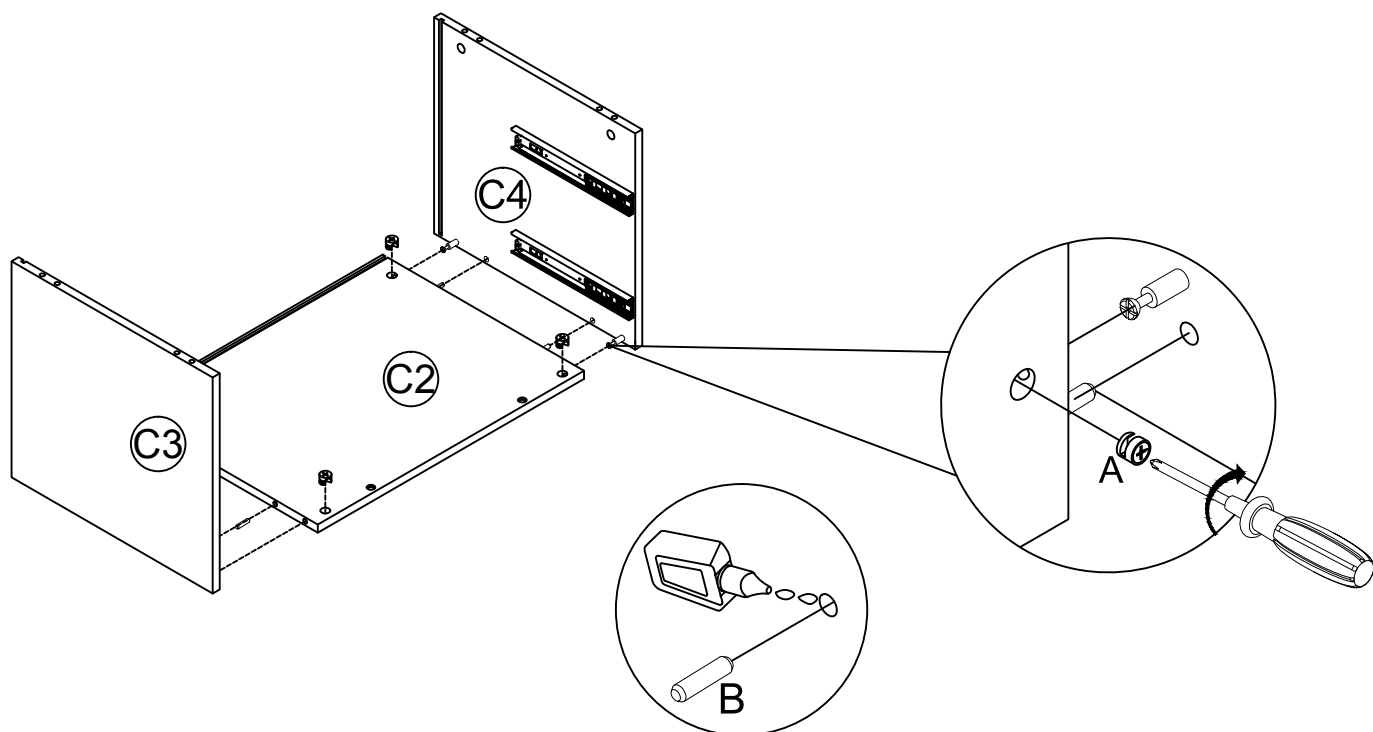
STEP 4：

Use Hex key(J) to attach the Leg(C6) to Panel(C2) with the Bolt(H) and Washer(I). Attach the Protect Foam(N) in the Leg(C6).

82302
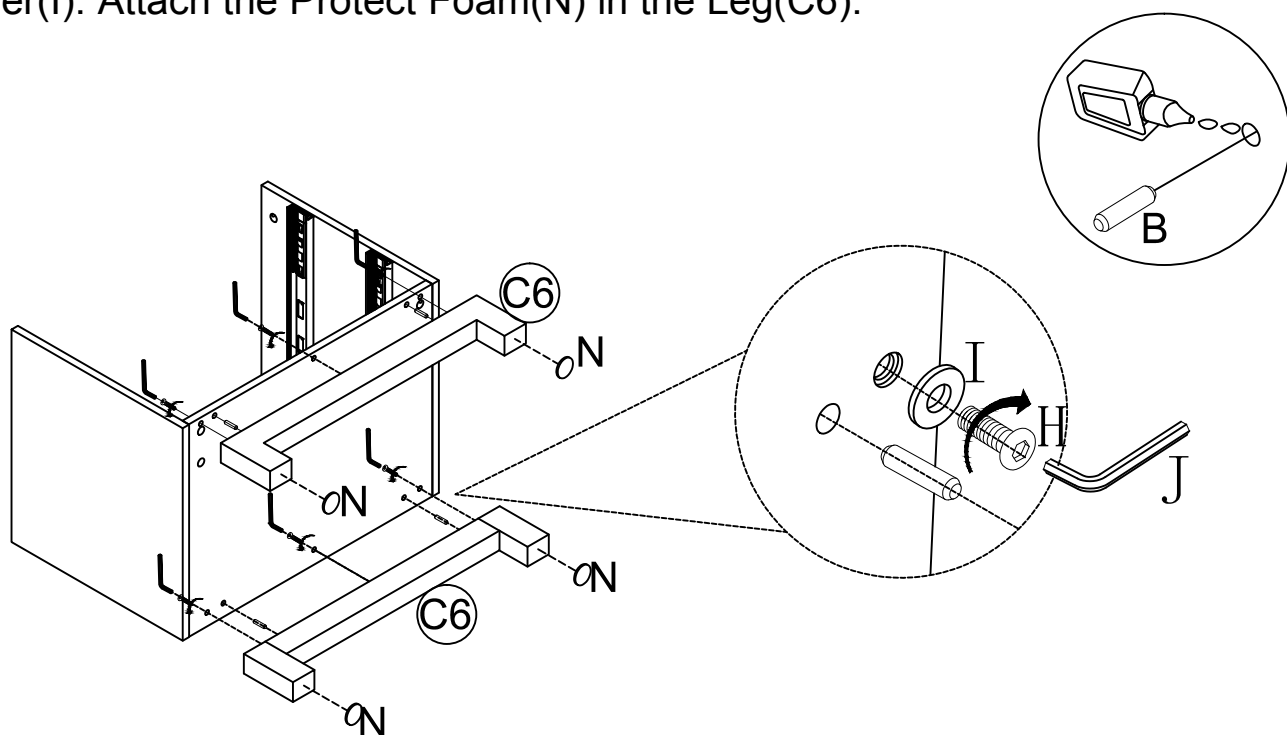
STEP 5：
Insert the Back Panel(C5) to the groove.

C5
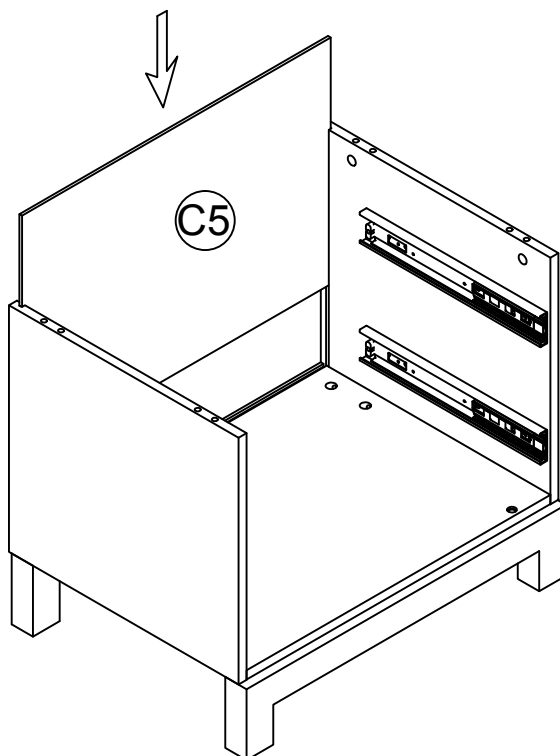
STEP 6：
Attach Panel(C1) to Panel(C3),(C4).And turn Cam lock(A) to lock into the head of Cam Pin(A).

C1

A

82302
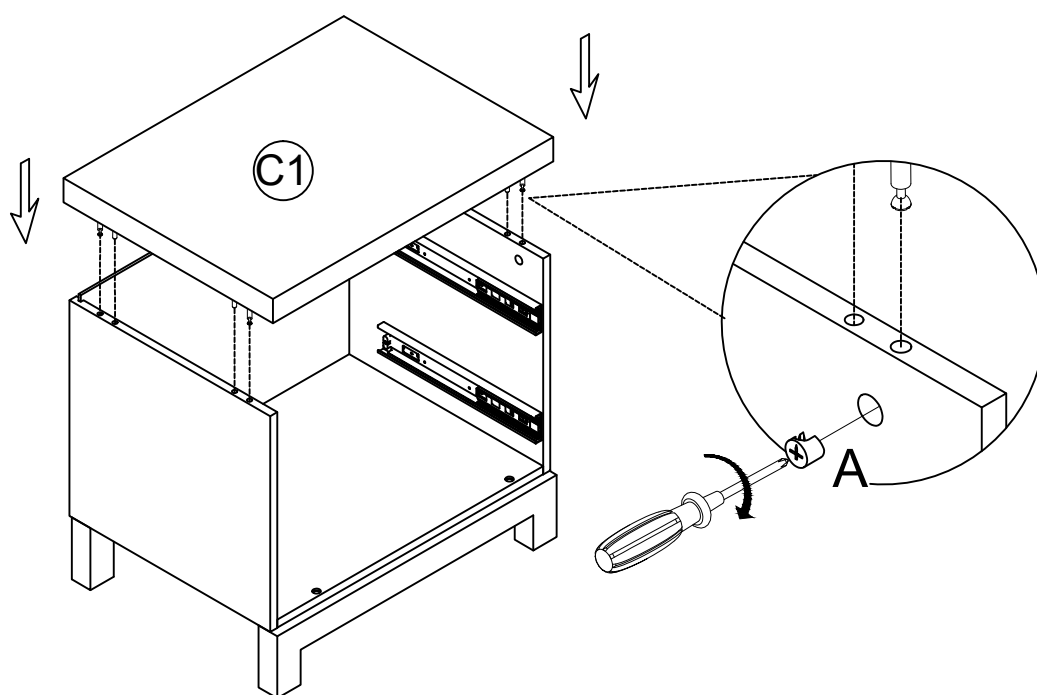
STEP 7：

Attach the Connector(F) to back corner with the Screw(G).

F

G
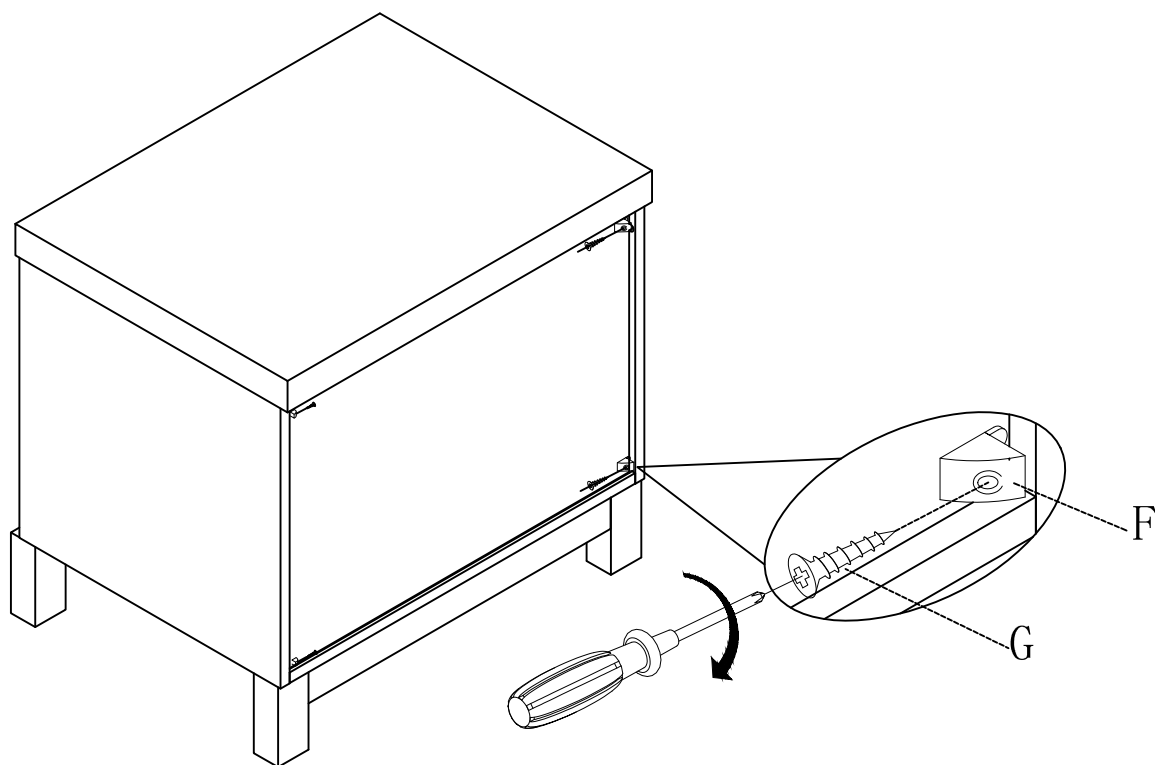
STEP 8：

Attach Panel (C8),(C9) to Panel(C7).Turn Cam lock(A) to lock into the head of Cam Pin(A).
Insert Panel(C11) to the groove. Attach Panel(C10),(C8),(C9) with Screw(D).

C8

C9

C7

C11

C10

A

D

X 2

82302
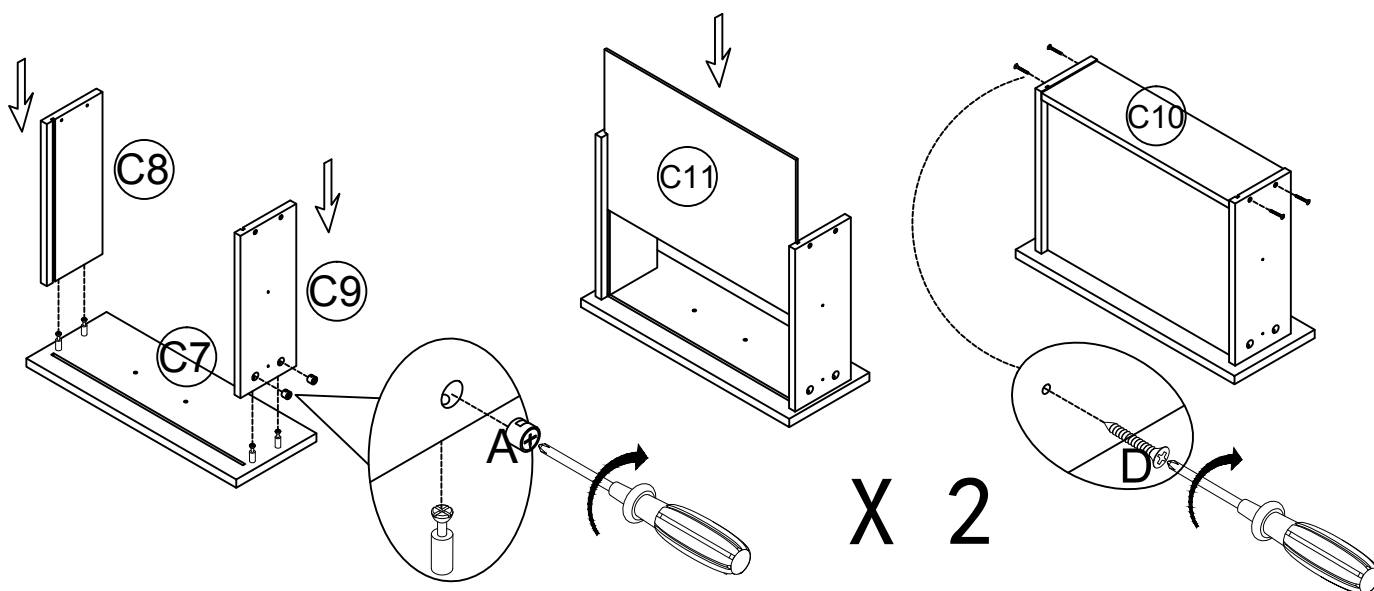
STEP 9:

Attach to Runner(K2) to Panel(C8),(C9) with Screw(C).And attach the Handle(C12) to Panel(C7) with Bolt(E).

X 2

STEP 10:

Insert the drawers into the body.

82302

Assembly is complete

82302
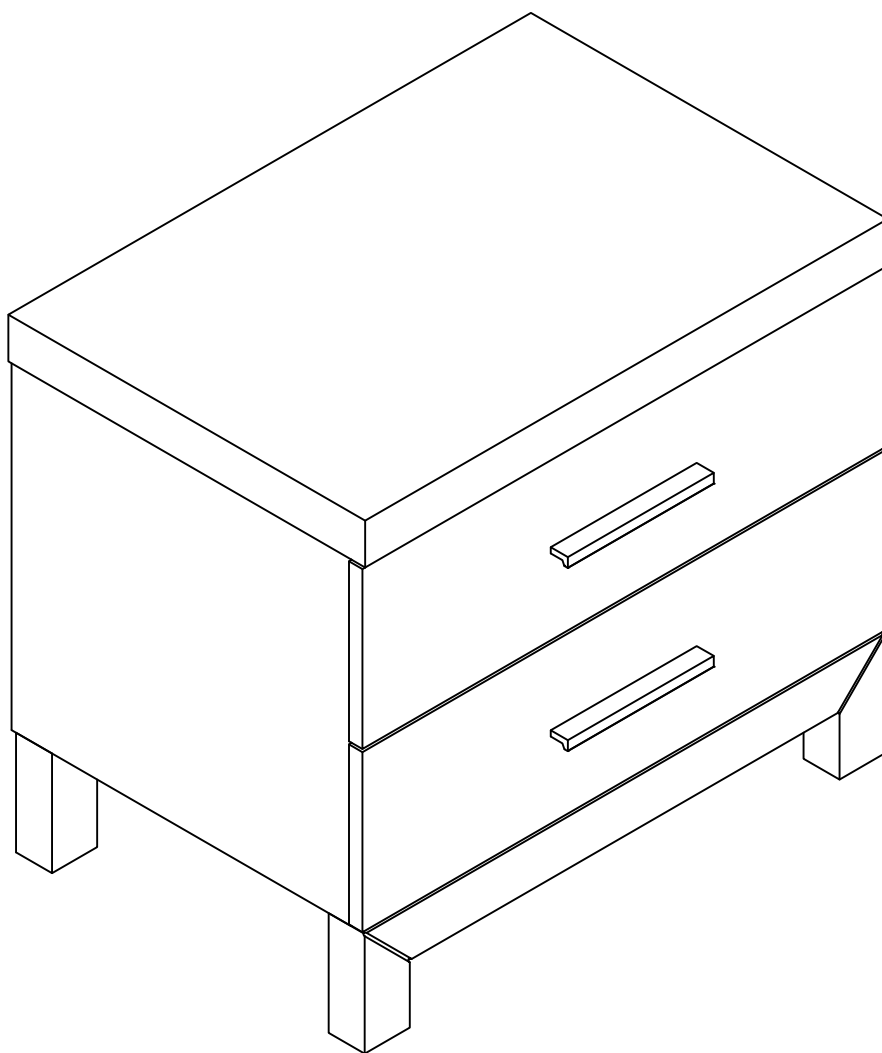
SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.

2. Attach the second Mounting Plate to the furniture frame with the Short Screws.

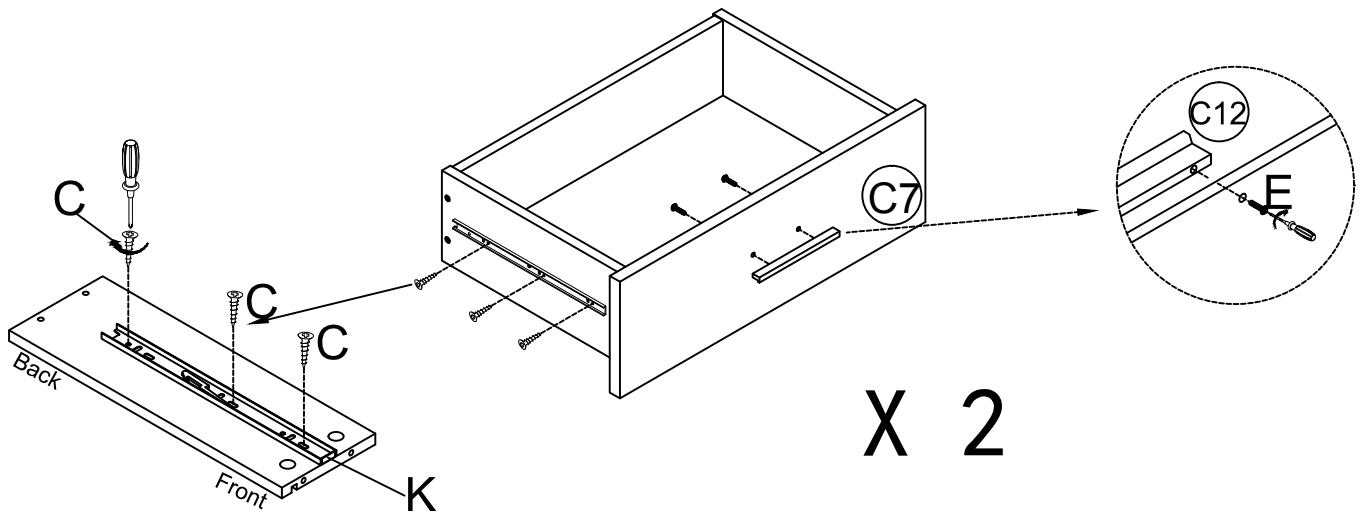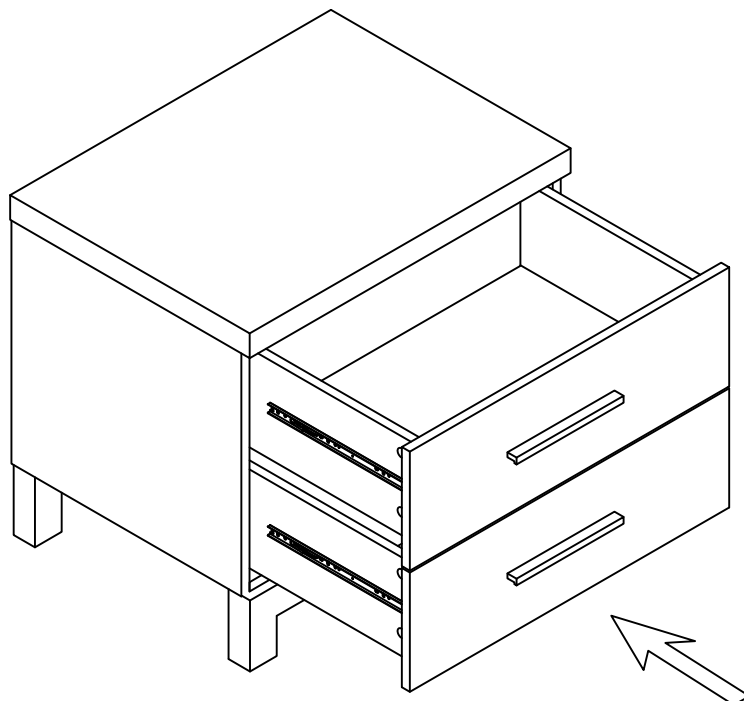3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.

4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE

| Mounting Plate x 2 | Wall Strap x 1 | Large Screw x2 | Small Screw x2 |

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

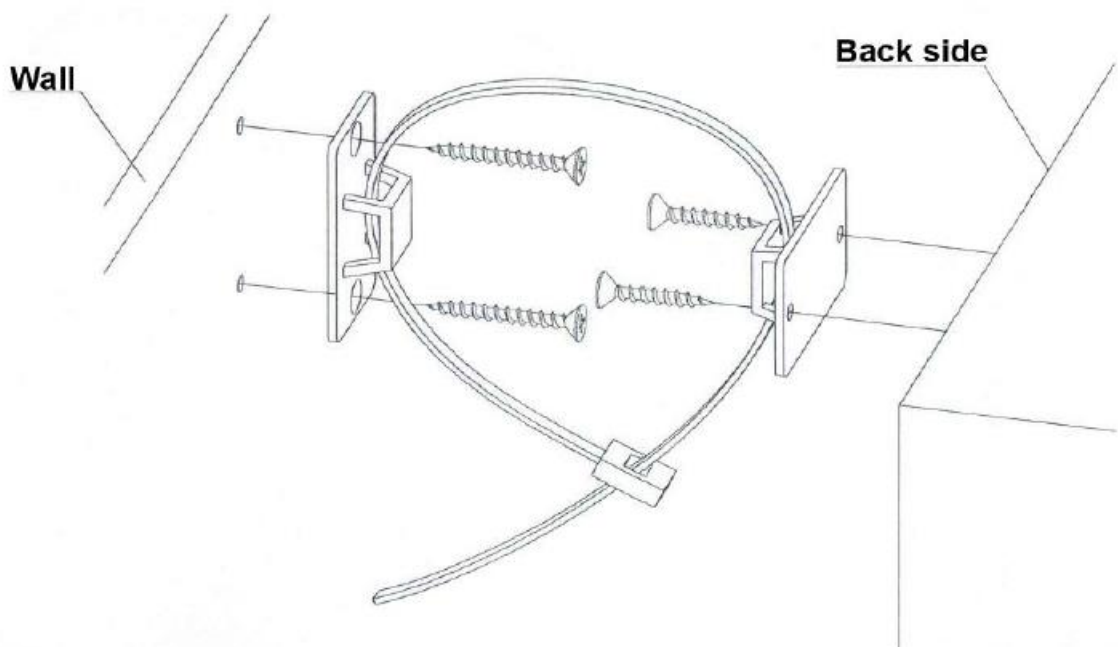Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase …

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.

Amart