Amart

500

500

500

1-10

86763

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean,level.spacious assembly area.Avoid hard surfaces that may damage the product
2. Take care when lifting.Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
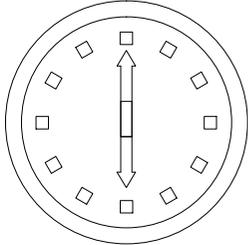
ALLOW 30 MINUTES
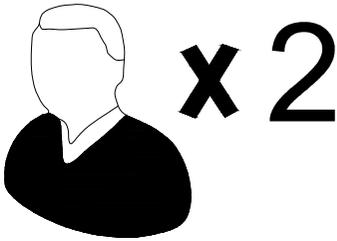
x2
2 PEOPLE REQUIRED

ADDITIONAL TOOLS REQUIRED

⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

NEVER put a TV on this furniture

**This is a permanent label. Do not remove!**

86763

CAM Lock and Pins

step 1

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used.
The below is information on how these work.
Cam Locks are fasteners used to join two boards together,
usually the edge of one board(A) to the flat side of another board(B)

Cam Pin   **Cam Lock**

Board A

flat side

edge to join
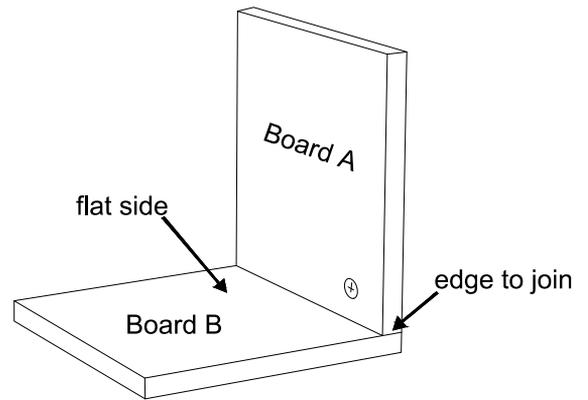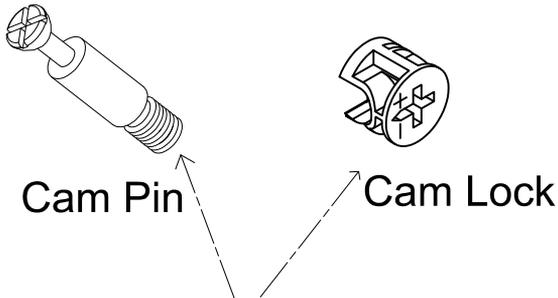
Board B

Ensure that you use the correct images that are representative
of the hardware used in the product

step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board,
it is important that:
 * The cam pin is kept vertical and is not put in on an angle
 * Cam Pin is inserted up to the collar
     * Too far and it wont catch the Cam Lock (Do not Over Tighten)
     * Not enough and the resulting product wont be stable

Cam Pin
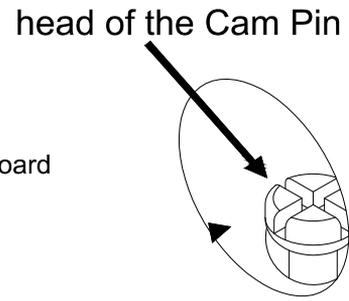
Collar
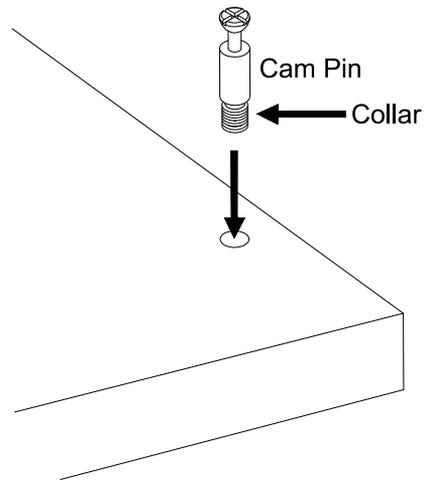
step 3

To use Cam Lock Fasteners

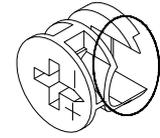Now fit the hole in the edge of the joining board over the Cam Pin

86763
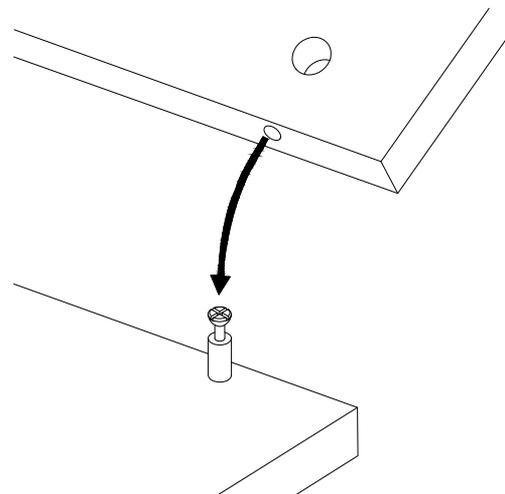
step 4
To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin
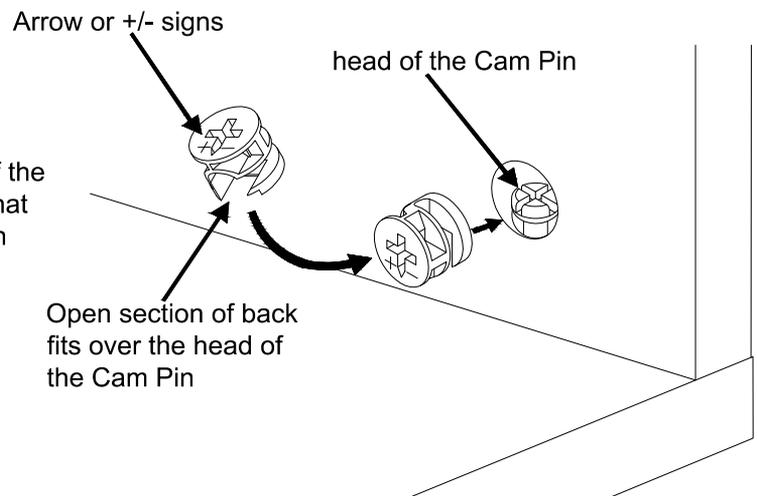
Cam Lock

step 5
To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin

Open section of back fits over the head of the Cam Pin
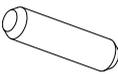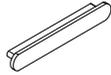
step 6
To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin.Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount,turn the Cam Pin out (counter-clockwise)one full turn,and try the Cam Lock again.

86763
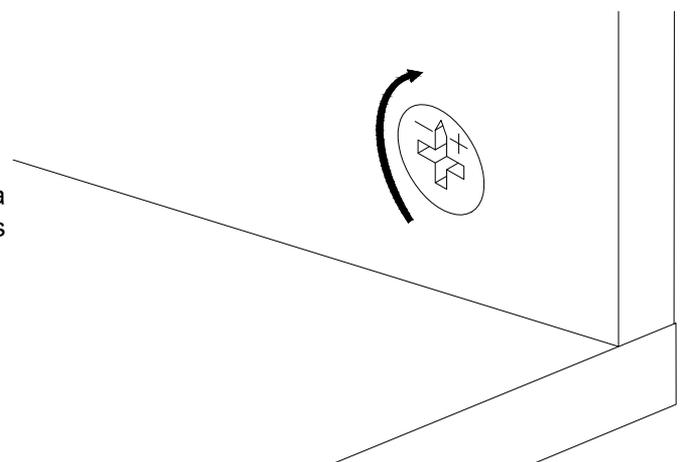
PARTS LIST
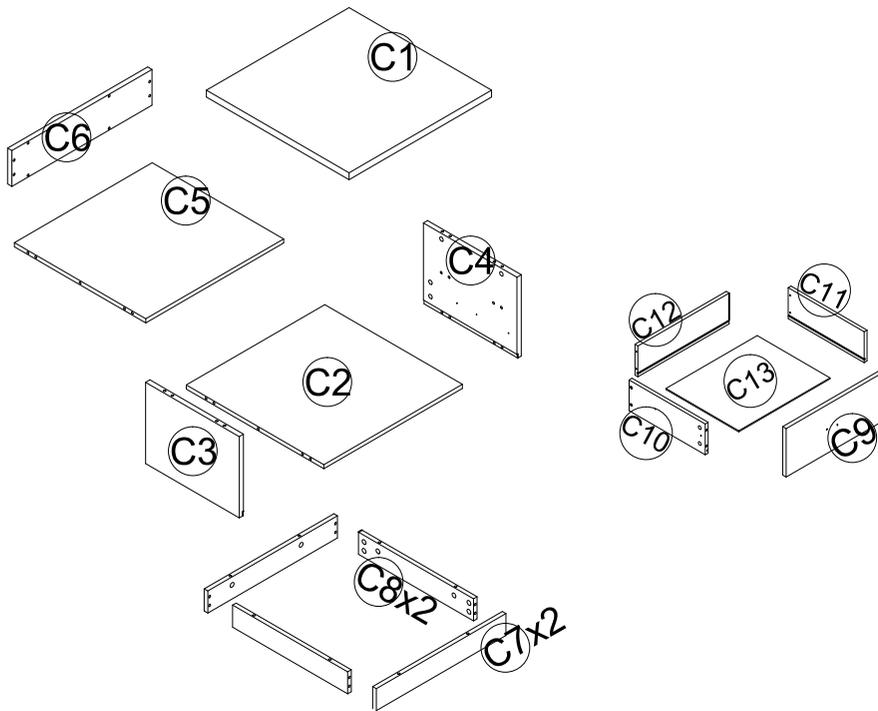
C1	Top Panel	C8X2	Leg
C2	Bottom Panel	C9	Drawer Front Panel
C3	Left Side Panel	C10	Drawer Left Side Panel
C4	Right Side Panel	C11	Drawer Right Side Pane
C5	Shelf panel	C12	Drawer Back Panel
C6	Back Panel	C13	Drawer Bottom Panel
C7X2	Leg		

A.Cam lock and Cam pin Ø15X35	B.Dowel Ø8x30	C.Screw Ø3.5x12	D.Screw Ø3.5x30	G.Runner	H.Protect foam 20x14x5mm	I.GLUE
40PCS	12PCS	12PCS	4PCS	2PCS	6PCS	1PCE

|		
J.Safety Bracket Kit	M.Screw Ø4x22	P.
1PCS	2PCS	1PCS

86763

STEP 1：
Runner slide separately(G=G1+G2)
Carefully pull out the runner slide(G2)and press plastic
clip to fully separate runner slide as diagram shown

G1

G2
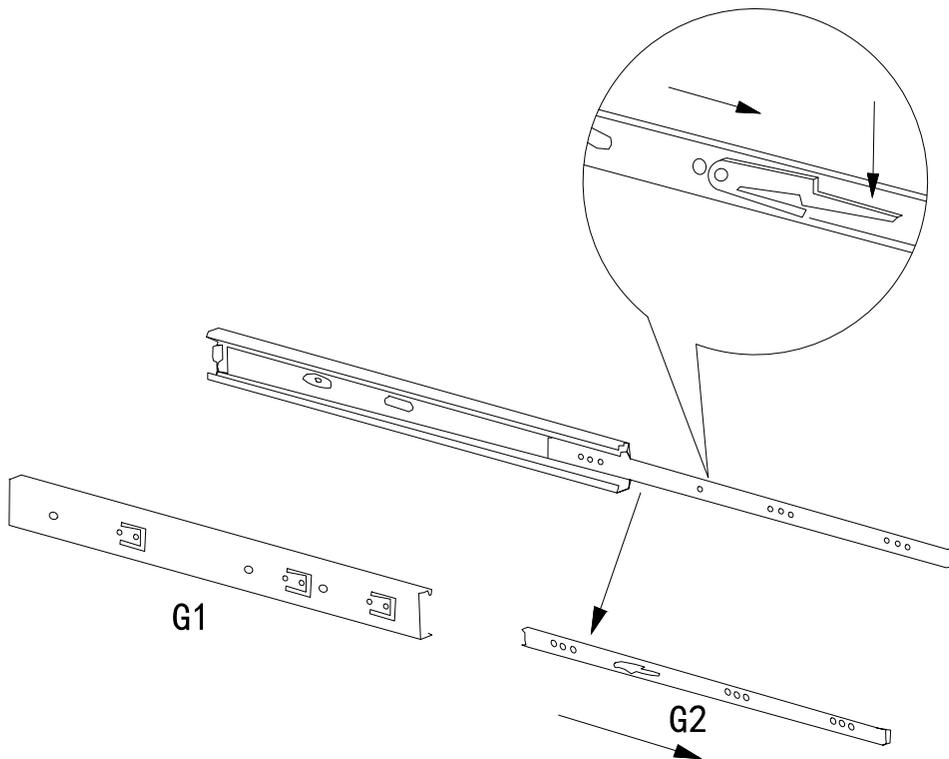
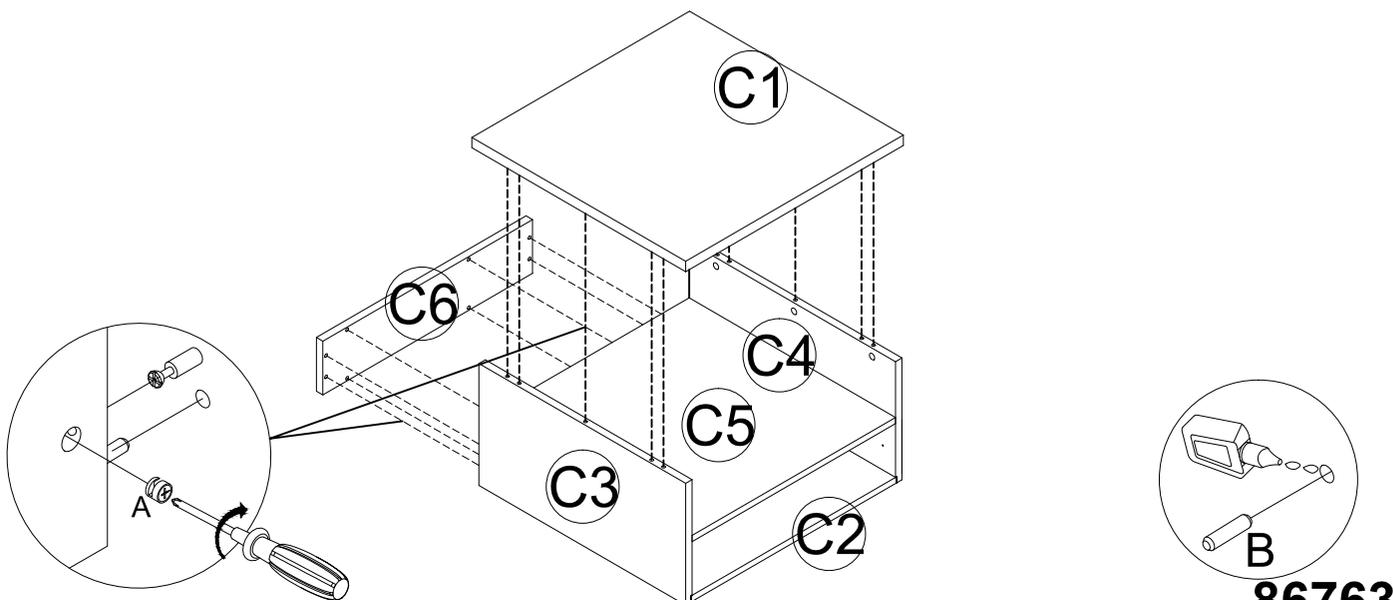## STEP 2：Use a Phillips Head Screwdriver to attach Cam Pin(A) to the Panel(C1,C2,C3,C4,C7,C8).Use a Phillips Head Screwdriver to attach Dowel (B) to the Panel(C1,C3,C4).attached Runner(G1) to the Panel(C3,C4) with Screw(C).

B

A

C1

C4

C8x2

C3

C7

C2

C   C   C

G1

86763
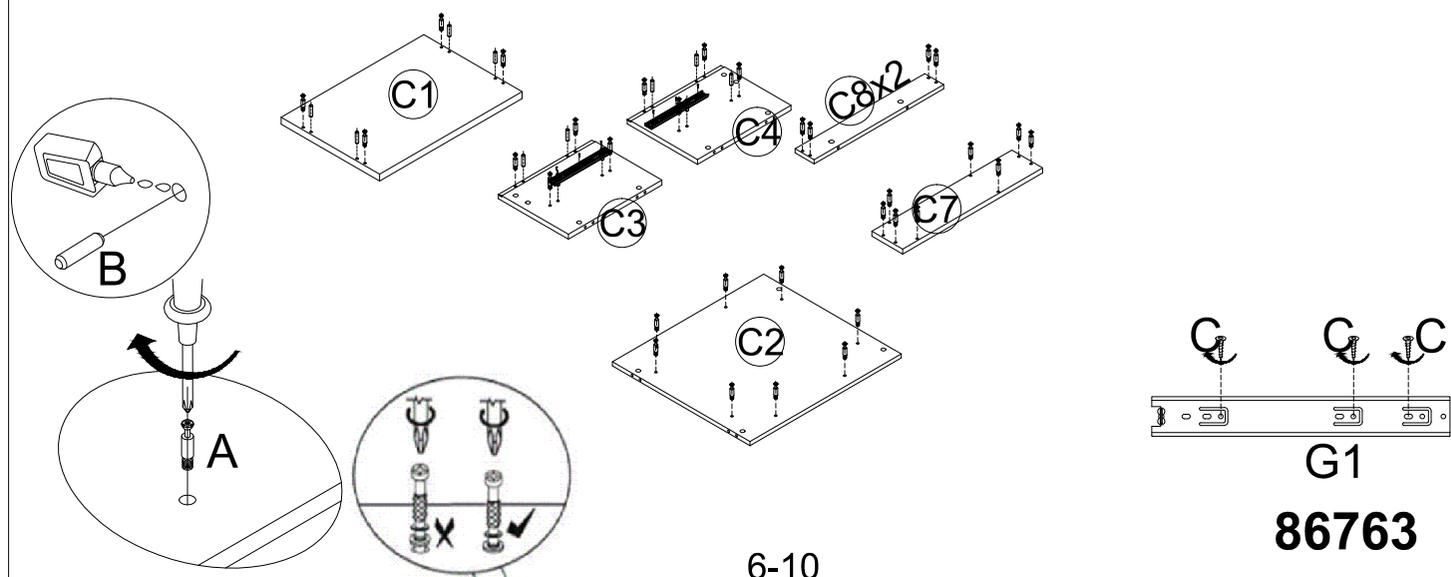
STEP 3：Attach Support Panel(C3&C4) to Shelf Panel(C2&C5).And turn Cam lock(A) to lock into the head of Cam Pin(A).Use a Phillips Head Screwdriver to assemble Panel (C7) to the Panel(C8) with Cam Lock(A).
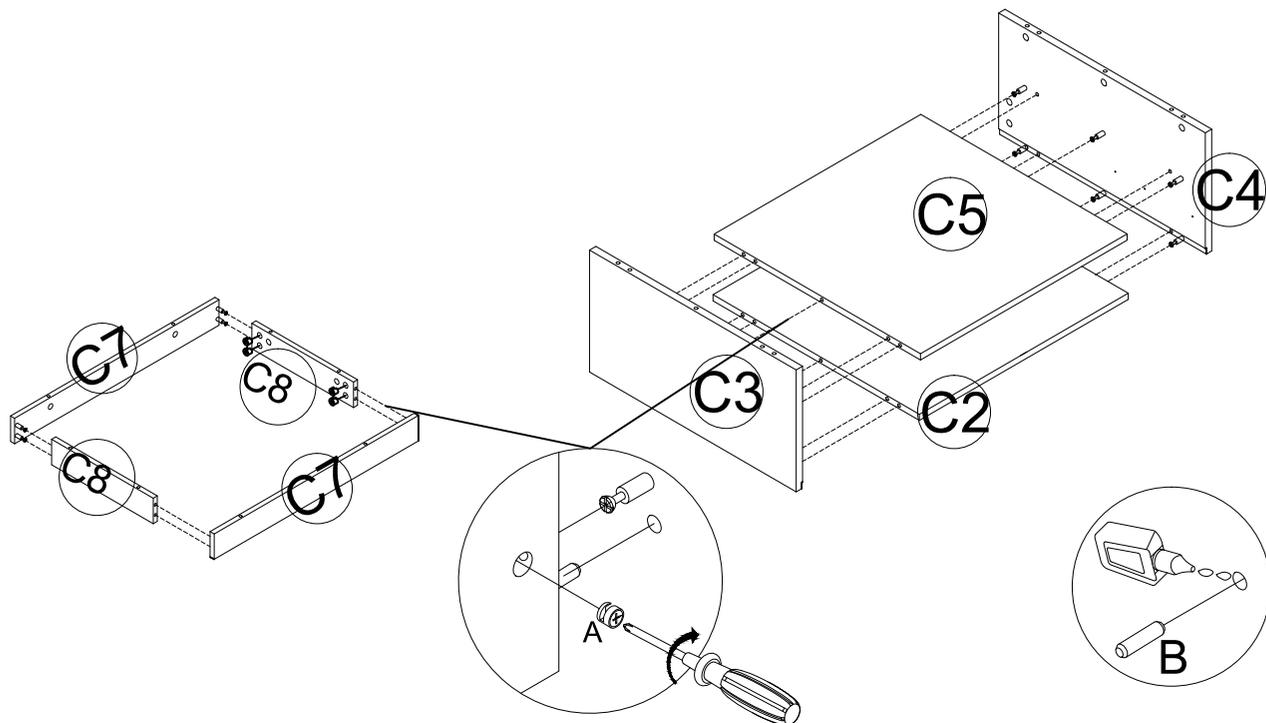
STEP 4：Attach Support Panel(C1) to Shelf Panel(C3&C4).And turn Cam lock(A) to lock into the head of Cam Pin(A).Attach Support Panel(C6) to Shelf Panel(C2&C3&C4&C5).And turn Cam lock(A) to lock into the head of Cam Pin(A).

86763

STEP 5：Use a Phillips Head Screwdriver to assemble Panel (C7,C8) to the
Panel(C2) with Cam Lock(A).Stick Protest Foam(H) to the Panel(C7,C8).

C2

C8

C7

A
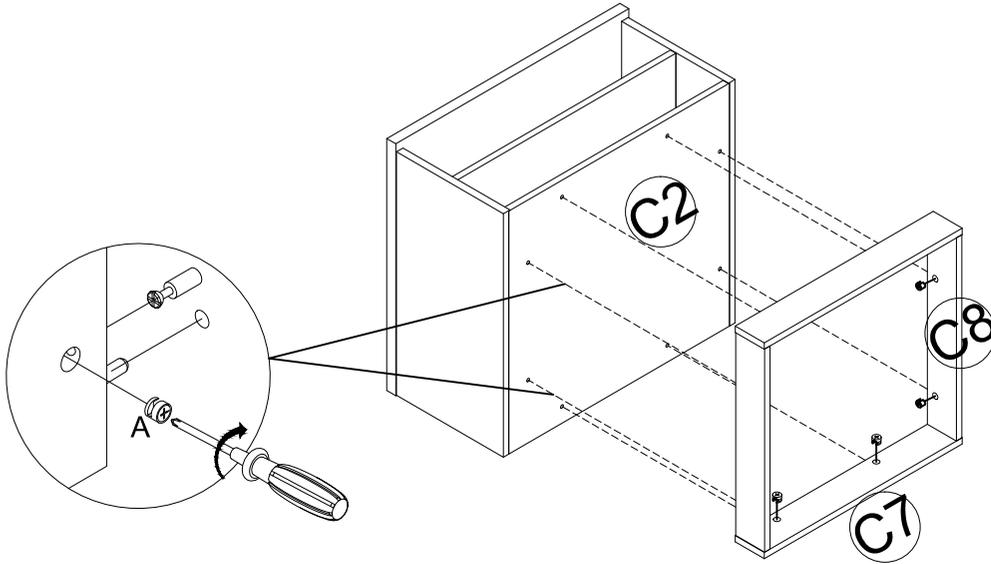
STEP 6：Use a Phillips Head Screwdriver to attach Runner(G2)to the Panel(C10,C11) with
Screw(C).assemble Panel(C10,C11) to the Drawer Back Panel(C12) withScrew(D)

C11

C12

C10

C

C

C

Back

Front

G2

D

86763
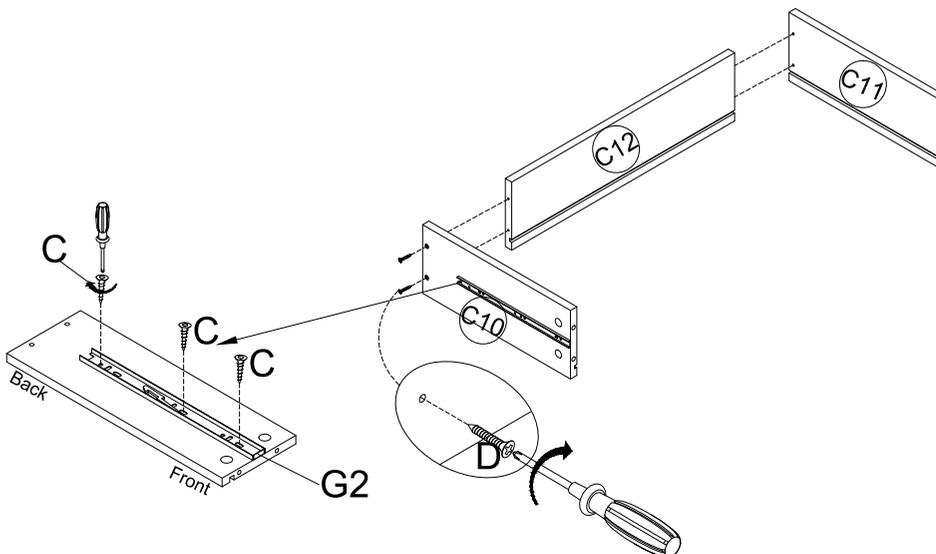
STEP 7： Insert the Drawer Bottom Panel(C13) to the groove,Usea PhillipsHead Screwdriver to assemble Panel(C10,C11) to the Drawer Front Panel(C13) with Cam Lock(A).Attached Handle(P) to the Drawer Front Panel(C9) with Bolt(M)
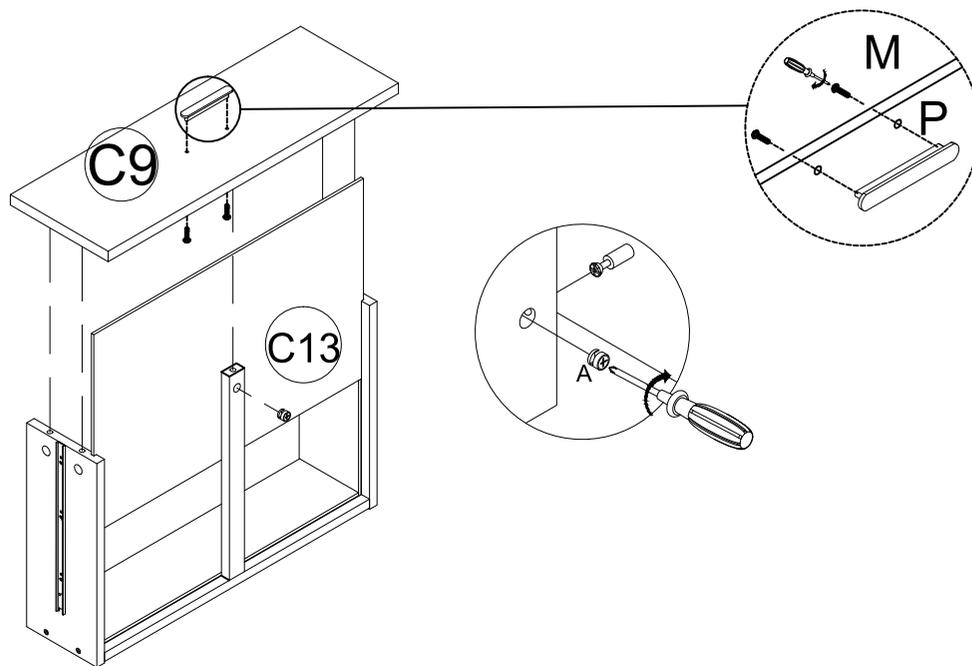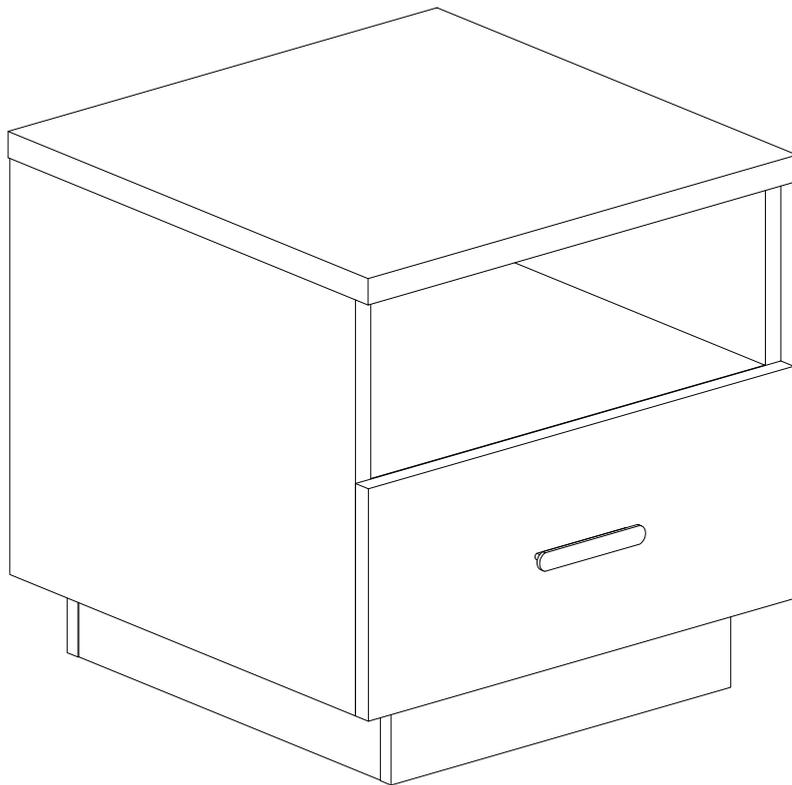
STEP 8： insert the drawers into the body

86763
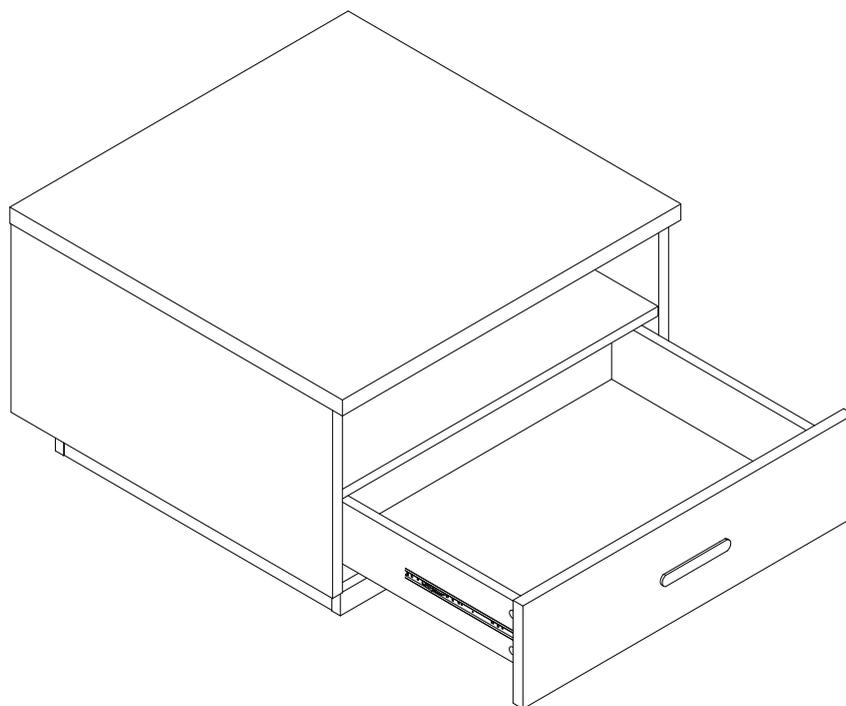
Note -
Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.

86763

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.

2. Attach the second Mounting Plate to the furniture frame with the Short Screws.

3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.

4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.
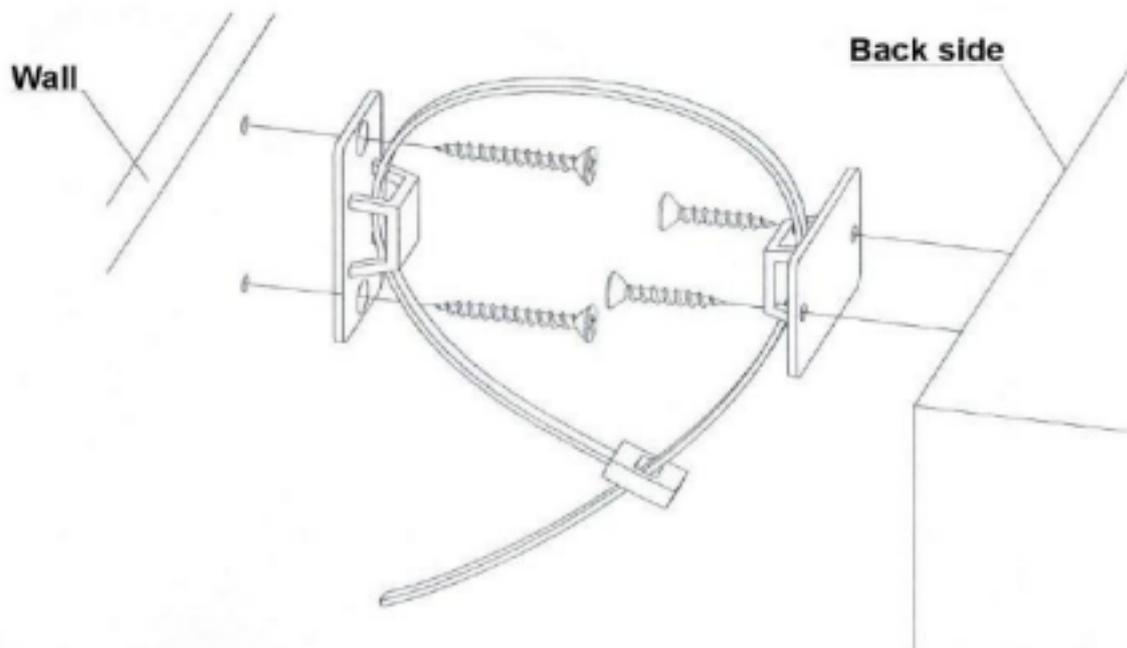
HARDWARE

Mounting Plate x 2	Wall Strap x 1	Large Screw x2	Small Screw x2

Wall

Back side

General Product Care

To protect your furniture, we suggest the following:

• Avoid placing your furniture in direct sunlight.

• Do not place furniture directly under windows.

• Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.

• Do not place material with high temperature directly onto the surface of your furniture.

• Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

• Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.