


# ASSEMBLY INSTRUCTION

## HARMON COFFEE TABLE

ITEM CODE 74699



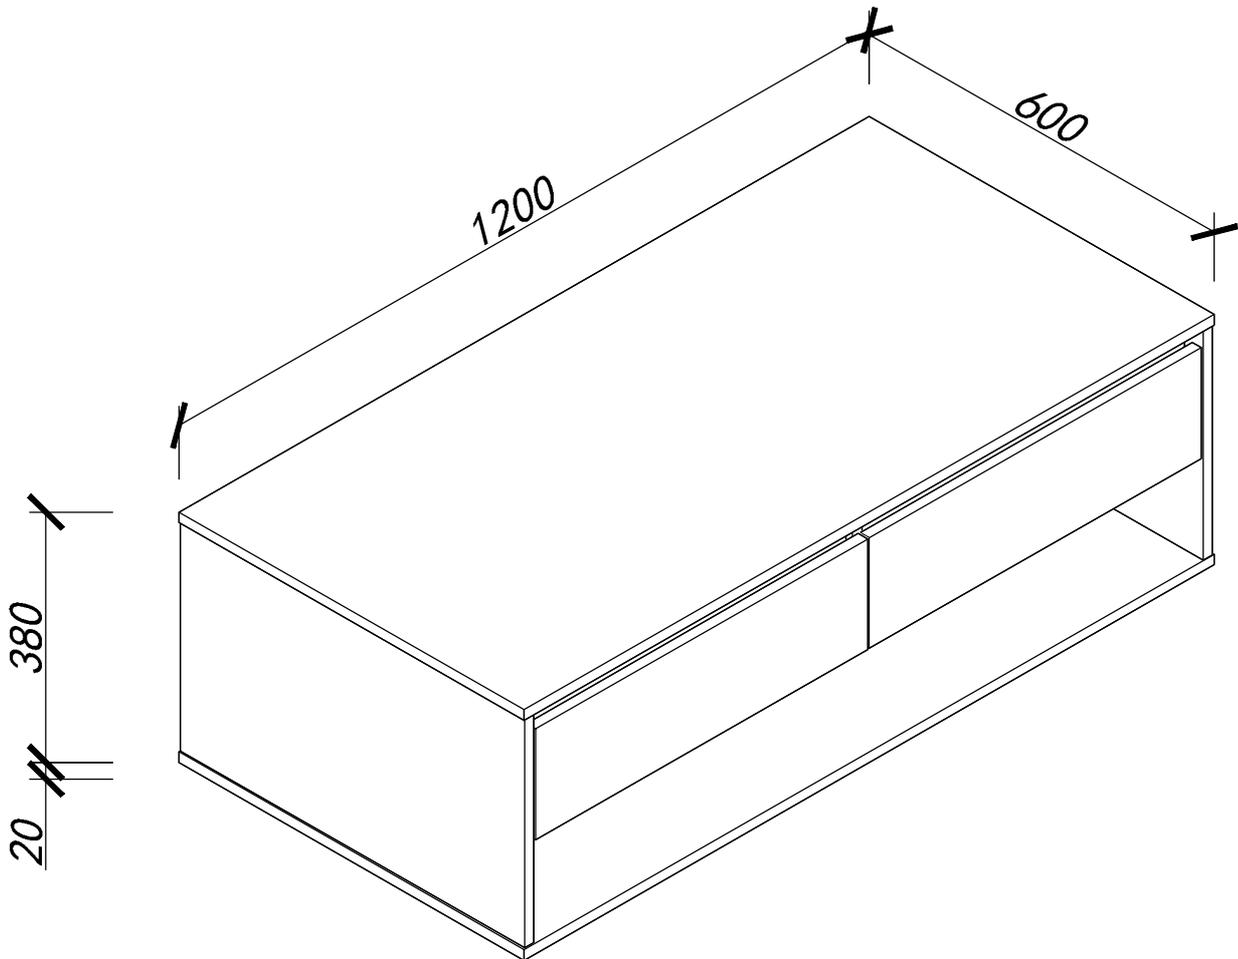


Imported by JWA Furniture Pty Ltd, Brisbane Qld, Australia.  
For any assistance with assembly or for missing parts please refer to your receipt

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.
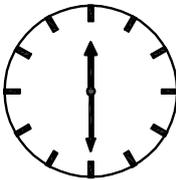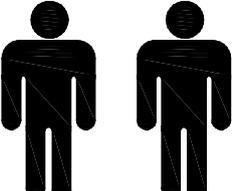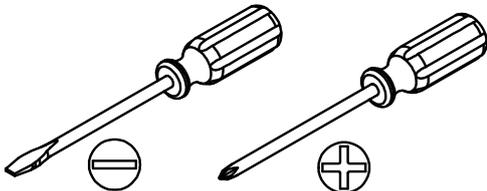
|   |   |  |
|---|---|--|
|  |  |  |
| Allow 60min   | For 2 person  | Additional tools required  |

 **TIPPING WARNING** 



**Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:**

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product




If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.**

*This is a permanent label. Do not attempt to remove!*

# CAM LOCK INSTALL METHOD AS FOLLOWS

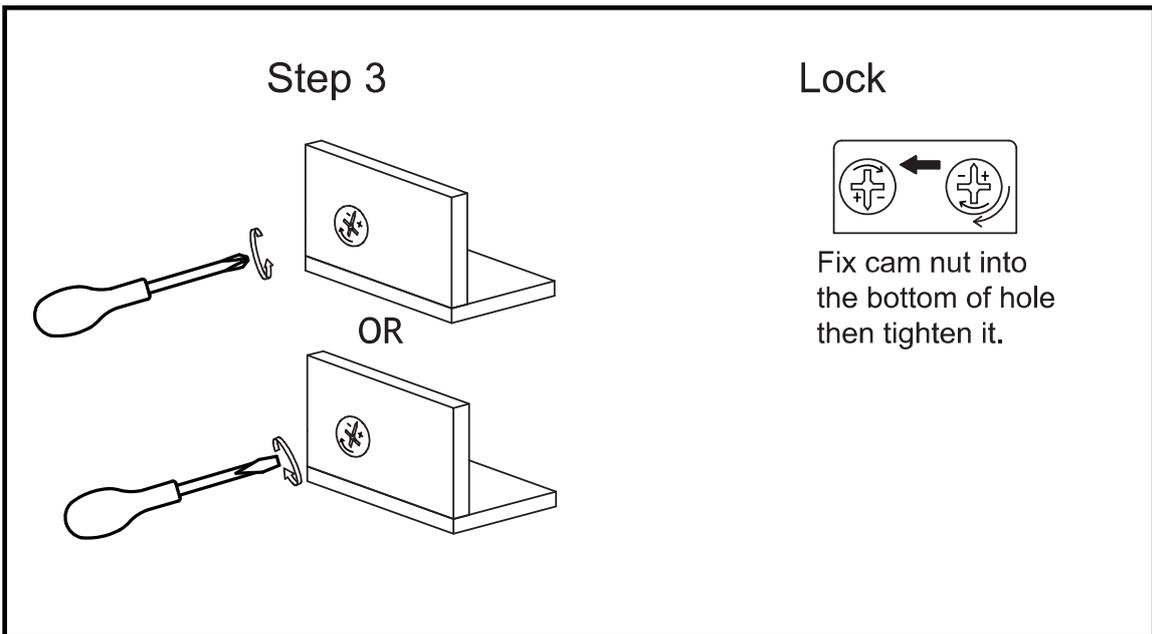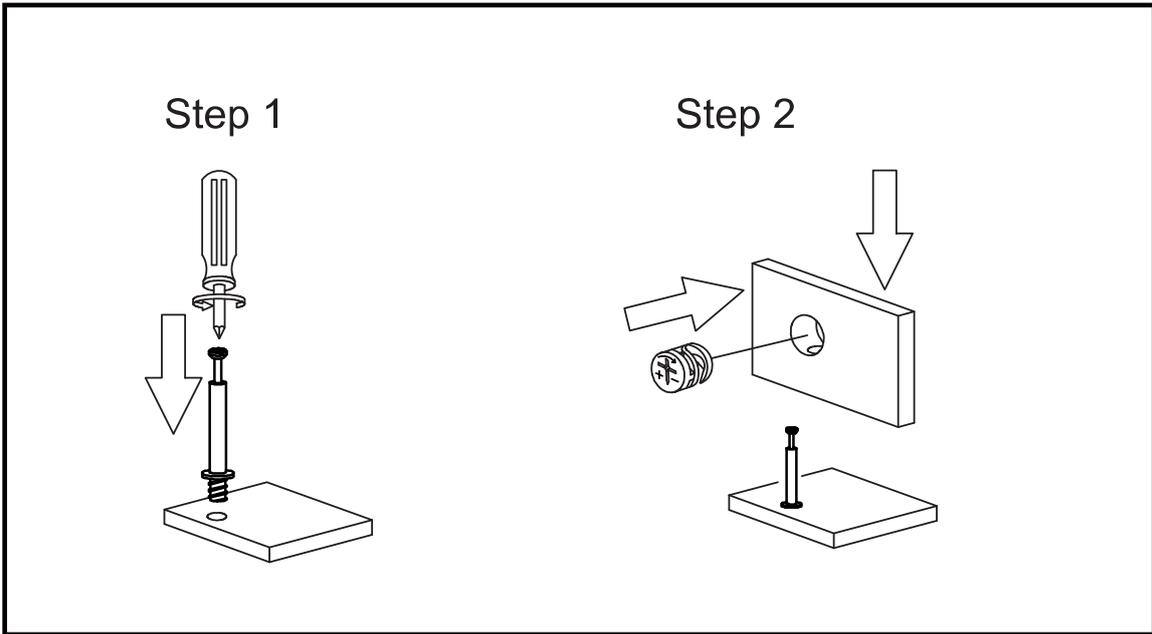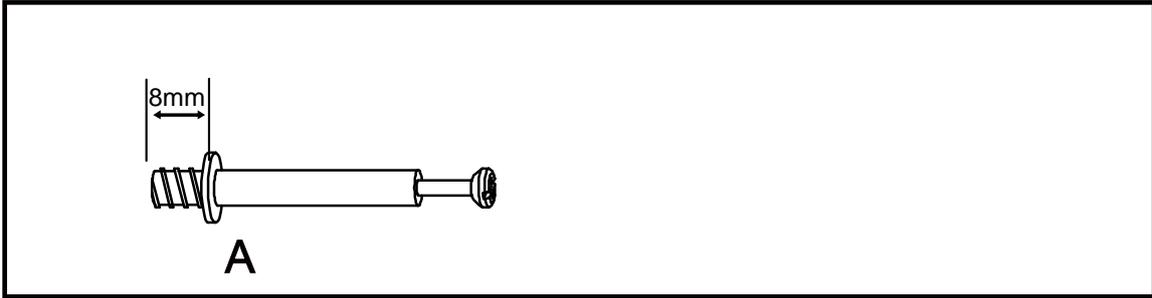


# PARTS LIST


|   |  |  |  |  |
|---|--|--|--|--|
| <b>A</b><br><br>M6x40mm<br>31pcs | <b>B</b><br><br>8x30mm<br>28pcs                                 | <b>C</b><br><br>$\varnothing 15 \times 12 \text{mm}$<br>31pcs | <b>H</b><br><br>M4<br>1pc         | <b>N</b><br><br>2pcs            |
| <b>O</b><br><br>M6x34mm<br>16pcs | <b>P</b><br><br>$\varnothing 12 \times 10.5 \text{mm}$<br>16pcs | <b>Q</b><br><br>M7x50<br>7pcs                                 | <b>V1</b><br><br>M3.5x12<br>16pcs | <b>V3</b><br><br>M4x35<br>14pcs |

| Panel No | Panel Sizes | Quantity |
|----------|-------------|----------|
| 1        | 1200*600*16 | 1        |
| 2        | 1200*600*16 | 1        |
| 3        | 343*598*16  | 1        |
| 4        | 343*598*16  | 1        |
| 5        | 177*365*16  | 1        |
| 6        | 1166*177*16 | 1        |
| 7        | 1166*150*16 | 1        |
| 8        | 1166*580*16 | 1        |
| 9        | 575*60*16   | 2        |


| Panel No | Panel Sizes | Quantity |
|----------|-------------|----------|
| 10       | 580*169*16  | 1        |
| 11       | 580*169*16  | 1        |
| 12       | 531*100*12  | 2        |
| 13       | 350*100*12  | 2        |
| 14       | 350*100*12  | 2        |
| 15       | 541*347.5*5 | 2        |
| 16       | 1140*60*25  | 2        |
| 17       | 540*60*25   | 2        |
| 18       | 420*60*25   | 1        |

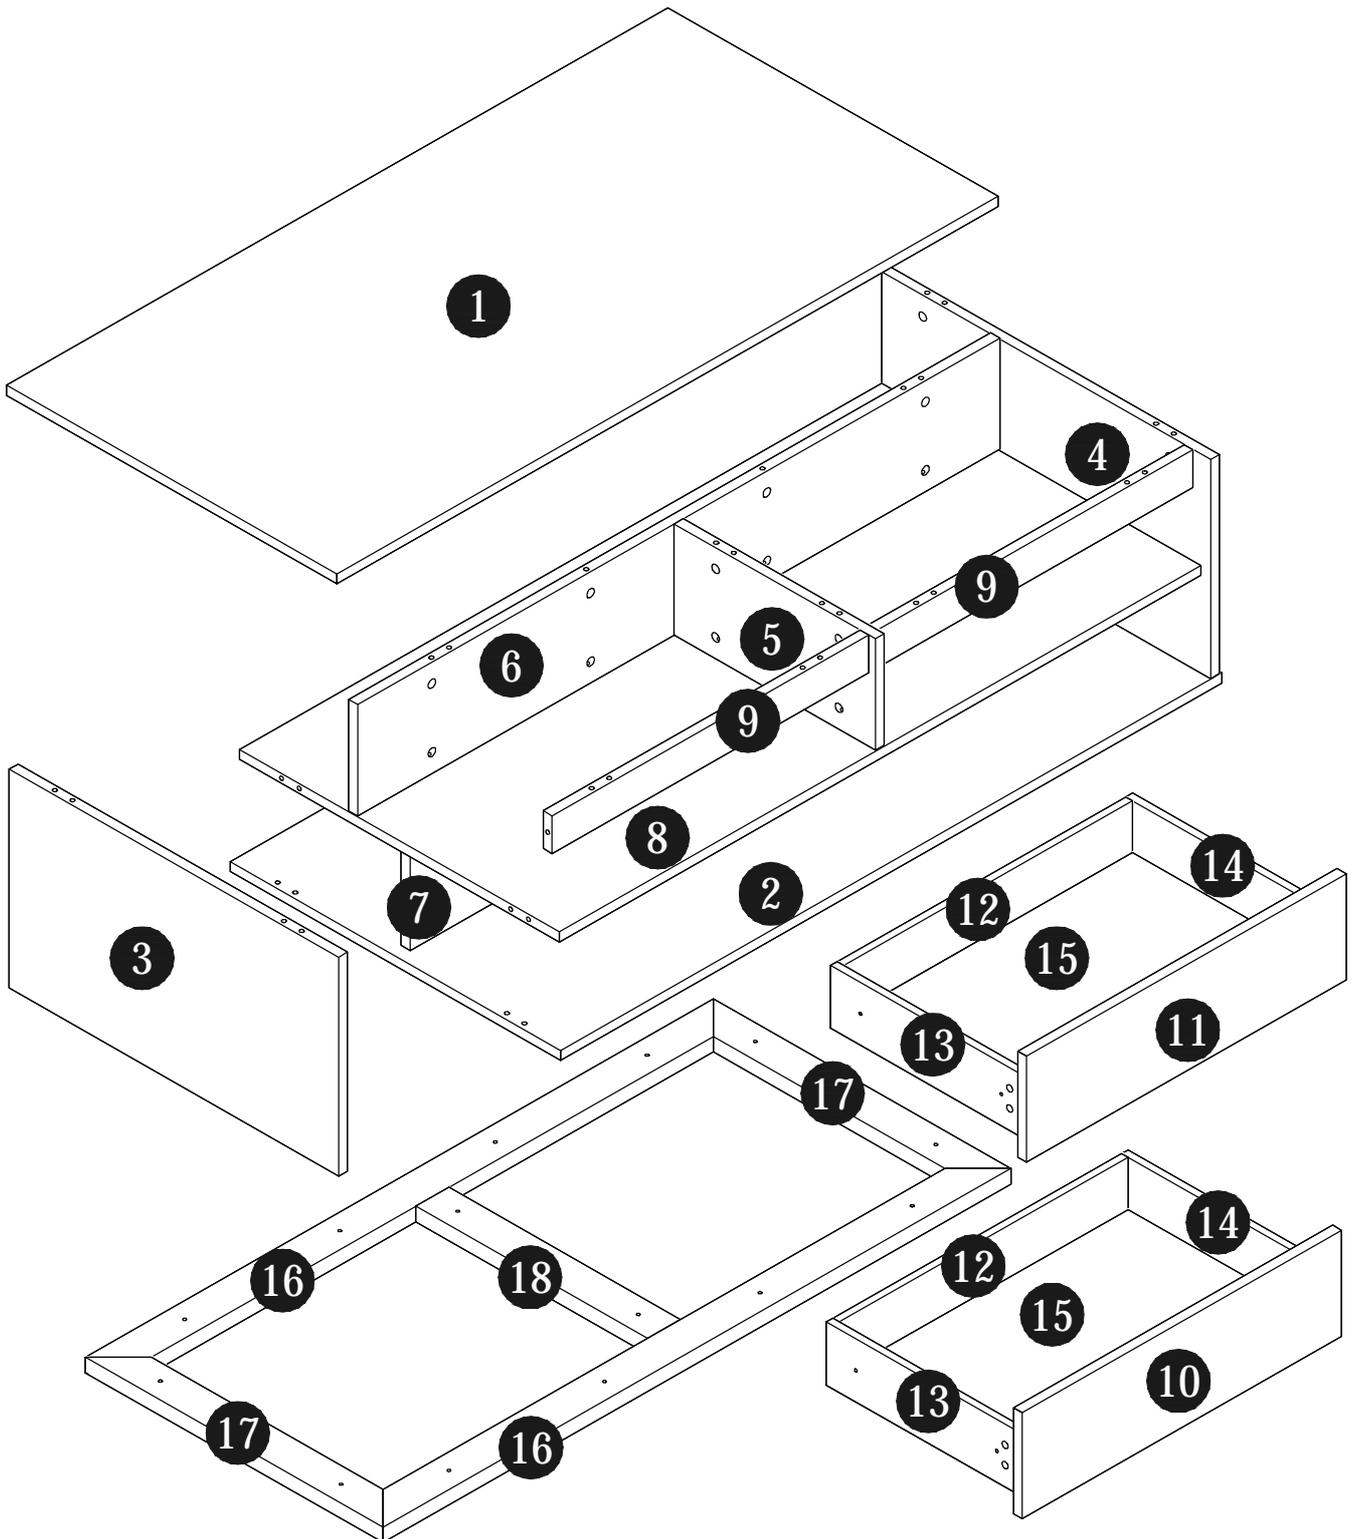


STEP 1: Fix rails (N-1) to panel (3) (4) (5) with screw (V1) .

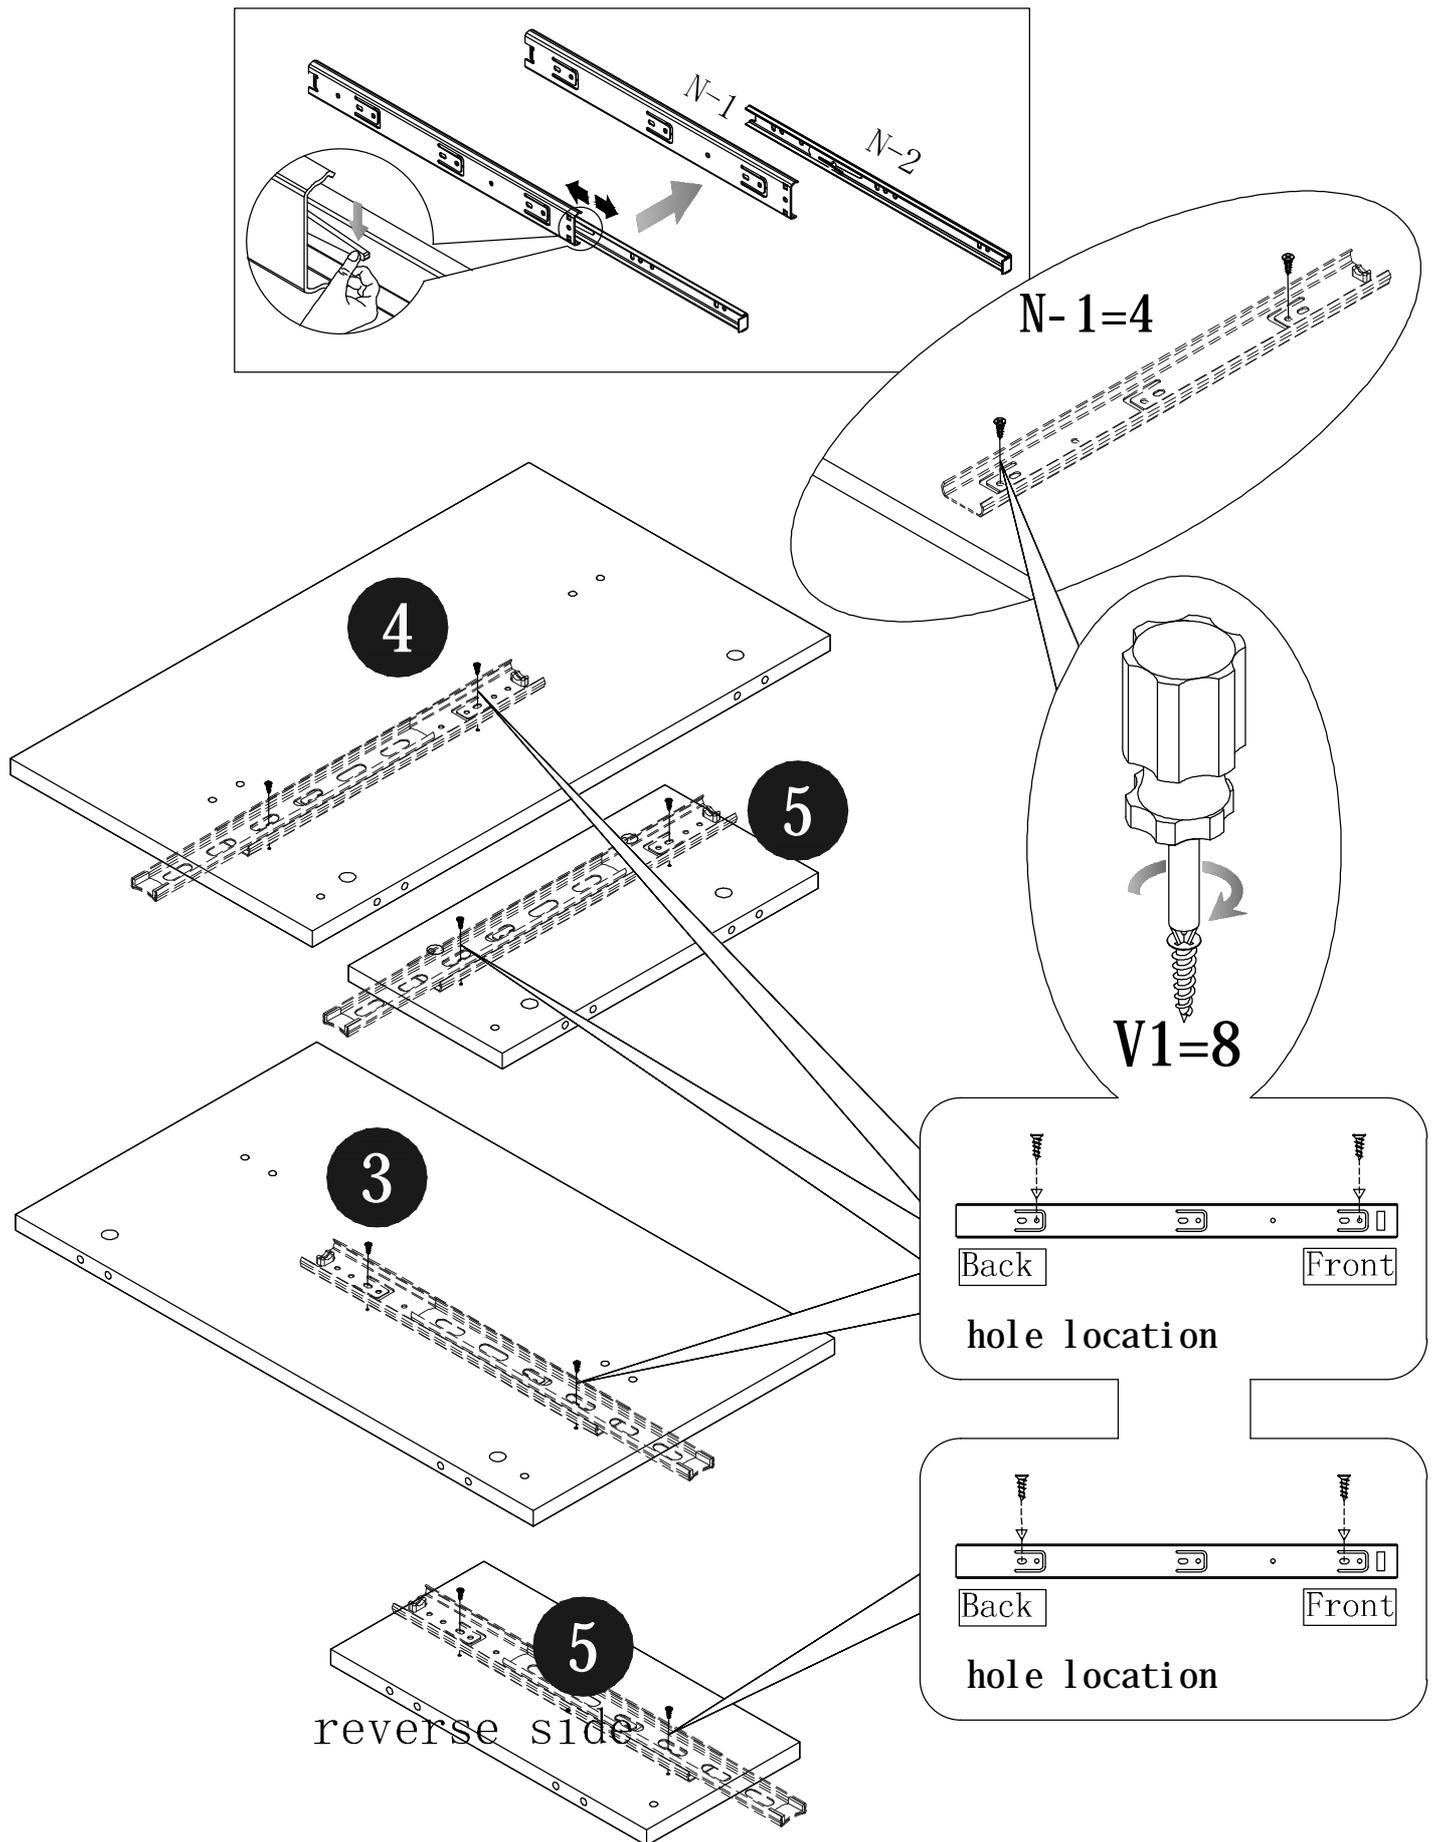


STEP 2: Fix dowel (B) and cam pin (A) to panel (1) (2) (3) (4) (5) (8).

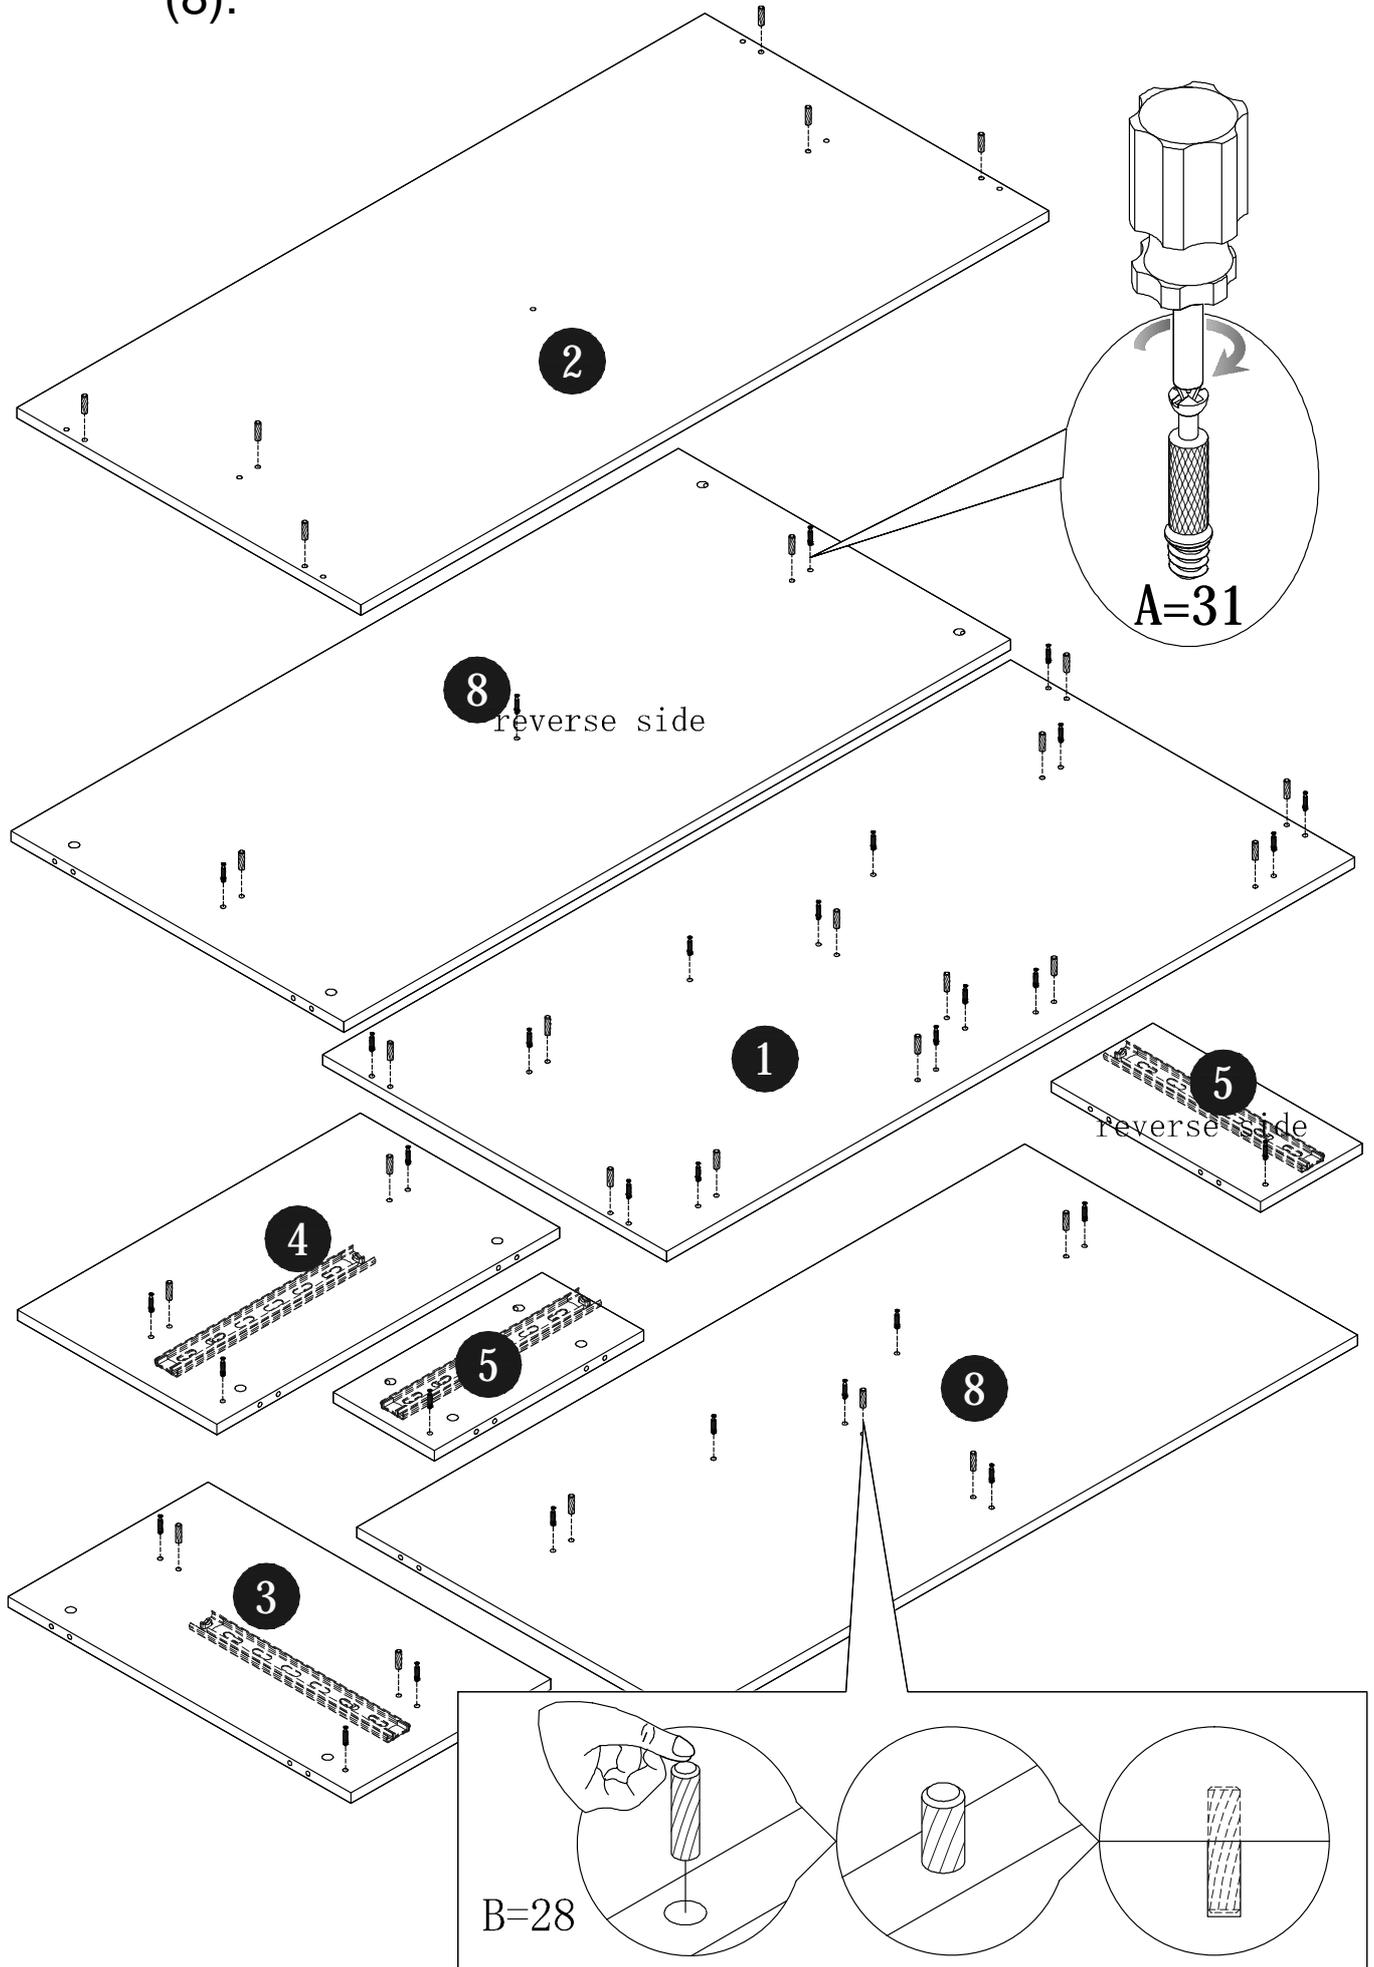


STEP 3: Fix panel (5) (6) (7) to panel (8) with cam lock (C).

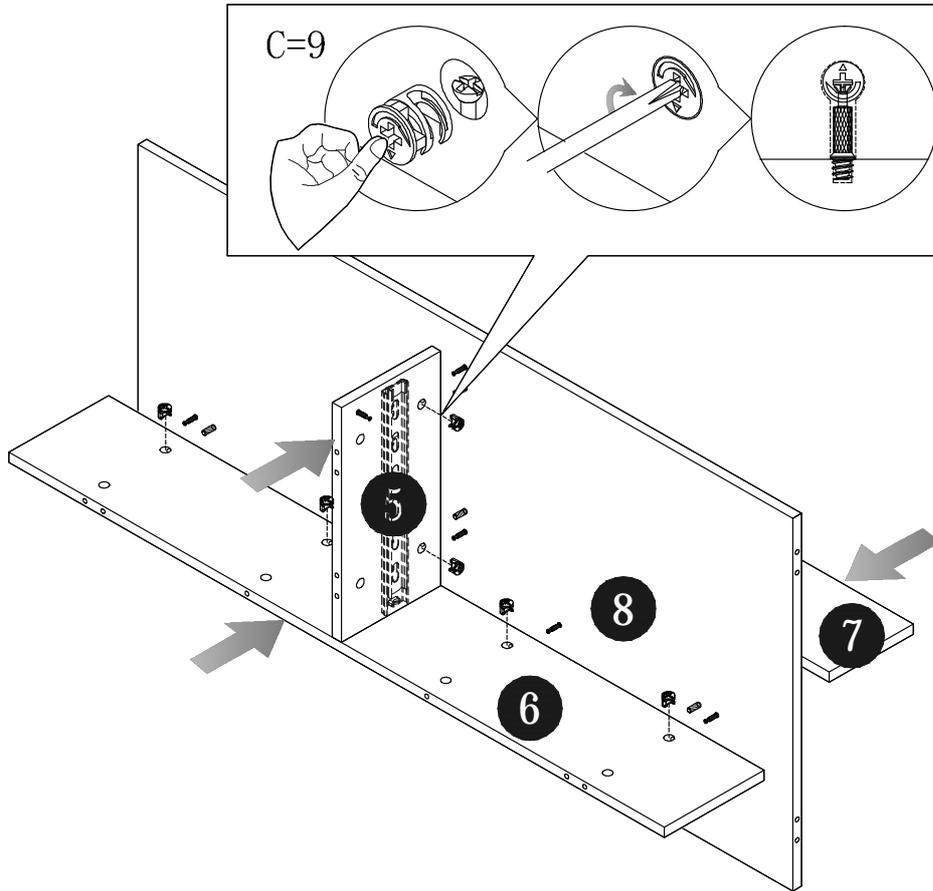


STEP 4: Fix panel (9) to panel (3) (4) (5) with cam lock (C).  
Fix panel (3) (4) to panel (8) with cam lock (C).

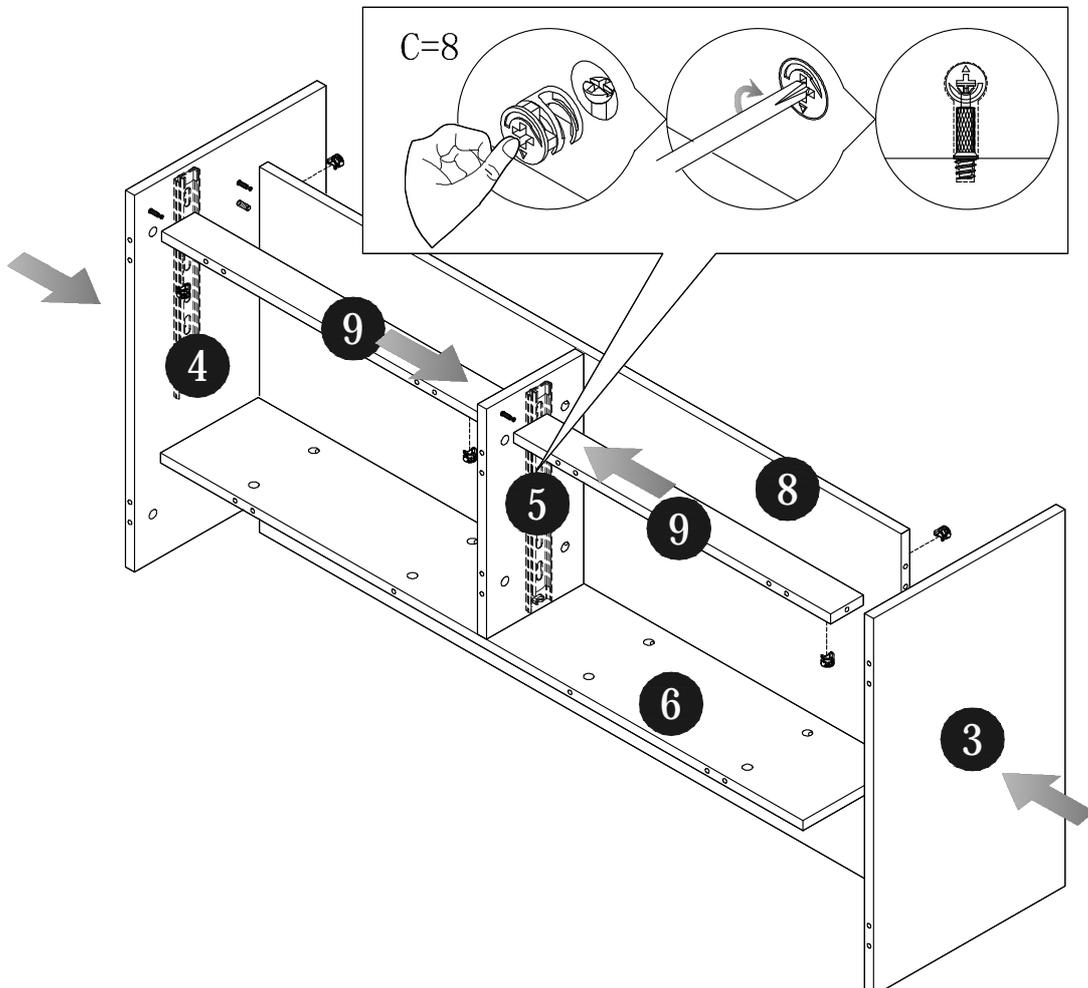


STEP 5: Fix panel (1) to panel (3) (4) (5) (6) (9) with cam lock (C).

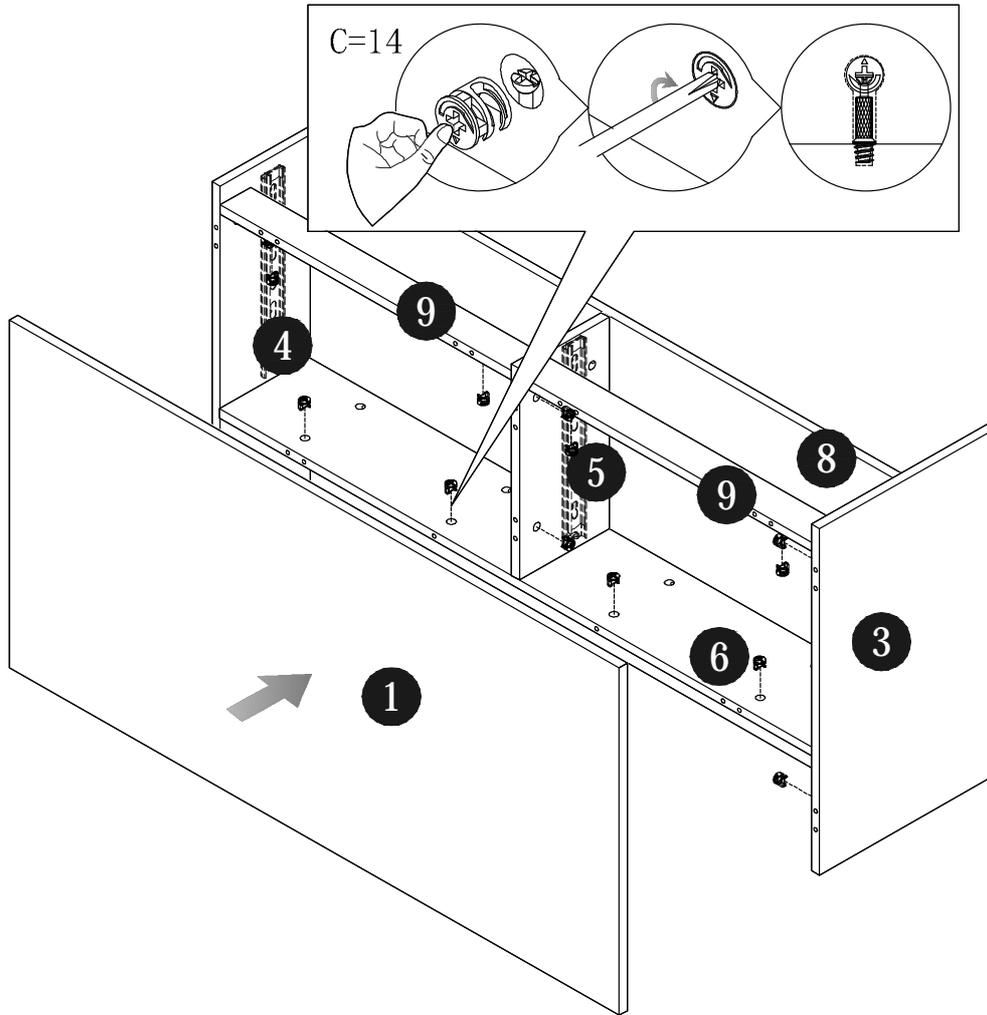


STEP 6: Fix panel (2) to panel (3) (4) (7) with screw (Q).

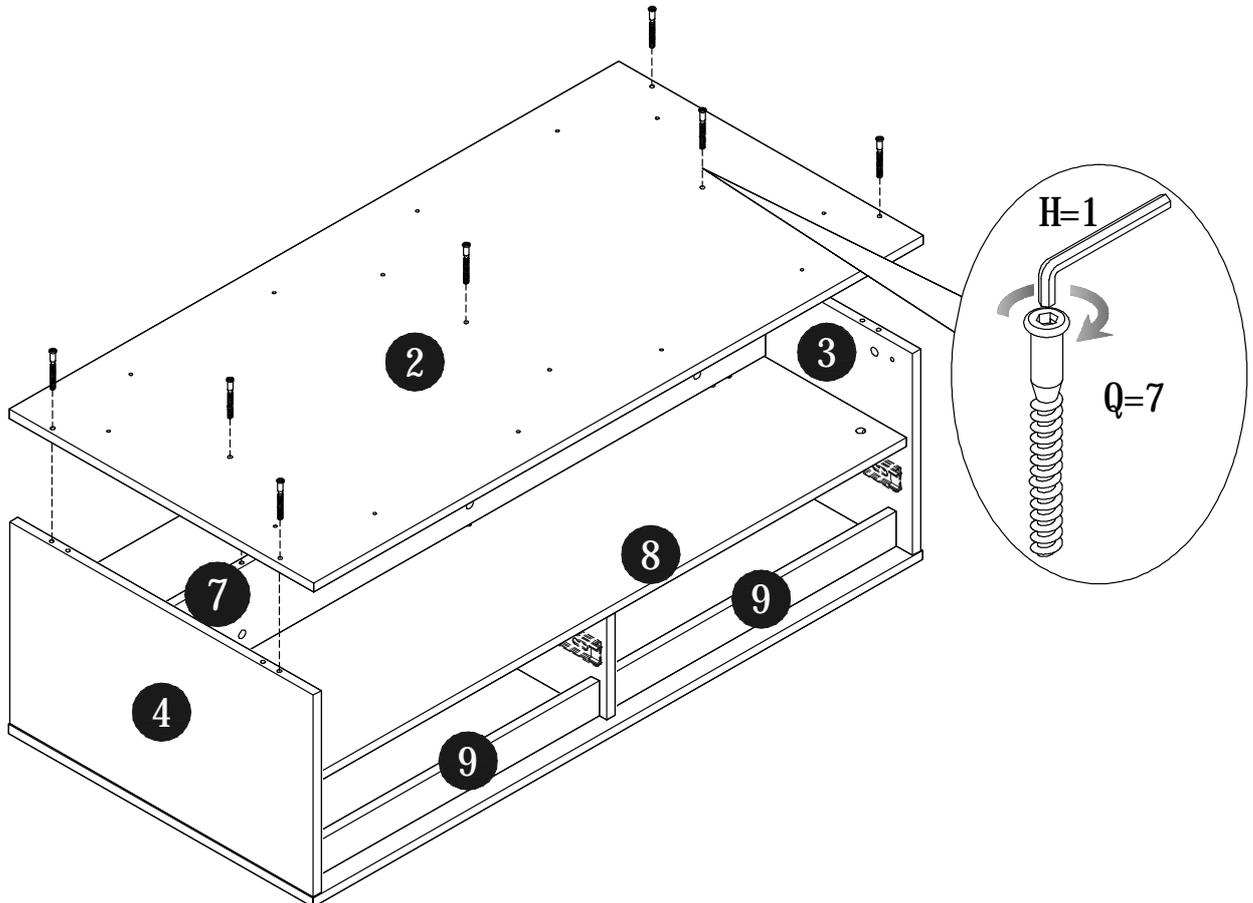

STEP 7: Fix panel (16) (17) (18) to panel (2) with screw (V3).

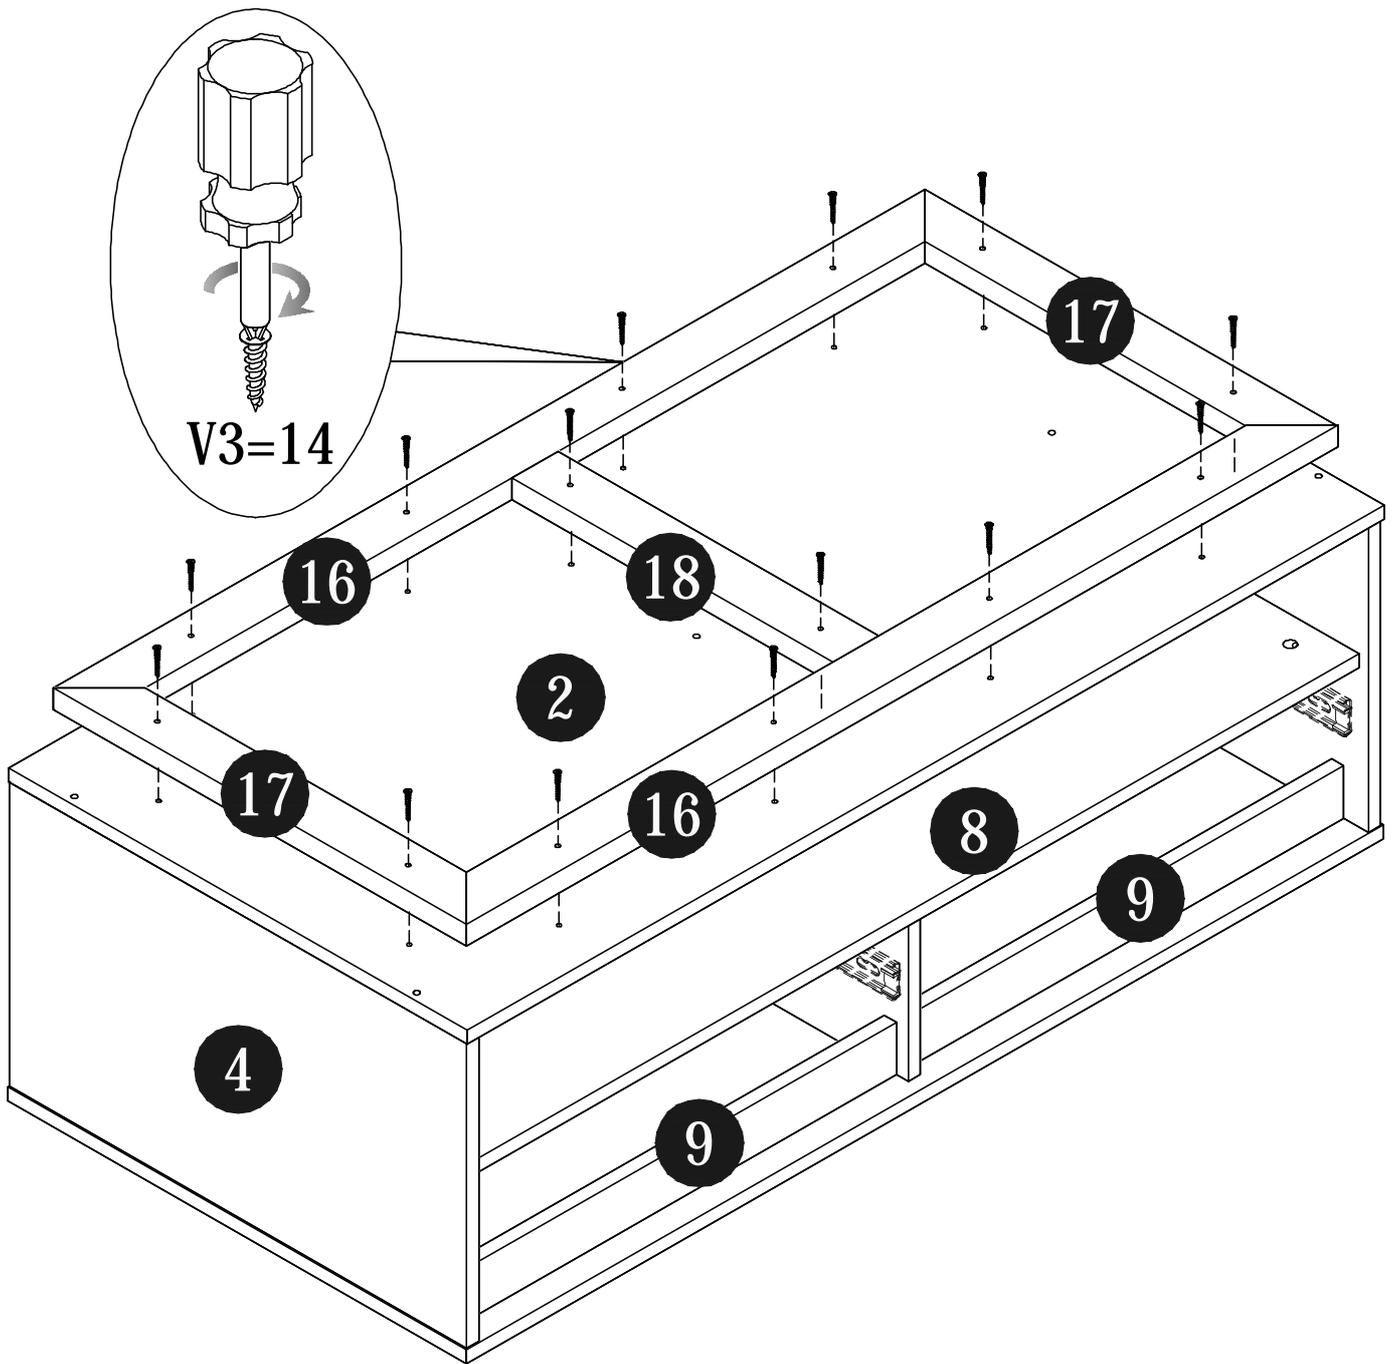


STEP 8-1: Fix cam pin (O) to panel (10) (11) (12) (13) (14).

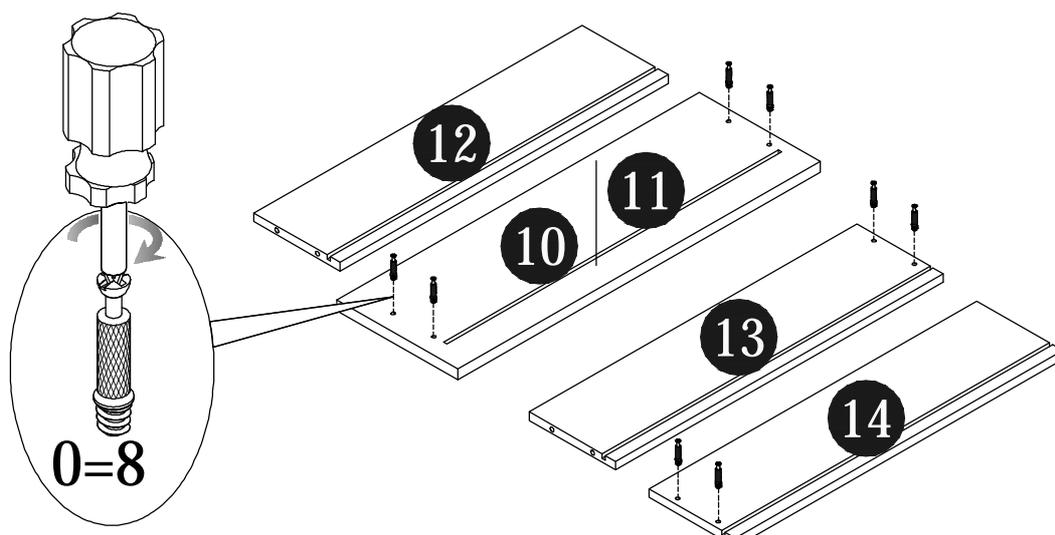


STEP 8-2:

Fix panel (12) to panel (13) (14) with cam lock (P).  
 Insert panel (15) into grooves between panel (10) (11) (12) (13) (14). Fix panel (13) (14) to panel (10) / (11) with cam lock (P).

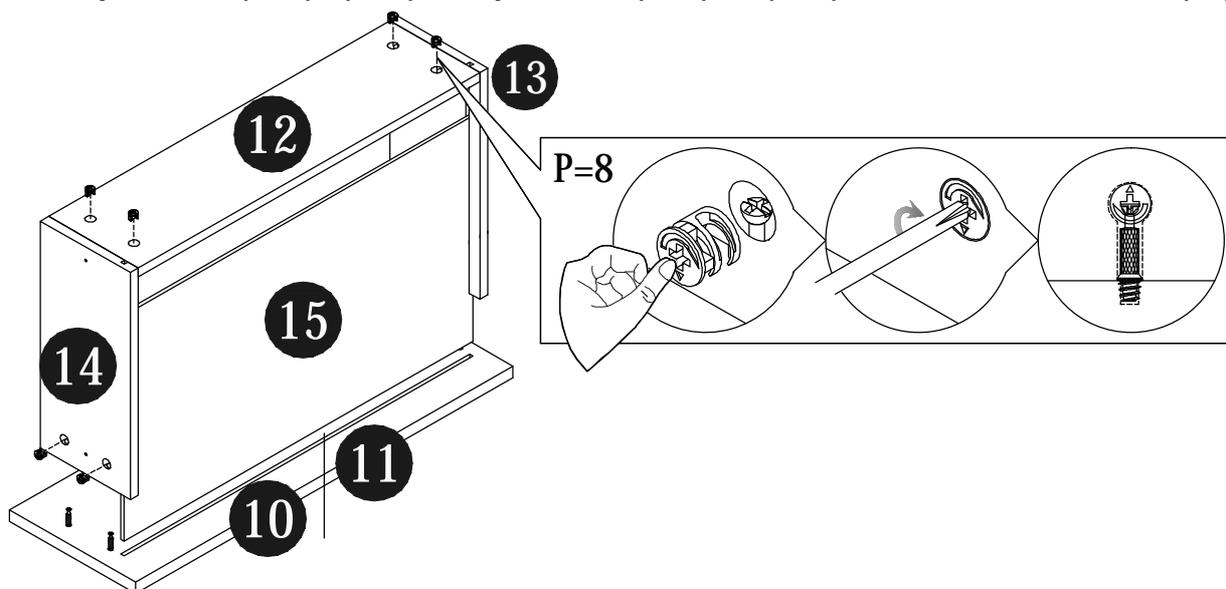


STEP 8-3: Fix rails (N-2) to panel (13) (14) with screw (V1)

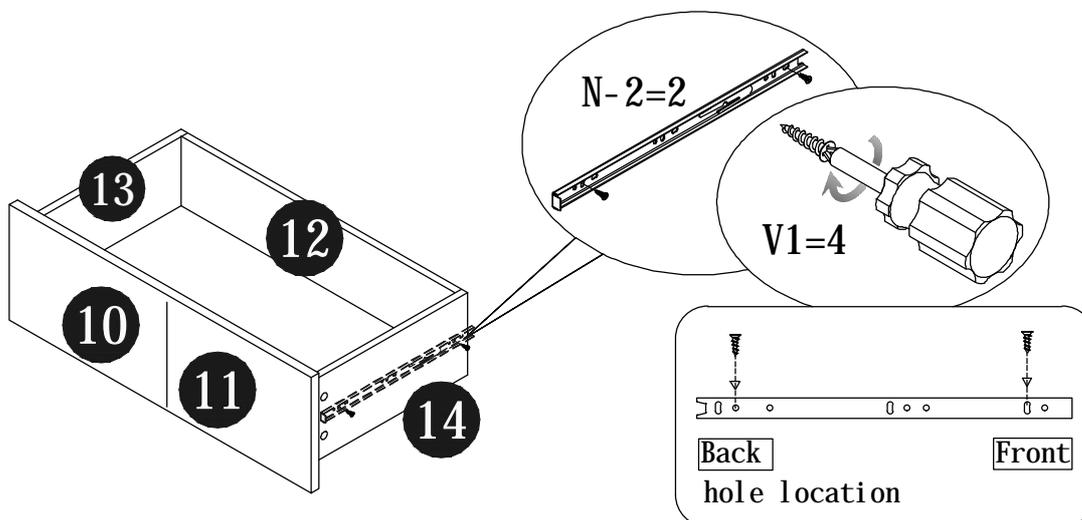


X2

STEP 9: Adjust to proper position.

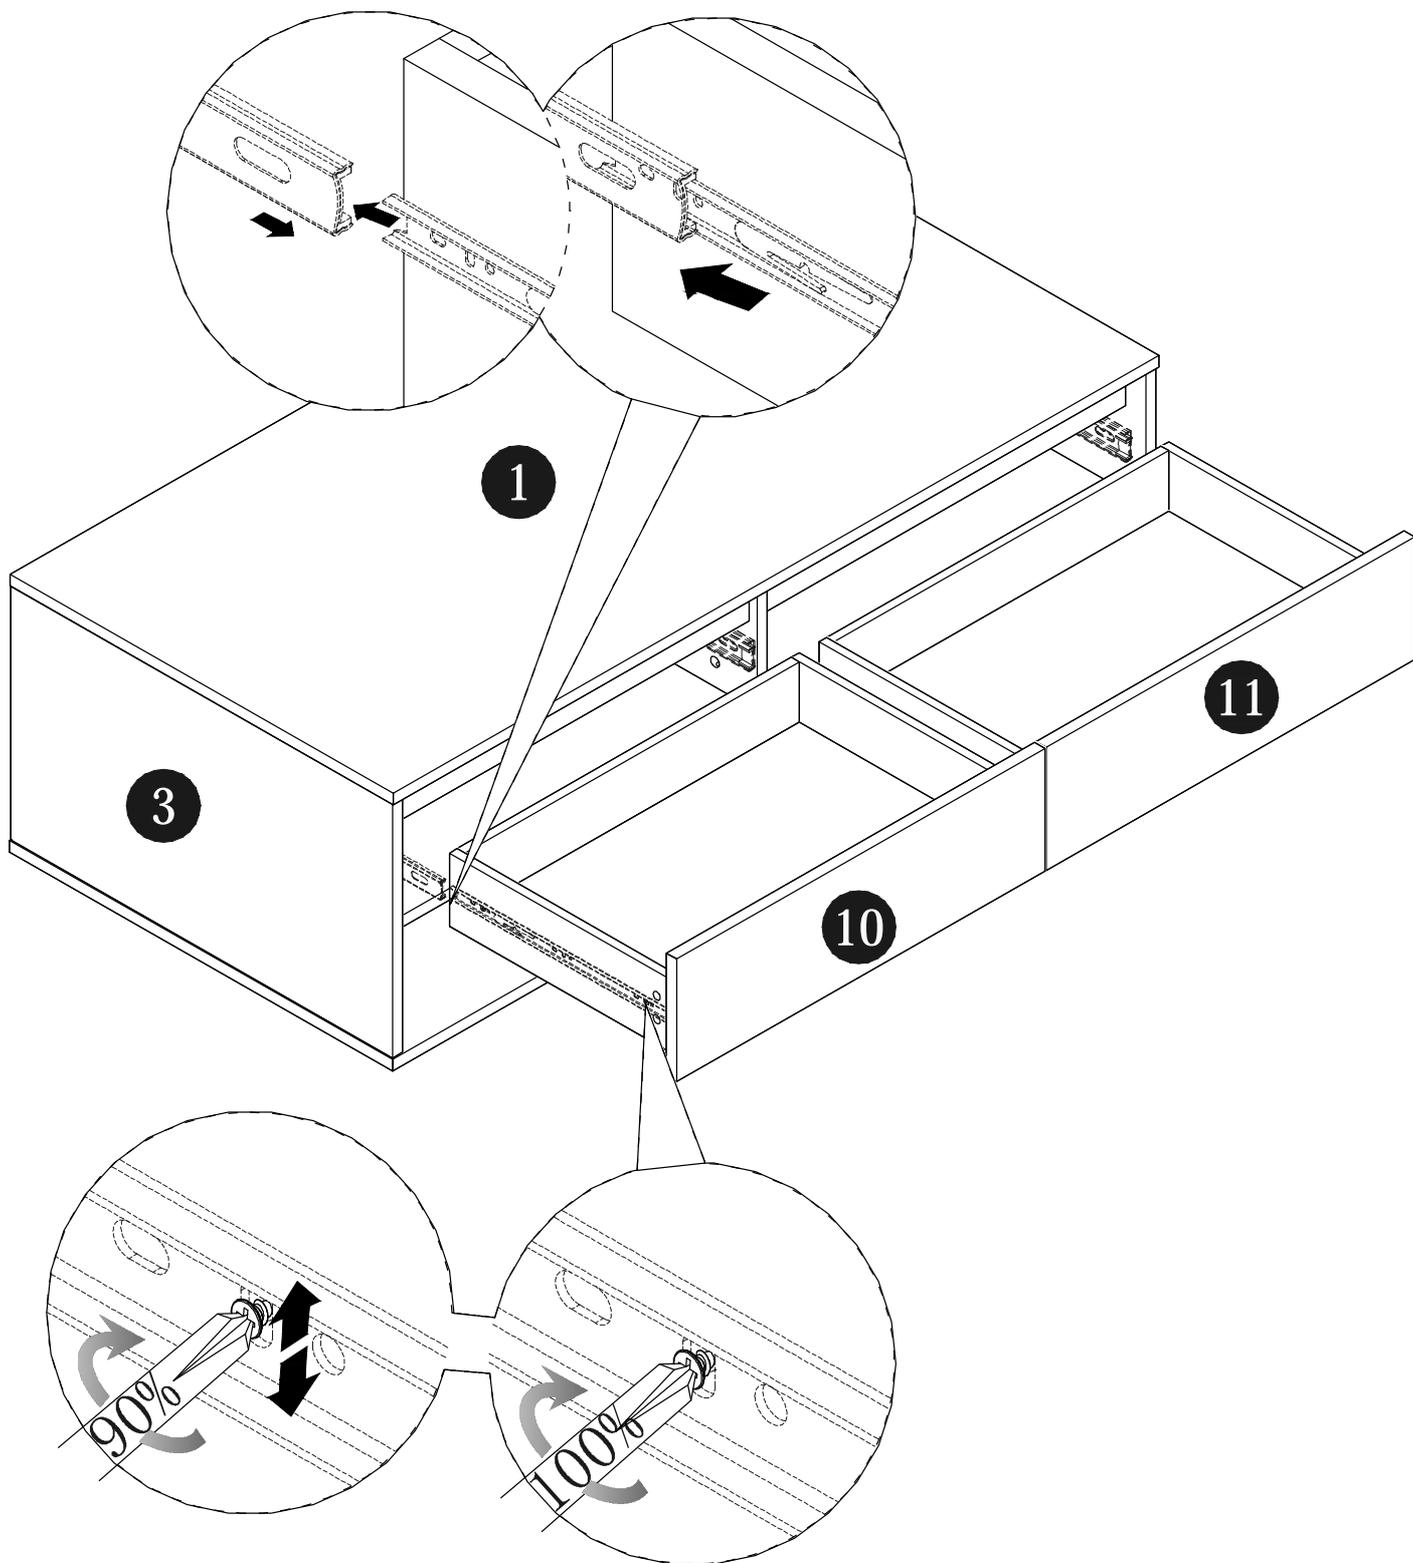

ASSEMBLY COMPLETE

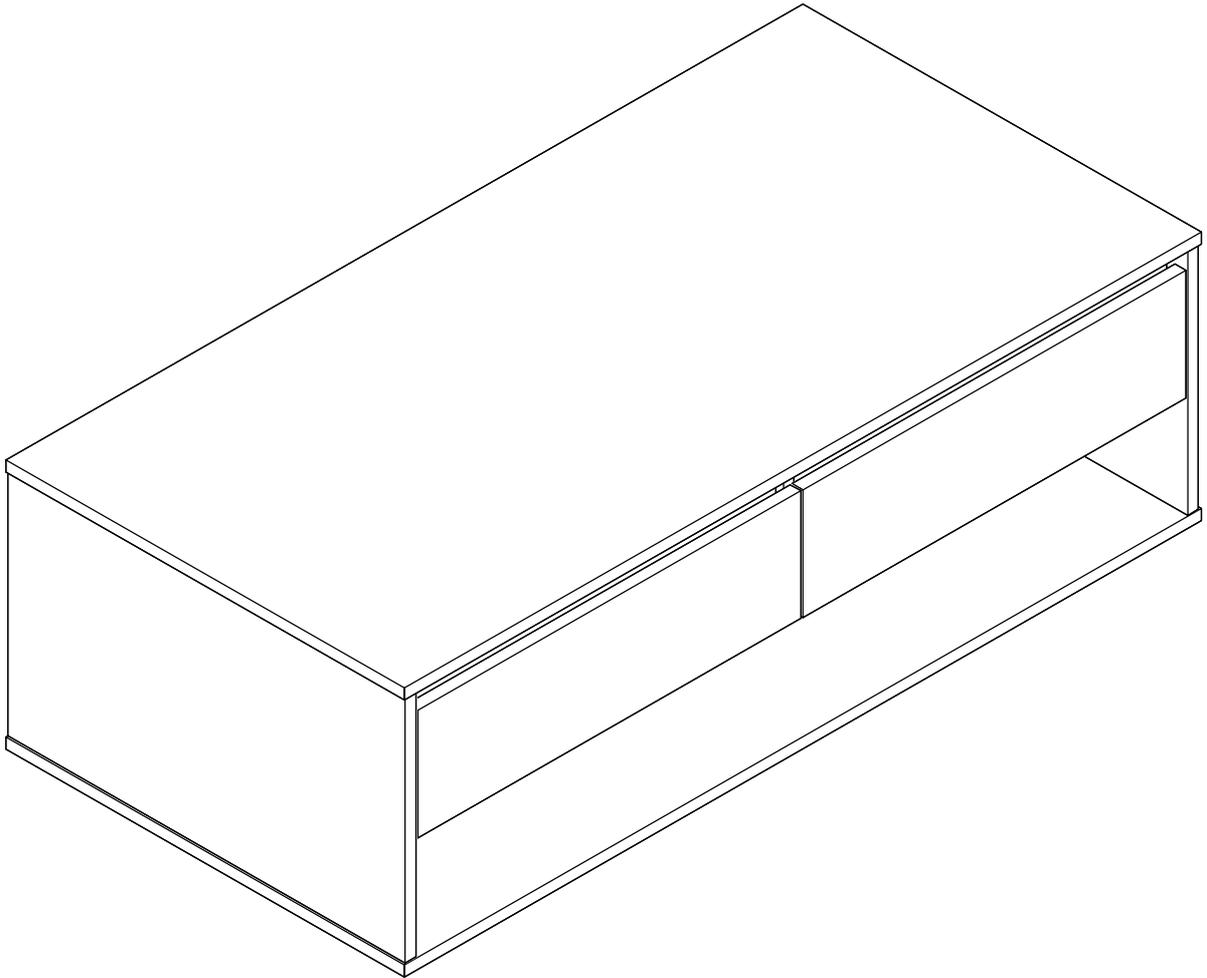

## **To protect your furniture, we suggest the following:**

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Cleanup spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void