

ASSEMBLY INSTRUCTION

DRESSER ITEM CODE 68556

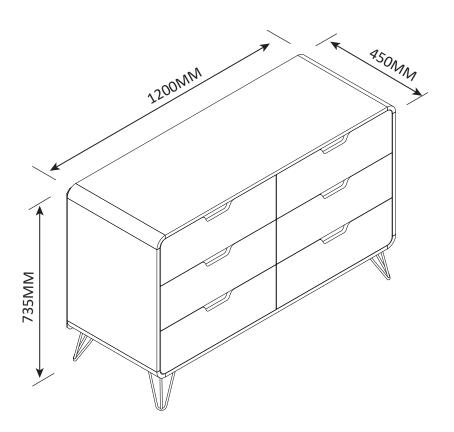

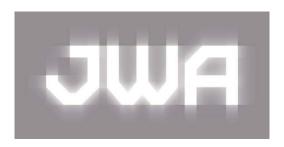


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

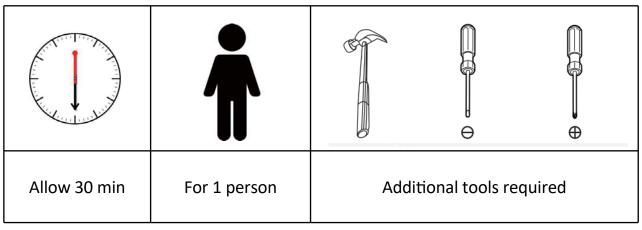




PARTS LIST


Α		M6X39mm 24pcs	В		M15X12mm 24pcs	С	M8X30mm 26pcs	D	TOTAL	M3.5X14mm 24pc
Е	AND THE PERSON NAMED IN	M5X40mm 12pcs	F		M5X50mm 12pcs	G	4pcs	Н		M3X14mm 20pcs
I		M4X19mm 12pcs	J	Wing.	M3X12mm 16pcs	K	2pcs	L		1pc


1	LEFT PANEL
2	RIGHTT PANEL
3	MIDDLE PANEL
4	LEFT PANEL
5	BOTTOM PANEL
6	TOP PANEL
7	BACK PANEL
8	DRAWER SIDE
9	DRAWER SIDE


10	DRAWER BACK
11	DRAWER BASE
12	DRAWER FRONT
13	DRAWER FRONT
14	DRAWER FRONT
15	DRAWER FRONT
16	DRAWER FRONT
17	DRAWER FRONT

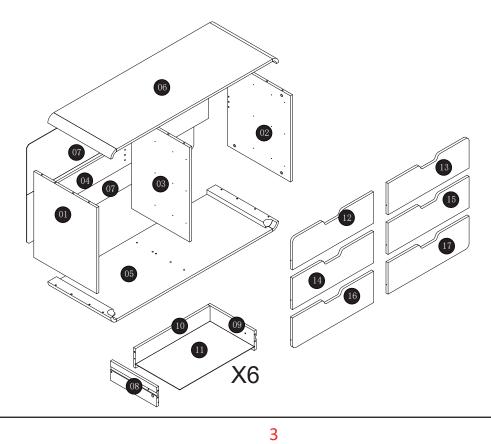



CAM LOCK INSTALL METHOD AS FOLLOWS

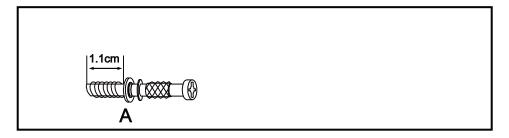


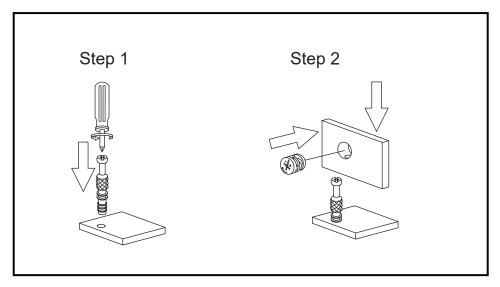


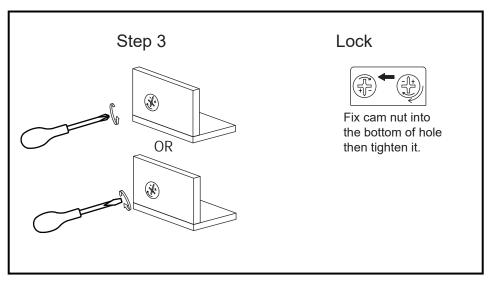


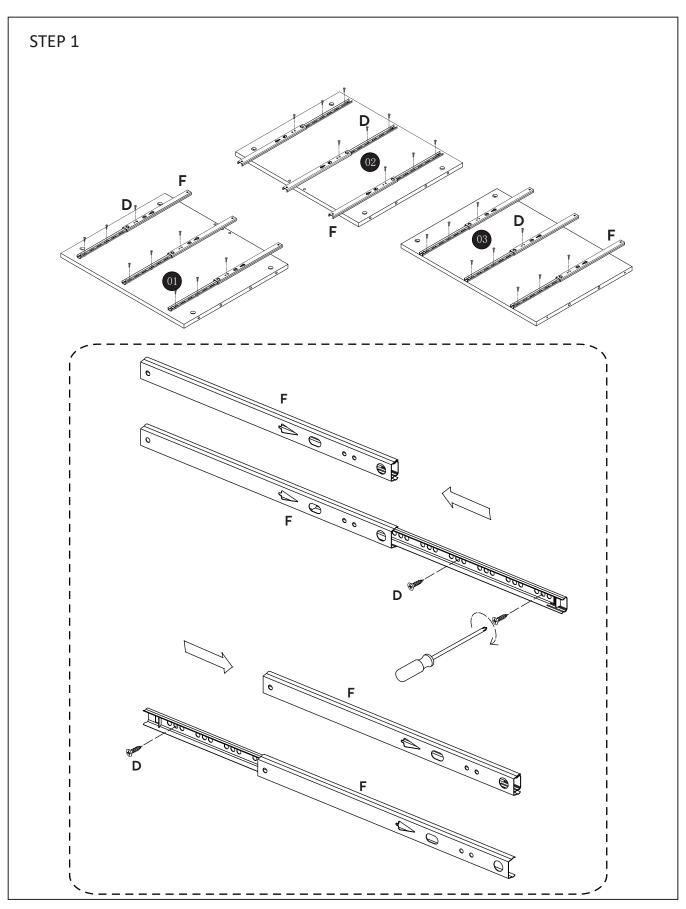


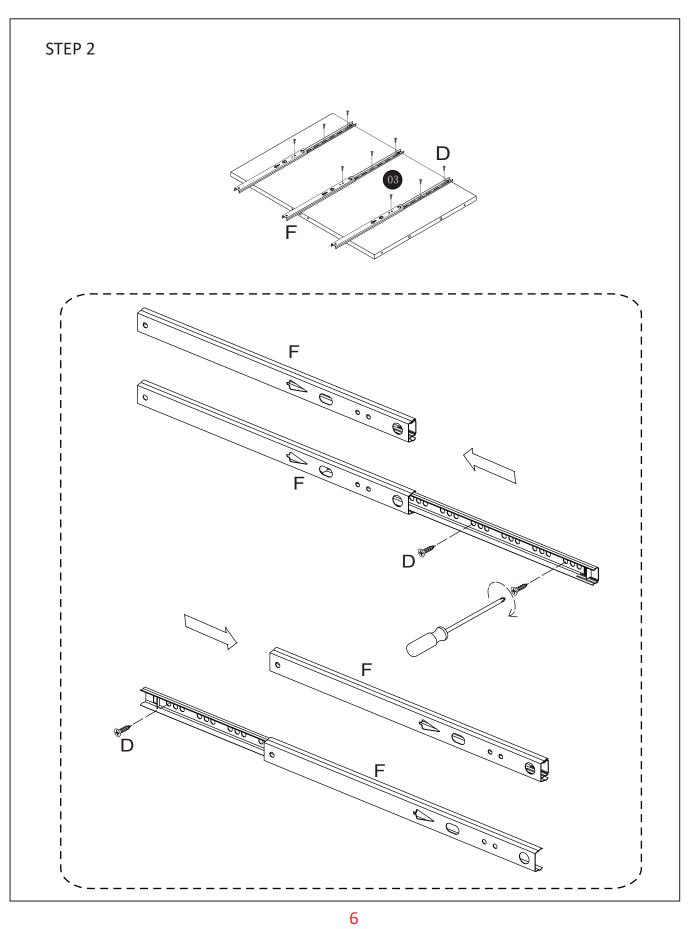


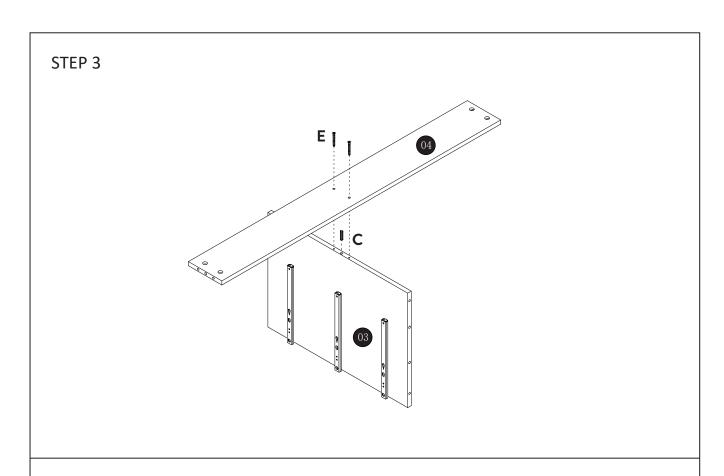


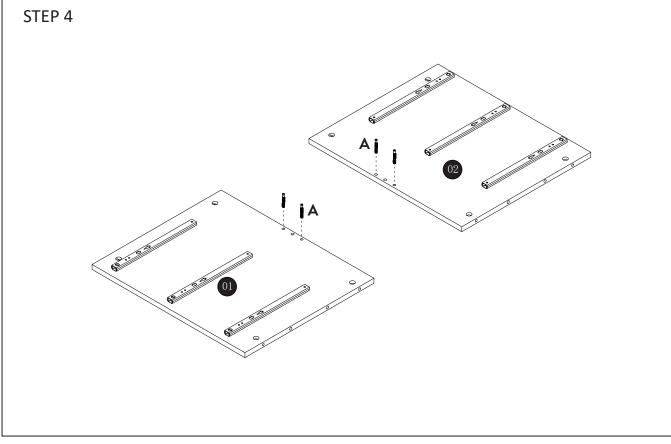


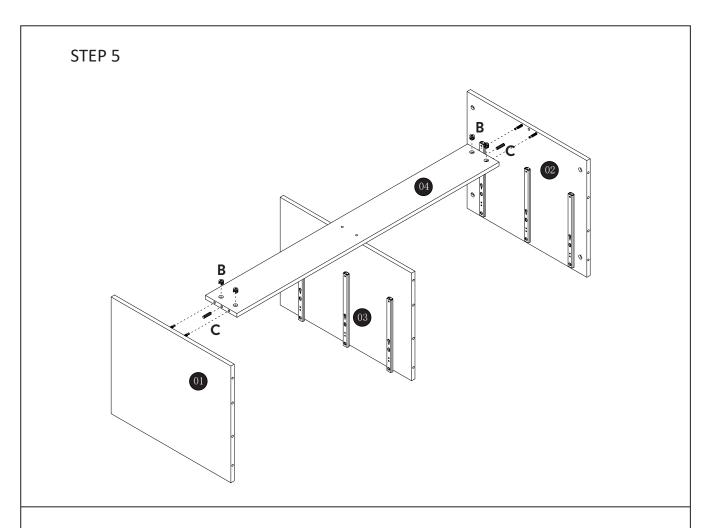


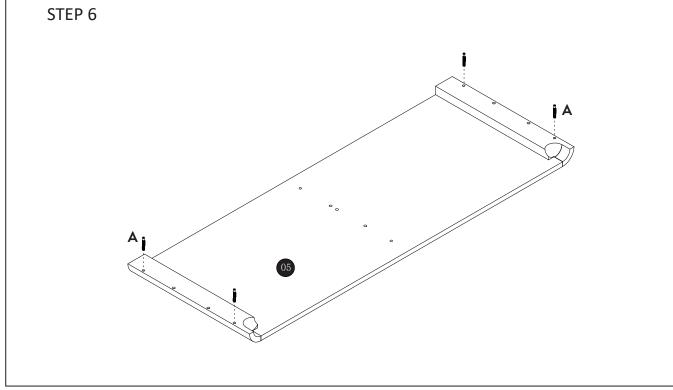


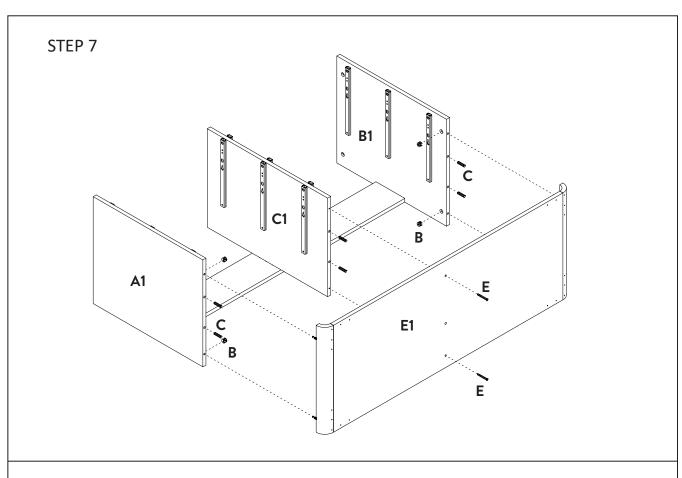

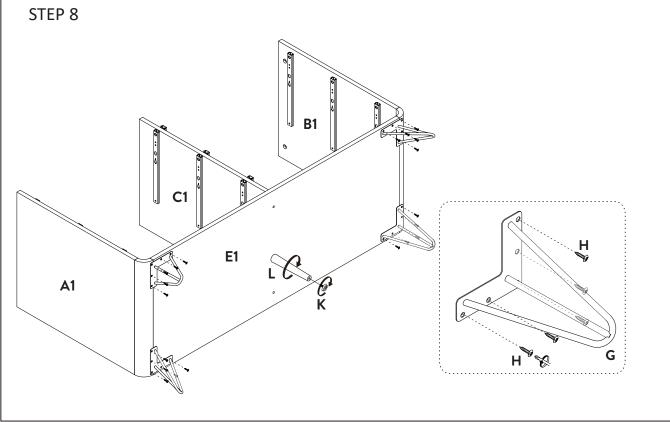


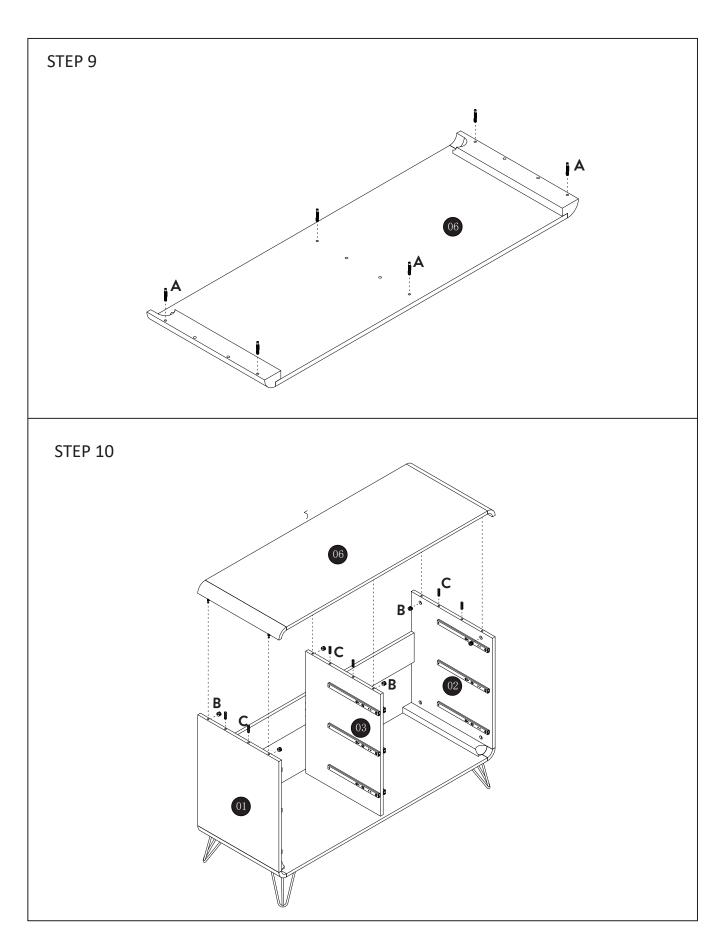

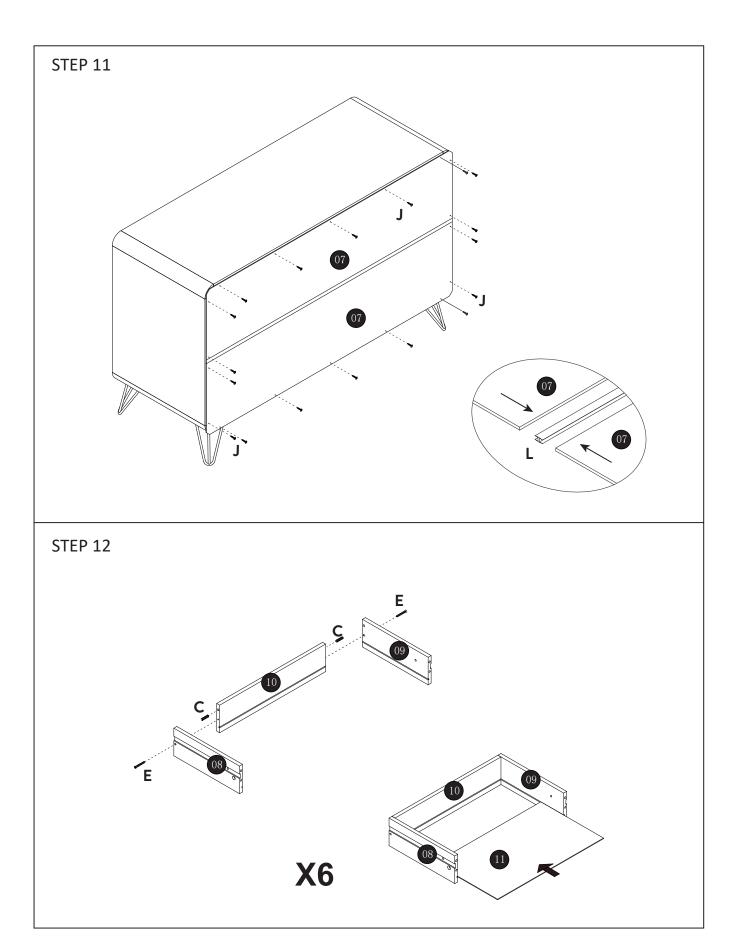

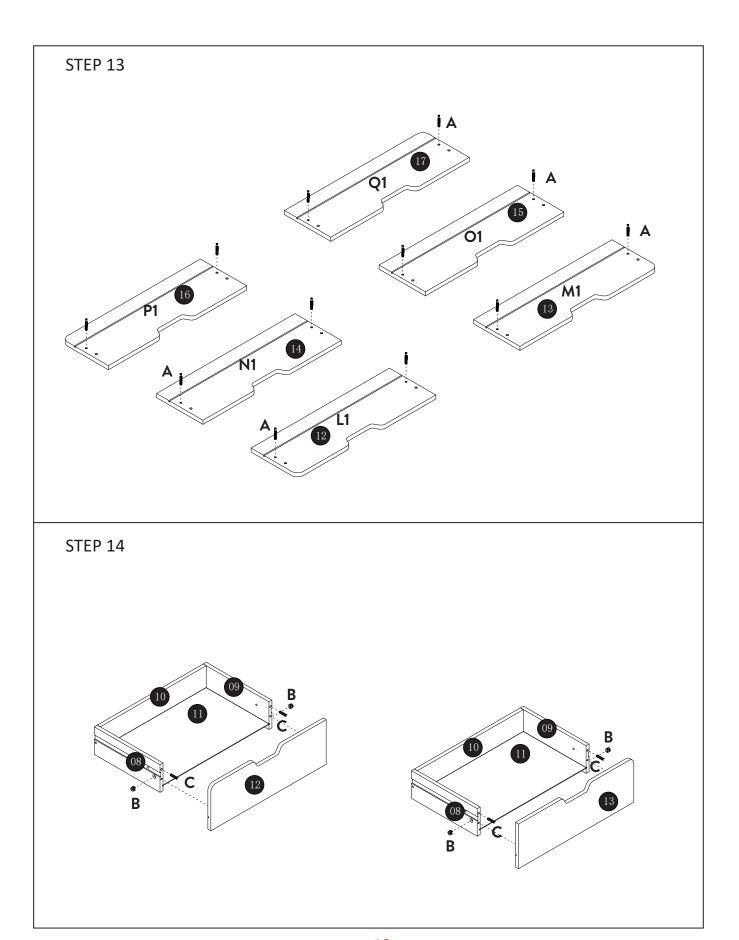


STEP 15 STEP 16

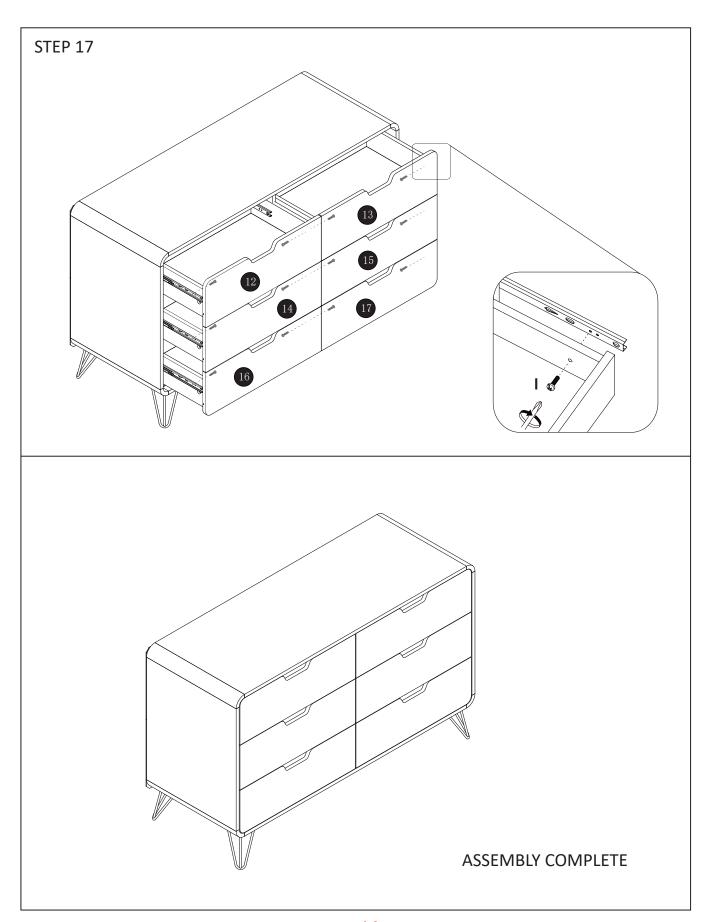

SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
 Mounting Plates and tighten until snug. Do not over tighten.
- Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

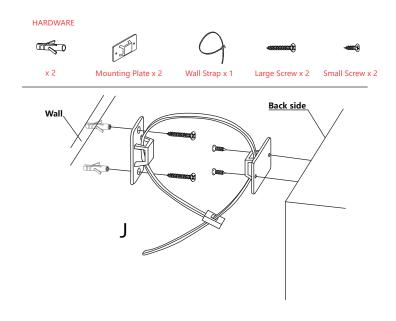

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void