

#### ASSEMBLY INSTRUCTION


Spacesaver Module 4 Drawer 1590

#### **ITEM CODE 49160**

Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture Ewing Road , Customer Service Free call 1800 351 084

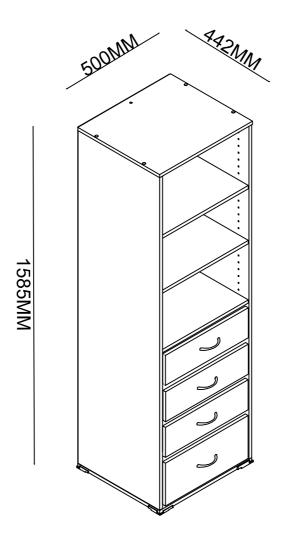


Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Ewing Road , Customer Service Free call 1800 351 084


### PRE-ASSEMBLY PREPARATION

# Before you start:

- Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

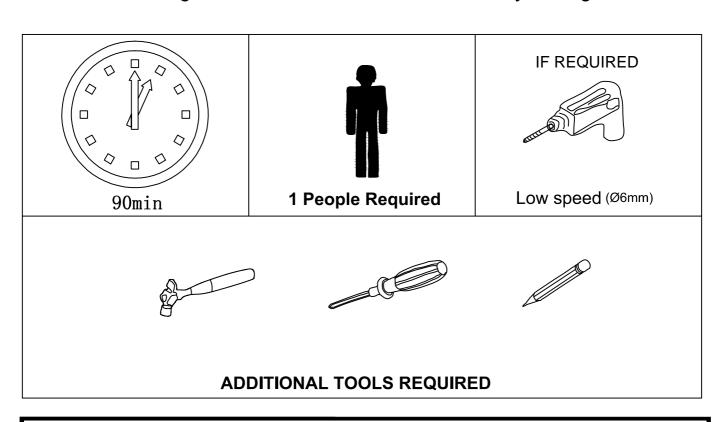



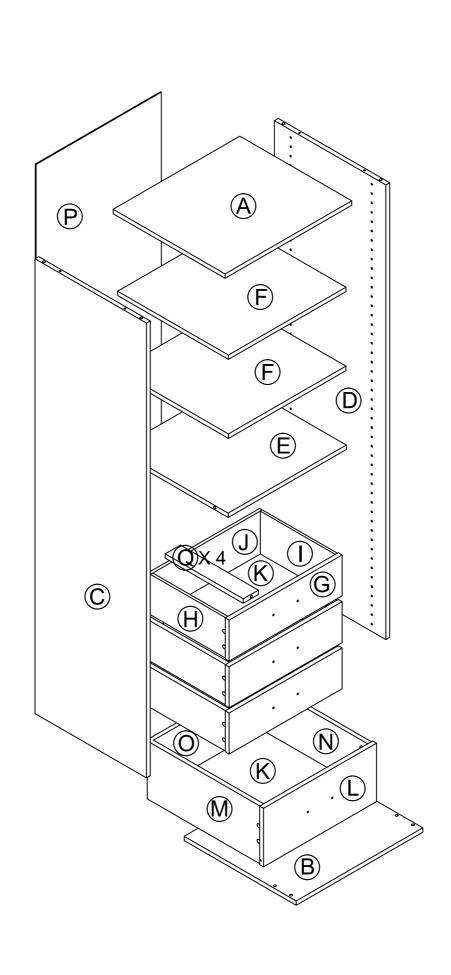


## Item Code- 49160


Panel(Mark)	Packing carton	Quantily	Picture	Dimension
А	(Box 1)	1 PC	$\Diamond$	500 x 442 x 15mm
В	(Box 1)	1 PC	$\Diamond$	500 x 442 x 15mm
С	(Box 1)	1 PC		1555 x 440 x 15 mm
D	(Box 1)	1 PC		1555 x 440 x 15 mm
Е	(Box 1)	1 PC	$\Diamond$	466 x 437 x 15mm
F	(Box 1)	2 PCS	$\Diamond$	464 x 437 x 15mm
G	(Box 1)	3 PCS		446 x 140 x 15mm
Н	(Box 1)	3 PCS		400 x 136 x 15mm
I	(Box 1)	3 PCS		400 x 136 x 15mm
J	(Box 1)	3 PCS		410 x 136 x 15mm
K	(Box 1)	4 PCS	$\Diamond$	419 x 394 x 3mm
L	(Box 1)	1 PC		446 x 200 x 15mm
М	(Box 1)	1 PC		400 x 196 x 15mm
N	(Box 1)	1 PC		400 x 196 x 15mm
0	(Box 1)	1 PC		410 x 196 x 15mm
Р	(Box 1)	1 PC		1581 x 492 x 3mm
Q	(Box 1)	4 PCS		384 x 60 x 15mm

### Please note - All Hardwares in box 1.

	24 PCS	24 PCS	3 8 PCS	8 PCS	(5) 4 PCS	6 53 PCS	7 4 PCS	8 16 PCS
	Ø15 x 12 mm	Ø6 x 34 mm	Ø8 x 30 mm	Ø10 x Ø7 x 50 mm	Ø15 x Ø3 x 7 mm	Ø4 x Ø2 x15 mm	65 x 65 x 13 mm	Ø6 x 10 mm
	9 4 Sets 99 99 99	•	24 PCS	1 PCS	•		16 PCS	
ŀ	16"	Ø3.5 x 14 mm	Ø8 x Ø4 x 33 mm	115 x 10 x30 mm	Ø8 x M4 x 19 mm	Ø5 x 22 x 9 x 17mm	Ø17.5 x 4 mm	20 x 40 x 1.2mm
	1 PC	1 PC	1 PC (mm>					
L	Ø9 x Ø6 x 25mm	Ø9 x Ø4 x 15mm	Ø9 x Ø4 x25mm					


	ШШШ	ШШ	ЩШШШ	ППППП	ППППП	ППППП		ШШ	ПППППП		ШШШ			ШШШ		ШІІШІ	ШШШ				
'.	1cm '	او	' 3	' ⊿	' -	ี่ ค่	' ∤ '	٩	'   '	່ ∤ດ່	11	' <sub>1</sub> 2	' {a '	- 1⊿ '	15 '	16	17	' 1 <sub>8</sub> '	' 1 <mark>9</mark> '	' do '	' 2 <sub>1</sub> '
	1inch 2		Ů	3 1			1	5				6		7			8				
			1		<u> </u>			,					ĭ		Ĭ					Ĭ	

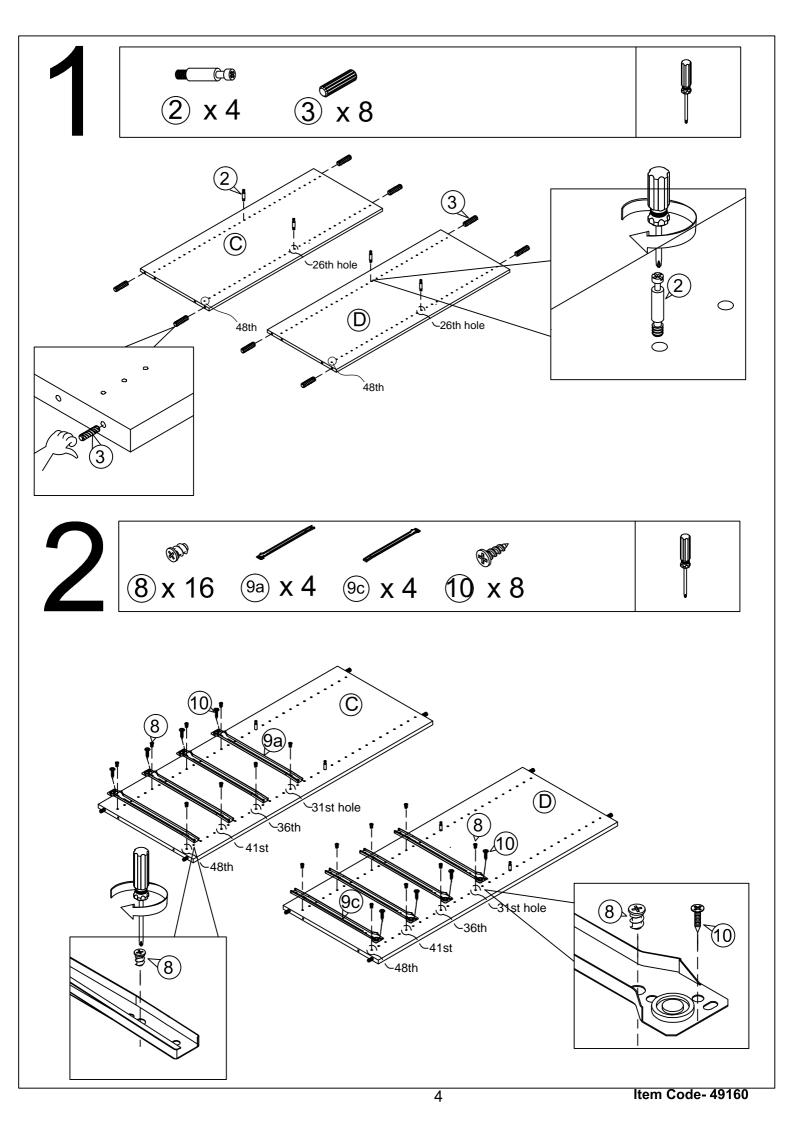

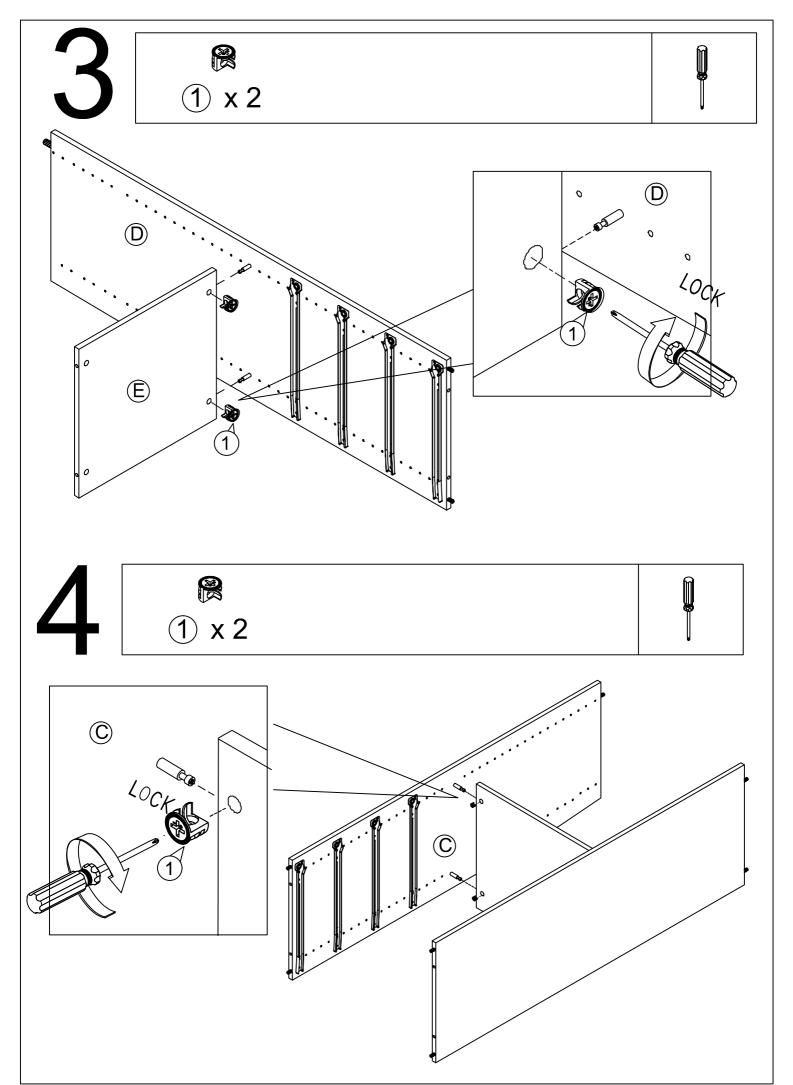







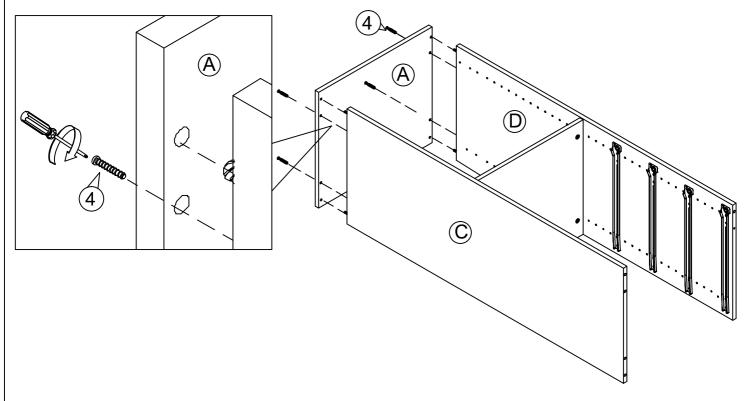







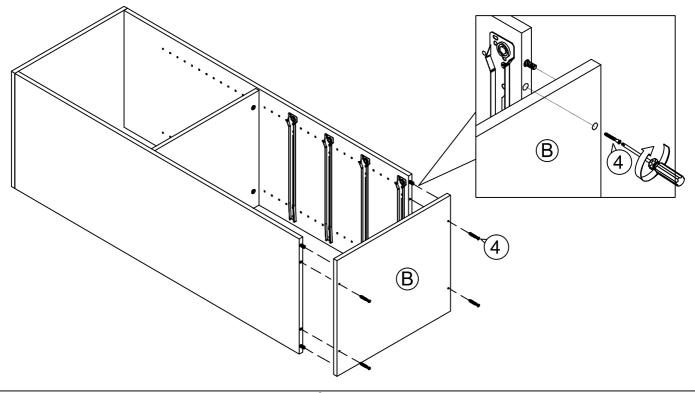


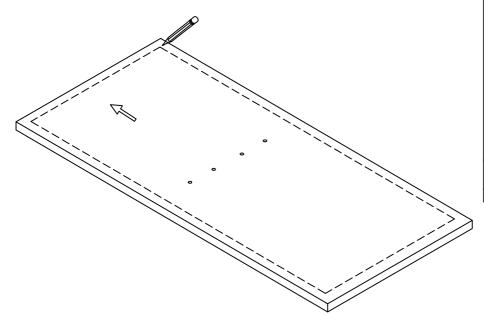


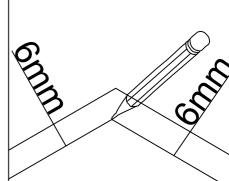







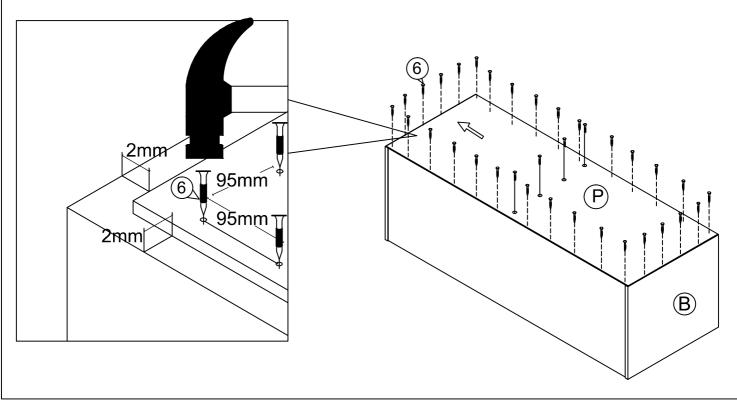


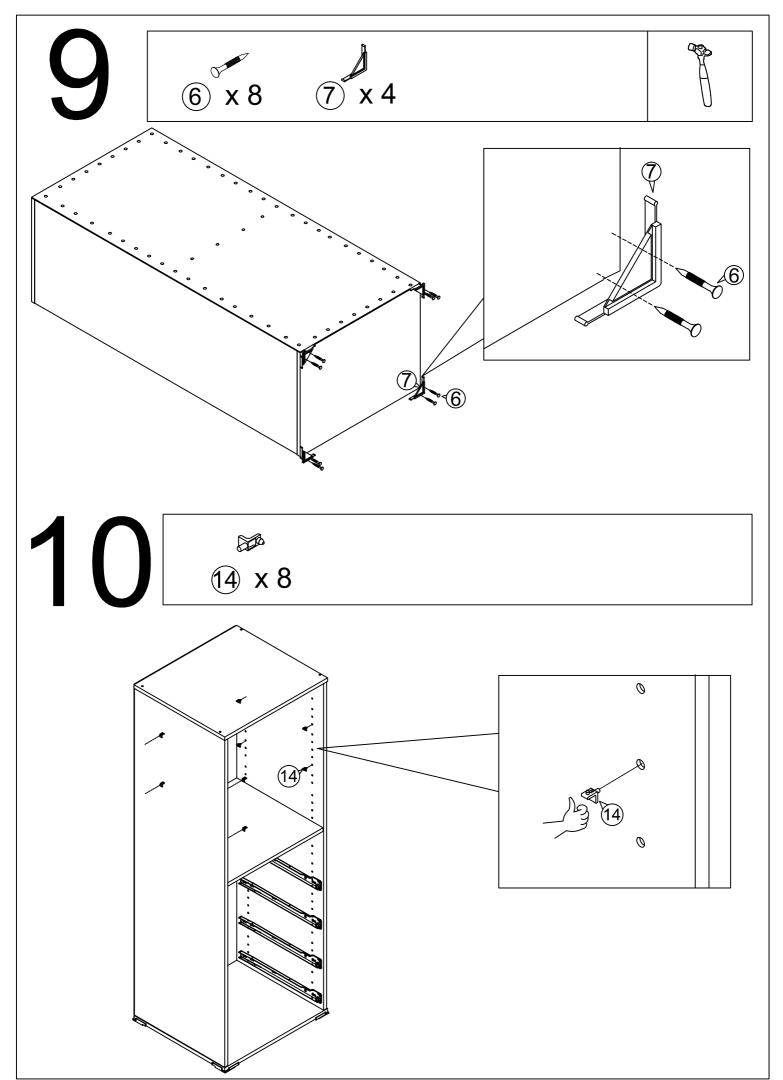

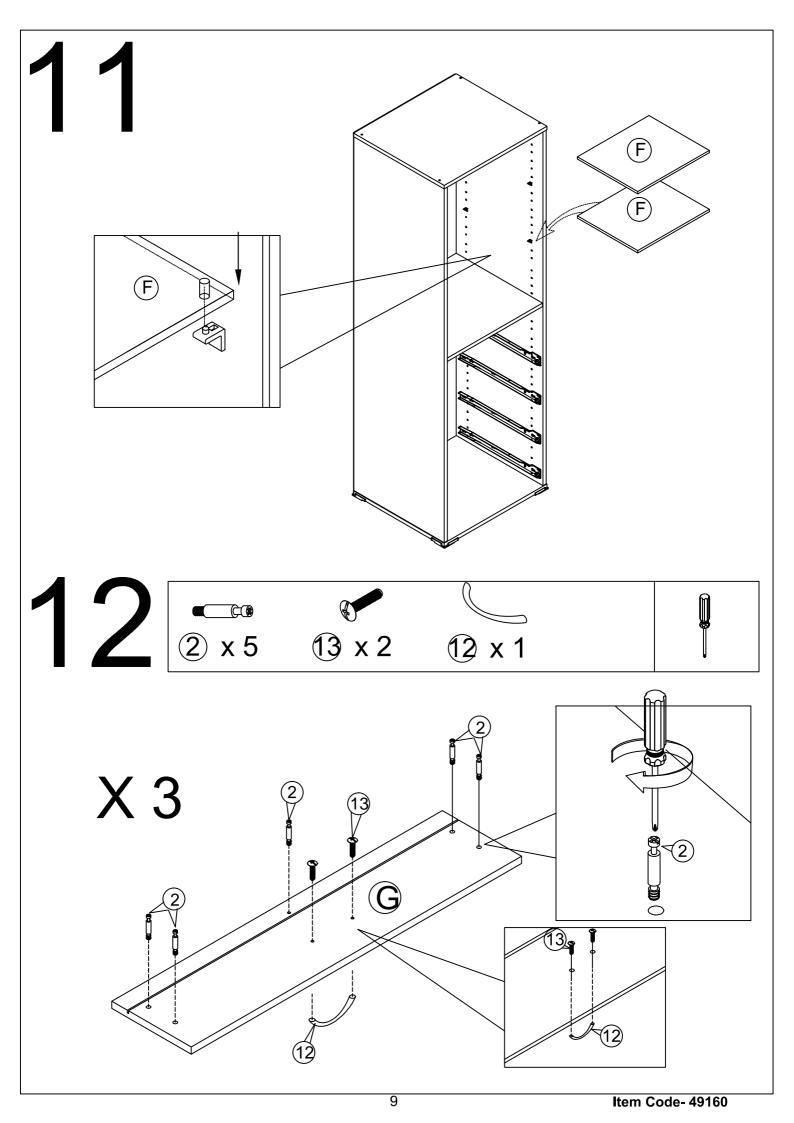






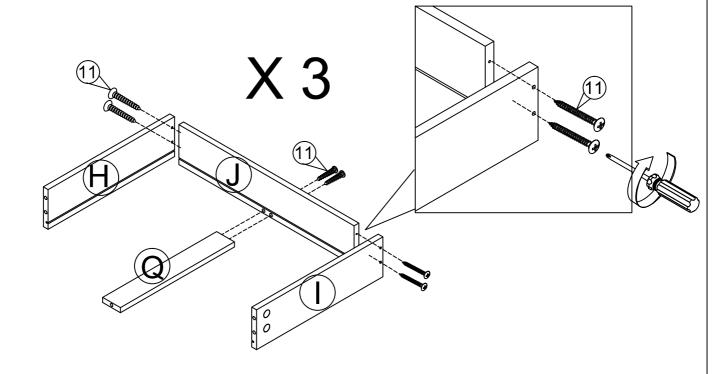


14

X 3

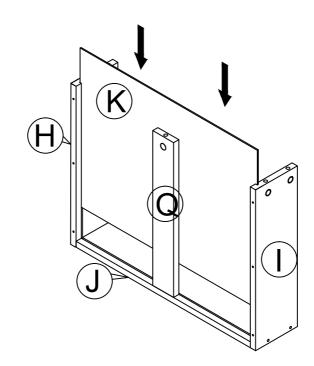





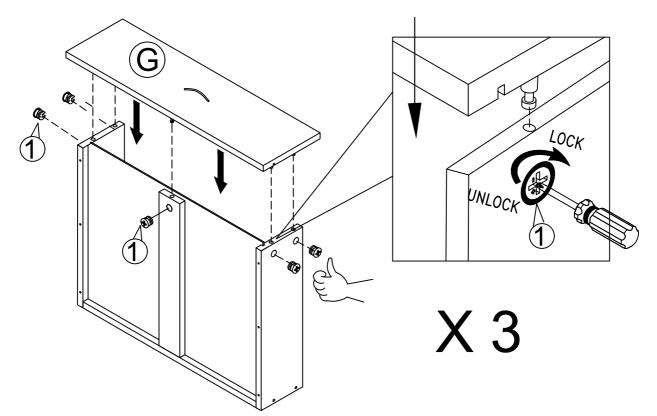


1 6 10 x 6












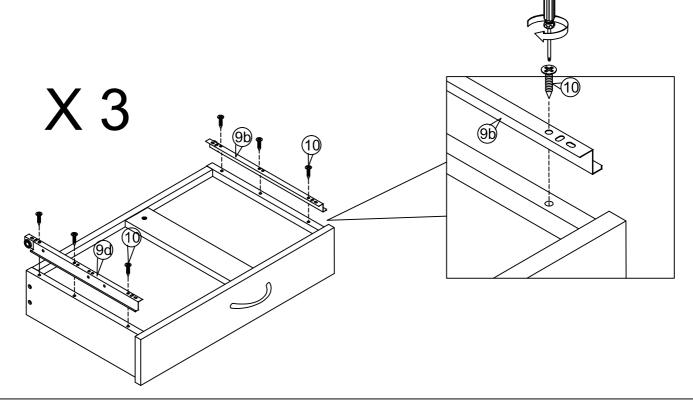

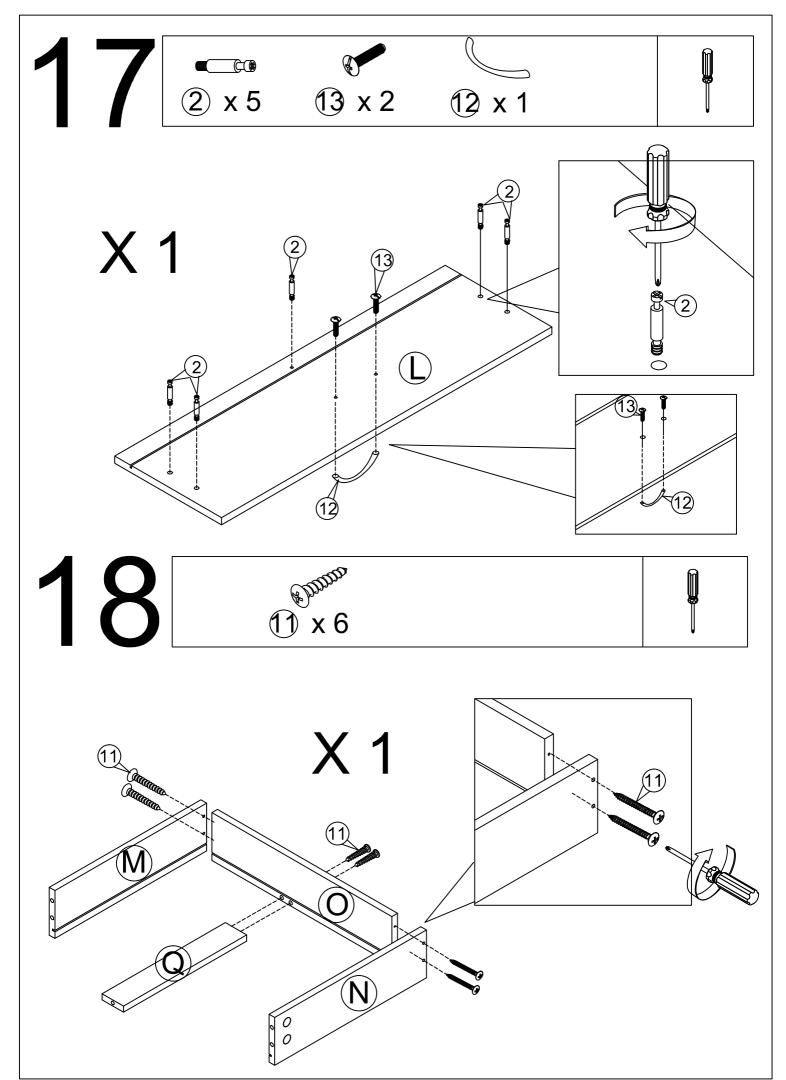

X 1

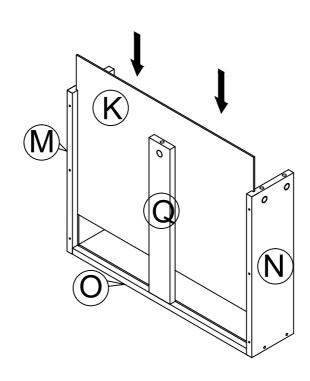

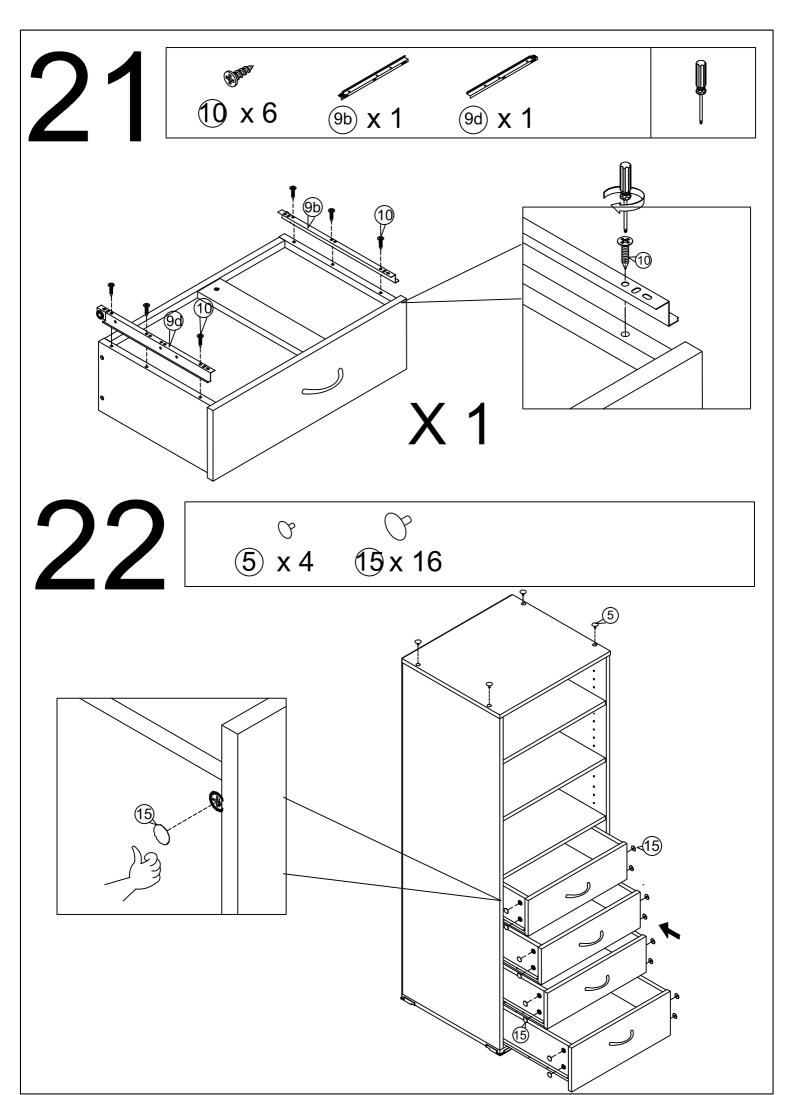


# SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- 1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short screws.
- 3. Move the furniter to its final position. Thread a Wall Strap through the both Mounting Plated and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plated are firmly attached to the wall and fumiture and that the Wall Strap is snug.


## **HARDWARE**












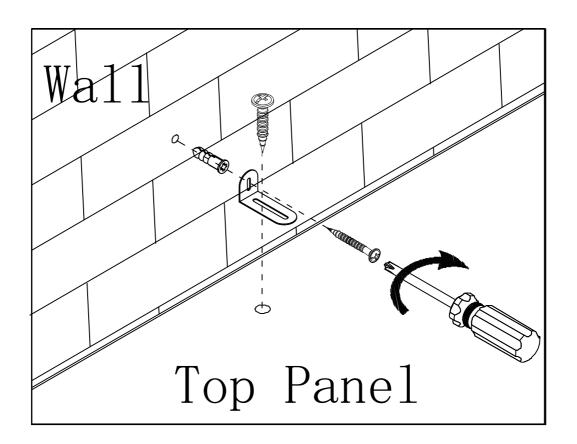




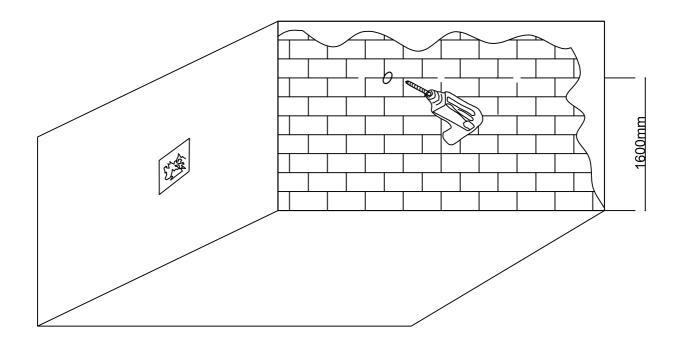





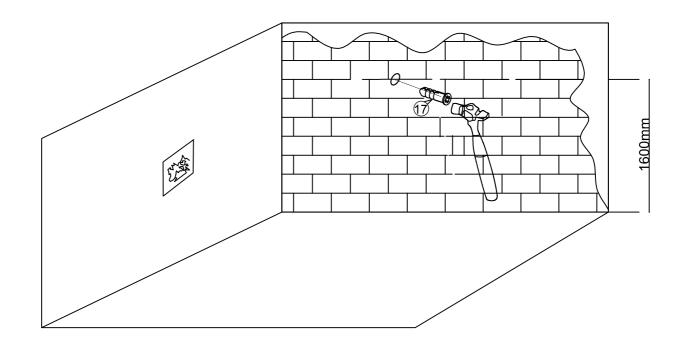



















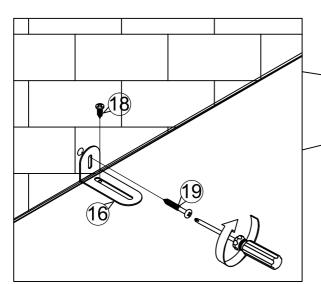

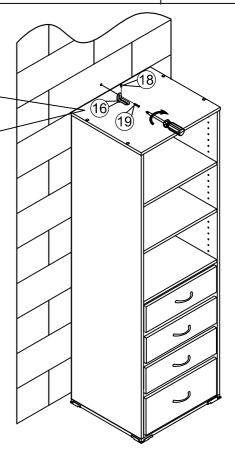


# **ASSEMBLY IS COMPLETE**

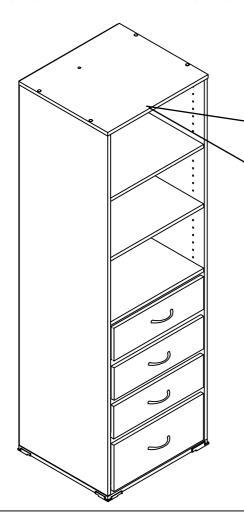

no the back side of the top panel next to coo label

# **TIPPING WARNING**





# **Product Care**



Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time