
#### **ASSEMBLY INSTRUCTION**

# MARTOS ENTERTAINMENT UNIT ITEM CODE 68549

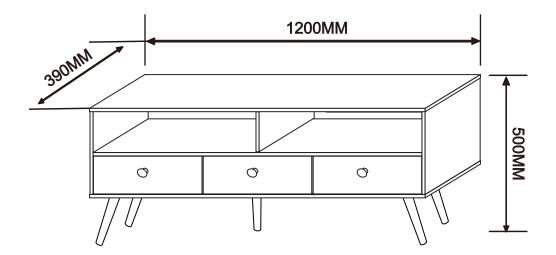




Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

#### PRE-ASSEMBLY PREPARATION


#### Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

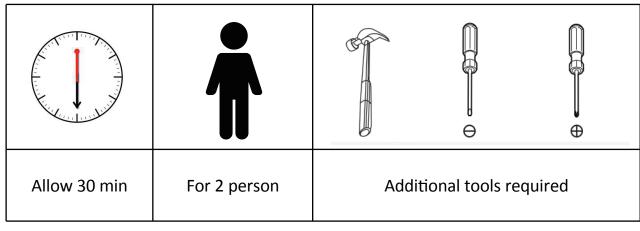




#### **PARTS LIST**

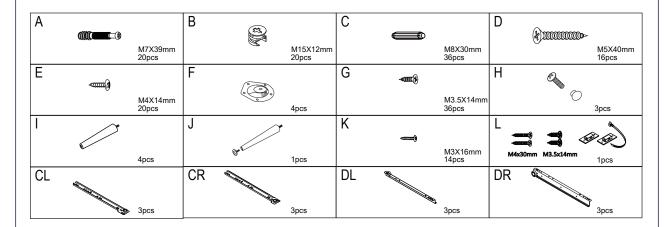



1	SIDE PANEL
2	SIDE PANEL
3	MIDDLE PANEL
4	MIDDLE PANEL
5	SHELF
6	BOTTOM PANEL
7	TOP PANEL
8	BACK PANEL


9	DRAWER BASE
10	DRAWER SIDE PANEL
11	DRAWER SIDE PANEL
12	DRAWER BACK PANEL
13	DRAWER FRONT
14	DRAWER FRONT
15	DRAWER FRONT

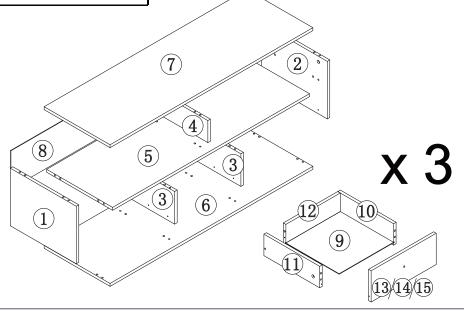


## **CAM LOCK INSTALL METHOD AS FOLLOWS**

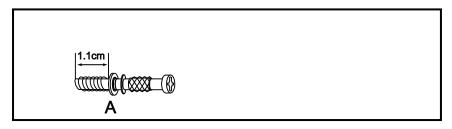

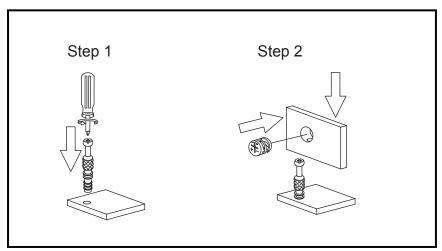

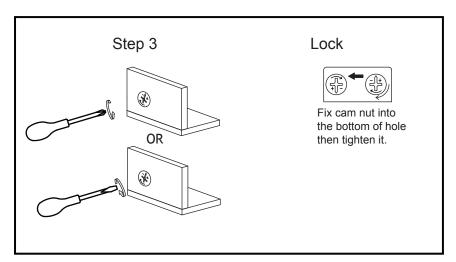


STEP 1: Fix cam pin (A)to panels (1)(2)(3). Fix runners (CL)(CR) to panels with screws(G).

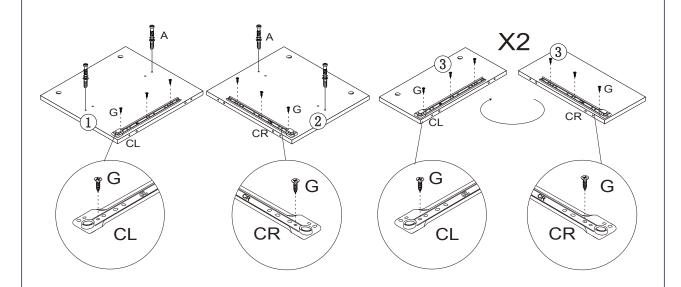


STEP 2: Fix cam pin (A)to panel (5).


Attach panel(3) to panel (5) with cam lock(B) and dowel (C).

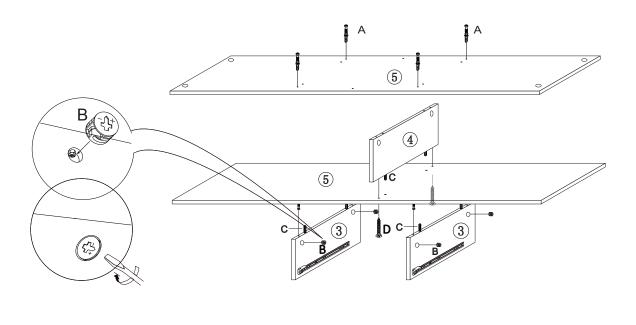

STEP 3: Attach panels (1)(2) to the body with cam lock parts.

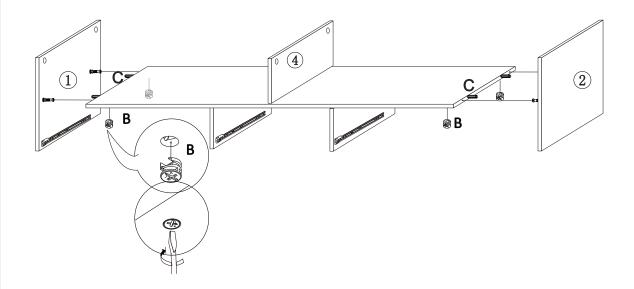


STEP 4: Attach bottom panel(6) to the body with screws(D).

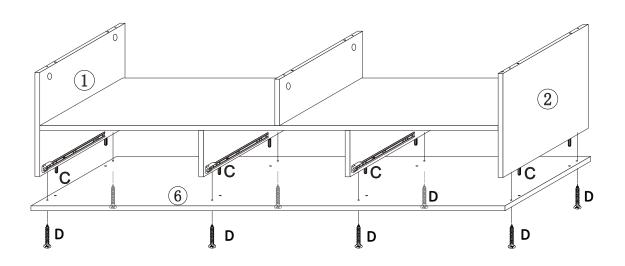


STEP 5: Fix cam pin (A)to panel (7).


Attach top panel(7) to the body with cam lock parts.

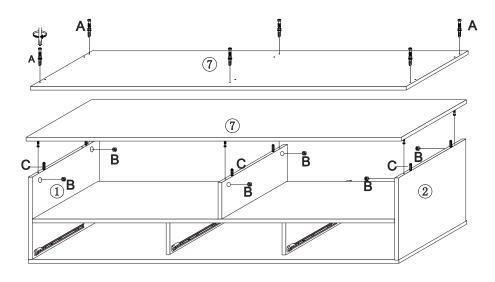


STEP 6: Fix metal plates(F) to bottom panel(6) with screws(E).

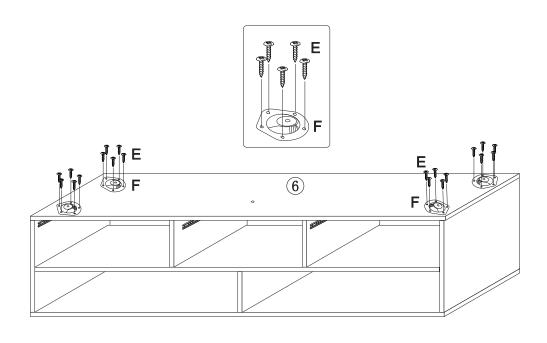

STEP 7: Fix legs(I)(J) to bottom panel(6).

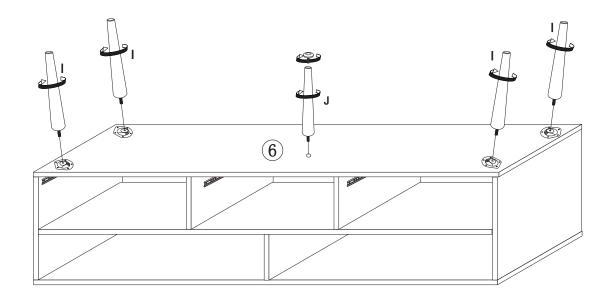

STEP 8: Attach back panel(8) to the body with screws(K).

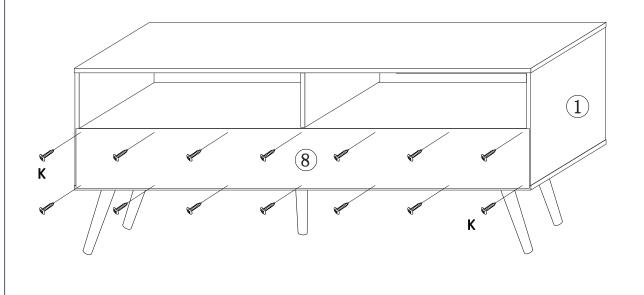


STEP 9: Attach panels (10)(11) to panel(12) with dowel (C) and screw(D).


Insert drawer base as shown.

Fix cam pin (A)to panels (13)(14)(15).


Attach drawer front to the body with cam lock parts.

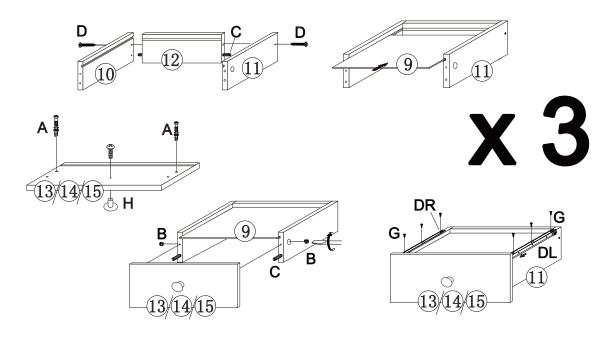

STEP 10: Assemble drawers to the body.

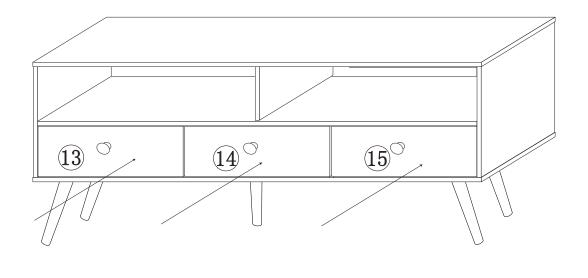


### ASSEMBLY COMPLETE

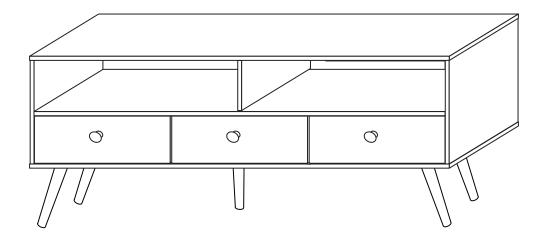

# SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
   Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

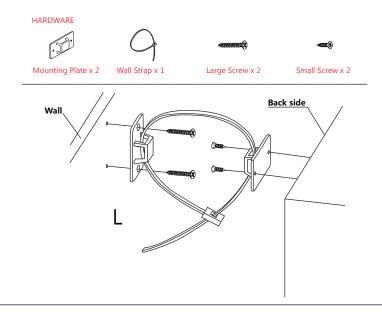

#### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void