

ASSEMBLY INSTRUCTION


Spacesaver Module 6 Drawer 1590

ITEM CODE 49161

Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture Ewing Road , Customer Service Free call 1800 351 084

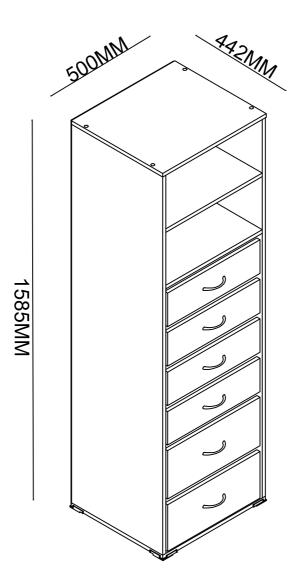


Imported by Amart Furniture Pty Ltd,Qld ,Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture Ewing Road , Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION

Before you start:

- Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

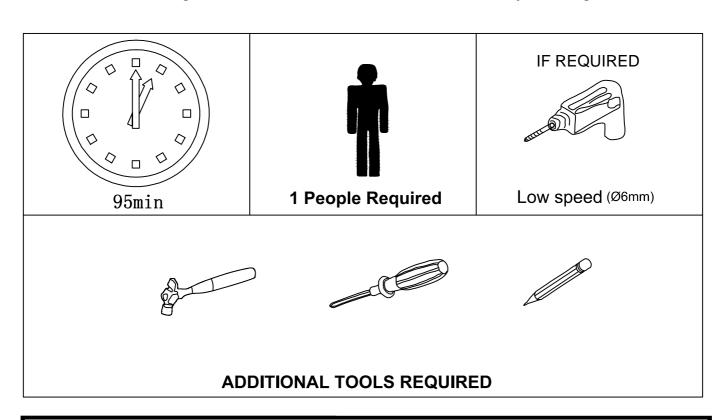



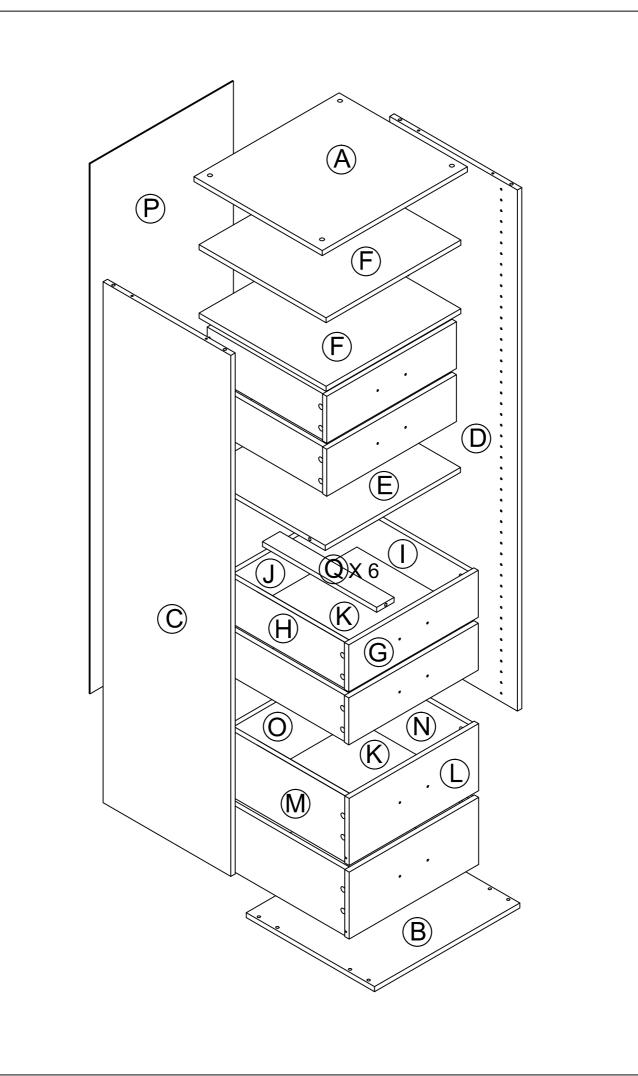


Item Code- 49161

Panel(Mark)	Packing carton	Quantily	Picture Dimension	
А	(Box 1)	1 PC	\Diamond	500 x 442 x 15mm
В	(Box 1)	1 PC	\Diamond	500 x 442 x 15mm
С	(Box 1)	1 PC		1555 x 440 x 15 mm
D	(Box 1)	1 PC		1555 x 440 x 15 mm
Е	(Box 1)	1 PC	\Diamond	466 x 437 x 15mm
F	(Box 1)	2 PCS	\Diamond	464 x 437 x 15mm
G	(Box 1)	4 PCS		446 x 140 x 15mm
Н	(Box 1)	4 PCS		400 x 136 x 15mm
I	(Box 1)	4 PCS		400 x 136 x 15mm
J	(Box 1)	4 PCS		410 x 136 x 15mm
K	(Box 1)	6 PCS	\bigcirc	419 x 394 x 3mm
L	(Box 1)	2 PCS		446 x 200 x 15mm
М	(Box 1)	2 PCS		400 x 196 x 15mm
N	(Box 1)	2 PCS		400 x 196 x 15mm
0	(Box 1)	2 PCS		410 x 196 x 15mm
Р	(Box 1)	1 PC		1581 x 492 x 3mm
Q	(Box 1)	6 PCS		384 x 60 x 15mm

Please note - All Hardwares in box 1.

34 PC	S 2 34 PCS	8 PCS	8 PCS	(5) 4 PCS	6 53 PCS	⑦ 4 PCS	8 24 PCS
Ø15 x 12 mm	Ø6 x 34 mm	Ø8 x 30 mm	Ø10 x Ø7 x 50 mm	Ø15 x Ø3 x 7 mm	Ø4 x Ø2 x15 mm	65 x 65 x 13 mm	Ø6 x 10 mm
9 6 Set	48 PCS	36 PCS	6 PCS	12 PCS	8 PCS	24 PCS	
	09 x 04 x 15mm	1 PC	119 X 10 X30 mm	Ø6 X IM4 X 19 MM	Ø5 x 22 x 9 x 17mm	Ø17.5 x 4 mm	20 x 40 x 1.2mm


	 		 			
'1cm' 2 ' 3 ' 1 ' 5 ' 6	' - ' - ' - ' - ' - ' - ' - ' - '	' 10 ' 11 '	12 12 14	15 16		a '
1 1inch 2	7 0 9	10 11	12 13 14	10	7	9 20 21
	ى ا	4) 	Ÿ	ί	Ϋ́

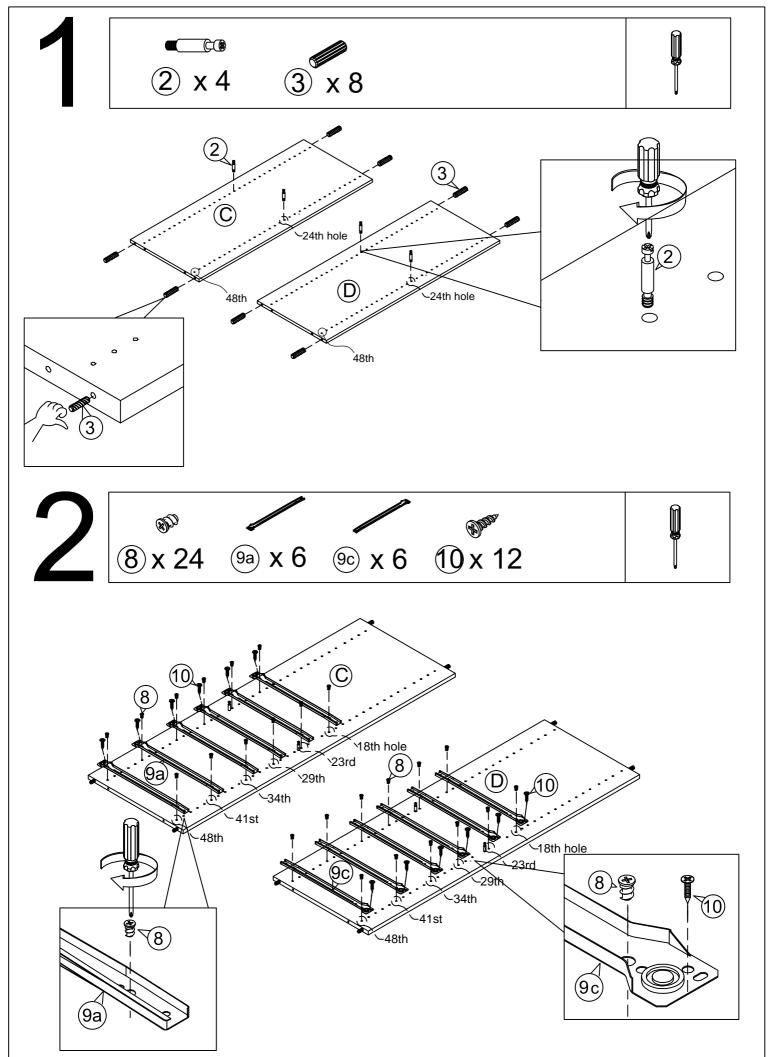



① x 2



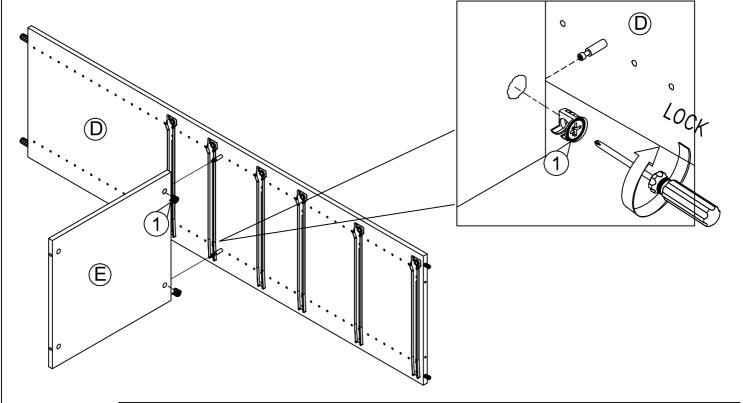


4




① x 2



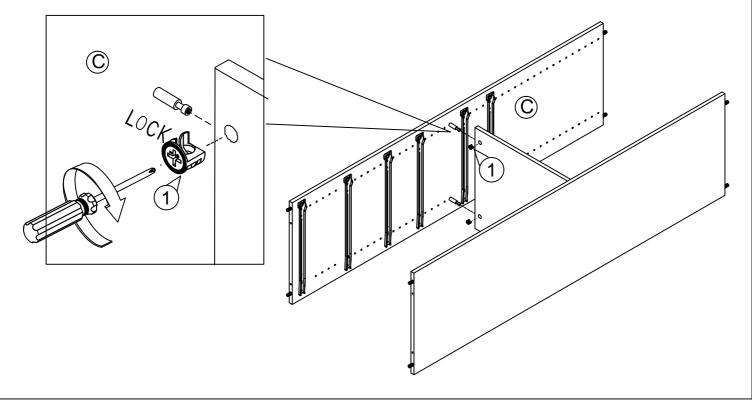






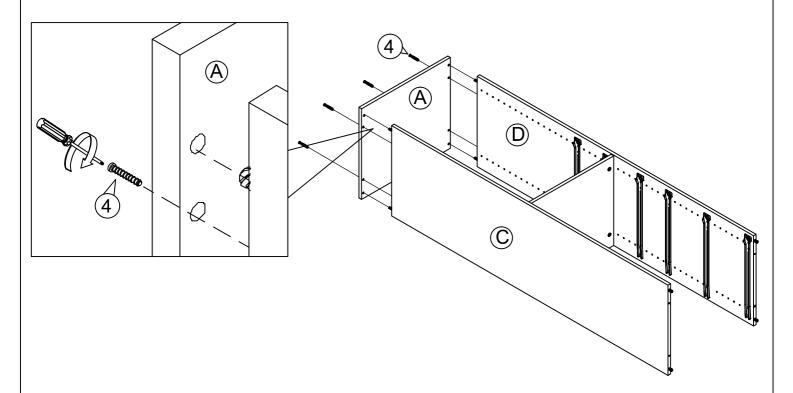







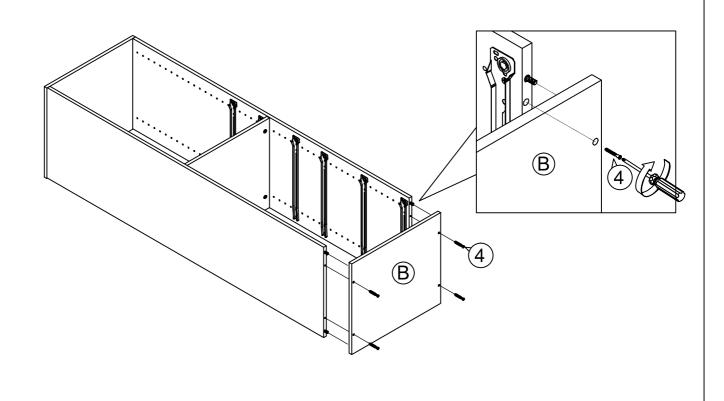





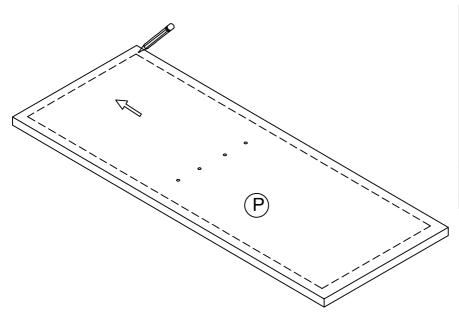


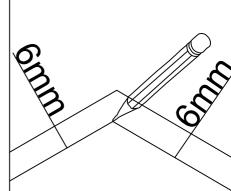







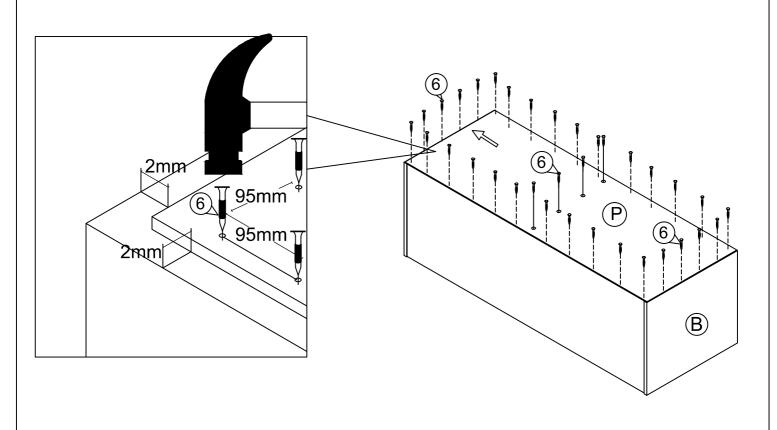

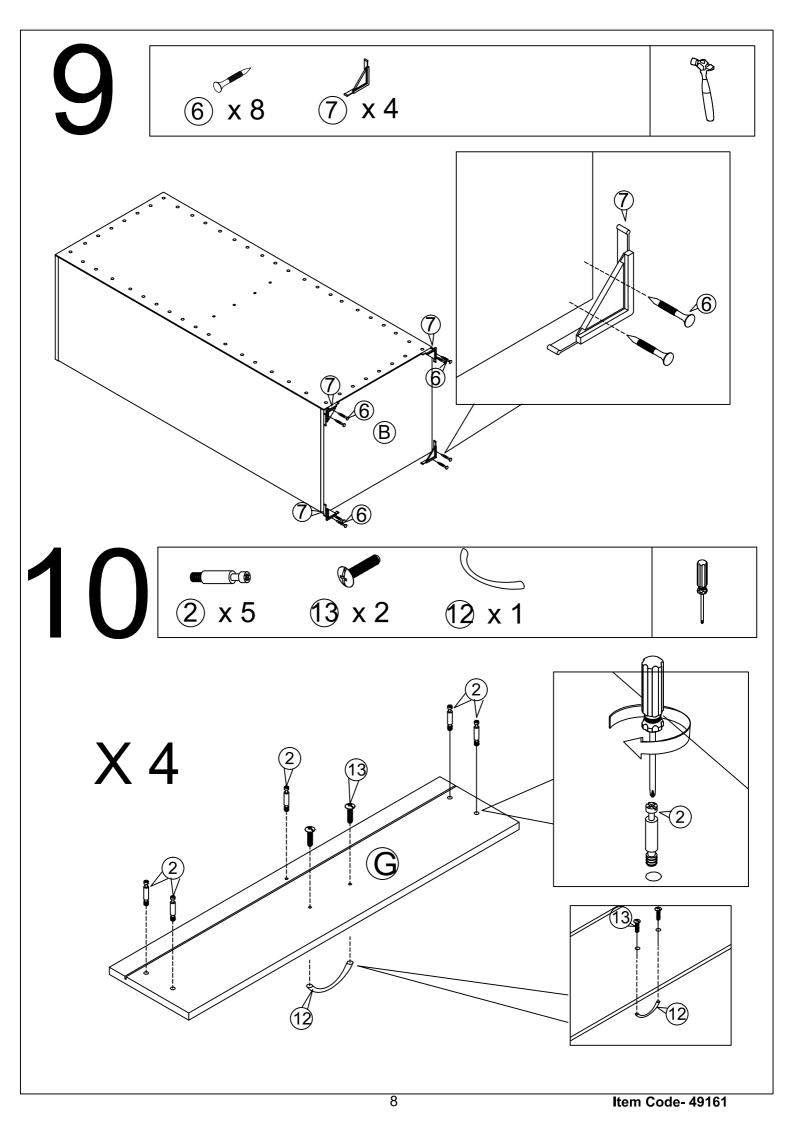






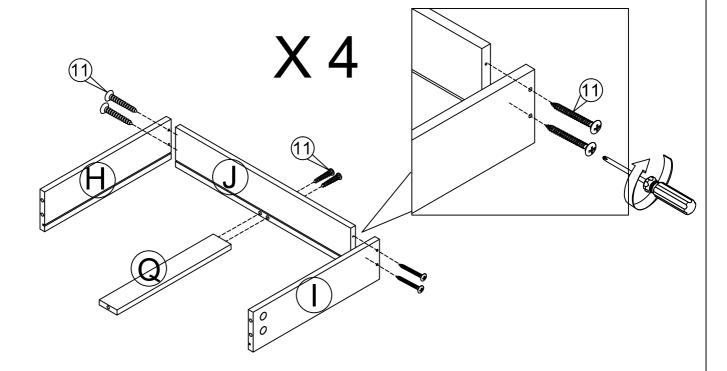


12

X 4

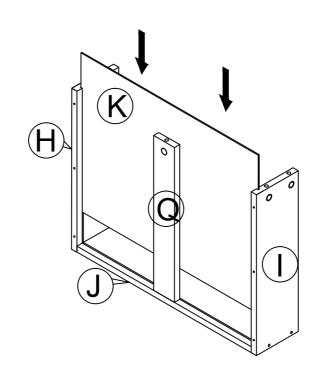






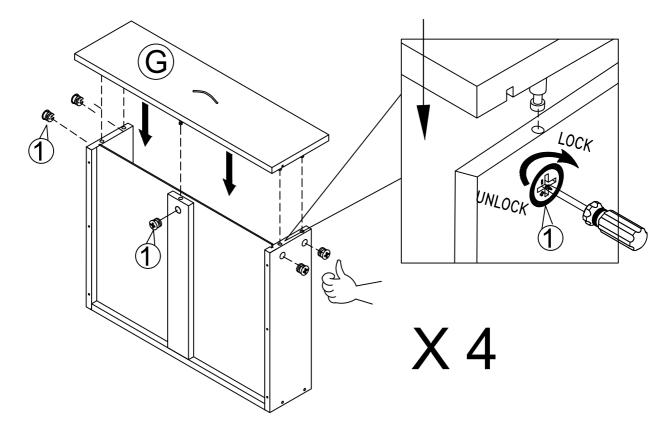












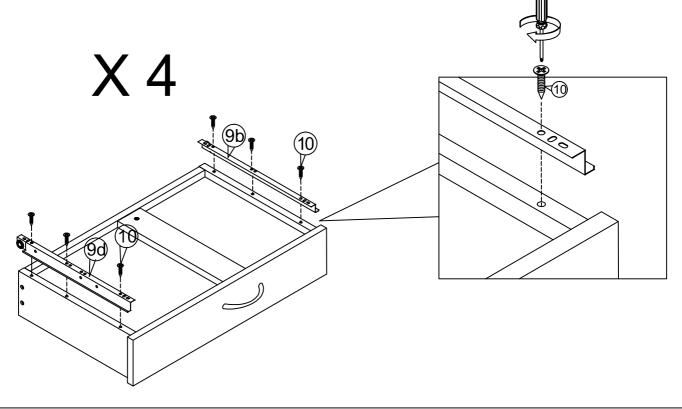

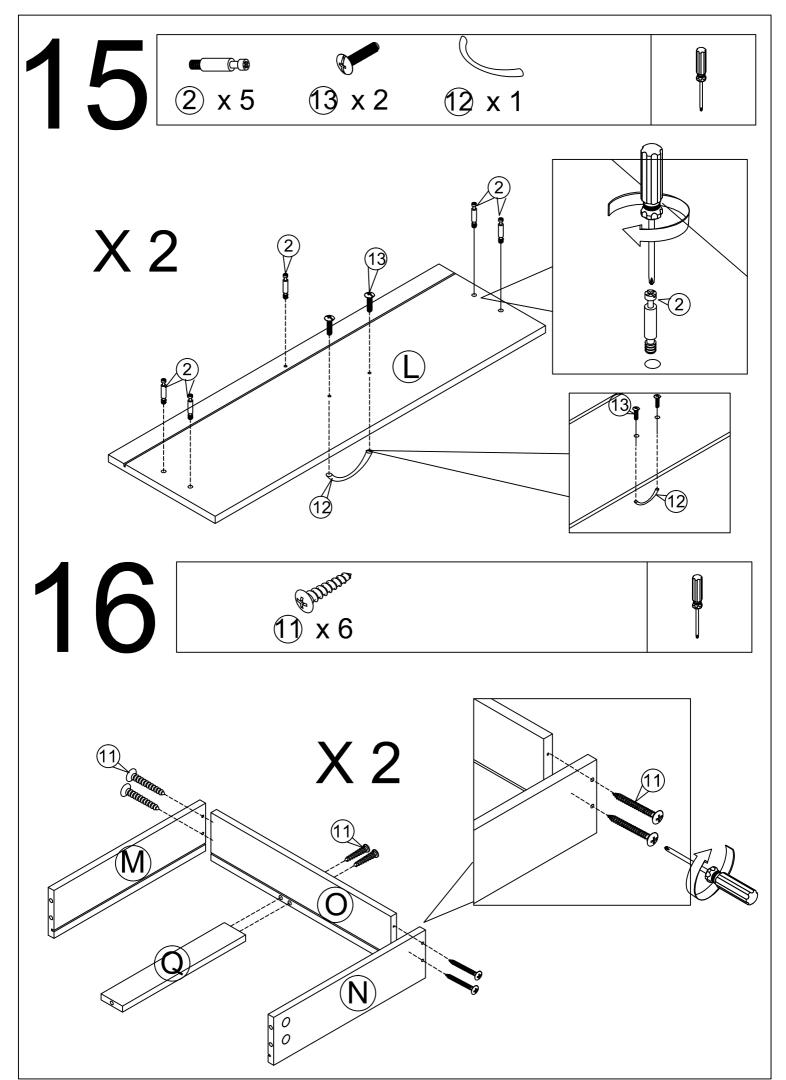


X 2

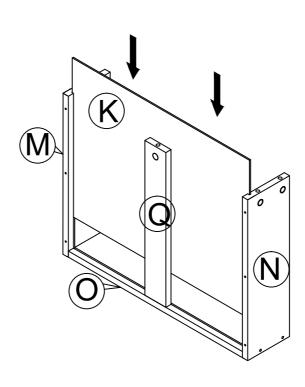







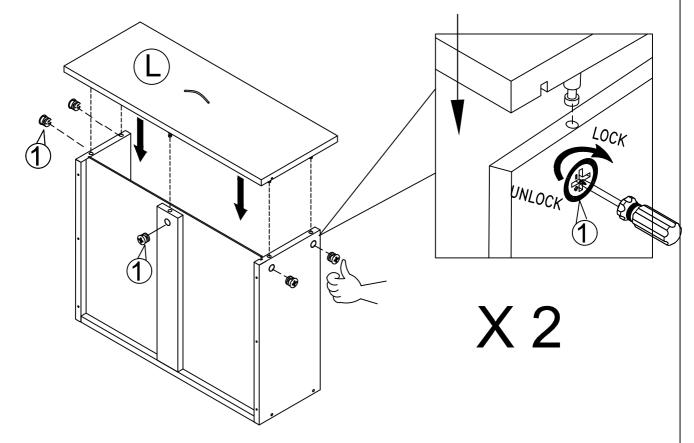


1 0 10 x 6 9b x 1 9d x 1

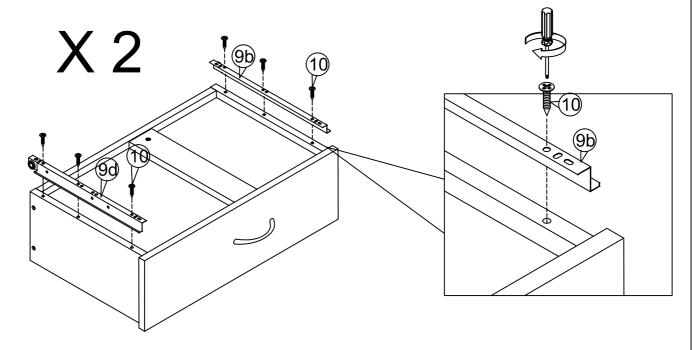


20 S x 4 15 x 24

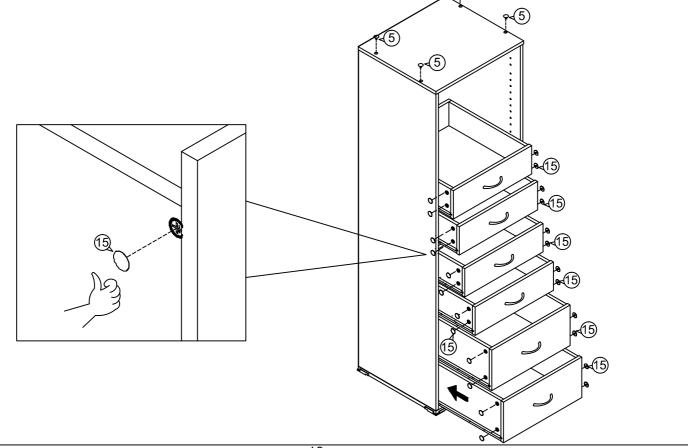



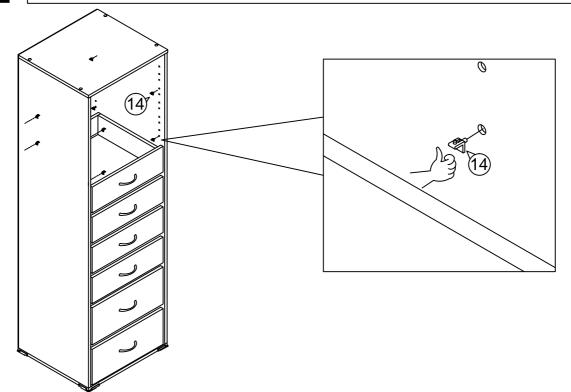

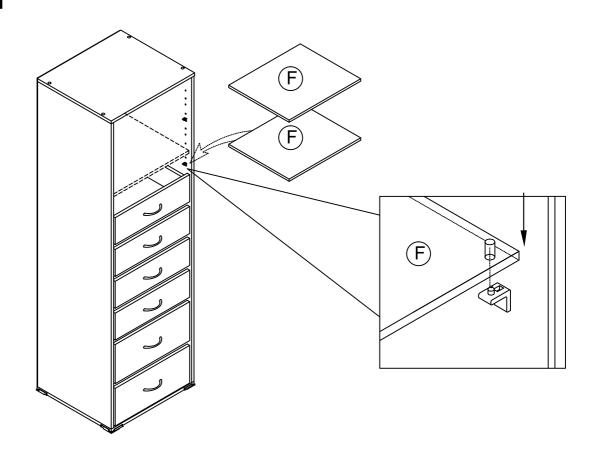


SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- 1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short screws.
- 3. Move the furniter to its final position. Thread a Wall Strap through the both Mounting Plated and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plated are firmly attached to the wall and fumiture and that the Wall Strap is snug.





20 x 40 x 1.2mm Wall Bracket




1 PC Ø9 x Ø6 x 25mm Plastic Screw





1 PC Ø9 x Ø4 x 15mm Screw



1 PC Ø9 x Ø4 x25mm Screw

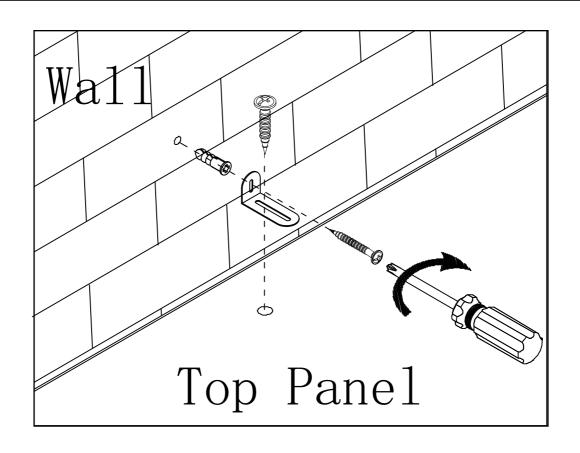




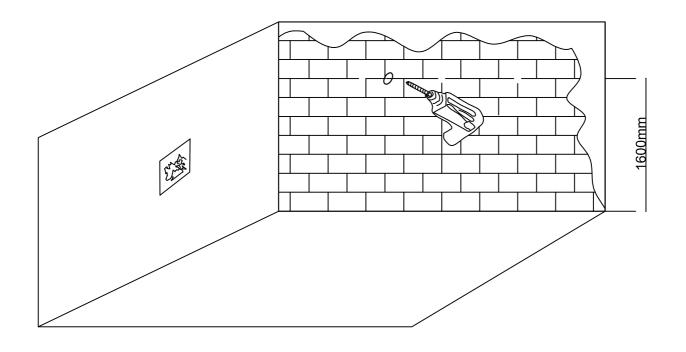





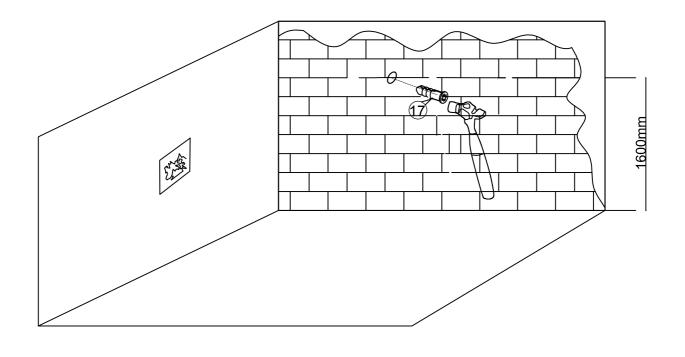












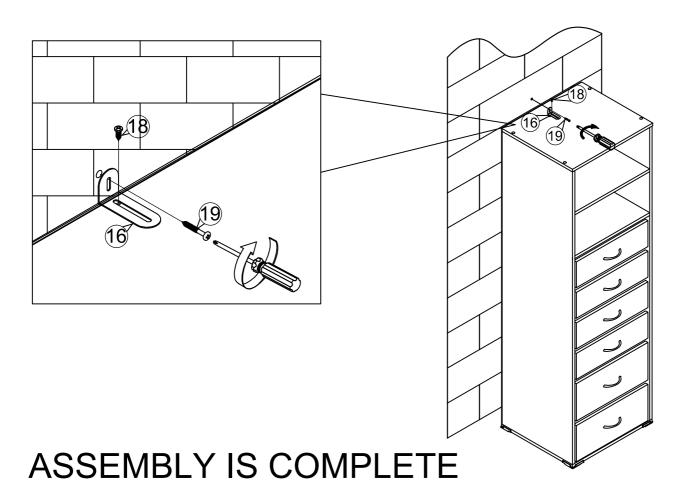



Product Care



Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time