
### **ASSEMBLY INSTRUCTION**

**ALAN** 

**BUFFET** 

**ITEM CODE 69644** 

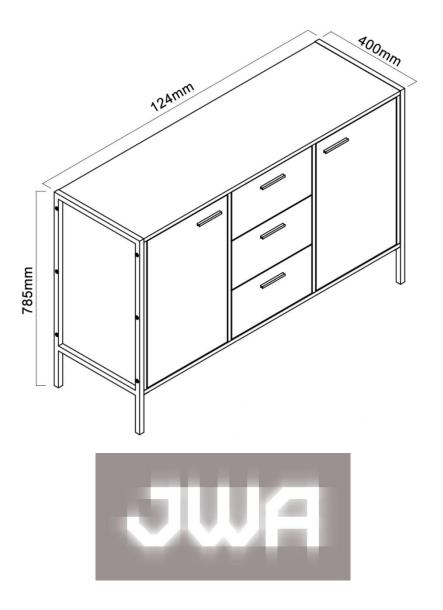


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

### PRE-ASSEMBLY PREPARATION

### **Before you start:**

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

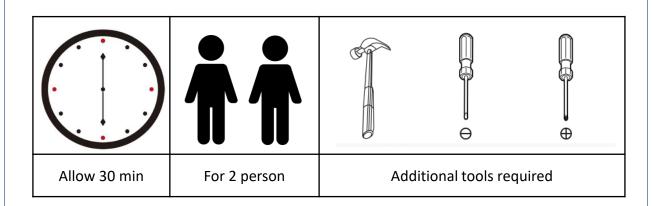




# **PARTS LIST**


NO.	ITEM	QTY	NO.	ITEM	QTY
Α	Ф6х35	20PCS	L	THE STATE OF THE S	4PCS
В	Ф15х10	20PCS	М	Ø	8PCS
С	<b>₽</b> <sub>Ф8х30</sub>	16PCS	Р	€ Ф4х12	36PCS
D	<b>88777777</b>	22PCS	Q	6	2PCS
Е	Ф6х30	12PCS	P1	CL 30CM	3PCS
F	Ф4х14	4PCS	P2	CR 30CM	3PCS
G	Ommunis	34PCS	P3	DL. 30CM	3PCS
Н		1PC	P4	DR 30CM	3PCS
1		5PCS	T		1PCS
J	Ф4х18	10PCS	S	9000000 Ф4x25	6PCS
K	Ф4х12	16PCS			


NO.	ITEM	QTY
1	TOP PANEL	1 PCE
2	BOTTOM PANEL	1 PCE
3	LEFT SIDE PANEL	1 PCE
4	RIGHT SIDE PANEL	1 PCE
5	MIDDLE SUPPORT LEG	1 PCE
6	METAL LEG	2 PCS
7	DRAWER FRONT PANEL	3 PCS
8	DRAWER LEFT SIDE PANEL	3 PCS
9	DRAWER RIGHT SIDE PANEL	3 PCS


NO.	ITEM	QTY
10	DRAWER BACK SIDE PANEL	3 PCS
11	DRAWER BOTTOM PANEL	3 PCS
12	UPRIGHT PANEL	1 PCE
13	UPRIGHT PANEL	1 PCE
14	SHELF PANEL	2 PCS
15	DOOR PANEL	1 PCE
16	DOOR PANEL	1 PCE
17	BACK PANEL	1 PCE
18	BACK PANEL	1 PCE


# **PARTS LIST**

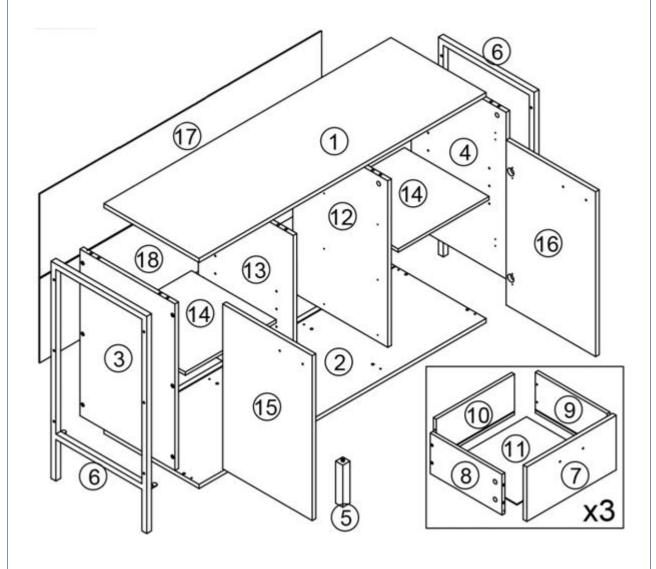


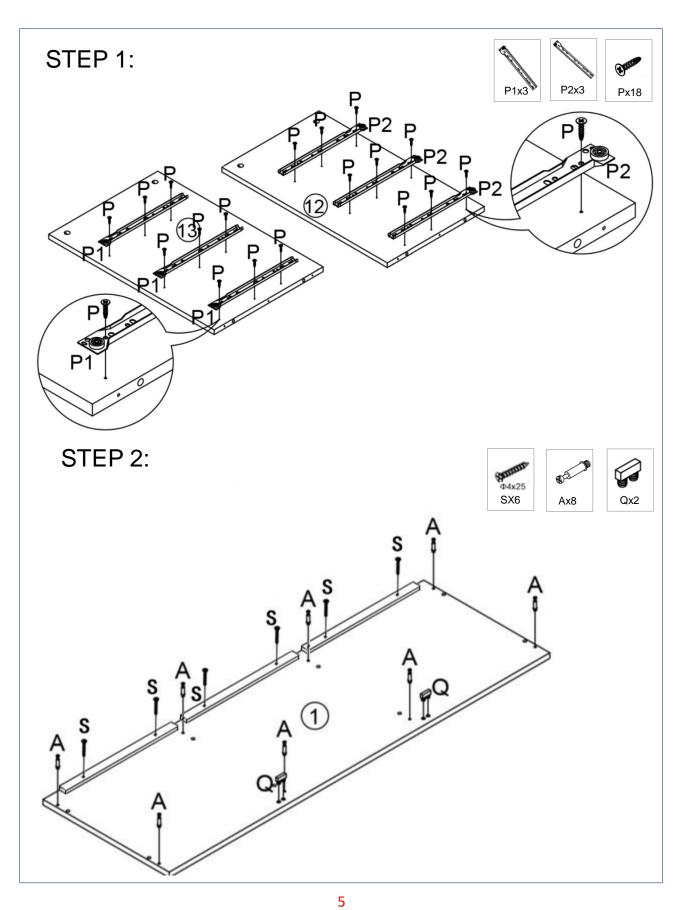


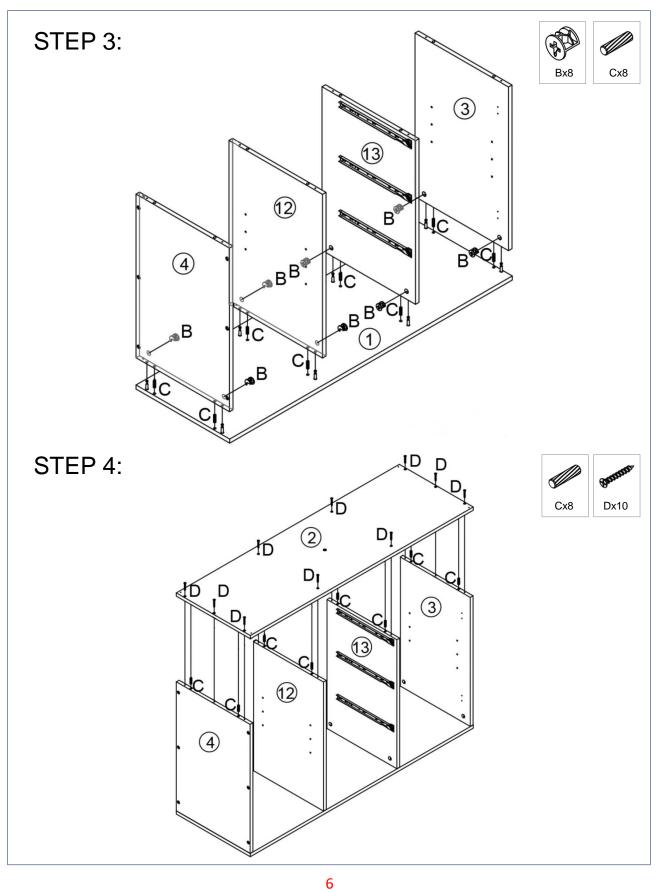


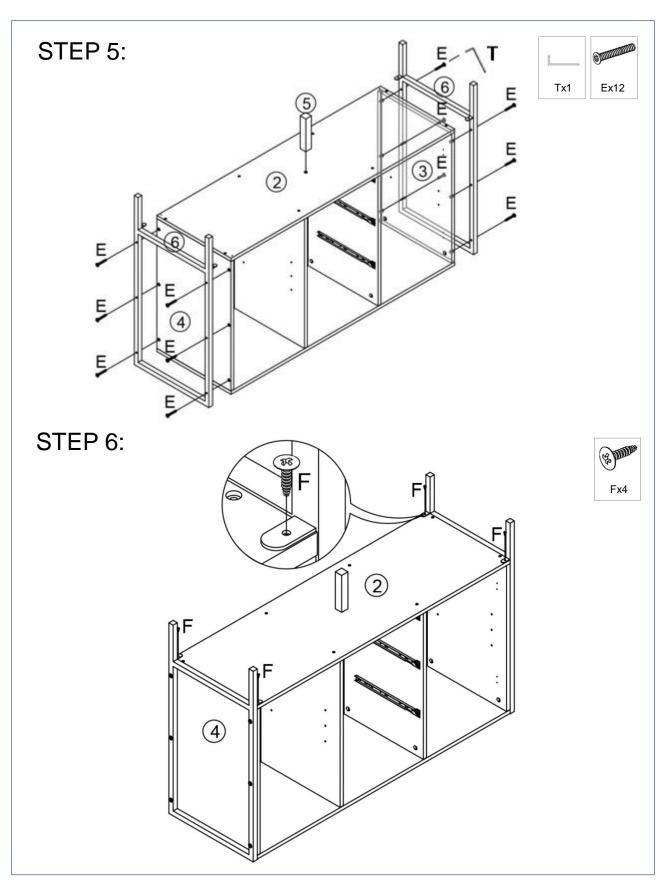


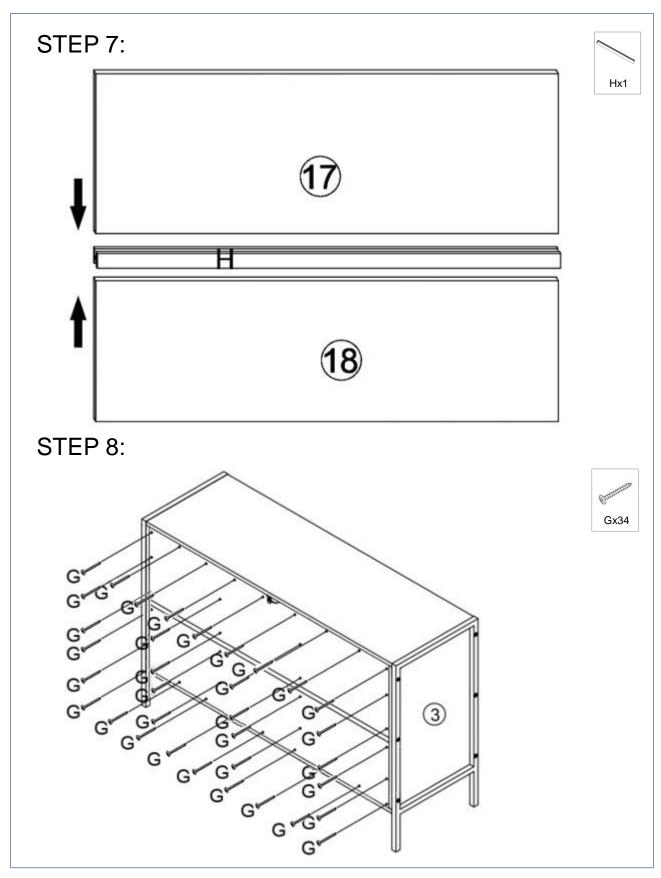

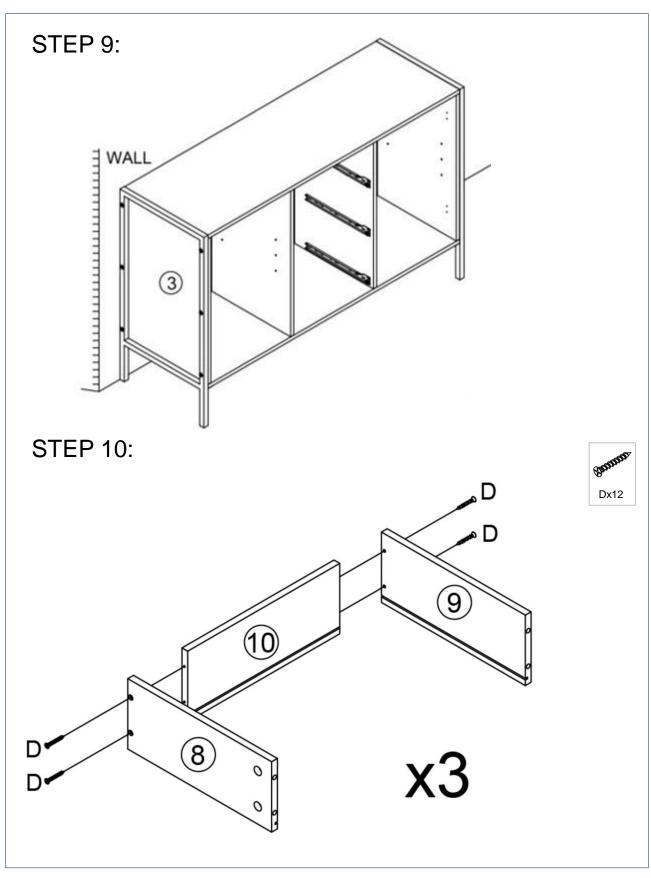

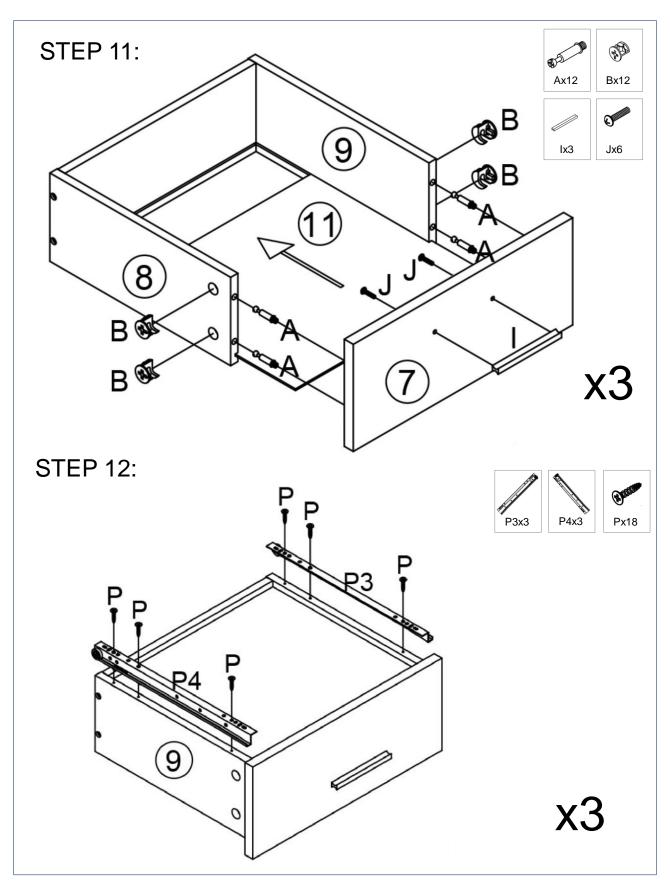


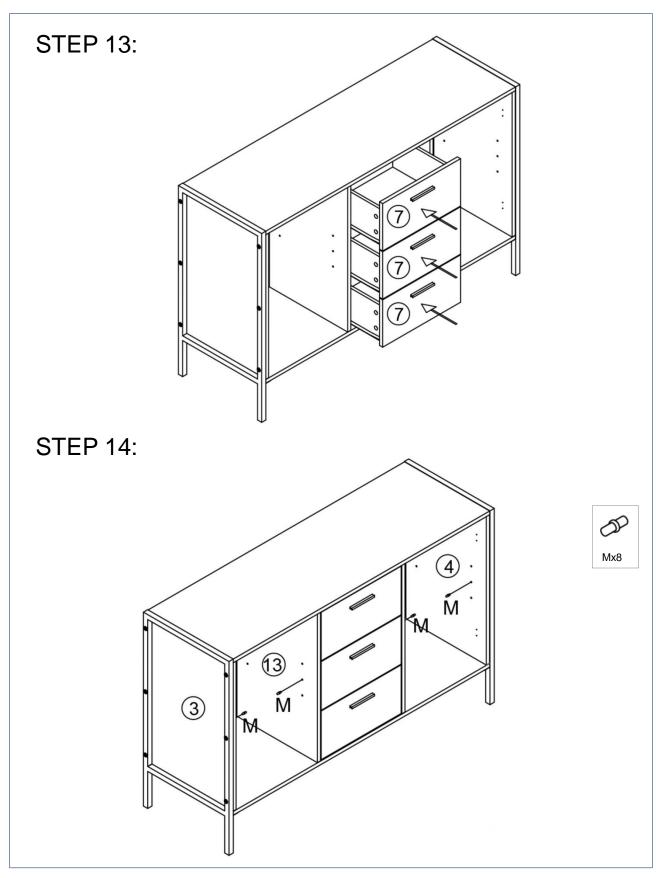

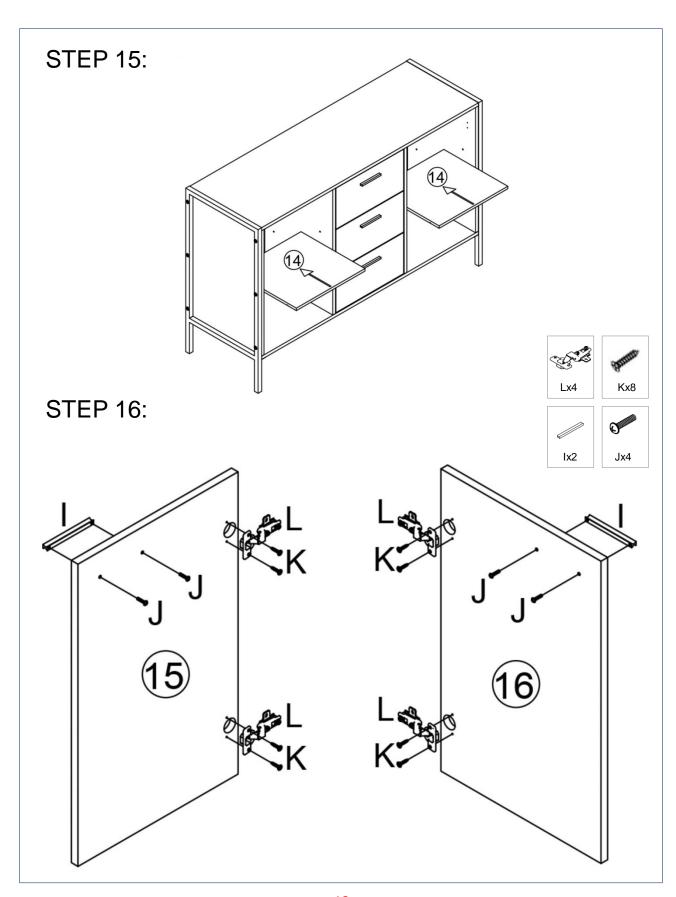

# **STEP 17:**




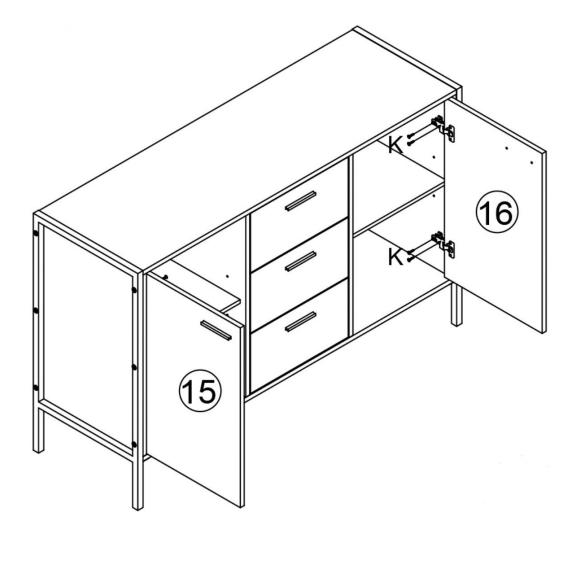

# **ASSEMBLY IS COMPLETE**

# SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
  Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

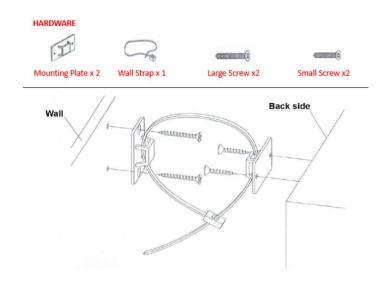

### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void