
ASSEMBLY INSTRUCTION

ELDA

DESK

ITEM CODE 68440

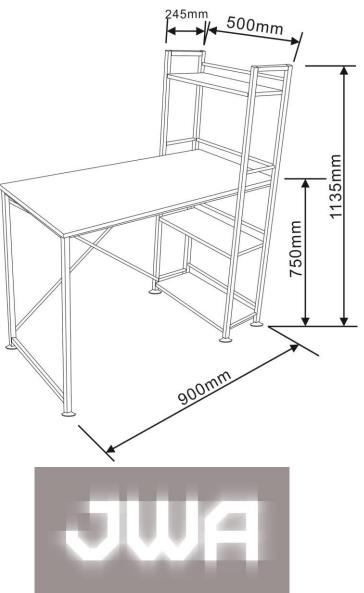


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

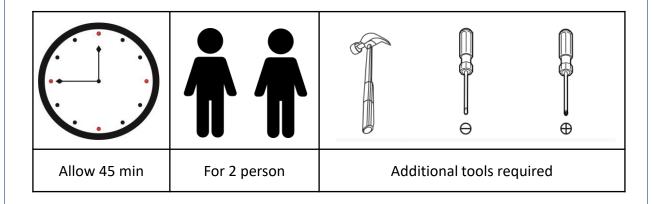




PARTS LIST

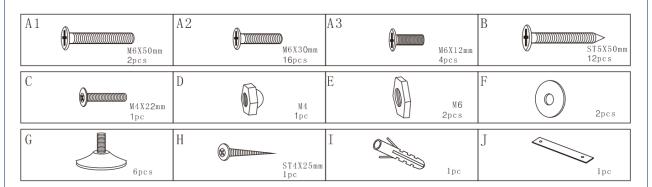


1	Desktop panel	P1	Left main frame
2	Layer panel	P2	Right main frame
		Р3	Right back main frame
		P4	Connection pipe

P5	Panel support frame
P6	Back support pipe

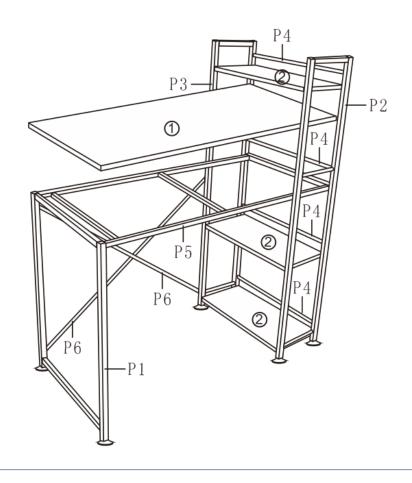


STEP 1:

Install fitting G at the bottom of metal frame P1, P2 and P3.

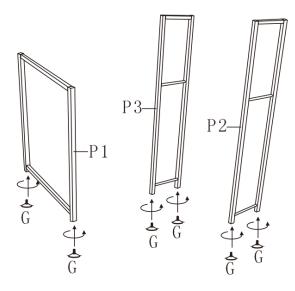

STEP 2:


Use fitting B to fix panel 2 on the metal frame of P2 and P3. Fix the metal pipe P4 on the metal frame P2 and P3 with fitting A2.

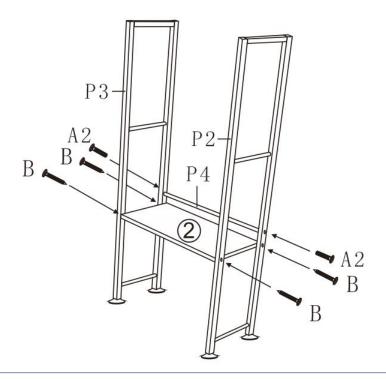

STEP 3:


Use fitting B to fix panel 2 on the metal frame of P2 and P3; Fix the metal pipe P4 on the metal frame P2 and P3 with fitting

A2.

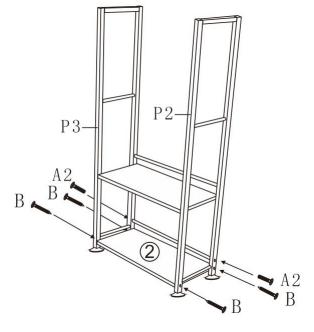


STEP4:

- 1) Use parts A1, A2, F and E to fix the metal frame P5 on the metal frame P2 and P3;
- 2) Fix metal frame P1 on metal frame P5 with fitting A2.

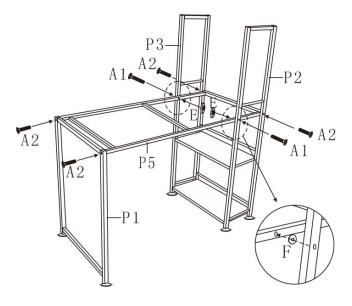


STEP 5:

- 1) Connect the metal pipes P6 with fitting C and D;
- 2) Fix the metal pipe P6 on the metal frame P1 and P3 with the fitting A3.

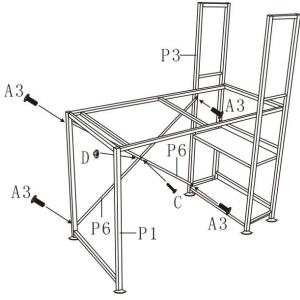


STEP 6:

Fix panel 1 with fitting A2 through metal frame P5.

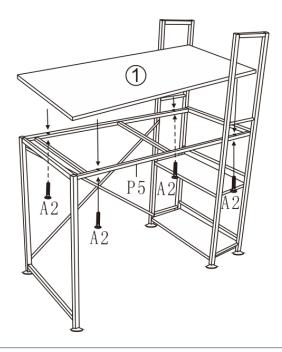


STEP 7:

Fix the metal pipe P4 on the metal frame P2 and P3 with fitting A2.

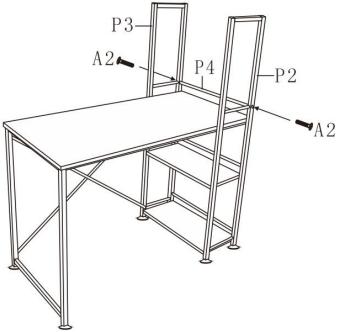

STEP 8:


- 1) fix the metal pipe P4 on the metal frame P2 and P3 with fitting A2;
- 2) fix panel 2 on the metal frame P2 and P3 with fitting B.
- 3)Lock P3 with part B, then lock the anti-fall device to the wall.

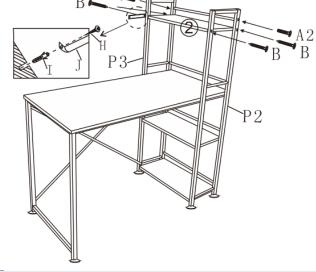



SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
 Mounting Plates and tighten until snug. Do not over tighten.
- Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

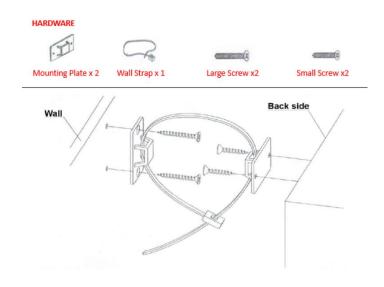

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void