
### **ASSEMBLY INSTRUCTION**

**EDGAR** 

1 DRAWER DESK

ITEM CODE 68430

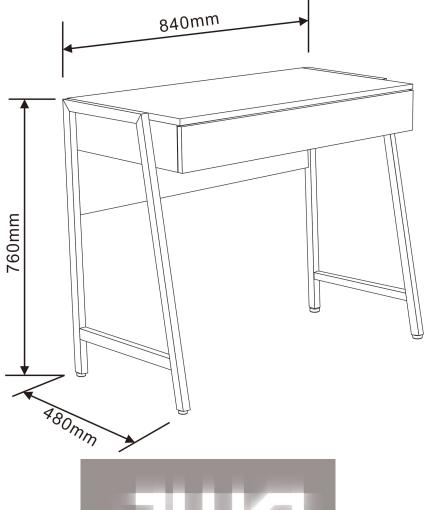




Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

### PRE-ASSEMBLY PREPARATION

### **Before you start:**

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2.Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

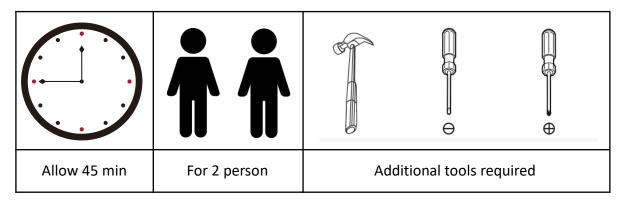




### SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- 1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.



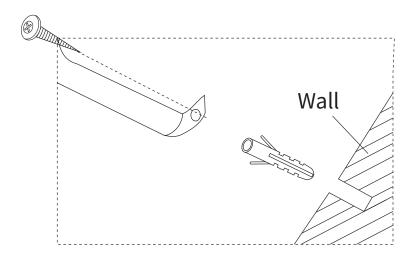


## **PARTS LIST**

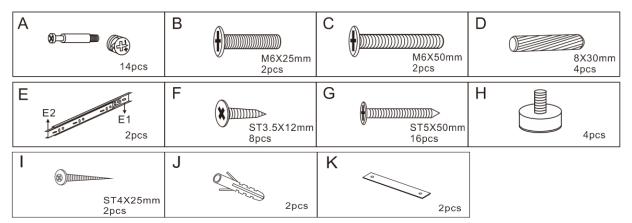


1	Desktop panel
2	Left side panel
3	Right side panel
4	Back panel


5	Drawer panel
6	Drawer left side panel
7	Drawer right side panel
8	Drawer middle panel


9	Drawer back panel
10	Drawer bottom panel
P1	Metal panel
P2	Support pipe

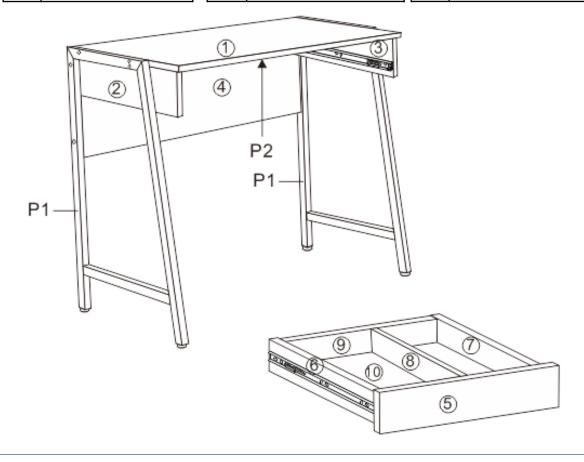


# **CAM LOCK INSTALL METHOD AS FOLLOWS**

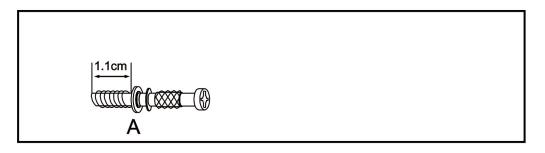

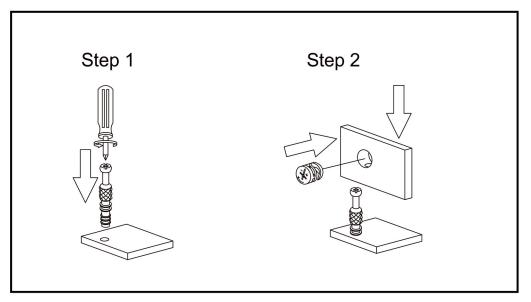


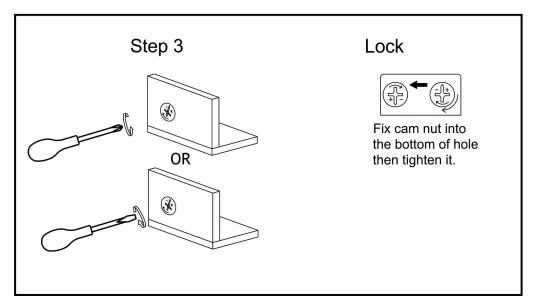


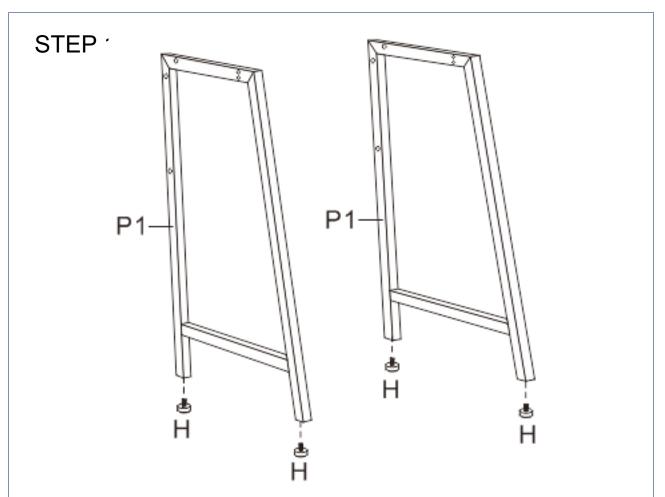


# STEP 2:

Raise the plastic tab on the runners and separate E1 from E2.

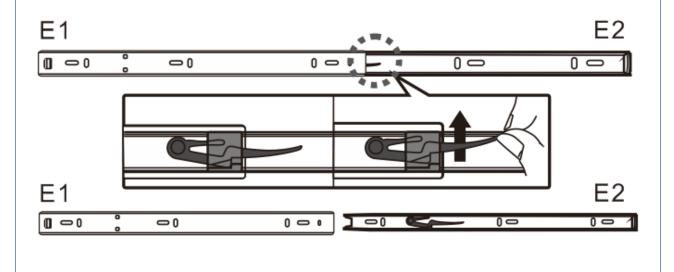


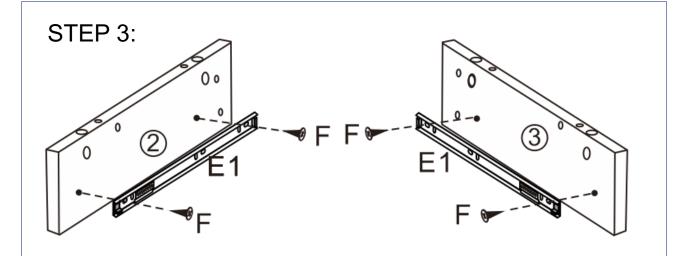



# STEP4:

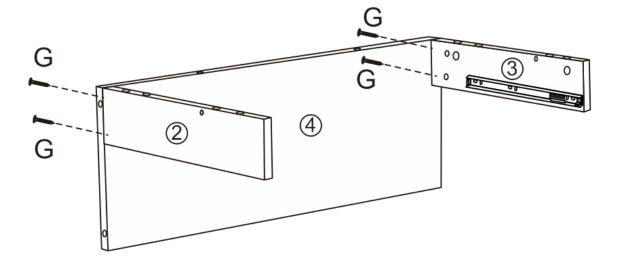

# STEP 5:

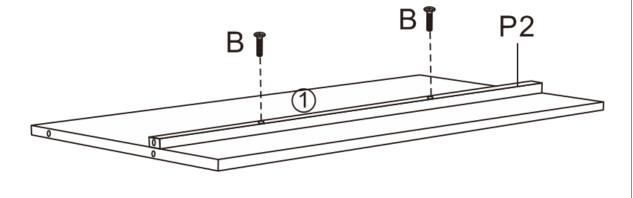


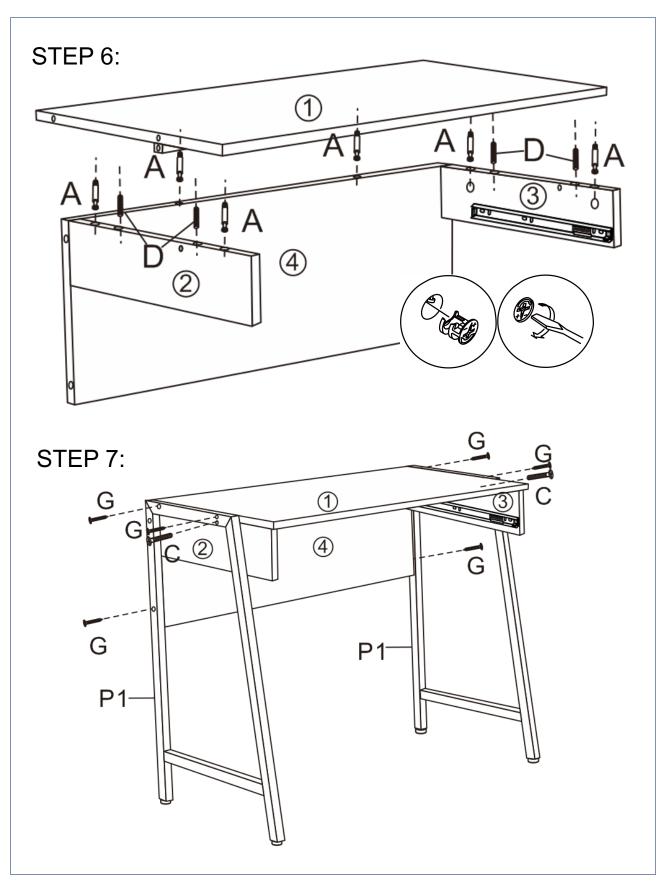

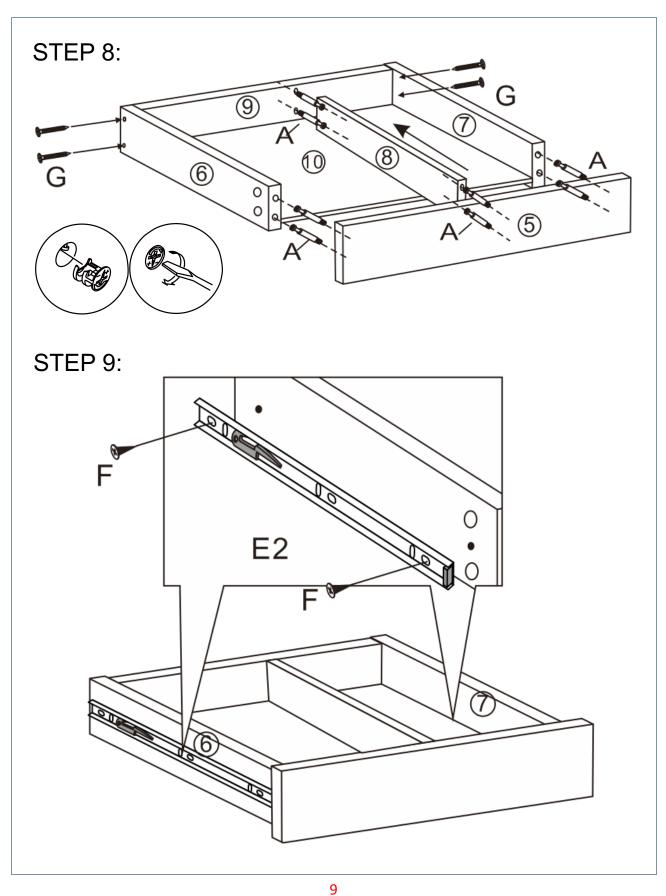

### **STEP 10:**

- Pull the slider on E1 forward to a fully extended position.
- Line the drawer up with the runners. E2 should cup inside E1
- Insert the runners into each other and push in around 4cm.
- Lift up the tabs on E2 and insert the drawer past halfway and release.
- Fully close and open the drawer a few times to allow the runner to properly engage.
- If the drawer cannot be pushed in or stuck, do not force it in.
  Lift the tabs, remove the drawer and repeat the steps above.

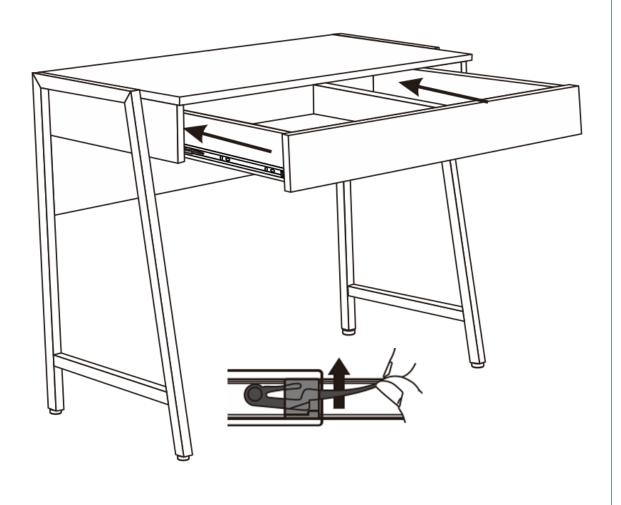

# STEP 11: Κ

# ASSEMBLY IS COMPLETE

### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void